PDP-8 Digital Software News December 1979 - January 1980

AA-J442A-BA



PDP-8 DIGITAL SOFTWARE NEWS

Published by Corporate Administrative Systems Group, Software Services Digital Equipment Corporation P.O. Box F Maynard, MA 01754

The PDP-8 Digital Software News (a bi-monthly publication) complements Software Reviews for COS-310, OS/8, and OS/78. New and revised Software Product Descriptions, programming notes, software problems and solutions, and documentation corrections are published here. Much of the material is developed from Software Performance Report (SPR) answers significant to the general audience and is printed here to supplement the maintenance notebook (established by the Software Review).

PRODUCTS SUPPORTED in the PDP-8 DIGITAL SOFTWARE NEWS

DISTRIBUTION

The Digital Software News is directed to one software contact for each software product. No Mailing will be made to addresses without a software contact name. Address change requests should be sent to the nearest DIGITAL field office. Include the new address and mailing label from the most recently received publication.

Software binary and sources are provided under licenses only. The standard Terms and Conditions, OEM Agreement, and/or Quantity Discount Agreement contain the licenses for all binaries other than DECsystem-10.

Eleanor F. Hunter, Editor Ann Owens, Associate Editor

Copyright © 1980 Digital Equipment Corporation

The material in this document is for information purposes only and is subject to change without notice. Digital Equipment Corporation assumes no responsibility for any errors which may appear in this document. Comments on the contents of this publication should be directed to your local DIGITAL Field Office.

TRADEMARKS of DIGITAL EQUIPMENT CORPORATION Maynard, Massachusetts

PDT **DECwriter RSTS DECUS** DIBOL DIGITAL LOGO **EDUsystem** RSX UNIBUS DECnet IAS DECsystem-10 DECSYSTEM-20 MASSBUS VAX PDP **VMS**

TABLE OF CONTENTS

	SEQ.NO.	PAGE
SPR USER LETTER SPR FORM (SAMPLE)		1 4
OS/8 V3D		
MONITOR EQUIVALENCE STATEMENT (SOFTWARE REVIEW CORRECTION) COMPONENTS, SUBCOMPONENTS, AND MODULES FOR THE OS/8 V3D COMBINED KIT ALPHABETIZED LIST OF OS/8 V3D COMBINED KIT ELEMENTS HOW TO GET VERSION NUMBERS	21.1.4 N	5 7 9 15
HANDLERS LQPØ1 HANDLER FAILS TO RECOGNIZE TABS	21.49.1 M	19
OS/8 MACREL/LINKER V2A		
PATCH TO OVRDRV TO CORRECT CDF PROBLEM	41.5.1 M	21
COS-31Ø V7.ØØ		
COMP MAXIMUM SIZE OF DATA DIVISION	7Ø.Ø N	25
os/78 V3.Ø		
MONITOR UPDATE TO OS/78 USER'S MANUAL	72.1.1 N	27
COS-31Ø V8.ØØ		
COPYING FILES USING SYSGEN/B HALF-BLOCK TRANSFERS USING RX HANDLER USING COMMAND FILES WITH PIP INCORRECT PARSING OF MENU COMMAND FILE MENU BUFFER PROBLEM ACCESSING RXØ1 DRIVES 2 AND 3 DATE COMMAND - ACCEPTS INVALID DAY	81.1.1 M 81.1.2 M 81.1.3 M 81.1.4 M 81.1.5 M 81.1.6 M 81.1.7 M	29 31 33 35 36 39 43
COS-31Ø V8.Ø1A		
MENU BUFFER PROBLEM ACCESSING RXØ1 DRIVES 2 and 3 DATE COMMAND - ACCEPTS INVALID DAY	81.2.1 M 81.2.2 M 81.2.3 M	47 5Ø 53
PDP-8 DIGITAL SOFTWARE NEWS CUMULATIVE INDEX		57
SOFTWARE PRODUCT DESCRIPTION (SPDs)		61
DECUS EQUIPMENT COMPUTER USERS SOCIETY (DECUS)		73

SPR USER LETTER

Submitted by Sheila Hatchell, 8/11 SPR Administration

The Dispatch SPR User Letter has been revised to reflect the new SPR form which is now available. These forms can be obtained from your local Digital Office or SPR Center, or by requesting them from SPR Administration.

How to Make the Best Use of the SPR Form

What We Can Do For You:

- Blank SPR forms are available upon request in the desired quantities Through the SPR Administration (P.O. Box F) and your local office/ SPR Center.
- 2. Copies of the SPR acknowledgement and answer are sent to the appropriate DIGITAL Office/SPR Center for their information.
- 3. STATUS FOR SUBMITTED SPRS IS PROVIDED UPON REQUEST.
- 4. SPRs marked PROBLEM/Error will have a response for supported Category A and B products. These SPRs should refer to suspected deficiencies in the software.
- 5. SPRs marked SUGGESTION are forwarded to the pertinent software group for information purposes, and are responded to at their discretion.

What You can Do For Us:

- 1. Fill out the form completely either by typing or printing clearly.
- 2. Limit only one problem per SPR form. Several problems on an SPR can greatly lengthen the turnaround time.
- 3. WHENEVER POSSIBLE, SUBMIT AN SPR WITH ATTACHMENTS, SUCH AS MACHINE READABLE DATA DETAILED INSTRUCTIONS ON HOW TO REPRODUCE THE PROBLEM, PROGRAM AND/OR DATA FILES, LISTINGS, AND CONSOLE LOG.
- 4. It would be most helpful to all concerned if problems with patches are reported as soon as possible.
- 5. For security SPRs, it is imperative that the DO NOT PUBLISH box be marked .
- 6. It would be helpful if tapes submitted with SPRs are labeled (track and density), and have a directory attached.
- Complete the questionnaire that is supplied with each SPR answer.
 Your feedback is very essential in monitoring the quality of our responses.
- 8. SPRs should not be used for problems concerning software policy, software distribution, or hardware. The local office should be contacted in these cases.

DIRECTIONS FOR COMPLETING SPR FORM

The SPR form must be filled out completely and MUST BE TYPEWRITTEN in order to ensure proper processing. The shaded areas on the form should be left blank, they will be used by DIGITAL in processing the SPR.

The following is a brief summary of the information required:

OPERATING SYSTEM/MONITOR (SOFTWARE PRODUCT)

Monitor (software product) the system program runs under and its version number (e.g. RSX-11M V3, TOPS-10 V6.03). Document Title such as OS/8 Handbook.

SYSTEM PROGRAM & VERSION (OR DOCUMENT PART NUMBER)

The program in which the problem resides, e.g. FORTRAN V5A, BASIC V1B. If a monitor, write MONITOR (module). If a documentation error is being reported, the DEC order number of the manual should be entered here (e.g. DEC-11-ORSUB-A-D).

DATE:

Date of submittal using a three character abbreviation for month (e.g. 4-APR-79)

NAME AND ADDRESS:

Fill out the name of your installation's responsible software contact and complete mailing address. The information in this block will be used to return the acknowledgment copy.

CLIST NO

A permanent reference number which is assigned by DIGITAL. Customers will be informed of their number.

SUBMITTED BY AND PHONE:

Enter name and phone number of the author of the SPR.

DEC OFFICE:

Enter local DEC office (or SPR Center if European or Australian).

REPRODUCIBLE AT WILL, SOURCE AND DOCUMENTATION QUESTIONS

Check appropriate boxes.

REPORT TYPE/PRIORITY

Check appropriate box for Report Type and Priority.

Priority Definitions are as follows:

- 1. Most production work cannot be run, e.g. functions/jobs which are not usable are a major use of system, e.g. system won't boot, necessary peripherals cannot be used as intended.
- 2. Some production work cannot be run, e.g. certain jobs/functions are not usable, performance degradation, installation has insufficient excess capacity.
- 3. All production work can be run with some impact on user, e.g. significant manual intervention required, extra procedures, performance degradation but installation has excess capacity.
- 4. All production work can be run with no significant impact on user, e.g., problem can be easily patched, simple bypass procedure exists.
- 5. No system modifications needed to return to normal production, e.g., suggestion, consultation, documentation error.

ATTACHMENTS:

If attachments are included with SPR, describe materials sent and insure that the number from the top of this form appears on them. Printed examples must be dark. If magtape, include track and density.

CPU TYPE:

Enter model number of the processor (e.g. 1080, 8/A, 11/70, 2040).

SERIAL

Enter serial # of central processor. If there are two processors, enter serial number of first.

SYSTEM DEVICE:

The device on which the monitor resides (e.g. DOS/BATCH on RK05 where RK05 is system device).

DISTRIBUTION MEDIUM:

Indicate the medium on which you receive software (e.g. 9TR Magtape, DEC Tape, RX02, RK05).

PROBLEM DESCRIPTION:

A concise description of the problem in the form of PROBLEM:, DIAGNOSIS:, CURE: (if known), with references to circumstances surrounding its occurrence should be included. Only one problem should be stated per SPR form. Attempt to reduce the problem to a simple test case. If you cannot, include all programs and data in machine readable form. If a patch or interim solution exists, include it.

DO NOT PUBLISH:

Check this box if you do not want your SPR published in its original form. This does not guarantee that the solution will not be published if of universal value.

SPR SUBMISSION

Upon completion of the SPR form remove last copy and send remainder to the nearest SPR center. Refer to the reverse side of this instruction sheet for a listing of SPR centers.

digita	9	OFTWARE PERFORMANCE	FIELD NO.:		CORPORATE SPR NO).t	258	3203
	F	REPORT	L		L			
€ TO SET UP FOR	PROPER A	LIGNMENT, START	AT MARK BEL	_ow.		P	AGE	OF
OPERATING SYSTEM	VERS	ION SYSTEM	PROGRAM OR DOC	UMENT TITLE	VERSION OR DOCUM	ENT PART	NO.	DATE
<u> </u>				DEC OFFICE	l	DO YOU HA	VE SOUR	CE\$1
				J20 01 1 102		20 100	YES	No N
NAME:			· +	DEPORT	TYPE/PRIORITY		_	
FIRM:			Į.			·-	Y SYSTER	
				PROBLEM/		_	R SYSTEM	STEM IMPACT
ADDRESS:				OTHER				NT IMPACT
CUST. NO.:			2			~⊢—		ON/SUGGESTION
SUBMITTED BY:		PHONE:					г	
	ATTACHM			CAN THE PRO	BLEM BE REPRODUCI	D AT WILL	7 YES	NO
MAG TAPE FLOP	PY DISKS	ı —	CTAPE		PR HAVE BEEN PREV		YES	NO
		نے در	<u> </u>		AIN IN PROVIDED SPA		. L	
OTHER: CPU TYPE SE	RIAL NO.	MEMORY SIZE	DISTRIBUTION	MEDIUM S	YSTEM DEVICE	DO N	OT PUBLI	SH 🖂
							_	
5	\	ALGERONIE RECOME	THE BROBERT	Q	AL EQUIPMENT CO			
SHORT NAME M	NT. CAT.	MNT. GRP.		XFER GRP.		PL		PRB. TYPE
DATE RECEIVED (M/	NIL)	DATE TO MAINT	AINER	XFER DATE		LOGGED	ON	
DATE RECEIVED (AS	G)	DATE RECEIVED F	ROM MAINTAINER	DATE ANSW	ERED	LOGGED	OFF	

ADMINISTRATIVE SERVICES GROUP, SWS

EN 1044H-07-R479 (35C)

OS/8 V3D MONITOR NOTES & DOCUMENTATION Seq 21.1.2 N

1 of 1 Supersedes article dated April/May 78

EQUIVALENCE STATEMENT (SOFTWARE REVIEW CORRECTION) (SPR 8-2484 JB)

OS/8 V3D Software Review AA-08771-BA

The patch issued concerning EQUIVALENCE statements (Seg 2 M; l of l; pg. 24), should reference the F4 compiler not FRTS. It should read as follows:

.GET SYS:F4
.ODT
2067/1471 1367
2070/1071 5363
2163/xxxx 2071
2164/xxxx 7000
2165/xxxx 1071
2166/xxxx 5271
2167/xxxx 2
1130/6401 6402
^C
.SAVE SYS:F4.SV
.GET SYS:PASS3.SV
.ODT
712/6401 6402
^C
.SAVE SYS:PASS3.SV

This patch upgrades F4.SV to V4B.

OS/8 V3D MONITOR NOTES & DOCUMENTATION Seq 21.1.4 N

1 of 2

The following is a list of components, subcomponents, and modules with their appropriate version number for the $OS/8\ V3D$ Combined Kit.

SUBCOMPONENT VERSION	COMPONENT		COMPONENT	
DOCUMENTATION		VERSION		VERSION
FORMATTERS AND COPIERS DICOPY.SV 10A BOOT.SV 5A DTFRMT.SV 4A BUILD.SV 7A RKCFMT.SV 4B RKCFMT.SV 4B RKCFMT.SV 4B RKCFMT.SV 4B RKCFMT.SV 4B CCL.SV 3A TDCOPY.SV 4B CCL.MA TDFRMT.SV 4A CCL.MA TDFRMT.SV 4A CCL.DX.MA CCLCDX.MA CCLCDX.MA CCLCOR.MA CCLSB2.MA CCLBB.MA CCLSB2.MA CCLBB.MA CCLSB2.MA CCLBB.MA CCLSB2.MA CCLBB.MA CCLBB.M	WODOFE		MODOLE	
FORMATTERS AND COPIERS DICOPY.SV 10A BOOT.SV 5A DTFRMT.SV 4A BUILD.SV 7A RKCFMT.SV 4B RKCFMT.SV 4B RKCFMT.SV 4B RKCFMT.SV 4B RKCFMT.SV 4B CCL.SV 3A TDCOPY.SV 4B CCL.MA TDFRMT.SV 4A CCL.MA TDFRMT.SV 4A CCL.DX.MA CCLCDX.MA CCLCDX.MA CCLCOR.MA CCLSB2.MA CCLBB.MA CCLSB2.MA CCLBB.MA CCLSB2.MA CCLBB.MA CCLSB2.MA CCLBB.MA CCLBB.M	DOCUMENTATION		ווידו דיידים	
### AND COPIERS DICOPY.SV				6B
DTCOPY.SV				
DTFRMT.SV		1 O A		
RLKFMT.SV				
RXCOPY.SV				
TDCOPY.SV				
TDFRMT.SV				J
RLFRMT.SV				
CCLCDX.MA				
MONITOR	NET MITTE			
MONITOR CCLDAT.MA CCLDAT.MA CCD SA CCLDRV.MA CCD SA CCLMSG.MA CCLREM.MA CCLREM.MA CCLREM.MA CCLREM.MA CCLPS.MA CCLPS.MA CCLPS.MA CCLSB2.MA				
REM	MONITOR			
CD		ЗТ		
ODT 6A CCLREM.MA CCL OVERLAY 3A CCLRUN.MA CCLPS.MA CCLPS.MA CCLSB2.MA CCLSEM.MA ASR33.BN A CCLSUB.MA BAT.BN B CCLSIZ.MA CR8E.BN C CCLTAB.MA CSA.BN A CCLTBL.MA CSE.BN A CREF.SV 5B CSC.BN A DIRECT.SV 6A CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32NS.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV 6B L1NCNS.BN A PAL8.SV 13A L1NCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA LSPT.BN A </td <td></td> <td></td> <td></td> <td></td>				
CCL OVERLAY 3A CCLRUN.MA CCLPS.MA CCLSB2.MA CCLSEZ.MA CCLSEM.MA ASR23.BN A CCLSUB.MA BAT.BN B CCLSIZ.MA CR8E.BN C CCLTAB.MA CSA.BN A CCLTBL.MA CSE.BN A CREF.SV 5B CSC.BN A DIRECT.SV 6A CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32NS.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV 6B L1NCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA LSPT.BN A SCC.MS.V 4A RF08N				
CCLPS.MA		3 A		
CCLSB2.MA CCLSEM.MA CCLSEM.MA CCLSUB.MA BAT.BN B CCLSUB.MA CR8E.BN CC CCLTAB.MA CCREE.BN CCCLTBL.MA CCLTBL.MA EPIC.SV 5A CCLTBL.MA EPIC.SV 5A CCTTBL.MA EPIC.SV SA CCTTBL.MA CCLTBL.MA CCTTBL.MA CCT		3 **		
HANDLERS CCLSEM.MA ASR33.BN A CCLSUB.MA BAT.BN B CCLSIZ.MA CR8E.BN C CCLTAB.MA CSA.BN A CCLTBL.MA CSE.BN A CREF.SV 5B CSC.BN A DIRECT.SV 6A CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32SY.EN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.EN A RESORC.SV 5A LSPT.BN A SRCCOM.SV 7A RF08NS.BN** A SRCCOM.SV 7A RF08NS.BN** A <td></td> <td></td> <td></td> <td></td>				
ASR33.BN BAT.BN BAT.BN B CCLSIZ.MA CCR8E.BN C CCLTAB.MA CSA.BN A CSE.BN A CSE.BN A CSC.BN A CSC.BN A CSD.BN A CSD.BN A CSD.BN B CSC.BN A CSD.BN A CSD.BN B CSC.BN A CSD.BN A CSD.BN A CSD.BN A CSD.BN A CSD.BN B CSC.BN B CSC.BN A CSD.BN B C	HANDLERS			
BAT.BN B CCLSIZ.MA CR8E.BN C CCLTAB.MA CSA.BN A CCLTBL.MA CSE.BN A CREF.SV 5B CSC.BN A DIRECT.SV 6A CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32NS.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT6E.BN A SRCCOM.SV 7A RF08NS.BN** A TDROM.SY NA		A.		
CR 8E . BN C CCLTAB.MA CSA . BN A CCLTBL.MA CSE . BN A CREF.SV 5B CSC . BN A DIRECT.SV 6A CSD . BN A EDIT.SV 12D DF 32 NS . BN A EPIC.SV 5A DF 32 SY . BN B FOTP.SV 9B DUMP . BN C HELP . SV NA KL 8E . BN E MCPIP.SV 6B LINCNS . BN A PAL8 . SV 13A LINCSY . BN B PIP . SV 14A LPS V . BN C PIP 10 . SV 3B LQP . BN A RESORC . SV 5A LSPT . BN A SAVEC B. PA NA L6 45 . BN A SET . SV 2A PT 6E . BN A SRCCOM . SV 4A RF 08 NS . BN ** A TD INIT . SV 7A RF 08 SY . BN B TD ROM . SY NA				
CSE.BN A CREF.SV 5B CSC.BN A DIRECT.SV 6A CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32SY.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA			CCLTAB.MA	
CSC.BN A DIRECT.SV 6A CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32SY.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV NA KL8E.PA E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	CSA.BN	А	CCLTBL.MA	
CSD.BN A EDIT.SV 12D DF32NS.BN A EPIC.SV 5A DF32SY.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E MCPIP.SV 6B L1NCNS.BN A PAL8.SV 13A L1NCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA			CREF.SV	5B
DF32NS.BN A EPIC.SV 5A DF32SY.BN B FOTP.SV 9B DUMP.BN C HELP.SV NA KL8E.BN E HELP.HL NA KL8E.PA E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	CSC.BN	Α	DIRECT.SV	6 A
DF 32 SY . BN B FOTP . SV 9B DUMP . BN C HELP . SV NA KL 8E . BN E HELP . HL NA KL 8E . PA E MCPIP . SV 6B LINCNS . BN A PAL 8 . SV 13A LINCSY . BN B PIP . SV 14A LPS V . BN C PIP 10 . SV 3B LQP . BN A RESORC . SV 5A LS PT . BN A SA VECB . PA NA L6 45 . BN A SET . SV 2A PT 6E . BN A SRCCOM . SV 4A RF 08 NS . BN *** A TD INIT . SV 7A RF 08 SY . BN B TD ROM . SY NA	CSD.BN	A	EDIT.SV	12D
DUMP.BN C HELP.SV NA KL8E.BN E HELP.HL NA KL8E.PA E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	DF32NS.BN	А	EPIC.SV	5 A
KL8E.BN E HELP.HL NA KL8E.PA E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	DF32SY.BN		FOTP.SV	9 B
KL8E.PA E MCPIP.SV 6B LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	DUMP.BN		HELP.SV	
LINCNS.BN A PAL8.SV 13A LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.EN B TDROM.SY NA	KL8E.BN		HELP.HL	
LINCSY.BN B PIP.SV 14A LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	KL8E.PA	E	MCPIP.SV	6B
LPSV.BN C PIP10.SV 3B LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	LINCNS.BN		PAL8.SV	
LQP.BN A RESORC.SV 5A LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA	LINCSY.BN		PIP.SV	
LSPT.BN A SAVECB.PA NA L645.BN A SET.SV 2A PT&E.BN A SRCCOM.SV 4A RFO&NS.BN** A TDINIT.SV 7A RFO&SY.BN B TDROM.SY NA				_
L645.BN A SET.SV 2A PT8E.BN A SRCCOM.SV 4A RF08NS.BN** A TDINIT.SV 7A RF08SY.BN B TDROM.SY NA				
PT&E.BN A SRCCOM.SV 4A RFO&NS.BN** A TDINIT.SV 7A RFO&SY.BN B TDROM.SY NA	·			
RFO8NS.BN** A TDINIT.SV 7A RFO8SY.BN B TDROM.SY NA				
RFO8SY.BN B TDROM.SY NA				
RKSESY.BN C TD12K.SY NA				
	RK8ESY.BN	С	TD12K.SY	N A

OS/8 V3D MONITOR NOTES & DOCUMENTATION Seq 21.1.4 N

2 of 2

SUBCOMPONENT WERSION
HANDLERS
CONT. FORT.SV
(CONT.) FORT.SV 5A RKOSSY.EN D SABR.SV 18A RK8ENS.BN A LOADER.SV 4A RK06NS.BN A LIESET.SV 3A RLSY.EN A LIESET.SV 3A RLD.EN A LIES.RL NA RLO.EN A ATAN.RL 11 RL1.BN A FLOAT.RL 5 RL2.EN A INTEGR.RL 5 RL3.BN A IOH.RL 10 RLC.BN A IOPEN.RL 21 RCMMSY.BN A IOPEN.RL 21 RCMMSY.BN A IPOWER.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.EN M RWTAPE.RL 2 RXSY2.BN M RWTAPE.RL 2 RXSY2.BN M RWTAPE.RL 10 TO85Y.EN B UTILITY.RL 10 TO85Y.EN B BASIC S TD8ED.BN D BCOMP.SV 5A TD8ED.
RKOSY.EN D SABR.SV 18A
RK8ENS.BN
RKO6NS.BN A LIBSET.SV 3A RLSY.BN A LIB8.RL NA RLO.BN A ATAN.RL 11 RL1.BN A FLOAT.RL 5 RL2.BN A INTEGR.RL 5 RL3.BN A IOH.RL 10 RLC.BN A IOPEN.RL 21 ROMMSY.BN A IOPEN.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TCO8NS.BN B UTILTY.RL 10 TCO8SY.BN B TD8EA.BN D BASIC TD8EB.BN D BASIC TD8EC.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TD8ESY.BN A BLOAD.SV 5B TM6E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXSY.BN A BASIC.FF NA VXSY.BN B BASIC.FF N
RLSY.BN A LIP8.RL NA RLO.EN A ATAN.RL 11 RL1.BN A FLOAT.RL 5 RL2.BN A INTEGR.RL 5 RL3.BN A IOH.RL 10 RLC.BN A IOPEN.RL 21 ROMMSY.BN A IOPEN.RL 21 ROMMSY.BN A IPOWER.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN A TIGG.RL 6 TCO8SY.BN A UTILTY.RL 10 TCO8SY.BN B TD8EA.BN D BASIC TD8EC.BN D BASIC TD8EC.BN D BASIC.SV 5B TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BLOAD.SV 5B TM8E.BN A BASIC.AF NA VXSY.BN A BASIC.FF NA VXSY.BN A BASIC.FF NA VXSY.BN A BASIC.FF NA VXSY.BN A BASIC.FF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A
RLO.BN A ATAN.RL 11 RL1.BN A FLOAT.RL 5 RL2.BN A INTEGR.RL 5 RL3.BN A IOPEN.RL 21 ROMMSY.BN A IOPEN.RL 21 ROMMSY.BN A IPOWER.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TCO8NS.BN A UTILTY.RL 10 TCO8SY.BN B TD8EA.BN D BASIC TD8EC.BN D BASIC TD8EC.BN D BASIC TD8ESY.BN A BLOAD.SV 5B TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.FF NA VXNS.BN A BASIC.FF NA
RL1.BN
RL2.BN A INTEGR.RL 5 RL3.BN A IOH.RL 10 RLC.BN A IOPEN.RL 21 ROMMSY.BN A IPOWER.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TCOBNS.BN A UTILTY.RL 10 TCOBSY.BN B UTILTY.RL 10 TD8EB.BN D BASIC TD8EB.BN D BASIC 5B TD8ESY.BN A BLOAD.SV 5B TD8ESY.BN A BLOAD.SV 5B TM6E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UTILITIES BASIC UTILITIES BASIC.UTILITIES BASIC.UTILITIES
RL3.BN A IOH.RL 10 RLC.BN A IOPEN.RL 21 ROMMSY.BN A IPOWER.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TC08NS.BN A UTILTY.RL 10 TC08SY.BN B UTILTY.RL 10 TD8EA.BN D BASIC 5 TD8EC.BN D BASIC 5 TD8ED.BN D BCOMP.SV 5 TD8ESY.BN A BLOAD.SV 5 TM8E.BN E BRTS.SV 5 VR12.BN A BASIC.AF NA VXSY.BN A BASIC.SF NA VXSY.BN A BASIC.UTILITIES BASIC UTILITIES BATCH.SV 8A
RLC.BN
ROMMSY.BN A IPOWER.RL 2 RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TCO8NS.BN A UTILTY.RL 10 TCO8SY.BN B TD8EA.BN D BASIC TD8EB.BN D BASIC TD8EC.BN D BASIC.SV 5B TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VT50.BN A BASIC.FF NA VXNS.BN A BASIC.FF NA VXSY.BN BASIC.FF NA BASIC.FF NA BASIC.FF NA BASIC.FF NA VXSY.BN BASIC.FF NA BASIC.FF
RXNS.BN N POWERS.RL 5 RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TC08NS.BN A UTILTY.RL 10 TC08SY.BN B BASIC 0 TD8EB.BN D BASIC 5B TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXNS.BN A BASIC.FF NA VXSY.BN A BASIC.UF NA *** INCLUDES NULL HANDLER BASIC UTILITIES BASIC UTILITIES BASIC UTILITIES BATCH.SV 8A
RXSY1.BN M RWTAPE.RL 2 RXSY2.BN M SQRT.RL 4 RX78C.BN N TRIG.RL 6 TC08NS.BN A UTILTY.RL 10 TC08SY.BN B UTILTY.RL 10 TD8EB.BN D BASIC 5B TD8EC.BN D BASIC.SV 5B TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXSS.BN A BASIC.FF NA VXSY.BN A BASIC.UF NA VXSY.BN A BASIC.UF NA *** INCLUDES NULL HANDLER BASIC UTILITIES BASIC UTILITIES BASIC UTILITIES BASIC UTILITIES BASIC UTILITIES
RX78C.BN N TRIG.RL 6 TC08NS.BN A UTILTY.RL 10 TC08SY.BN B UTILTY.RL 10 TD8EA.BN D BASIC TD TD8EC.BN D BASIC.SV 5B TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXNS.BN A BASIC.FF NA VXNS.BN A BASIC.UF NA VXSY.BN A BASIC.UF NA *** INCLUDES NULL HANDLER BASIC UTILITIES BASIC UTILITIES BASIC UTILITIES
RX78C.BN N TRIG.RL 6 TC08NS.BN A UTILTY.RL 10 TC08SY.BN B UTILTY.RL 10 TD8EA.BN D BASIC TD TD8EC.BN D BASIC.SV 5B TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXNS.BN A BASIC.FF NA VXNS.BN A BASIC.UF NA VXSY.BN A BASIC.UF NA *** INCLUDES NULL HANDLER BASIC UTILITIES BASIC UTILITIES BASIC UTILITIES
TCO8NS.BN A UTILTY.RL 10 TCO8SY.BN B TD8EA.BN D BASIC TD8EB.BN D BASIC.SV 5B TD8EC.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VXNS.BN A BASIC.FF NA VXNS.BN A BASIC.UF NA VXSY.BN A BASIC.UF NA ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
TCO8SY.BN B TD8EA.BN D TD8EB.BN D TD8EC.BN D TD8EC.BN D TD8ED.BN D TD8ESY.BN A TD8ESY.BN A TD8ESY.BN A VX12.BN A VX50.BN A VXSY.BN A VXSY.BN A VXSY.BN A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
TD8EA.BN
TD8EB.BN
TD&EC.BN D BASIC.SV 5B TD&ED.BN D BCOMP.SV 5A TD&ESY.BN A BLOAD.SV 5B TM&E.BN E BRTS.SV 5C VR12.BN A VT50.BN A VXNS.BN A VXNS.BN A VXNS.BN A BASIC.FF NA VXSY.BN A BASIC.UF NA EABRTS.EN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
TD8ED.BN D BCOMP.SV 5A TD8ESY.BN A BLOAD.SV 5B TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VT50.BN A BASIC.FF NA VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
TD8ESY.BN A BLOAD.SV 5E TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VT50.BN A BASIC.FF NA VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
TM8E.BN E BRTS.SV 5C VR12.BN A BASIC.AF NA VT50.BN A BASIC.FF NA VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
VR12.BN A BASIC.AF NA VT50.BN A BASIC.FF NA VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
VT50.BN A BASIC.FF NA VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
VXNS.BN A BASIC.SF NA VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
VXSY.BN A BASIC.UF NA EABRTS.BN 5A ** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
** INCLUDES NULL HANDLER BASIC UTILITIES BATCH.SV 8A
BATCH.SV 8A
MARMAN TU
FORTRAN IV BPAT.BN NA
FRTS.SV 5A FUTIL.SV 8B
FPAT.BN NA MSBAT.SV 3B
F4.SV 4B GENIOX.SB 7A
PASS2.SV 4A RESEQ.BA NA
PASS20.SV 4A TECO.SV 5.08
PASS3.SV 4A
RALF.SV 62A
LIBRA.SV 24A
FORLIB.RL NA
LOAD.SV 24A

OS/8 V3D Seq 21.1.5 N MONITOR NOTES & DOCUMENTATION 1 of 6

ALPHABETIZED LIST OF OS/8 V3D COMBINED KIT ELEMENTS

The following is an alphabetized list of all of the elements in the OS/8 V3D Combined Kit.

ELEMENT	VERSION	NUMBER
ABSLDR.SV ABS.RA ACOS.RA ADC.RA ALOG.RA ALOG10.RA AMOD.RA AMIN.RA AMIN.RA ASIN.RA ASIN.RA ASR33.BN ATAN.RL	6 B	
ATAN2.RA		
BATCH.SV BASIC.SV BASIC.AF BASIC.FF BASIC.SF BASIC.UF BAT.BN BCOMP.SV BITMAP.SV BLOAD.SV BCOT.SV	8 A 5 B N A N A N A S A 4 A 5 B 5 A	
BPAT.BN BRTS.SV BUILD.SV	N A 5 C 7 A	Patch to BRTS to use 2 page handlers

OS/8 V3D
MONITOR
NOTES & DOCUMENTATION

Seq 21.1.5 N
2 of 6

ELEMENT	VERSION	NUMBER
CAMP.SV CABS.RA	5 A	
CARITH.RA CCL.SV CCL.MA CCLAT.MA CCLCD.MA CCLCDX.MA CCLCOR.MA CCLDAT.MA CCLDAT.MA CCLDRV.MA CCLMSG.MA CCLREM.MA CCLRUN.MA CCLPS.MA CCLSE2.MA CCLSE2.MA CCLSUB.MA CCLSIZ.MA CCLTAB.MA CCLTBL.MA	3 A	
CCL.BI CEXP.RA CHARS.RA CHKEOF.RA CLOG.RA CLOCK.RA CLK8A.RA CMPLX.RA COSH.RA COS.RA COSD.RA		BATCH file to assemble the CCL sources
CREF.SV CR8E.BN CSIN.RA CSQRT.RA	5B C	
CSA.BN CSE.BN CSC.BN CSD.BN	0 0 0	

ELEMENT	VERSION	NUMBER
DATE.RA DAES.RA DATAN.RA DATAN2.RA DBLE.RA DCOS.RA DEXP3.RA DEXP.RA DF32SY.BN DF32NS.BN DIM.RA DLOG 10.RA DLOG.RA DMAX1.RA DMOD.RA DMIN1.RA DSIN.RA DSQRT.RA	B	
DSIGN.RA DIRECT.SV DTCOPY	6 A 1 O A	
DTFRMT.SV DUMP.BN	4 A C	
EABRTS.BN EDIT.SV EPIC.SV	5 A 1 2 D 5 A	
FLOAT.RL FLOAT.RA FOTP.SV FCRT.SV FORLIB.RL FPAT.BN FRTS.SV FUT1L.SV F4.SV	9B 5A NA NA 5A 8B 4B	Patches to FRTS to use 2 page handlers
GENIOX.SB GENIOX.RL	7 A	
HELP.SV HELP.HL	N A N A	
IDINT.RA IFIX.RA INTEGR.RL IOH.RL IOPEN.RL IPOWRS.RL		

PDP-8 Digital Software News, December/January 1980

ELEMENT	VERSION	NUMBER
KL8E.BN KL8E.PA KBM	E E 3 T	The KBM is "inivisible" but includes CD V5A, OS8 V3S, USR, and ODT V6A
LIBSET.SV LIB8.RL LIBRA.SV LINCNS.BN LINCSY.BN LOADER.SV LOAD.SV LPSV.BN LQP.BN LSPT.BN LTR.RA L645.BN	3 A N A 2 4 A B 4 A 2 4 A C A	
MCPIP.SV MSBAT.SV	6B 3B	
ONQIB.RA OS78.BI		A BATCH file to make an RXO2 OS/78 syste
PAL8.SV PAUSE.RA PASS2.SV PASS20.SV PASS3.SV PIP.SV PIP10.SV PLOT.RA POWERS.RL PT8E.BN	13A 4A 4A 14A 3B	floppy
RALF.SV RESORC.SV RESEQ.BA REALTM.RA REAL.RA RFDV.RA RFCV.RA	62A 5A NA	
RFO8SY.BN RFO8NS.BN RKLFMT.SV RKO8SY.BN RKO8NS.BN RK8ESY.BN RK8ENS.BN	B A D D A C A	

PDP-8 Digital Software News, December/January 1980

OS/8 V3D	Seq 21.1.5 N
MONITOR	
NOTES & DOCUMENTATION	5 of 6

ELEMENT	VERSION	NUMBER
RLC.BN	A	
RL1.BN RL2.BN	A A	
RL3.BN	A	
RLSY.BN	A	
RLO.BN ROMMSY.BN	A A	
RSW.RA		
RWTAPE.RL	lin	
RXCOPY.SV RX78C.BN	4B N	
RXSY1.BN	M	
RXSY2.BN	M	
RXNS.BN	N	
SABR.SV	18A	
SAVECE.PA	N A	
SET.SV SINH.RA	2 A	
SIND.RA		
SIGN.RA		
SIN.RA SNGL.RA		
SQRT.RL		
SQRT.RA		
SRCCOM.SV	4 A	
TAN.RA		
TAND.RA		
TANH.RA TCO8SY.BN	В	
TCO8NS.BN	A	
TDCOPY.SV	4 A	
TDFRMT.SV TDINIT.SV	4 A 7 A	
TDROM.SY	N A	
TD12K.SY	N A	
TD8EA.BN TD8EB.BN	D D	
TD8EC.BN	D	
TD8ED.BN	D	
TD8ESY.BN TECO.SV	A 5.08	
TM8E.BN	J.00 E	
TRIG.RA		

OS/8 V3D Seq 21.1.5 N

MONITOR

NOTES & DOCUMENTATION 6 of 6

ELEMENT VERSION NUBMER

UTILTY.RL

 VR12.EN
 A

 VT50.BN
 A

 VXNS.BN
 A

 VXSY.BN
 A

XFIX.RA

Note that NA = No Internal Version Number

RA extensions are FORTRAN IV Library modules

RL extensions are FORTRAN II Library modules except for FORLIB.RL and LIB8.RL, which are cusps.

OS/8 V3D

MONITOR

NOTES & DOCUMENTATION

Seq 21.1.6 N

1 of 4

HOW TO GET VERSION NUMBERS

The following is a list of OS/8 cusps and how to get their respective version numbers.

BASIC.AF BASIC.FF NA BASIC.SF NA BASIC.SV See Note 4 BASIC.UF BAT	CUSP	HOW TO GET VERSION NUMBER
BASIC.FF BASIC.SV BASIC.SV See Note 4 BASIC.UF BAT BAT See Note 3 BATCH BCOMP See Note 4 BITMAP BLOAD BLOAD BOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the # CCL Type VE after the # CCL Type VE after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EDIT Type # after the # BFIC ODT LOC. 352 & 353 (See Note 2) FORT FORT Type /W after the * FRTS Type /W after the # F	ABSLDR	ODT LOC. 12200 (See Note 2)
BASIC.SF BASIC.SV See Note 4 BASIC.UF BAT See Note 3 BATCH Type /V after the * BCOMP See Note 4 BCOMP BECOMP See Note 4 BOOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /W a	BASIC.AF	
BASIC.SV BASIC.UF BASIC.UF BATCH BAT BAT See Note 3 BATCH BCOMP See Note 4 BITMAP BITMAP BLOAD BRTS BRTS See Note 4 BUILD CAMP CCL Type VE after the # CCL Type VE after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT DTCOPY From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EABRTS EDIT Type # after the # COT COT Sore Note 2) FORT FORT FORLIB FORLIB FORT FRTS Type /V after the * Type /V after the * FRTS Type /V after the * Type SH VERS after the * Type SH VERS after the *	BASIC.FF	N A
BASIC.UF BAT BAT See Note 3 BATCH BCOMP See Note 4 BITMAP BITMAP BITMAP BOOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTOOPY DTFRMT From its output heading From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EPIC ODT LOC. 352 & 353 (See Note 2) FORT FORT Type /W after the * FRTS Type /W after the * FR		•••
BAT Sec Note 3 BATCH Type /V after the * BCOMP See Note 4 BITMAP From its output listing BLOAD See Note 4 BOOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP Type VE after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # BPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the *		
BATCH BCOMP BCOMP See Note 4 BITMAP BLOAD See Note 4 BOOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF DIRECT DTCOPY From its output listing EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EDIT Type # after the # EPIC OT LOC. 352 & 353 (See Note 2) FORT FORT FORT Type /W after the * FRTS Type /W after the * FRTS Type /W after the # FRTS Type /W after		
BCOMP BITMAP BITMAP From its output listing BLOAD See Note 4 BOOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP CCL Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output heading EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /W after the * OTOLION FORLIB FOTD FORLIB FOTD FORLIB FOTP Type /W after the * FRTS Type /W after the *		-
BITMAP BLOAD See Note 4 BGOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP CCL Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY DTFRMT From its output heading From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the *		
BLOAD BOOT Type VERS after the / BRTS See Note 4 BUILD Type VE after the \$ CAMP CAMP CCL Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT FORLIB FOTP Type /W after the * FRTS Type /W after the * FRTS Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL KBM Type VER after the dot		
BOOT BRTS See Note 4 BUILD Type VE after the \$ CAMP CCL Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EPIC ODT LOC. 352 & 353 (See Note 2) FORT FORLIB FORLIB FORT Type /V after the * FRTS Type /V after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot		
BRTS BUILD See Note 4 Type VE after the \$ CAMP CCL Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT FORLIB FOTP Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /V after the * FRTS Type /V after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot		
CAMP CCL Type VE after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot		Soo Note !!
CAMP CCL Type VER after the # CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the *	-	
CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /W after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	BOILD	Type VL alber one w
CCL Type VER after the dot CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /W after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	CAMP	Type VE after the #
CD R FUTIL 51.0 (See Note 5) CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot		• •
CREF From its output listing DIRECT Type /W after the * DTCOPY From its output heading DTFRMT From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /W after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot		
DTCOPY From its output heading From its output dialogue EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB NA FOTP Type /W after the * FRTS Type /W after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot		From its output listing
EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) EDIT EPIC ODT LOC. 352 & 353 (See Note 2) FORT FORLIB FOTP FRTS FRTS Type /V after the * FRTS FYPE /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL KBM Type VER after the dot	DIRECT	Type /W after the *
EABRTS ODT 1115 & 1116 (Coded in 6-bit Octal) Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL KBM Type VER after the dot		
EDIT EPIC Type # after the # EPIC ODT LOC. 352 & 353 (See Note 2) Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	DTFRMT	From its output dialogue
FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 F7 FYOM its output listing, also ODT 0113 FUTIL KBM Type VER after the dot	EABRTS	ODT 1115 & 1116 (Coded in 6-bit Octal)
FORT Type /V after the * or ODT 0342 (Coded in 6-bit Octal) FORLIB FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	EDIT	Type # after the #
FORLIB FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	EPIC	ODT LOC. 352 & 353 (See Note 2)
FOTP Type /W after the * FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	FORT	Type /V after the * or ODT 0342 (Coded in 6-bit Octal)
FRTS Type /V after the *, also ODT 5533, 5534 F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	FORLIB	N A
F4 From its output listing, also ODT 0113 FUTIL Type SH VERS after the * KBM Type VER after the dot	FOTP	Type /W after the *
FUTIL Type SH VERS after the * KBM Type VER after the dot	FRTS	Type /V after the *, also ODT 5533, 5534
KBM Type VER after the dot	F 4	
· ·	FUTIL	Type SH VERS after the *
· ·	K BM	Type VER after the dot
	KL8E	See Note 3

```
OS/8 V3D
MONITOR
                                                              2 of 4
NOTES & DOCUMENTATION
                    HOW TO GET VERSION NUMBER
CUSP
                    ODT LOC. 4404 & 4405 (See Note 2)
LIBRA
                    ODT 12753 (See Note 2)
LIBSET
LIB8
                    Load.it & ODT 207 (See Note 6)
LINCSY
                    ODT LOC. 17374 (See Note 2)
LOADER
                    ODT LOC. 12073 & 12074 (See Note 2)
LCAD
                    See Note 3
LPSV (LPT)
                    See Note 3
LQP
MCPIP
                    Type /V after *
                    Type /V after *
MSBAT
                    R FUTIL 60.0, See Note 5
ODT
PAL8
                    From its output listing
                    From F4 output listing
PASS2
                    From F4 output listing
PASS 20
                    From F4 output listing
PASS3
                    Type /V after the *
PIP
                    From a directory listing or ODT 4320
P1P10
RALF
                    From its output listing
                    Printed in the source listing (after 1979)
RESEQ
RESORC
                    Type /V after the RES
RF08NS
                    See Note 3
RF08SY
                    ODT 207 (See Note 6)
                    See Note 3
RKO8NS
                    ODT 207 (See Note 6)
RKO8SY
                    See Note 3
RK8ENS
                    See Note 3
RKSESY
                    ODT 0000
RKLFMT
RLFRMT
                    From its output dialogue
                    See Note 3
RLSY
RLO
                    See Note 3
                    See Note 3
RL1
RL2
                    See Note 3
                    See Note 3
RL3
                    See Note 3
RLC
                    See Note 3
ROMMSY
                    ODT 573 (See Note 6)
RXNS
                    ODT 207 (See Note 6)
RXSY1
                    ODT 207 (See Note 6)
RXSY2
                    ODT 573 (See Note 6)
RX28C
                    See Note 3 or ODT 572 (See Note 6)
RX76C
```

Seq 21.1.6 N

Type /V after the *

RXCOPY

OS/8 V3D

MONITOR

NOTES & DOCUMENTATION

Seq 21.1.6 N

3 of 4

CUSP	HOW TO GET VERSION NUMBER
SABR	ODT LOC. 17032 & 17033 (See Note 2)
SET	Type VERS after the #
SRCCOM	From its output listing
TCO8SY	ODT LOC. 207 (See Note 6)
TD8ESY	See Note 3 or ODT LOC. 207 (See Note 6)
TECO	Type EO= after the \$
TDCOPY	ODT LOC. 74 & 75 (See Note 2), also from output heading
TDFRMT	ODT LOC. 1007 & 1010 (See Note 2)
TDIN1T	ODT LOC. 1420 & 1421 (See Note 2) or from its output
	dialogue
TDROM	N A
TD12K	N A
TD8EA	See Note 3
VXNS	See Note 3
VXSY	See Note 3

NOTES

1. All cusps that state "TYPE" nnnn after n means, run the cusp and type the required input to the prompt. For example:

.R BUILD <CR>
\$VE <CR>
BUILD 7A

2. All ODT LOC. nnnnn statements mean:

.GET SYS:cusp name .ODT xxxx/aaaa

aaaa is the system response of the version number packed in 6-bit octal code. Each 2 bits is one character. For example to get the version number of the the ABSLDR cusp:

.GET SYS:ABSLDR <CR>
.ODT
12200/6602

The 66 represents a 6.
The 02 represents a B.
Thus, the version number of the ABSLDR cusp is 6B.

OS/8 V3D MONITOR NOTES & DOCUMENTATION Seq 21.1.6 N

4 of 4

- 3. The version numbers for handlers may be found by:
 - A) Inserting the handler into the BUILD program.
 - B) Saving the built configuration (BOOT).
 - C) Running the RESORC program with its /E option. The version number of all active handlers will be part of the RESORC output.
- 4. Type the following line to the KBM dot.

.EX ROD.BA/V

Where ROD.BA is a BASIC program. The version nubmer of the forementioned cusps will be output before the execution of the BASIC program.

5. To use the following procedure, you must have FUTIL.SV. Type,

.R FUTIL <CR>
60.0/xxxx

Where xxxx is the version or patch number in 6-bit octal code.

6. The following procedeure is an alternate method to obtain some of the version numbers for handlers.

.LOAD filename <CR>
.ODT
xxxx/zzzz

Where filename = handler with a BN extension xxxx/ = location in octal notation zzzz = version number coded in 6-bit octal notation

OS/8 V3D HANDLERS LQP.BN VA Seq 21.49.1 M

1 of 1

Supersedes article dated March 78

LOPØ1 HANDLER FAILS TO RECOGNIZE TABS (SPR 8-2441 JM)

The LQP.BN handler as distributed does not recognize the TABS character. Any listing or text that uses TABS will not be printed correctly.

The method to patch this problem is through the BUILD procedure. This will fix this problem and maintain the correct version in the saved copy of BUILD.

This is done as follows:

.R BUILD LOAD DSK:LQP.BN (OR DEVICE THAT DISTRIBUTED LQP.BN IS ON) \$ALTER LQP,324=7640 \$BOOT .SAVE SYS BUILD

This patch corrects this problem and upgrades the LQP.BN to VB.

OS/8 MACREL/LINKER V2A OVRDRV.MA Seq 41.5.1 M

1 of 1

PATCH TO OVRDRY TO CORRECT CDF PROBLEM (DBB)

Problem: The first execution of OVRDRV may cause the overlay to be

started with the wrong data field in the data field register.

Diagnosis: Upon entry, OVRDRV sets location EXIT to a CDF with the current data field. Once-only code at ONCE then places a DCA EXIT in location SWAPO. OVRDRV then leaves the once-only code with the accumulator clear and executes the DCA EXIT at

SWAPO, thus clearing the previous CDF instruction at EXIT.

Solution: Replace the JMP SWAPO at location PTEMP with a JMP SWAPO+1.

Also replace the 6201 at location SWAP with 6202. This patch

fixes the problem and upgrades ${\tt OVRDRV}$ to ${\tt V2B}$.

NOTEBOOK MAINTENANCE

The following COS-310 articles are being republished here with the corrected Version and Sequence Numbers. Please adjust your notebook accordingly.

COS-31Ø V7.ØØ COMP

Seq 70.0 N

1 of 1

MAXIMUM SIZE OF DATA DIVISION (MD)

The COS-300/310 System Reference Manual (DEC-08-OCOSA-G-D) incorrectly indicates that the data division of a DIBOL program can be up to 32K bytes. This should be 24K bytes.

On page 4-11, the meaning of the error message TOO MUCH DATA should be changed to read: Program's Data Division exceeds 24K bytes.

OS/78 V3.Ø MONITOR NOTES & DOCUMENTATION Seq 72.1.1 N

1 of 1

UPDATE TO OS/78 USER'S MANUAL (DK)

An Update (#1) to the $\underline{OS/78}$ User's Manual is now available from the Software Distribution Center. The order number is

AD-5748B-T1

COS-31Ø V8.ØØ (PATCH 1)

Seg 81.1.1 M

1 of 2

COPYING FILES USING SYSGEN/B (MD)

PROBLEM

When executing SYSGEN/B to build a new system, if the response to IS EVERYTHING CORRECT? is NO, the switch for the question DO YOU WANT TO COPY YOUR FILES is not reset. This can result in copying files when not requested.

SOLUTION:

The following patch to SYSGEN corrects this problem. It also changes the version number of SYSGEN to V8.00A.

- 1. Create a "AICH command file (PTØ1) using the following editor commands:
 - .ER
 - .LN
 - .0100 SYSGEN
 - .0110 15
 - .0120 152
 - .0130 4540

 - .0140 153 .0150 4541
 - .0160 154
 - .0170 5555
 - .0180 155
 - .0190 0255
 - .0200 254
 - .0210 5152 .0220 255
 - .0230 3335
 - .0240 END
 - .0250 0531
 - .0260 20
 - .0270 314
 - .0280 2142
 - .0290 END
 - .0300 0041
 - .0310 END
 - .0320 /X
 - .0330 < ctr1/z >
 - .WR PT01

COS-31Ø V8.ØØ (PATCH 1)

Seq 81.1.1 M

2 of 2

2. Check the PTØl command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PTØ1

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PTØl command file to insure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PTØ1/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.ØØ (PATCH 2)

Seq 81.1.2 M

1 of 2

HALF-BLOCK TRANSFERS USING RX HANDLER (MD)

PROBLEM: There are occasions when the RX handler is called upon to read or write only half a block. The most common of these occasions (but definitely not the only one) is when adding an entry to a directory. On systems that are SYSGENed for both RXØls and RKØ5s, the RX handler transfers a full block causing part of the program or data area to be unexpectedly altered. When adding an entry to a directory, this results in corruption of the directory.

SOLUTION: The following patch to SYSGEN corrects this problem. It also changes the version number of SYSGEN to V8.00B.

1. Create a PATCH command file (PTØ2) using the following editor commands.

.ER .LN .ØlØØ SYSGEN .Ø11Ø 2 .Ø12Ø 171 .Ø13Ø 5265 .Ø14Ø 3Ø5 .Ø15Ø 7576 .Ø16Ø END .Ø17Ø ØØØ3 .Ø18Ø 2Ø .Ø19Ø 314 .Ø2ØØ 2143 .Ø21Ø END .Ø22Ø ØØØ1 .Ø23Ø END .Ø24Ø /X .Ø25Ø <ctr/z> .WR PTØ2

2. Check the PTØ2 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PTØ2

PATCH will respond by displaying the PATCH dialogue, and returning to the Monitor. If PATCH does not return to the Monitor, check the PTØ2 command file to insure that it was entered correctly.

COS-31Ø V8.ØØ (PATCH 2)

Seq 81.1.2 M

2 of 2

3. Install the patch by entering the following command:

.R PATCH, PTØ2/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

4. If you are running a system that is SYSGENed for RXØls and RKØ5s, you must run SYSGEN/C after installing the patch.

COS-31Ø V8.ØØ (PATCH 3)

Seg 81.1.3 M

1 of 2

USING COMMAND FILES WITH PIP (MD)

PROBLEM

PIP fails to get the response to the prompt MORE? from the command file when copying data files using option D.

SOLUTION

The following patch to PIP corrects this problem. It also changes the version number of PIP to V8.00A.

- 1. Create a PATCH command file (PT03) using the following editor commands:
 - .ER
 - .LN
 - .0100 PIP
 - .0110 02
 - .0120 371
 - .0130 2706
 - .0140 END
 - .0150 0332
 - .0160 06
 - .0170 306
 - .0180 0000
 - .0190 307
 - .0200 4501
 - .0210 310 .0220 1713
 - .0230 311
 - .0240 1314
 - .0250 312
 - .0260 5706
 - .0270 313
 - .0280 4000
 - .0290 314 .0300 7447
 - .0310 END
 - .0310 END
 - .0320 466
 - .0340 104
 - .0350 2142
 - .0360 END
 - .0370 0041
 - .0380 END
 - .0390 /X
 - .0400 <ctrl/z>
 - .WR PT03

COS-31Ø V8.ØØ (PATCH 3)

Seq 81.1.3 M

2 of 2

2. Check the PT03 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PT03

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PT03 command file to insure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PT03/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.ØØ (PATCH 4)

Seq 81.1.4 M

1 of 1

INCORRECT PARSING OF MENU COMMAND FILE (CW)

PROBLEM: When executing MENU with a DISPLAY section smaller than 256 characters, error messages may be displayed.

SOLUTION: The following patch to MENU corrects this problem.

- 1. Create a PATCH command file (PTØ4) using the following editor commands:
 - .ER
 - .LN
 - .ØlØØ MENU
 - .Ø11Ø 1
 - .Ø12Ø 255
 - .Ø13Ø 73Ø1
 - .Ø14Ø END
 - .Ø15Ø 6261
 - .Ø16Ø END
 - .Ø17Ø /X
 - .Ø18Ø <ctrl/z>
 - .WR PTØ4
- 2. Check the PTØ4 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:
 - .R PATCH, PTØ4

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PT $\emptyset 4$ command file to insure that it was entered correctly.

- 3. Install the patch by entering the following command:
 - .R PATCH, PTØ4/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.ØØ (PATCH 5)

Seq 81.1.5 M

1 of 3

MENU BUFFER PROBLEM (CW)

PROBLEM:

When more than three Monitor or Editor commands are specified for the first MENU command, MENU sleeps for several seconds when that command code is issued, then aborts and returns to the Monitor without issuing an error message.

SOLUTION:

The following patch to MENU corrects this problem.

COS-31Ø V8.ØØ (PATCH 5)

Seq 81.1.5 M

2 of 3

1. Create a PATCH command file (PT05) using the following editor commands:

```
.ER
.LN
.0100 MENU
.0110 2
.0120 61
.0130 1372
.0140 70
.0150 6201
.0160 71
.0170 3411
.0180 72
.0190 2323
.0200 73
.0210 1323
.0220 74
.0230 3411
.0240 75
.0250 5324
.0260 77
.0270 6211
.0280 103
.0290 6201
.0300 104
.0310 3411
.0320 107
.0330 4200
.0340 110
.0350 1600
.0360 124
.0370 6211
.0380 125
.0390 1410
.0400 126
.0410 6201
.0420 127
.0430 3411
.0440 130
.0450 2060
.0460 131
.0470 5324
.0480 132
.0490 5277
.0500 172
.0510 1577
.0520 END .0530 7460
.0540 END
.0550 /X
.0560<sup>°</sup>
            <ctrl/z>
.WR PT05
```

COS-31Ø V8.ØØ (PATCH 5)

Seg 81.1.5 M

3 of 3

2. Check the PTO5 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE CPTION C TG UPDATE rather than NEW BLCCK PATCHED CK. To check the command file enter the following:

.R PATCH, PT05

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PTO5 command file to insure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PT05/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.ØØ (PATCH 6)

Seq 81.1.6 M

1 of 4

ACCESSING RXØ1 DRIVES 2 AND 3 (CW)

PROBLEM:

Some RXO1 drives may have slightly different operating characteristics from the majority of RXO1 drives that have been shipped. This variation in the hardware prohibits accessing drives 2 and 3 with a standard RXO1 handler.

SOLUTION:

The following patch to SYSGEN corrects this problem. It also changes the version number of SYSGEN to v8.00C. SYSGEN/C must be run after the patch has been made to install the modified RX handler in the monitor.

COS-31Ø V8.ØØ (PATCH 6)

Seq 81.1.6 M

2 of 4

1. Create a PATCH command file (PT06) using the following editor commands:

- .ER
- .LN
- .0100 SYSGEN
- .0110 2
- .0120 361
- .0130 0346
- .0140 375
- .0150 3743
- .0160 END
- .0170 0001
- .0180 3
- .0190 6
- .0200 6745
- .0210 27
- .0220 6747
- .0230 40
- .0240 1350
- .0250 47
- .0260 5342
- .0270 53
- .0280 7346
- .0290 54
- .0300 3316
- .0310 55
- .0320 1337
- .0330 56
- .0340 7010
- .0350 57
- .0360 6750
- .0370 60
- .0380 6755
- .0390 61
- .0400 7600
- .0410 62
- .0420 6754
- .0430 63
- .0440 0050
- .0450 107
- .0460 5351
- .0470 112

COS-31Ø V8.ØØ (PATCH 6)

Seq 81.1.6 M

3 of 4

.0480 5746 .0490 END .0500 0025 .0510 20 .0520 314 .0530 2144 .0540 END .0550 0001 .0560 END .0570 /X

.WR PTO6

COS-31Ø V8.ØØ (PATCH 6)

Seq 81.1.6 M

4 of 4

2. Check the PT06 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PTO6

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PTO6 command file to insure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PT06/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.ØØ (PATCH 7)

Seq 81.1.7 M

1 of 3

DATE COMMAND - ACCEPTS INVALID DAY (CW)

PROBLEM:

When entering the date into the system, the MONITOR accepts a numeric day of zero or blank as valid.

SOLUTION:

The following patch to the MONITOR corrects this problem. It changes the version number of the MONITOR to V8.00A. Please note that COS-310 assumes each month is 31 days long, and therefore will accept such dates as 31-FEB-79.

```
COS-31Ø V8.ØØ (PATCH 7)
```

Seq 81.1.7 M

2 of 3

1. Create a PATCH command file (PTO7) using the following editor commands:

```
.ER
.LN
.0100 /N
.0110 15
.0120 204
.0130 7440
.0140 205
.0150 1314
.0150 205
.0170 7700
.0180 207
.0190 5315
.0200 210
.0210 4563
.0220 211
.0230 5315
.0240 212
.0250 4565
.0250 213
.0270 0030
.0280 214
.0290 3203
.0300 215
.0310 2313
.0320 216
.0330 2203
.0340 217
.0350 1713
.0350 220
.0370 2313
.0380 221
.0390 7500
.0400 222
.0410 5315
.0420 223
.0430 1103
.0440 224
.0450 7650
.0450 225
.0470 1104
.0480 226
```

COS-31Ø V8.ØØ (PATCH 7)

Seq 81.1.7 M

3 of 3

```
.0490 1713
.0500 227
.0510 7640
.0520 230
.0530 5215
.0540 231
.0550 1203
.0550 232
.0570 7002
.0580 233
.0590 7110
.0600 251
.0610 0213
.0620 END
.0530 0434
.0640 26
.0550 255
.0550 2142
.0670 END
.0580 0041
.0590 END
.0700 /X
.0710 <ctrl/z>
.WR PT07
```

2. Check the PT07 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PT07

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PT07 command file to ensure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PT07/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.Ø1A (PATCH 1)

Seq 81.2.1 M

1 of 3

MENU BUFFER PROBLEM (CW)

PROBLEM: When more than three Monitor or Editor commands are specified for

the first MENU command, MENU sleeps for several seconds when that command code is issued, then aborts and returns to the Monitor without

issuing an error message.

SOLUTION: The following patch to MENU corrects this problem.

COS-31Ø V8.Ø1A (PATCH 1)

Seq 81.2.1 M

2 of 3

1. Create a PATCH command file (PTO1) using the following editor commands:

```
.ER
.LN
.0100 MENU
.0110 2
.0120 61
.0130 1372
.0140 70
.0150 6201
.0160 71
.0170 3411
.0180 72
.0190 2323
.0200 73
.0210 1323
.0220 74
.0230 3411
.0240 75
.0250 5324
.0260 77
.0270 6211
.0280 103
.0290 6201
.0300 104
.0310 3411
.0320 107
.0330 4200
.0340 110
.0350 1600
.0360 124
.0370 6211
.0380 125
.0390 1410
.0400 126
.0410 6201
.0420 127
.0430 3411
.0440 130
.0450 2060
.0460 131
.0470 5324
.0480 132
.0490 5277
.0500 172
.0510 1577
.0520 END
.0530 7460
.0540 END
.0550 /X
.0560
          <ctrl/z>
```

.WR PTO1

COS-31Ø V8.Ø1A (PATCH 1)

Seq 81.2.1 M

3 of 3

2. Check the PTO1 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PTO1

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PTO1 command file to insure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PTO1/C

 ${\tt PATCH}$ will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.Ø1A (PATCH 2)

Seq 81.2.2 M 1 of 3

ACCESSING RXØ1 DRIVES 2 and 3 (CW)

PROBLEM:

Some RX01 drives may have slightly different operating characteristics from the majority of RX01 drives that have been shipped. This variation in the hardware prohibits accessing drives 2 and 3 with a standard RX01 handler.

SOLUTION:

The following patch to SYSGEN corrects this problem. It also changes the version number of SYSGEN to V8.01B. SYSGEN/C must be run after the patch has been made to install the modified RX handler in the monitor.

COS-31Ø V8.Ø1A (PATCH 2)

Seg 81.2.2 M

2 of 3

1. Create a PATCH command file (PT02) using the following editor commands:

.ER .LN .0100 SYSGEN .0110 2 .0120 351 .0130 0346 .0140 375 .0150 3743 .0160 END .0170 0001 .0180 3 .0190 5 .0200 6745 .0210 27 .0220 6747 .0230 40 .0240 1350 .0250 47 .0260 5342 .0270 53 .0280 7346 .0290 54 .0300 3316 .0310 55 .0320 1337 .0330 56 .0340 7010 .0350 57 .0350 6750 .0370 60 .0380 6755 .0390 61 .0400 7600 .0410 62 .0420 6754 .0430 63 .0440 0050 .0450 107

.0460 5351 .0470 112 COS-31Ø V8.Ø1A (PATCH 2)

Seq 81.2.2 M

3 of 3

```
.0480 5746
.0490 END
.0500 0025
.0510 20
.0520 314
.0530 2243
.0540 END
.0550 0001
.0560 END
.0570 /X
.0580 <ctrl/z>
```

2. Check the PTO2 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT—USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PT02

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PT02 command file to insure that it was entered correctly.

3. Install the patch by entering the following command:

.R PATCH, PT02/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

COS-31Ø V8.Ø1A (PATCH 3)

Seq 81.2.3 M

1 of 3

DATE COMMAND - ACCEPTS INVALID DAY (CW)

PROBLEM:

When entering the date into the system, the MONITOR accepts a numeric day of zero or blank as valid.

SOLUTION:

The following patch to the MONITOR corrects this problem. It changes the version number of the MONITOR to V8.01B. Please note that COS-310 assumes each month is 31 days long, and therefore will accept such dates as 31-FEB-79.

COS-31Ø V8.Ø1A (PATCH 3)

Seq 81.2.3 M

2 of 3

1. Create a PATCH command file (PT03) using the following editor commands:

- .ER
- .LN
- .0100 /N
- .0110 16
- .0120 204
- .0130 7440
- .0140 205
- .0150 1314
- .0160 206
- .0170 7700
- .0180 207
- .0190 5315
- .0200 210
- .0210 4563
- .0220 211
- .0230 5315
- .0240 212
- .0250 4565
- .0260 213
- .0270 0030
- .0280 214
- .0290 3203
- .0300 215
- .0310 2313
- .0320 216
- .0330 2203
- .0340 217
- .0350 1713
- .0350 220
- .0370 2313 .0380 221
- .0390 7500
- .0400 222
- .0410 5315
- .0420 223 .0430 1103
- .0440 224
- .0450 7550
- .0460 225
- .0470 1104
- .0480 226

COS-31Ø V8.Ø1A (PATCH 3)

Seq 81.2.3 M

3 of 3

```
.0490 1713
.0500 227
.0510 7540
.0520 230
.0530 5215
.0540 231
.0550 1203
.0560 232
.0570 7002
.0580 233
.0590 7110
.0500 251
.0510 0213
.0620 END
.0530 0434
.0640 26
.0550 255
.0660 2243
.0670 END
.0680 0001
.0690 END
.0700 / X
.0710 <ctrl/z>
.WR PT03
```

2. Check the PT03 command file by running PATCH without the /C option. PATCH simulates the patching operation but does not change the file on the system device. When run without the /C option, PATCH displays CHECKSUM CORRECT--USE OPTION C TO UPDATE rather than NEW BLOCK PATCHED OK. To check the command file enter the following:

.R PATCH, PT03

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor. If PATCH does not return to the Monitor, check the PT03 command file to ensure that it was entered correctly.

- 3. Install the patch by entering the following command:
 - .R PATCH, PT03/C

PATCH will respond by displaying the PATCH dialogue and returning to the Monitor.

PDP-8 DIGITAL SOFTWARE NEWS CUMULATIVE INDEX DECEMBER/JANUARY 1980

This is a complete listing of all articles for current products supported in the 8 Digital Software News. Missing sequence numbers may pertain to problems unique to other versions of the same product.

IMPORTANT!

Unassigned articles are indicated: UNASSIGNED.

Flags are currently being installed for all articles. The flags and definitions are as follows.

- M = Mandatory Patch. These patches correct errors in the software product. All users are required to apply these patches to maintain consistent "user level" unless the accompanying article specifies otherwise.
- F = Optional Feature Patch. These patches extend or configure functionality into the product. These functions will be treated as a supported part of the product for the duration of the current release and will be incorporated with any future release, unless otherwise stated.
- R = Restriction. These articles discuss areas that will not be patched in the current release because they require major modifications orr because of the product. Restrictions, except those described as permanent, are reviewed and modified when possible as part of the normal release cycle.
- N=N Note. These articles provide explanatory information that supplements the manual set and provide more detailed information about a program or package. They also provide procedural information to make it easier to use a program or package.

Component	Sequence	Mon/Yr
OS/8 FORTRAN IV PLOTTER V3C		
FORTRAN IV PLOTTER ROUTINE, PSCALE, HANGS IN ENDLESS LOOP PLOTTER OUTPUT PROBLEM	01 02	Apr 77 Aug 77
OS/8 V3D		•
*Articles dated October 1977 appeared in OS/8 V3D Software Review, October	ober 1977.	
DOCUMENTATION FAULTY DESCRIPTION FOR ERROR PERFORMANCE	01 N#	Oct 77
HANDLER CTRL/Z AND NULL	01 0*	Oct 77
NOTES/PROGRAMMING HINTS DATE ALGORITHM	01 N	Dec 77
UTILITIES ADDING A NEW CCL COMMAND DEFAULT EXTENSIONS FOR TECO HOW TO COPY LARGE FILES	01 N* 02 O* 03 O*	Oct 77 Oct 77 Oct 77
OS/8 EXTENSION KIT V3D		
BASIC RESTRICTION ON EXTENDED RANGE FOR-NEXT LOOPS	01 R	Oct 77
BATCH CANNOT MOVE BATCH INPUT FILE RESTARTING BATCH RUNNING BATCH IN 32K	01 R 02 N 03 O	Oct 77 Oct 77 Oct 77
MSBAT MARK SENSE BATCH FORTRAN II READS THROUGH DOLLAR SIGNS	01 0	0et 77
GENIOX GENIOX QUESTIONS	01 N	Oct 77

Component		Sequence	Mon/Yr
	OS/8 FORTRAN IV V3D		
FORLIB.RL V5A PLOT, ADC, AND REALTM MODULES		01 N	Oct 77
F4.SV V4A PASSING ARGUMENTS EQUIVALENCE STATEMENT COMPILER VERSION NUMBERS COMPILER GENERATES WRONG LENGTH QUESTIONS CONCERNING ARRAY SIZES		01 R 02 M 03 N 04 O	Oct 77 Oct 77 Oct 77 Oct 77 Oct 77
FRTS V5A USE OF EAE MODE A FORMATTED INPUT RECORDS LONGER THAN 132 RUNNING FORTRAN IV UNDER BATCH IN 32K FPP-8A	CHARACTERS	01 R 02 O 03 O 04 O	Oct 77 Oct 77 Oct 77 Oct 77
	OS/8 V3D		
MONITOR			
NOTES & DOCUMENTATION USING THE PDP-8/A PARALLEL PORT FOR A LI SOFTWARE REVIEW CORRECTION PROBLEM WHEN YOU DESTROY BATCH COMPONENTS, SUBCOMPONENTS, AND MODULES I ALPHABETIZED LIST OF OS/8 V3D COMBINED I HOW TO GET VERSION NUMBERS	FOR OS/8 V3D COMBINED KIT	21.1.1 N 21.1.2 N 21.1.3 N 21.1.4 N 21.1.5 N 21.1.6 N	Mar 78 Dec/Jan 80 Aug/Sep 78 Dec/Jan 80 Dec/Jan 80 Dec/Jan 80
CCL DEFAULT EXTENSIONS TO TECO		21.3.1 0	May 78
UTILITIES NOTES & DOCUMENTATION DOCUMENTATION EXAMPLE FOR SET BLOCK		21.10.1 N	Jun/Jul 79
CREF BUG WITH FIXTAB		21.15.1 M	.Мау 78
EDIT EDIT PROBLEM WITH NO FORMFEED AT END OF EDIT Q COMMAND AFTER L COMMAND EDIT Q COMMAND PATCH	THE INPUT FILE	21.17.1 M 21.17.2 M 21.17.3 M	Mar 78 Jun/Jul 79 Jun/Jul 79
FOTP INCORRECT DIRECTORY VALIDATION		21.19.1 M	Jun/Jul 79
MCPIP DATE-78 PATCH FOR MCPIP		21.21.1 M	Mar 78
PAL8 INCORRECT CORE SIZE ROUTINE ERRONEOUS LINK GENERATION NOTED ON PAGE	DIRECTIVE	21.22.1 M 21.22.2 M	Aug/Sep 78 Aug/Sep 78
PIP PIP /Y OPTION DOES NOT WORK PROPERLY WHI HEAD FROM A DEVICE WHICH IS NOT CO-RECUSE OF PIP'S /Y OPTION		21.23.1 M 21.23.2 N	Aug/Sep 78 Aug/Sep 79
PIP10 DATE '78 PATCH TO PIP10		21.24.1 M	Jun/Jul 79
SET USING SET WITH TWO-PAGE SYSTEM HANDLERS SCOPE RUBOUTS FAIL IN SET PARSING OF = IN TTY WIDTH OPTION		21.26.1 M 21.26.2 M 21.26.3 M	May 78 May 78 Aug/Sep 78
HANDLERS ASR33 HOW TO WRITE TWO-PAGE SYSTEM HANDLERS		21.40.1 N	May 78
LPQ LDP01 HANDLER FAILS TO RECOGNIZE TABS		21.49.1 M	Jan 80

Component	Sequence	Mon/Yr
FORTRAN II & SABR SABR		
LINE BUFFER PROBLEM IN SABR	21.91.1 M	Oct/Nov 79
OS/8 EXTENSION KIT V3D		
BASIC		
GOOD RANDOM NUMBERS FOR OS/8 BASIC BASIC EDITOR HAS A FIELD BOUNDARY BUG	31.1.1 N 31.1.2 N	May 78 Aug/Sep 78
BASIC.UF INCOMPATIBLE FROM OS/8 V3C	31.5.1 M	Aug/Sep 78
BRTS IOTABLE OVERFLOW BASIC PNT FUNCTION LINE SIZE ON OUTPUT OF BASIC PATCH TO CHANGE LINE PRINTER WIDTH PATCH TO BRTS FOR ADDRESSING LAB 8/E FUNCTIONS	31.11.1 M 31.11.2 M 31.11.3 O 31.11.4 F 31.11.5 M	Mar 78 Jul 78 Jul 78 Oct/Nov 79 Oct/Nov 79
TECO & OTHERS TECO		
CHANGING THE DEFAULT EU VALUE CHANGING THE DEFAULT EH VALUE REMOVING YANK PROTECTION SCOPE SUPPORT FOR VT05 USERS PROBLEM WITH AY COMMAND CONDITIONALS INSIDE ITERATIONS ECHOING OF WARNING BELLS CTRL/U SOMETIMES FAILS AFTER * MULTIPLYING BY O IN TECO Q-REGISTERS DON'T WORK IN 8K CAN'T SKIP OVER A "W" UNSPECIFIED ITERATIONS AFTER INSERTS NEW FEATURES IN TECO V5	31.20.1 0 31.20.2 0 31.20.3 0 31.20.4 0 31.20.5 M 31.20.6 M 31.20.7 M 31.20.8 M 31.20.11 M 31.20.11 M 31.20.12 M 31.20.13 M 31.20.14 N	Mar 78 May 78 May 78 MAY 78 May 78 Jul 78 Aug/Sep 78
FUTIL		
FUTIL PATCH PATCH TO FIX 'SHOW CCB' AND MAPPING OF 'CD' MODULES -237 PATCH FUTIL PATCH TO MACREL/LINK OVERLAYS	31.21.1 M 31.21.2 M 31.21.3 O 31.21.4 N	May 78 Aug/Sep 78 Aug/Sep 78 Jun/Jul 79
MSBAT DIM STATEMENT NOT WORKING IN MSBAT	31.22.1 M	Dec 78/Jan 79
BATCH		
MANUAL INTERVENTION REQUIRED ERRONEOUSLY	31.23.1 M	Aug/Sep 78
OS/8 V3D DEVICE EXTENSIONS		
MONITOR		
NOTES & DOCUMENTATION NOTES ON VERSION NUMBERS NOTES ABOUT OS/8 V3D DEVICE EXTENSIONS FRTS PATCH BUILD DOCUMENTATION	35.1.1 N 35.1.2 N 35.1.3 M 35.1.4 N	Apr/May 79 Apr/May 79 Apr/May 79 Apr/May 79
MONITOR MONITOR V3S PATCH	35.2.1 M	Apr/May 79
UTILITIES	33.2	
FUTIL UNDER BATCH PATCH	35.13.1 M	Apr/May 79
ABSLDR ABSLDR PATCH	35.18.1 M	Apr/May 79
BASIC NOTES & DOCUMENTATION OS/8 DEVICE EXTENSIONS BASIC DOCUMENTATION	35.50.1 N	Apr/May 79

<u>Component</u>	MACDET /I THEED WOA	Sequence	Mon/Yr
05/8	MACREL/LINKER V2A		
NOTES & DOCUMENTATION EXPUNGE DOCUMENTATION ERROR		41.1.1 N	Jun/Ju
MACREL VERSION NUMBERS		41.1.2 N	Jun/Ju
MACRO RESTRICTION IN MACREL		41.1.3 N	Aug/Se
MACREL			
EXPUNCE PATCH TO MACREL		41.4.1 F 41.4.2 N	Jun/Ju
INCONSISTENCIES IN MACREL ERROR REPORTING FORWARD REFERENCE PATCH TO MACREL		41.4.3 M	Aug/Se Aug/Se
OVRDRV			
PATCH TO OVRDRV TO CORRECT CDF PROBLEM		41.5.1 M	Dec/Ja
08/	8 FORTRAN IV V3D		
F4 FORTRAN COMPILER FAILS TO RECOGNIZE " AS AN E	RROR	51.3.1 M	Jul 78
FORTRAN COMPILER NOT RECOGNIZING SYNTAX ERROR		51.3.2 M	Jul 78
FORTRAN RUNTIME SYSTEM 2-PAGE HANDLER		51.3.3 0	Aug/Se
	RTS-8 V3		
SYSGEN		62,25,1 F	Jun/Jı
RTS-8 V3 NUMERICAL COMPARE SKIP FUNCTIONS		02.23.1 F	JU117 J
	COS-310 V7.00		
COMP		70 0 N	Dec/Ja
MAXIMUM SIZE OF DATA DIVISION		70.0 N	Dec/1
	OS/78 V3.0		
MONITOR NOTES & DOCUMENTATION			
UPDATE TO OS/78 USER'S MANUAL		72.1.1 N	Dec/Ja
BASIC			
NOTES & DOCUMENTATION PRINT USING STATEMENT		72.60.1 N	Oct/No
RLO1 DOCUMENTATION ERROR		72.60.2 M	Oct/No
BASIC AND SLU2 DOCUMENTATION		72.60.3 N	Oct/No
BRTS PATCH TO CHANGE TTY WIDTH		72.64.1 F	Oct/No
	COS-310 V7.00		
COMP MAXIMUM SIZE OF DATA DIVISION		70.0 N	Dec/J
	COS-310 V8.00		
COPYING FILES USING SYSGEN/B HALF/BLOCK TRANSFERS USING RX HANDLER		81.1.1 M 81.1.2 M	Dec/J Dec/J
USING COMMAND FILES WITH PIP		81.1.3 M	Dec/J
INCORRECT PARSING OF MENU COMMAND FILE		81.1.4 M	Dec/J
MENU BUFFER PROBLEM		81.1.5 M	Dec/J
ACCESSING RX01 DRIVES 2 AND 3 DATE COMMAND - ACCEPTS INVALID DAY		81.1.6 M 81.1.7 M	Dec/J Dec/J
	COS 210 VO 014		
MONIA DURANTA PROPERTY	COS-310 V8.01A	04 0 4 4	B.: /-
MENU BUFFER PROBLEM		81.2.1 M 81.2.2 M	Dec/J Dec/J
ACCESSING RXO1 DRIVES 2 AND 3 DATE COMMAND - ACCEPTS INVALID DAY		81.2.3 M	Dec/J:
DATE COMMAND - MOCENIO INVALID DAI		01.2.5 M	Dec/1

Gigital Software Product Description

PRODUCT NAME: OS/8, Version 3D, Operating System

SPD 4.1.11

DESCRIPTION:

OS/8 is a comprehensive operating system that runs on PDP-8 computer systems. OS/8 provides an extensive collection of application software development tools and an efficient runtime environment for the production use of these application programs.

Programs stored on disk can be accessed for loading, modification, or execution by simple keyboard commands.

OS/8 allows program chaining, so that a program can be divided into a set of smaller programs. Very large programs can be coded in small segments that can be overlaid during execution to conserve memory storage.

Programs written under OS/8 can be device-independent coded. Program I/O is performed by standard calls to the system device handlers and the I/O supervisor User Service Routines. This feature permits programs to be written without regard for the characteristics of a particular I/O device. When a device independent program is executed, the user enters a runtime I/O specification command selecting the I/O devices to be employed during program execution. As the system configuration grows, device-independent programs can use the new I/O capabilities immediately, with no rewriting or reassembly.

Device independence can be maintained even for nonstandard devices. Nonstandard devices are added to the system by coding a 1- or 2-page device handler and appending it to the standard device handlers supplied with the system.

Every OS/8 system is easily extended to include additional peripheral devices. Fully supported I/O device options include high- or low-speed paper tape equipment, card readers, line printers, a selection of hard-copy or CRT console terminals, and a variety of disk and magnetic tape mass storage devices.

OS/8 Monitor System Programs include:

CCL (Concise Command Language) — provides the user with a set of easy-to-use terminal commands. The OS/8 version of CCL is similar to that of TOPS-10, the DECsystem-10 monitor. Typical commands available in CCL include: COPY, DIRECTORY, HELP, RENAME, LIST, and DELETE.

EDIT — incorporates all features of the stand-alone package and provides I/O device independence

PAL8 — is an extended assembler. It includes some of the features of both PAL III and MACRO-8, plus additional features such as conditional assembly, expanded symbol table (allowing over 1500 entries on a 12K-word system), hash symbol table search, extended pseudo-operations, and paginated listings with page headings and numbered pages.

RALF — is an assembler that translates PDP-8 floating point processor (FPP) source code into binary code. RALF is a subset of the OS/8 FORTRAN IV System.

ABSLDR (Absolute Loader) — is the Absolute Loader program which reads a binary program into memory and creates a resident memory image suitable for addition to the system library or for immediate execution.

ODT (Octal Debugging Technique) — allows the user to run prototype programs under carefully controlled conditions, modify programs during execution, or monitor the state of main memory and the major registers. The OS/8 version of ODT does not require any memory other than certain areas of the 256-location resident monitor and at most 3 additional words in each field. It is swapped into memory from the system device whenever required, while overlaid portions of the running program are saved on the device for later restoration.

PIP (Peripheral Interchange Program) — is a file manipulation routine. OS/8 PIP can transfer ASCII, memory image, or binary files from one device to another. PIP can also merge or delete files and list, zero, or compress file directories.

FOTP (File-Oriented Transfer Program) — allows the user to transfer groups of files between two OS/8 file-structured devices with minimum terminal interaction and device overhead. For example, all ASCII files can be transferred between a DECtape and disk with one command.

OS/8 FORTRAN II — is a complete FORTRAN II programming system consisting of:

- 1. FORT: The FORTRAN compiler
- 2. SABR: A Symbolic Assembler for Binary Relocatable programs
- LOADER: The linking loader that accepts an openended list of relocatable binary files and generates a memory image suitable for saving or execution.

The FORTRAN II system includes such features as Hollerith constants, implied DO loops, program chaining, and mixed FORTRAN and assembly language statements.

November 1979

AE-0844K-TA

BUILD — the system generation program for allows convenient generation or reconfiguration of any OS/8 system. BUILD is most frequently employed to insert or delete system I/O device handlers to permit the system I/O structure to be tailored to a particular application.

CREF (Cross Reference Utility Program) — aids the development programmer in writing, debugging, and maintaining assembly language programs by providing the ability to locate all references to a particular symbol. Input is supplied to the OS/8 version of CREF in the form of an ASCII listing file produced by either PAL8, RALF, or the SABR assembler.

SRCCOM (Source Compare) — compares two source files line by line and creates a third file listing all differences between the two sources.

PIP10 — allows the user to transfer ASCII files between DECsystem-10 DECtapes and OS/8 devices. This utility runs only on a PDP-8, 8/I, 8/L, 8/E, 8/M, or 8/A equipped with either TC08 or TD8E DECtape.

MINIMUM HARDWARE REQUIRED:

- PDP-8, DECstations 78/88, or PDP-12 with at least 8K words of memory
- · At least 64K words of mass storage
- Console terminal (LT33, LT35, LA30, LA36, VT05, VT50, VT52)

OPTIONAL HARDWARE:

- · Additional memory to a system total of 32K words
- TM8-E magnetic tape controller and transport
- TA8-E DECcassette controller and dual drive
- RK8-E, RK08, DF32, or RF08 disk system
- RL8A disk system*
- TC08 or TD8-E DECtape controller and dual transport with MR8-E ROM
- LS8-E, LE8-E, LA180, LQP78, or LV8 line printer
- CR8-F or CM8-F card reader
- TP8-E high-speed paper tape reader/punch
- RX8 dual-diskette system (single density)
- RX28 dual-diskette system (double density)*
- KS33 low-speed paper tape reader/punch
- KT8A extended memory support module*
 *Requires OS/8 Device Extension for RL01, RX02, and KT8A.

PREREQUISITE SOFTWARE:

None

OPTIONAL SOFTWARE:

RTS/8
OS/8 Extension Kit
OS/8 FORTRAN IV
OS/8 MACREL/LINKER
OS/8 V3D Device Extension

TRAINING CREDITS:

None

SUPPORT CATEGORY:

OS/8 is a DIGITAL Supported Software Product.

SOFTWARE INSTALLATION:

OS/8 is a software product engineered to be installed by the customer and includes other Software Product Support services listed below.

SOFTWARE PRODUCT SUPPORT:

OS/8 includes Standard Services as defined in the Software Support Categories Addendum of this SPD.

ORDERING INFORMATION:

Source and/or listing options are only available after the purchase of at least one supported license and after a source license agreement is in effect.

The following key (B, C, E, N, R, Y, Z) represents the distribution media for the product and must be specified at the end of the order number, e.g., QF015-AC = binaries on DECtape.

B = Papertape

C = DECtape

E = RK05 Disk Cartridge

N = TU60 Cassette

R = Microfiche

Y = RX01 Floppy Diskette

Z = No hardware dependency

QF015 -A— Single-use license, binaries, documentation, support services (media: B, C, N, Y)

Upgrade Options:

The following option is available as an upgrade kit from OS/78 for use on the same single CPU on which OS/78 is licensed. The license previously granted for OS/78 shall be extended to cover this upgrade.

QF025 -C— OS/8, Version 3D, Single-use license, binaries, documentation, no support services (media: Y)

Update Options:

Users of OS/8 whose specified Support Category warranty has expired may order under license the following software update at the then current charge for such update. The update is distributed in binary form on the appropriate medium and includes no installation or other services unless specifically stated.

QF015 -H— Binaries, documentation (media: B, C, N, Y)

Users of OS/8 whose specified Support Category warranty has not expired may order under license the following software update for the then current media charge. The update is distributed in binary form on the appropriate medium and includes no installation or other services unless specifically stated.

QF015 -W— Binaries, documentation (media: B, C, N, Y)

Source/Listing Options:

QF015 -E- All sources (media: C, E, Y)

QF015 -F- Listings (media: R)

Source/Listing Update Options:

The following options are available to licensed users as updates to source/listing options. The update is distributed in source form on the appropriate medium and includes no installation or other services unless specifically stated.

QF015 -N- Sources update (media: C, E, Y)

Miscellaneous Options:

QF015 -G— Documentation only (media: Z)

ADDITIONAL SERVICES:

QF015 -S— Consulting Services (media: Z)

Software Product Description

PRODUCT NAME: RTS/8, Version 3.0, Real Time Operating System

SPD 4.20.8

DESCRIPTION:

RTS/8 is highly flexible, event-driven, multitasking, multiprogramming real-time operating system, which runs on all PDP-8 family computers except PDP-8/S. The RTS/8 system allows up to 127 tasks to run concurrently. Tasks compete for resources on a fixed-priority basis, RTS/8 may be entirely memory resident or it may include non-resident modules. Each system is custom-configured by the user, with the aid of an English language question/answer System Generating Program, running under the OS/8 operating system.

OS/8 can also run in RTS/8 background and may be used for development work in larger configurations. The RTS/8 Executive Module is entirely memory resident. Its size can range from 640 to 2,000 words of memory, depending on the number of tasks included in the system.

MACREL/LINKER, the assembly language programming system is now included in RTS/8 Version 3.0. It contains the functions of the OS/8 PAL8 Assembler and Absolute Loader (ABS.LDR) programs with major enhancements. MACREL is a macro assembler producing relocatable modules. LINKER is a linking loader.

To create an RTS/8 system you must now use MACREL/LINKER Version 2A rather than PAL8 and ABS.LDR. The manual linking and loading of an RTS/8 system to create partitions for non-resident tasks is automatically performed by LINK.

Some other RTS/8 features are:

- Maximum of 126 foreground tasks and one background (the OS/8 module) task
- Fixed task priority
- Tasks can be scheduled by themselves, by another task, or by the operator.
- Tasks can be scheduled for immediate execution, at a fixed interval from the time requested, or a specific time of day.
- Tasks can be swapped into and out of memory as required.
- The RTS/8 executive provides facilities for tasks to communicate with other tasks

The following modules (tasks) are provided by DIGITAL in source form. The SYSGEN procedure is used to create parameter and batch files. The batch files are run to create a specialized RTS/8 system.

RTS/8 Executive (monitor)

- · Controls task execution
- Schedules events (If a clock is available on the system)
- · Sends messages to system tasks
- · Suspends task execution

Memory Management Swap Module

This module swaps tasks into and out of memory as required. SWAP determines whether a task is already in memory or whether a task must be swapped out to make room for a new task.

Monitor Console Routine (MCR) Module

The Monitor Console Routine provides the operator/programmer with functions to control, inspect, debug, suspend, schedule, and print the status of tasks within the system.

Mass Storage Modules

This group of drivers accepts the same request message format to read or write blocks on the following storage devices:

- RX8 Floppy Diskette
- RX28 Floppy Diskette
- RK8-E Cartridge Disk
- TC08 DECtape
- RL8-A Cartridge Disk

OS/8 File Modules

This module provides the user the ability to look up, create, and delete files in OS/8 directories from a foreground task. This module, when used in conjunction with one or more of the previously mentioned mass storage modules, allows the programmer the capability to read or write OS/8 files onto the previously mentioned storage device.

OS/8 Background Module

The combination of the previously mentioned device drivers and the OS/8 background module allows the execution of any of the OS/8 operating system utilities (i.e., PAL8, EDITOR, TECO, BATCH, BASIC, but excluding Industrial BASIC, BUILD, BOOT, RXCOPY) to run under the RTS/8 executive. OS/8 can be run in the top two or more memory fields under control of the KM8-E, (standard on PDP-8/E, F, M with 8K words or more memory) or time shared PDP-8 (KT08) hardware option. Alternately, OS/8 backgrounds up to 32K in size may be run under the KT8-A Memory Expansion Control.

November 1979 AE-0848H-TA

The OS/8 background terminal may be shared with the foreground or be on a separate terminal.

Clock Module

This accepts requests (in the form of RTS/8 messages) to perform actions after a specified time has elapsed.

Console Terminal Module; Non-console Terminal Module

These drivers handle a single terminal in either line or character mode. Input in line mode is terminated by a carriage return or an ALTMODE character, and may be edited with a RUBOUT or CTRL/U character. In character mode, input is not echoed and is terminated by overflow of a specified character count. One terminal per system may be shared with the OS/8 background. One terminal per system may be designated to support emergency message breakthrough. Systems with a clock may support message timeout on all terminals.

Line Printer Module

The RTS/8 line printer supports an LE-8, LS8-F or LV-8 Line Printer. The structure of the calling sequence is identical to the line mode calling sequence of the terminal module.

Power Fail/Auto-Restart Module

This module provides the mechanism by which the system can recover from a power failure. If a power low condition occurs, the processor state is saved and the processor is halted. When power is restored, the processor state is restored and control is transferred to the power fail module. This module is not supported with MOS Memory.

KL8-A Support Module

This module allows the use of one to three KL8-A serial 4-line handlers under RTS/8 control.

NULL8A Module

This module is a special null job for the PDP-8A which uses the LED lights to count in decimal at a rate of approximately one increment per second. (Null job is an idle mode indicator.)

Exit Module

This module, if present, allows tasks to perform special actions before an RTS/8 exit to OS/8 is completed.

NOTE:

KT8-A Memory Expansion to 128K words is provided in all DIGITAL supported RTS/8 modules.

NOTE

Driver modules are included, but not supported for LINCtape, RK08, DF32, RF08, CASSETTE.

NOTE:

Simultaneous RL8-A and RK8-E DMA transfers are not allowed by the hardware. The software drivers are interlocked so that one at a time is in action.

MINIMUM HARDWARE REQUIRED:

Minimum RTS/8 configuration for a run-time system is as follows:

Without OS/8 background support:

- Any PDP-8 family processor (except a PDP-8/S) with at least 12K words of memory
- Console Terminal

With OS/8 background support:

- Any PDP-8 family processor (except a PDP-8/S) or VT78 with at least 16K words of memory
- One terminal
- RX8, RX28, TC08, RK8-E, RL8-A

Minimum RTS/8 development configuration is a 16K OS/8 operating system configuration (which requires a PDP-8 with mass storage and an OS/8 supported terminal).

OPTIONAL HARDWARE:

Additional memory (up to 128K words system total) DK8-EA, DK8-EC, DK8-EP Clocks

LA30-PA, VT05 Terminals (up to 2400 baud with KL8-JA) VT50, VT52, VT100 Video Terminal (teletype level support)

LT33, LT35 Teletypewriters

TC08 DECtape (not TD8-E)

RK8-E Disk

RX8 Dual Diskette System (single density)

RX28 Dual Diskette System (double density)

DP8-E Power Fail/Auto-Restart

LE-8, LS8-F, LV-8 Line Printer

LA30, LA36 Serial DECwriters .

KL8-A 4-Channel Interface

RTS/8, Version 3.0 does not support the FPP8/A, FPP8/E, or FPP12 nor does it support use of these devices by the OS/8 monitor running in background.

PREREQUISITE SOFTWARE:

OS/8, Version 3D or later

OPTIONAL SOFTWARE:

OS/8 Device Extension is required for RL8-A, RX28 or KT8-A.

TRAINING CREDITS:

None

SUPPORT CATEGORY:

RTS/8 is a DIGITAL Supported Software Product.

SOFTWARE INSTALLATION:

RTS/8 is a software product engineered to be installed by the customer and includes other Software Product Support services listed below.

SOFTWARE PRODUCT SUPPORT:

RTS/8 includes Standard Services as defined in the Software Support Categories Addendum of this SPD.

ORDERING INFORMATION:

Source and/or listing options are only available after the purchase of at least one supported license and after a source license agreement is in effect.

The following key (C, E, Q, Y) represents the distribution media for the product and must be specified at the end of the order number, e.g., QF028-XC = sources on DECtape.

C = DECtape

E = RK05 Disk Cartridge Q = RL01 Disk Cartridge

Y = RX01 Floppy Diskette

Source/Listing Options

QF028 -X— Single-use license, source license, sources for RTS/8; binaries for MACREL/LINKER, supportservices (media: C, E, Q, Y)

QF028 -Y— Single-use license, source license, sources for RTS/8; binaries for MACREL/LINKER, no support services (media: C, E, Q, Y)

Update Options

Users of RTS/8 whose specified Support Category warranty has expired may order under license the following software update at the then current charge for such update. The update is distributed in source form on the appropriate medium and includes no installation or other services unless specifically stated.

QF028 -N— RTS/8 Update Kit, updates Version 2B to Version 3 (media: C. E, Q, Y)

Users of RTS/8, Version 2B, whose specified Support Category warranty has not expired may order under license the following software update for the then current media charge. The update is distributed in source form on the appropriate medium and includes no installation or other services unless specifically stated.

QF028 -V— RTS/8 Update Kit, updates Version 2B to Version 3 (media: C, E, Q, Y)

ADDITIONAL SERVICES:

None

Software Product Description

PRODUCT NAME: COS-310, Version 8.01, Commercial Operating System-310

SPD 5.98.9

DESCRIPTION:

COS-310 is one of Digital Equipment Corporation's DATASYSTEM 300 Series Commercial Operating Systems. It is an applications development tool for EDP users who wish to implement data management functions for small-to medium-size business applications. COS-310 is a self-contained, single use, disk-resident operating system. It provides an operation control monitor, as easy-to-learn, high-level programming language (DIBOL), program preparation, debugging utilities, and production utilities.

COS-310 Monitor — COS-310 provides software operation control through the system monitor. For memory economy, the monitor resides in two segments: one memory-resident and the other on the system device. The monitor includes a comprehensive set of commands which control the editing and execution of programs, and the maintenance of file directories.

The monitor contains all the necessary I/O device handlers for the system. The direct implementation and changing of programs can be controlled and altered through conversational commands designed into the software. The COS-310 monitor device options include line printers and disk storage devices. The monitor size is 8K bytes (16K bytes if an RL01 disk drive and/or an LQP printer is used).

DIBOL Language — Digital Equipment Corporation's Business Oriented Language (DIBOL) is built around procedural statements that permit the programmer to arrange information for desired execution and output. These procedural statements (commands plus data) permit data manipulation, calculation of arithmetic expressions, subscripting, overlaying of records, clearing of memory or buffers, file initialization, branching, tracing, program chaining, and printing overlapping with processing.

The language syntax is divided into two sections: a data definition section and a procedure section. The data definition section stipulates the type and size of the data variables. The procedure section of the language consists of procedural statements, each with comprehensive arguments. These statements are: PROC, XMIT, READ, WRITE, GO TO, IF, CALL, RETURN, FORMS, STOP, CHAIN, ACCEPT, DISPLAY, TRAP, and INCR.

Editor — The system includes a line oriented text editor that is part of the monitor. It is interactive, with commands indicating line numbers followed by the information to be inserted, deleted, or changed. The COS-310 editor provides a means to reorder the file by resequencing line numbers with the use of simple commands. Input to the editor comes from the operator through the console keyboard. Output from the editor can be a listing of a file on the console display or the line printer.

COMP — This utility compiles a DIBOL program created by the system's editor into interpretive code. This program can be stored on disk, listed on the printer, or run immediately. No linking is required to run a program. Without a program listing, program compilation usually takes 10 to 30 seconds. This results in substantial time savings over other products that have much slower compilers and require program linking.

SYSGEN (SYStem GENeration) — SYSGEN is a conversational utility program that allows the user to change the current device handlers or to create a new system disk. This is done using simple English statements, prompted to the operator from the program. Changing the handlers provides the operator with the ability to specify the disk and line printer I/O handlers that will operate most effectively in the system. In addition to changing the selected handlers in the current system, SYSGEN can copy the system from an RX01/RX02 to an RX05 or to an RL01 and vice versa for installation start-up. RK05 and RL01 cannot be present on the same system.

DFU (Data File Utility) — DFU allows the user to designate and examine logical unit assignments. The use of logical unit assignments for data files provides data file device independence for the programs using COS-310. Logical unit assignments can be input to DFU from the operator's keyboard, from a command file stored on the system device, or from the edit buffer. The current logical unit assignments can be displayed or printed.

FLOW (FLOW chart generator) — FLOW is a utility program designed to assist in the program documentation process. FLOW will generate a printed flowchart from a set of easily understood commands. The FLOW commands can optionally be included in the DIBOL source program.

AE-0841J-TA

November 1979

PATCH — PATCH is used to fix either a system program or the monitor on a COS-310 system. All input information for the PATCH operation is distributed as official patches from Digital Equipment Corporation. The PATCH information is a line-by-line dialogue. The PATCH program has the capability to perform automatic patching of the COS-310 system.

Debugging Aids — COS-310 includes several features that facilitate DIBOL program debugging.

- CREF Cross Reference provides an alphabetical listing of all symbols used in the DIBOL program, the line number where each symbol is defined, and all the line numbers where each symbol is used.
- DAFT The Dump and Fix Technique has the ability to search for, examine, list, change records, and make minor adjustments to a data file.
- TRACE/NO TRACE An integral DIBOL language feature. Each trace enables the DIBOL statement executed to print a line containing the source file line number.
- DDT The DIBOL Debugging Technique features breakpoint, variable examination, subroutine call traceback, and iteration.

SORT — COS-310 SORT is a multiphase sort which can reorder a data file containing fixed length records into a specified sequence. The user can specify up to eight fields (with sub-fields) of a fixed length record as a sort key. A file can be sorted in either the ascending or descending sequence of the contents of the fields in each record. The SORT also has merge file capability. This allows each volume of a multivolume file to be sorted independently and then merged with the other volumes within the file. Both sort and merge capabilities are parameterized by a sort control file.

PIP (Peripheral Interchange Program) — PIP is a utility program that transfers files from one device to another. It can replace an existing file with a new file and allow data files to be combined, It can accept input from disk and produce output on terminal, disk, or the line printer. PIP includes the capability to enter PIP commands from a predefined command file in addition to the keyboard. This eliminates the need for an operator response to PIP's prompts and, therefore, reduces the possibility of operator error.

PRINT — PRINT is a utility for the creation of report programs. Using a parameter file which describes the report, PRINT will generate a DIBOL program which will produce that report.

MENU — The MENU program allows the operator to select a function to be performed from a set of functions that is displayed on the screen. The function is a batch stream or a series of monitor commands. These are stored in a command file for operator use. The MENU program reduces operator errors in selecting programs to be run.

FILEX (File Conversion Program) — FILEX is a utility program that converts COS-310 formatted files stored on RK05 disks into OS/8 formatted files and vice versa. On RX02 diskettes, FILEX permits conversion of data files on RX02 diskettes to be moved onto an RX01

diskette loaded into the second RX02 disk drive. Conversion of RX01 disk files to RX02 files is also permitted.

In addition, FILEX can convert a COS-310 file stored on a flexible diskette, an RK05 or an RL01 onto an RX01 flexible diskette in a format directly readable by the IBM 3740 series data entry terminal. IBM files on flexible diskettes can be converted to COS-310 format provided they are single volume and there are no bad tracks on the diskette media.

BATCH — Commands to run DIBOL programs and system utilities may be stored in a BATCH file. These job streams may be run by operator command or by the MENU utility.

START-UP FILE — A start-up file may be optionally specified in SYSGEN which would, if present, automatically start a job after the operator bootstrapped the system and entered a valid date.

Format Programs — DKFMT formats RK05 disks. DLFMT formats RL01 disks. DYFMT converts an RX01 diskette into an RX02 diskette. Except for COS-310 software distributed on an RX02, any diskette used on an RX02 drive must be formatted before being used.

MINIMUM HARDWARE REQUIRED:

One of the following (with a minimum of 16K bytes of memory):

- DATASYSTEM 310
- DATASYSTEM 308
- DECstation 78/50, 78/70, 88/50

One of the following (with a minimum of 64K bytes of memory):

• DECstation 88/80, 88/90, 88/92, or 88/97

OPTIONAL HARDWARE:

D308 or DECstation-78

- Up to 4 RX01 floppy disk drives1
- Up to 4 RX02 floppy disk drives
- 1 LA8, LQP82, or LA120 printer

D310

- Additional memory up to a system total of 64K bytes
- 1 VT52 or VT100 console terminal
- Up to 4 RX01 floppy disk drives
- Up to 4 RX02 floppy disk drives¹
- Up to 4 RK05 disk drives (RK05 F counts as 2) and controller
- One LA35, LQP8², LA8A, LA120, LA8, or LP05 printer

DECstation-88

- Up to 4 RX02 floppy disk drives
- Up to 4 RL01 disk drives3
- 1 LA35, LQP8, LA8A, LA120, LA8, or LP05 printer

¹RX01 and RX02 drives are not supported by the same system. ²LQP requires a minimum of 32K bytes of memory of which 8K bytes are used by the LQP handler.

³RK05 and RL01 drives are not supported by the same system.

PREREQUISITE SOFTWARE:

None

OPTIONAL SOFTWARE:

COS-310 2780/3780 Communications Software

TRAINING CREDITS:

TWO (2) — Applies only to options that include support services. Consult the latest Educational Services Catalog at your local office for the available courses, course requirements, and guidelines.

SUPPORT CATEGORY:

COS-310 is a DIGITAL Supported Software Product.

SOFTWARE INSTALLATION:

COS-310 is a software product engineered to be installed by the customer and includes other Software Product Support services listed below.

SOFTWARE PRODUCT SUPPORT:

COS-310 includes Standard Services as defined in the Software Support Categories Addendum of this SPD.

ORDERING INFORMATION:

The following key (E,Q,X,Y) represents the distribution media for the product and must be specified at the end of the order number, e.g., QF310-HX = binaries on RX02 Double Density Diskette.

E = RK05 Disk Cartridge

Q = RL01 Disk Cartridge

X = RX02 Double Density Diskette

Y = RX01 Floppy Diskette

Z = No hardware dependency

This software is available only for the systems listed in the minimum hardware section of this SPD, and is offered with support services (includes hardware, single-use license, binaries, documentation, and support services). Systems are also available which include a single-use license only (no binaries, no documentation, and no support services).

Update Options:

Users of COS-310 whose specified Support Category warranty has expired may order the following software update at the then current charge for such update, for use under the existing license. Except where the medium is designated as Z, the update is distributed in binary form on the appropriate medium. A software update where the medium is designated as Z grants the user of COS-310 the right to copy the previously ordered QF310-H or QF310-W software update for use on an additional single CPU for which a COS-310 license has been obtained.

QF310 -H— Binaries, documentation (media: E, Q, X, Y)

QF310 -H— Right to copy for single-use (under existing license), no binaries, no documentation, no support services (media: Z)

Users of COS-310 whose specified Support Category warranty has not expired may order under license the following software update for the then current media charge. The update is distributed in binary form on the appropriate medium and includes no installation or other services unless specifically stated.

QF310 -W— Binaries, documentation (media: E, Q, X, Y)

Miscellaneous Options:

QF310 -G— Documentation only kit (media: Z)

ADDITIONAL SERVICES:

None

The Digital Equipment Computer Users Society



DECUS, the Digital Equipment Computer Users Society, was established in March of 1961 to advance the effective use of DIGITAL computers. It is a voluntary, not-for-profit users group, supported in part by Digital Equipment Corporation.

OBJECTIVES

The objectives of the Society are to advance the effective utilization of computers, computer peripheral equipment, and software manufactured and marketed by Digital Equipment Corporation, by promoting the interchange of information concerning their uses; advance the art of computation through mutual education and exchange of ideas and information; establish standards and provide channels to facilitate the exchange of computer programs among DECUS members; provide feedback to the computer industry on equipment and software needs; and to reduce the duplication of development efforts.

ACTIVITIES

1. SYMPOSIA

Symposia are held throughout the year in each of the DECUS Chapters. These meetings provide a forum for users of DIGITAL computers to meet with other users and with DIGITAL management, engineers, and Software Services and Field Service representatives. They are an opportunity for users to participate in DIGITAL Product Workshops and Product Planning feedback sessions. The technical papers and presentations from each symposium are published as DECUS Proceedings after each meeting and provide a permanent record of the meetings activities.

2. SPECIAL USER GROUPS

DECUS encourages subgrouping of users with common interests and/or geographical proximity.

Special Interest Groups (SIGs) promote the interchange of specialized information and have no geographical limitations. Specializations may be for application areas, subject areas (such as languages), or specific operating systems. A group of users must petition the Chapter Executive Board for recognition as a Special Interest Group. The group must have a chairman, and its organization must meet the guidelines of the Chapter Executive Board.

Examples of active SIGs are users of RSX-11, RSTS, RT-11 users, business system users, etc. For additional information, contact your Chapter Executive Secretary.

One of the most successful subgroupings are Local Users Groups (LUGs). There are numerous active LUGs in Australia, Canada, Europe, and the U.S. Local User Groups are basically geographic in nature; however, they may be geographic and specific as well.

The largest Special User Group is composed of users of the DECsystem-10 and DECsystem-20.

3. STANDARDS

DECUS promotes user activity in reviewing DIGITAL standards. Users are given the opportunity to comment on DIGITAL standards prior to their finalization.

4. PROGRAM LIBRARY

One of the major activities of the users group is the DECUS Program Library. The Library contains programs written and submitted by users and is maintained and operated separate from the Digital Software Distribution Center. A wide range of software is available, including languages, editors, numerical functions, utilities, display routines, and various other types of application software.

DECUS (continued)

Library catalogs, updated periodically, contain descriptive abstracts and ordering information.

Information and forms for submitting programs to the Library may be obtained from local DECUS offices.

Programs are available to all members on a request basis. Orders for programs are made on DECUS Library Order Forms and directed to the local DECUS Chapter office. Information on the nominal service charge applied to most programs is published in the Library Catalogs.

As of January 1979, the Library contained approximately 1500 active software packages.

MEMBERSHIP

Membership in DECUS is voluntary and is not subject to a membership fee. Members are invited to take an active interest in the Society by contributing to the Program Library, to DECUSCOPE, and by participating in its Special User Groups and symposia. There are two types of membership: Installation Membership and Associate Membership.

INSTALLATION

An organization, institution, or individual that has purchased, leased, or has on order a computer manufactured by Digital Equipment Corporation is eligible for Installation Membership in DECUS. Membership status is acquired by submitting a written application to the appropriate Chapter Executive Secretary for approval by the Chapter Executive Board.

On acceptance of the application for membership, literature covering numerous DECUS services is sent to the Installation Delegate for reference and aid in maintaining active participation in the Society.

ASSOCIATE

Any person, who is not an appointed Installation Delegate, who has a bona fide interest in DECUS is eligible for Associate Membership.

Like Installation Members, Associate Members receive DECUSCOPE, the Society's quarterly newsletter, automatically. They may receive other DECUS material on request. Written application indicating desire to join must be submitted to the appropriate Chapter Executive Secretary for approval by the Chapter Executive Board.

On acceptance of the application for membership, literature covering the numerous DECUS services is sent to the member for reference and to enable active participation in the Society.

To obtain a membership form for DECUS, please return this form to the appropriate	Chapter office listed below.
NAME:	
COMPANY:	
ADDRESS:	
CITY:	
STATE/COUNTRY:	_ ZIP:
Membership form Requested (check one):	
Installation Associate	February 1979
I obtained this form from	
DECUS OFFICES	

DECUS Australia

Wales 2065

Crows Nest, New South

P.O. Box 491

Australia

SOFTWARE PROBLEMS OR ENHANCEMENTS

Questions, problems, and enhancements to DIGITAL software should be reported on a Software Performance Report (SPR) form and mailed to the SPR Center at one of the following Digital Offices: (SPR forms are available from the SPR Center).

Areas Covered	SPR Center	Areas Covered	SPR Center
United States; remainder of Far East, Middle East, Africa Latin America	Administrative Services Group, SWS P.O. Box F Maynard, Ma 01754	Japan	Digital Equipment Corp. INTL 3rd Floor Kowa Bldg. 8-7 Sanban Cho Chiyoda Ku Tokyo 102 Japan
Canada	Digital Equipment Canada P.O. Box 11500 Ottawa, Ontario Canada K2H 8K8	New Zealand	Digital Equipment N.Z. LTD P.O. Box 17093 Greenlane, Auckland 5, New Zealand
United Kingdom, Bahraine, Egypt, Iraq, Jordan, Kuwait, Lebanon, Libya, Qatar, Oman, Saudi Arabia, Syria, United Arab Emirates, Yemen, Arab Republic.	Digital Equipment Corp. LTD Fountain House Butts Centre GB - Reading RG17QN England	Belgium, Holland, Luxemburg	Digital Equipment B.V. KAAP Horndreef 38 NL - Utrecht/Overvecht Holland
Australia-Melbourne	Digital Equipment Aust. PTY. LTD 60 Park Street So. Melbourne Victoria Australia 3205	Sweden	Digital Equipment Corp. AB Englundavägen 7 S-171 24 Solna, Sweden
Australia-Sydney	Digital Equipment Aust. PTY. LTD 123 125 Willoughby Rd. P. O. Box 491 Crows Nest NSW Australia 2065	Denmark	Digital Equipment Corp. APS Kristineberg 3 DK-2100 Copenhagen Ø Denmark
Brazil	Digital Equipment Comercio Ind. Rua Batatais 429 Esq AL Campin 01423 Jardim Paulista Sao Paulo 0100 Brazil	Finland	Digital Equipment Corp. OY PL16 SF - 02201 ESPOO 20 Finland
Caribbean	De Latin America P. O. Box 11038 Fernando Juncos Sta. Santurce PR 00910	Norway	Digital Equipment Corp. A/S Pottenmakerveien 8 N - Oslo 5 Norway
France	Digital Equipment France 18, rue Saarinen France Silic 225 F - 94528 Rungis - Cedex France	Austria, East Germany, West Germany, Poland, Hungary, Rumania, Czechoslovakia, Russia, Bulgaria	Digital Equipment Corp. GMBH Wallsteinplatz 2 D - 8 Munich 40 West Germany
Italy	Digital Equipment S.P.A. Viale Fulvio Testi 117 I-20092 Cinisillo Balsamo Milan, Italy	Israël	DECSYS Computers LTD. 4, Yirmiyahou Str. P.O. Box 6359 IL - Tel-Aviv 63505 Israël

Areas Covered

Greece, Portugal, Spain, Switzerland, Yugoslavia & Sina (Morocco, Algeria, Tunisia, Cyprus, Turkey, Malta)

SPR Center

Digital Equipment Corp. SA 9, route des Jeunes 1211 Geneva 26 Switzerland

DIGITAL EQUIPMENT CORPORATION, Corporate Headquarters: Maynard, Massachusetts 01754, Telephone: (617)897-5111-SALES AND SERVICE OFFICES: UNITED STATES—ALABAMA, Huntsville • ARIZONA, Phoenix and Tucson • CALIFORNIA, El Segundo, Los Angeles, Oakland, Ridgecrest, San Diego, San Francisco (Mountain View), Santa Ana, Santa Clara, Stanford, Sunnyvale and Woodland Hills • COLORADO, Englewood • CONNECTICUT, Fairfield and Meriden • DISTRICT OF COLUMBIA, Washington (Lanham, MD) • FLORIDA, Ft. Lauderdale and Orlando • GEORGIA, Atlanta • HAWAII, Honolulu ILLINOIS, Chicago (Rolling Meadows) • INDIANA, Indianapolis • IOWA, Bettendorf • KENTUCKY, Louisville • LOUISIANA, New Orleans (Metairie) • MARY-LAND, Odenton • MASSACHUSETTS, Marlborough, Waltham and Westfield • MICHIGAN, Detroit (Farmington Hills) • MINNESOTA, Minneapolis • MISSOURI, Kansas City (Independence) and St. Louis • NEW HAMPSHIRE, Manchester • NEW JERSEY, Cherry Hill, Fairfield, Metuchen and Princeton • NEW MEXICO, Albuquerque • NEW YORK, Albany, Buffalo (Cheektowaga), Long Island (Huntington Station), Manhattan, Rochester and Syracuse • NORTH CAROLINA, Durham/Chapel Hill • OHIO, Cleveland (Euclid), Columbus and Dayton • OKLA-HOMA, Tulsa • OREGON, Eugene and Portland • PENNSYLVANIA, Allentown, Philadelphia (Bluebell) and Pittsburgh • SOUTH CAROLINA, Columbia • TEN-NESSEE, Knoxville and Nashville • TEXAS, Austin, Dallas and Houston • UTAH, Salt Lake City • VIRGINIA, Richmond • WASHINGTON, Bellevue • WISCONSIN, Milwaukee (Brookfield) • INTERNATIONAL - ARGENTINA, Buenos Aires • AUSTRALIA, Adelaide, Brisbane, Canberra, Melbourne, Perth and Sydney • AUSTRIA, Vienna • BELGIUM, Brussels • BOLIVIA, La Paz • BRAZIL, Rio de Janeiro and Sao Paulo . CANADA, Calgary, Edmonton, Halifax, London, Montreal, Ottawa, Toronto, Vancouver and Winnipeg • CHILE, Santiago • DENMARK, Copenhagen • FINLAND, Helsinki • FRANCE, Lyon, Grenoble and Paris • GERMAN FEDERAL REPUBLIC, Cologne, Frankfurt, Hamburg, Hannover, Munich, Nuremburg, Stuttgart and West Berlin • HONG KONG • INDIA, Bombay • INDONESIA, Djakarta • IRELAND, Dublin • ITALY, Milan, Rome and Turin • IRAN, Tehran • JAPAN, Osaka and Tokyo • MALAYSIA, Kuala Lumpur • MEXICO, Mexico City • NETHERLANDS, Utrecht • NEW ZEALAND, Auckland and Christchurch • NORWAY, Oslo • PUERTO RICO, Santurce • SINGAPORE • SPAIN, Madrid • SWEDEN, Gothenburg and Stockholm • SWITZERLAND, Geneva and Zurich • UNITED KINGDOM, Birmingham, Bristol, Epsom, Edinburgh, Leeds, Leicester, London, Manchester and Reading VENEZUELA, Caracas