# digital

#### EK-RD31A-IP-001

# ILLUSTRATED PARTS

# Breakdown

### HOW TO USE THE IPB

#### GENERAL

This IPB is compiled following the organization and nomenclature of the engineering drawing structure.

#### MAJOR ASSEMBLY LOCATOR

The Major Assembly Locator (first illustration) is an index that provides a description and a figure reference for all illustrations used in this manual.

#### INDENTED PARTS LIST

This manual identifies each assembly being broken down (figure reference callout), and all parts of that assembly Further breakdown of an assembly is shown by an asterisk (\*) preceding the item callouts in the Description Column. The number of asterisks preceding an item is used to denote the subordination of that item with respect to the Major Assembly. A single asterisk preceding an item description indicates that the item is part of the major assembly being illustrated. Items that are subordinate to single asterisks items, are denoted by two asterisks (\*) and immediately follow the related single asterisk item. Additional asterisks are used, as required, to denote further subordination. This system of part identification, provides a means for the user to identify the next higher assembly item and make alternate selections for parts when the required replacement part or assembly is not immediately available.

#### COLUMN CALLOUT DESCRIPTION

Figure & Item - Indicates the figure number and item number of each part.

**Description** — Lists the name of the part and pertinent specifications (when required). Asterisks preceding the description denote the subordination of the part to the next higher assembly

**DEC Part No.** – Lists the DEC part ordering number. A blank in this column indicates a DEC part number was not assigned at the time of publication.

# RD31-A DISK DRIVE

ECO Cut-In – The notation at the top of this column indicates the ECO level of the system (option), at which the IPB was initially prepared. Subsequent ECO level designations, that modify existing parts or add new parts to the device, are inserted in the ECO Cut-In column next to the part that is added or modified. A bracket ({) preceding the item description is used to indicate the parts affected by ECO's.

Vendor Code/Part No. – Indicates vendor parts that are not stocked by DEC. Refer to the Field Service Spares Catalog (vendor part number to DEC part number) for the vendor code cross-reference.

**Used On Code** – Letters in this column correspond to the variation codes assigned in Figure 1. Parts with an Alpha notation(s) are used only in those option variations. A blank indicates that the part is used on all option variations.

Ref Fig No. — A cross reference between illustrations. For each Major Assembly, the number in this column denotes the figure of the next higher assembly. For all subassemblies, the number in this column denotes the figure showing additional detailed breakdown.

#### SYMBOL USAGE

Hardware Designators – Alpha designators for screws (S), washers (W), nuts (N), and retaining rings (R) are inserted after the item number callouts on the illustration when stacked item numbers are used.

Attaching Hardware – The @ symbol is inserted before any part that is used as attaching hardware. Attaching hardware is denoted as those parts that are not an integral part of the referenced assembly.

(NFR) Not Field Repairable – The (NFR) symbol is inserted after any assembly that is not to be field dismantled.

Other Symbols – Any other symbols that are required for kits, accessories, etc., will be explained and appear as part of the item description


REVISION HISTORY			OTHER IPB MANUALS REQUIRED			
PRINTING	ECO	LEVEL	DATE	TO SUPPORT THIS OPTION		
1st Printing	RD31-A 00000-00000		9-25-85	N/A		
				-		

Copyright <sup>©</sup> 1985 by Digital Equipment Corporation. All rights reserved.

DEC reserves the right, without notice, to make substitutions and modifications in the specifications of products documented in this manual and further reserves the right to withdraw any of these products from the market without notice. DIC is not responsible for errors which may appear in the technical description (including illustrations and photographs) of the products covered by this manual.

None of the descriptions contained in this manual imply the granting of any license whatsoever to make, use or sell equipment constructed in accordance therewith.



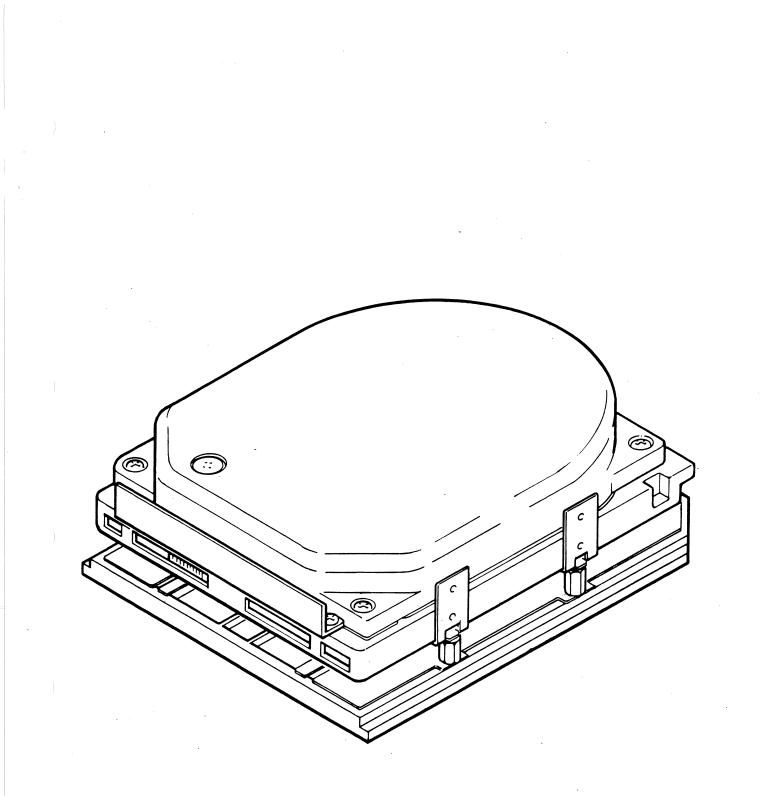


RD31A-00

## RD31-A Disk Drive

1

· · · · · **.** 



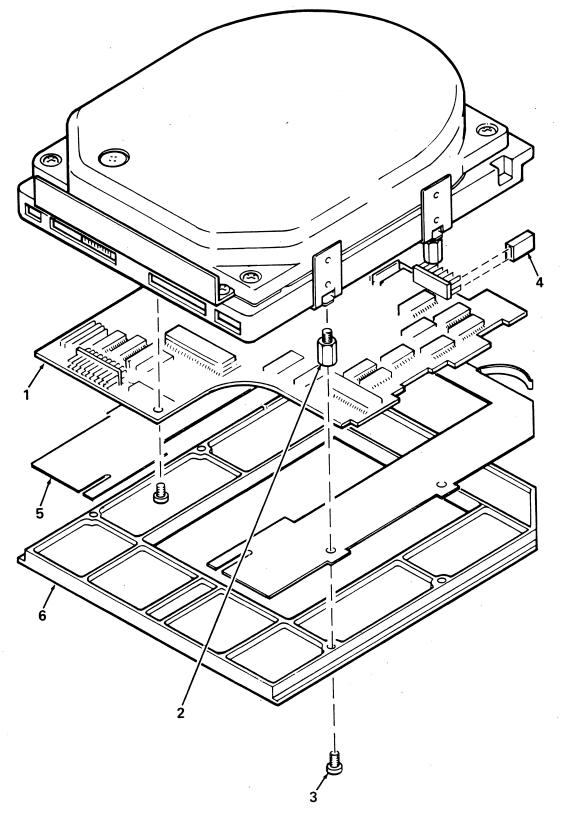

RD31A-01



1

1

FIG. & ITEM NO.	DESCRIPTION	A DEC PART NO.	ECO CUT-IN RD31-A 00000	USED ON CODE	REF FIG NO.
1_	RD31-A DISK DRIVE	RD31-A			
1 2 3 4 5 6	*Device PCB *Standoff *Screw,PhI Pan Hd No. 6-32 x 5/16 *Jumper *Clip, Ground *Plate, Skid	29-25527-00 90-00001-39 90-06021-01 12-14314-00 74-28201-01 74-25652-01			
					809008D

## ILLUSTRATED PARTS BREAKDOWN COMMENT SHEET

Any and all comments and suggestions for correcting errors and/or additional information to improve this manual will be reviewed and researched for possible use when this manual is revised and/or reprinted. Enter your comments and suggestions in the form provided below and return to Technical Documentation.

MODEL RD31-A DISK DRIVE	PUBLICATION NOEK-RD31A-001
FIGURE NO ITEM NO	FIGURE NO ITEM NO
CHANGE FROM	CHANGE FROM
CHANGE TO	CHANGE TO
FIGURE NO ITEM NO CHANGE FROM CHANGE TO	CHANGE FROM
FIGURE NO ITEM NO CHANGE FROM CHANGE TO	CHANGE FROM

ADDITIONAL COMMENT(S)

Please describe your position				
Name	Organization			
Street	Department			
City	State Zip or Country			



## BUSINESS REPLY MAIL

**Fold Here** 

Do Not Tear - Fold Here and Staple

FIRST CLASS PERMIT NO. 33 MAYNARD, MA.

POSTAGE WILL BE PAID BY ADDRESSEE

Digital Equipment Corporation Educational Services 129 Parker Street, PKO3-2/H31 Maynard, MA 01754 No Postage Necessary if Mailed in the United States