

FIGURES

1-1	UNIBUS Controller Module and Cable.....	1-2
1-2	TK50-R System and Parts.....	1-3
1-3	Installing a TK50-R in a Rackmount Assembly.....	1-4
1-4	TK50-D System and Parts.....	1-5
1-5	Controller Module Address.....	1-7
1-6	Jumper Addresses.....	1-8
2-1	PDP-11/44 Mounting Box.....	2-2
2-2	Grant Continuity Card Location.....	2-3
2-3	NPG Jumper.....	2-4
2-4	Installing Shields on Modules.....	2-5
2-5	Installing Cable in Module.....	2-6
2-6	Routing a Cable Around Power Supply.....	2-7
2-7	Routing Cable in Cabinet.....	2-9
2-8	Routing Ribbon Cable to Bulkhead.....	2-10
2-9	External Drive Cable Installation.....	2-11
2-10	Power Cable and Voltage Switch.....	2-12
3-1	Address Selection Scheme.....	3-3
3-2	M7547 Module.....	3-5
3-3	Bus Grant Continuity Card.....	3-6
3-4	NPG Jumper.....	3-7
3-5	Installing Drive Cable on Bulkhead.....	3-8
3-6	Internal UNIBUS Controller Cabling.....	3-9
3-7	Drive Cabling in Cabinet.....	3-11
4-1	TK50 Controls and Indicators.....	4-2
4-2	Rear Panel Assembly.....	4-5
4-3	Inserting a Tape Cartridge.....	4-6
4-4	Labeling and Write-Protecting a TK50 Tape Cartridge.....	4-7
4-5	Lifting Cartridge Insert/Release Handle.....	4-9
4-6	Positioning Tape in Drive.....	4-10
4-7	Inserting Tape.....	4-11
4-8	Lowering Cartridge Insert/Release Handle.....	4-12
4-9	Pressing Load/Unload Button.....	4-13
5-1	Desktop and Rackmount Subsystems.....	5-2
5-2	M7547 Module.....	5-4
5-3	TK50 Controls and Indicators.....	5-6
5-4	Rear Panel.....	5-8
5-5	Jumper Settings.....	5-10
5-6	Revision Level Switch Settings.....	5-12
6-1	Removal from Rackmount Housing.....	6-2
6-2	Removal from Desktop Housing.....	6-3
6-3	Sliding the Tape Drive Forward.....	6-4
6-4	Remove the Power Cable and Drive Cables.....	6-5
6-5	TK50-R and TK50-D Subsystem Groove and Channel Guide.....	6-6
6-6	Power Supply, Component Side View.....	6-7