

# TABLES

3-1	Address Settings.....	3-3
4-1	TK50 Subsystem Controls.....	4-3
4-2	TK50 Subsystem Indicator Lights.....	4-4
5-1	Common Jumper Settings.....	5-10
5-2	Unit Number Switchpack Settings.....	5-11
5-3	Revision Level Dip Switch.....	5-12
5-4	System Controller and Cable Option Kits.....	5-13
5-5	Basic Troubleshooting Checklist.....	5-13
6-1	TK50 Subsystem FRUs.....	6-1
6-2	TUK50 Part Number and Description.....	6-1
A-1	J1 Connector Signals and Pin Numbering.....	A-1
A-2	AC Power Supply Input Connectors.....	A-1
A-3	DC Power Supply Output Connectors.....	A-2
B-1	General Environmental Requirements.....	B-1
C-1	Related Documentation.....	C-1