

Introduction

Chapter 6 Removal and Replacement Procedures

This chapter describes procedures to remove and replace the Field Replaceable Units (FRUs) in the TK50. Only trained service personnel and self-maintenance customers can perform these procedures.

Appendices

The appendices describe the following.

Appendix A	Connector Pin Numbers and Signals
Appendix B	System Specifications
Appendix C	Related Documentation
Appendix D	Service Options

HELP

If you need help:

- Refer to Table 5-5 Basic Troubleshooting Checklist.
- For hardware questions, call your service representative.
- For software questions, call your sales representative and ask for an access code number for the Digital Phone Support Center (PSC).

MNEMONICS

The following are commonly used mnemonics.

BLK	Block
BOT	Beginning of tape
CB	Circuit breaker
CONFIG	Configure -- refers to software program
CPU	Central processing unit
CSR	Control status register
DIP	Dual in-line process; refers to switches
DMA	Direct memory access
DRV	Drive
DRV SEL	Drive select
DSA	Digital storage architecture
DMSCP	Disk mass storage protocol
DUP	Diagnostics utilities protocol
EOT	End of tape
ERR	Error