


Table 3-1 Address Settings

Transport	Unit Number	Address	Vector	Configuration
1	0	774500 ₈	260 ₈	1 (unit 0)
2 to 4	1 to 3	CSR range 760000 ₈ to 8	Vector range 300 ₈ to 700 ₈	2 to 4 (units 1 to 3)

When more than one (up to four) TK50 is installed with the host system, select the UNIBUS addresses for the second, third, and fourth TK50 with SYSGEN>CONFIG. SYSGEN>CONFIG shows the available CSR addresses. Refer to the example in Table 3-1 and step 5.

3. Use address setting diagram (Figure 3-1) to set the UNIBUS address. This diagram also shows starting address 774500 in the basic configuration.
4. Install the address jumpers as shown. Address bits 12 through 2 are specified by jumpers. Address bits 17 through 13 are hardwired to 1s. Address bits 1 and 0 are ignored.

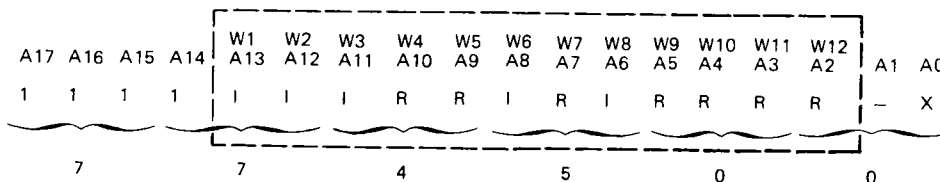

I = JUMPER INSTALLED
 R = JUMPER REMOVED
 X = UNSELECTABLE (IGNORED)
 1 = UNSELECTABLE (HARDWIRED AS 1)
 A1 SELECTS IP OR SA REGISTER

SHR-0403-85

Figure 3-1 Address Selection Scheme