

Table 4-2 TK50 Subsystem Indicator Lights

Red	Green	Condition
Off	Off	No power to the tape drive.
Off	On	It is okay lift cartridge insert/release handle and power is present.
On	Off	Do not lift cartridge insert/release handle. <ul style="list-style-type: none"> • Power-up self-test is running. • Cartridge is inserted but handle is still up. • Tape is loading or unloading. • Tape is stopped.
On	On	Tape loaded successfully.
On	Blinking	Tape in motion (except rewind). Read/write commands are being processed. Irregular fast blinking means tape calibration is occurring.*
Blinking	Blinking	Tape is rewinding.
Flashing rapidly		There is a fault. Press and release the Load/Unload button four times. If the problem persists, stop the operation of the tape drive and call your service representative.

* If tape is new, the system performs a calibration sequence that takes about two minutes.