TK50 TAPE DRIVE REMOVAL


NOTE: Repair or replacement of any of this subsystem's parts must be done by qualified repair personnel.

Use the following procedure to remove the TK50 tape drive from rackmount or desktop subsystems.

- 1. Remove the cartridge.
- 2. Set the subsystem power switch to 0 (off).
- Remove the ac power cable and all other cables from the subsystem.

WARNING: You are in extreme danger if you do not remove the power cable. AC power can still be in the chassis, even though the green dc LED is not lit and the fan is not turning.

 Press the quick-release tab on the rear of the rackmount unit and pull the basic chassis from the rack (Figure 6-1).

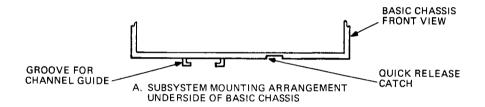 

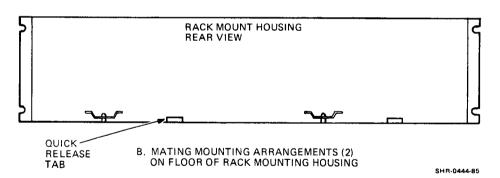


Figure 6-1 Removal from Rackmount Housing