


3. Remove the two screws from the top plate of the power supply. Tip the power supply assembly gently to the right (as seen from the front). See Figure 6-6.
4. Disconnect the dc power connector at the rear of the power supply (Figure 6-6).
5. Lift the power supply assembly out of the chassis.
6. Disconnect the ac power connector at the lower front of the power supply (Figure 6-6).

Reverse steps 1 through 6 to install a replacement power supply.

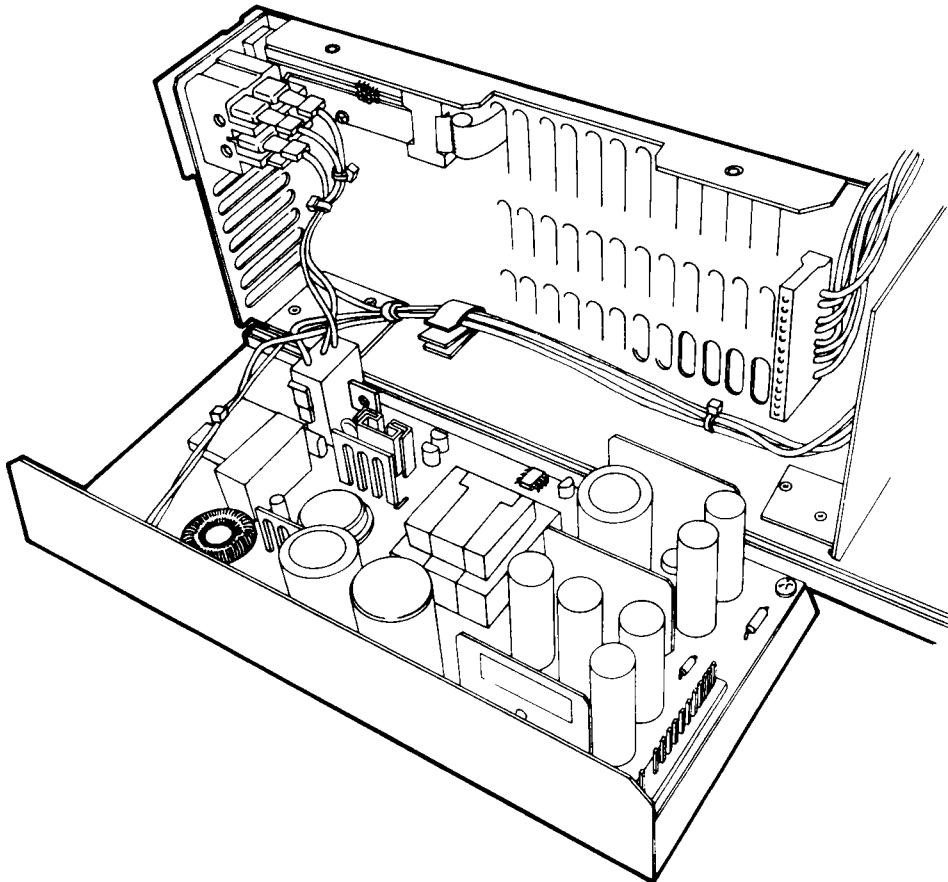

MR-12186
SHR-0412-85

Figure 6-6 Power Supply, Component Side View