

FAN ASSEMBLY REMOVAL

Use the following procedure to remove the fan.

1. Remove all cables from the TK50 subsystem.
2. Remove the rear bezel (three screws) and slide the chassis out the rear of the unit.
3. Remove the front bezel from rackmount units, press the quick-release tab, and remove the chassis from the rack.
4. Disconnect the dc plug to the fan assembly and remove the four screws on the rear panel holding the fan assembly in place.
5. Remove the fan assembly.

Reverse steps 1 through 5 to install a replacement fan.