


Inspecting and Loading a Tape Cartridge

5. Set the LOAD/UNLOAD switch to UNLOAD.

Before turning on power, make sure the LOAD/UNLOAD switch is in the UNLOAD (out) position.

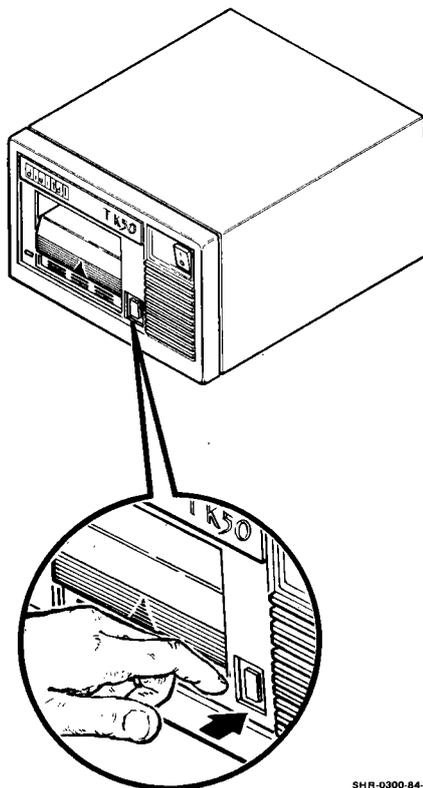

SHR-0300-84-B