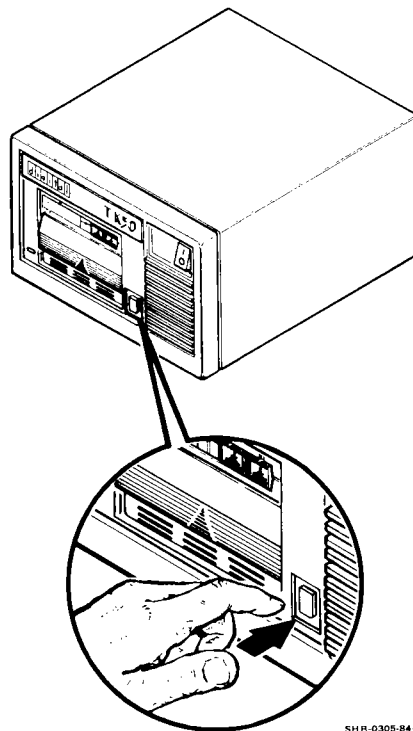

CHAPTER 3
UNLOADING THE TAPE CARTRIDGE

This chapter explains how to remove the tape cartridge from the drive.

1. Set the LOAD/UNLOAD switch to UNLOAD (OUT position).

If the tape is not already at BOT, both lights flash slowly while the tape is rewinding.

If very little tape was in the drive when you set the unload switch, you may not see the lights flash when the tape is rewinding. Whether or not you see the flash depends on how much of the tape was out on the take-up reel inside the drive.



SHR-0305-84 C