


Unloading a Tape Cartridge

4. Turn the power switch off (0 position). Push the cartridge insert/release handle down.

Whenever you turn the power off in a tabletop unit, you'll hear some whistling and whirring noises. Don't worry, this is normal.

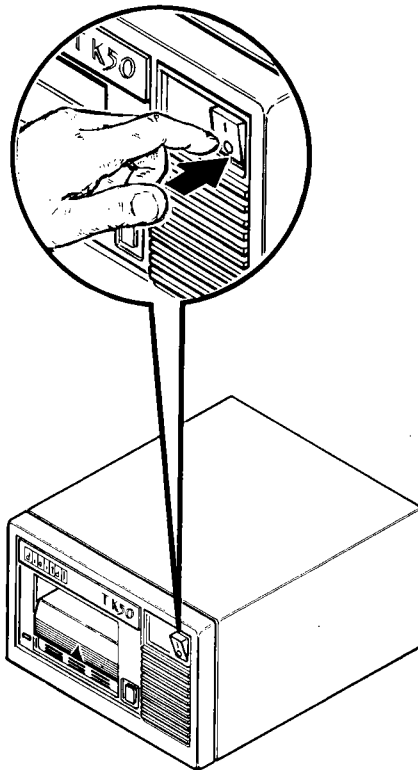

SHR-0309-84-B