

RK06/07

ZR6JF0

RK06/07 DISK DRIVE DIAGNOSTIC TEST 3

ABSTRACT :

The RK06/07 test 3 is the manual intervention test. You have to open and close the door, pull ou the unit select plug, push the port switch and so one.....

OPERATING PROCEDURES :

.R ZR6JF0

*SA=220 request bus address, vector address and priority modification
normal RKCS1 address 177440, vector 210.*

*Load program, scratch pack installed and drive ready, drives not to be tested
must have both ports deselected.*

SWITCH SETTINGS :

*SW15= 1 halt on error
SW14= 1 loop on test
SW13= 1 inhibit error typeout
SW12= 1 bypass drive after 20 errors
SW11= 1 inhibit test iterations
SW10= 1 ring bell on error
SW09= 1 loop on error*

use "CONTROL G" to change software SWR at loc. 176