

RK06/RK07 DRIVE COMPATIBILITY TEST

ABSTRACT :

This utility helps to verify the compatibility of up to 16 RK06 or RK07 drives. Compatibility is defined here as the ability of a drive to write data which can be read successfully by all other drives, and additionally the ability of a drive to completely over-write data written by all other drives. The testing is done in two passes. For the entire test you need only one pack but you have to move that one around into all drives.

OPERATING PROCEDURES :

START ADDRESSES:

SA=200 start program for one subsystem only

SA=204 start pass 1 for more than one subsystem

SA=220 start pass 2 for more than one subsystem

Follow as the program instructs you !

SWITCH SETTINGS :

SW15= 1 halt on error

SW14= 1 loop on current test

SW13= 1 inhibit error typeout

SW12= 1 report description only, on errors

SW11= 1 unused

SW10= 1 ring bell on error

SW09= 1 loop on error

SW08= 1 apply random stall between operations

SW07= 1 type bad sector files at start

SW01= 1 unused

use "CONTROL G" to change software SWR at loc. 176