

MAINDEC-11-D9E*

NEW NUMBER = DZQML

Maintenance Loader

ABSTRACT

The purpose of this loader is to provide an alternate method of loading diagnostics which may function when the absolute loader fails to work due to a hardware failure. A description of the bootstrap loader loading the maintenance loader is also provided to aid in isolation of trouble should it be impossible to load even the maintenance loader. This loader is not intended to replace the absolute loader and should only be used for loading of diagnostic programs if the absolute loader will not function.

REQUIREMENTS

PDP-11

STORAGE = 17476 = 17742

LOADING = Normal Bootstrap

STARTING PROCEDURE = Start at 17500

PRINTOUTS = No

SWITCH REGISTER OPTIONS = No