

OS/78 System Release Notes

Order No. AA-D927B-TA

August 1979

This document describes the differences between OS/78 V2 and OS/78 V3. These differences consist of new and revised features for V3 and corrections of known software problems.

SUPERSESSSION/UPDATE INFORMATION: This is a new manual.

OPERATING SYSTEM AND VERSION: OS/78 V3

To order additional copies of this document, contact the Software Distribution Center, Digital Equipment Corporation, Maynard, Massachusetts 01754

First Printing, August 1979

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by DIGITAL or its affiliated companies.

Copyright © 1979 by Digital Equipment Corporation

The postage-prepaid READER'S COMMENTS form on the last page of this document requests the user's critical evaluation to assist us in preparing future documentation.

The following are trademarks of Digital Equipment Corporation:

DIGITAL	DECsystem-10	MASSBUS
DEC	DECTape	OMNIBUS
PDP	DIBOL	OS/8
DECUS	EDUSYSTEM	PHA
UNIBUS	FLIP CHIP	RSTS
COMPUTER LABS	FOCAL	RSX
COMTEX	INDAC	TYPESET-8
DDT	LAB-8	TYPESET-11
DECCOMM	DECSYSTEM-20	TMS-11
ASSIST-11	RTS-8	ITPS-10
VAX	VMS	SBI
DECnet	IAS	PDT
DATATRIEVE	TRAX	

1.0 DIFFERENCES BETWEEN OS/78 V2 AND V3

- V3 supports RX02 and RL01 devices.
- V3 has two page handler support in Commercial BASIC V7A. (This feature uses about 6% of the program space available for program execution.)
- V3 FORTRAN Language supports LQP printers and SLUx/VLUx handlers (x= 2 or 3).
- V3 SET command is enhanced to allow static replacement of device handlers in the OS/78 monitor.
- V3 has two new commands:
 - BOOT - to boot from RX01 and RX02 system devices to RL01 system disks and vice-versa
 - FORMAT - to allow formatting of RL01 disk packs for drives 0 and 1
- V3 has seven new logical device names:
 - RXAx - to support both RX01 and RX02 drives (x=0,1,2,3)
 - VXA0 - to use above 32K as a non-system pseudo-device
 - SLU2, SLU3 - for hardcopy terminal on the SLU ports
 - VLU2, VLU3 - for video terminals on the SLU ports
 - RLxx - to support system and non-system RL01 disks (xx= 0A, 0B, 0C, 1A, 1B, 1C)
- V3 spooler symbiont (for DECstation 78's only) has been enhanced for RX02 devices. It supports a parallel port and line printer (serial printer support is not included).
- V3 RESEQ.BA utility has been largely modified and enhanced to resequence up to 500 program lines for BASIC programs. ON (exp) statements are now handled properly.
- V3 HELP has been modified to reflect all command changes/additions. Each time the utility is invoked, HELP automatically issues an escape sequence to set VT100 terminals to the VT52 mode and clear the screen.
- V3 has a new standard monitor. Configured to satisfy most users' needs, it is easily modified by the new SET HANDLER command.
- The DUPLICATE command has two new options:
 - /S - for single-density formatting (RX01)
 - /D - for double-density formatting (RX02)

NOTE: These options implement hardware directives that work only on RX02 double-density drives, and cannot be used for RX01 (single density) drives.

- On A machines, five BASIC files can be open at one time.
- The demo is started as follows:

```
.SUB DEMO/H/T
```

2.0 MAINTENANCE

- V3 has been patched at the source and binary levels to repair all bugs in V2. No patches are required before using V3.

3.0 RESTRICTIONS

- The default handlers for the standard distributed system are configured for DECstation/78's.

CAUTION

If you have a DECstation 88/70 configuration (4 RX02's), you must issue the following command before using the second diskette controller (RXA2: and RXA3:):

```
SET HANDLER RX78C<RX28C
```

to get the correct diskette handlers in your OS/78 monitor. The command:

 
```
SET HANDLER/L
```

verifies that the replacement has taken place.


- The VT-100 terminals on the DECstation 88 systems should be run at 4800 baud only in the normal scroll mode.
- If a handler is invoked for which no physical device exists, the monitor will "hang" (attempt to access the non-existent device). Recovery consists of halting and rebooting the system.
- Although SLU2 and SLU3 can be used in place of LPT for most functions, serial printers are not supported for BATCH LOG.

Do Not Tear - Fold Here and Tape

igital



No Postage
Necessary
if Mailed in the
United States

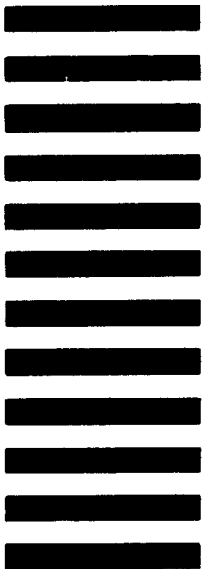

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO.33 MAYNARD MASS.

POSTAGE WILL BE PAID BY ADDRESSEE

RT/C SOFTWARE PUBLICATIONS ML 5-5/E45
DIGITAL EQUIPMENT CORPORATION
146 MAIN STREET
MAYNARD, MASSACHUSETTS 01754

Do Not Tear - Fold Here