

**decdata**system

**COS310**

**new  
user's  
guide**

**digital**



# COS-310

## New User's Guide

Order No. AA-D758A-TA

November 1978

This is an introductory manual to the operating procedures, DIBOL language, logical units, and programming conventions associated with the COS-310 Operating System. This information will allow a new user to be operating with COS-310 in a minimal amount of time.

Utility programs are herein introduced, but their actual operating instructions are contained in the COS-310 System Reference Manual.

|                                  |                       |
|----------------------------------|-----------------------|
| Supersession/Update Information: | This is a new manual. |
| Operating System and Version:    | COS-310 V 8.00        |
| Software Version:                | COS-310 V 8.00        |

To order additional copies of this document, contact the Software Distribution Center, Digital Equipment Corporation, Maynard, Massachusetts 01754

First Printing, November 1978

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by DIGITAL or its affiliated companies.

Copyright © 1978 by Digital Equipment Corporation

The postage-prepaid READER'S COMMENTS form on the last page of this document requests the user's critical evaluation to assist us in preparing future documentation.

The following are trademarks of Digital Equipment Corporation:

|               |              |            |
|---------------|--------------|------------|
| DIGITAL       | DECsystem-10 | MASSBUS    |
| DEC           | DECTape      | OMNIBUS    |
| PDP           | DIBOL        | OS/8       |
| DECUS         | EDUSYSTEM    | PHA        |
| UNIBUS        | FLIP CHIP    | RSTS       |
| COMPUTER LABS | FOCAL        | RSX        |
| COMTEX        | INDAC        | TYPESET-8  |
| DDT           | LAB-8        | TYPESET-11 |
| DECCOMM       | DECSYSTEM-20 | TMS-11     |
| ASSIST-11     | RTS-8        | ITPS-10    |

## CONTENTS

|  | Page  |
|--|---|
| <b>PREFACE</b>                         | <b>v</b>  |
| ORGANIZATION OF THE MANUAL             |   |
| NOTATIONAL CONVENTIONS FOR THIS MANUAL |   |
| <b>CHAPTER 1</b>                       | <b>INTRODUCTION TO COS-310</b>                      |
| 1.1                                    | OVERVIEW 1-1  |
| 1.2                                    | HARDWARE REQUIREMENTS 1-1                           |
| 1.3                                    | FUNCTIONAL VIEW OF COS-310 PROGRAMS 1-2             |
| 1.3.1                                  | The System Monitor 1-2                              |
| 1.3.2                                  | A High-level Programming Language 1-2               |
| 1.3.3                                  | System Utility Programs 1-2                         |
| <b>CHAPTER 2</b>                       | <b>OPERATING COS-310</b>                            |
| 2.1                                    | USING THE KEYBOARD 2-1                              |
| 2.2                                    | ERROR CORRECTION 2-3                                |
| 2.3                                    | ERROR MESSAGES 2-3                                  |
| 2.4                                    | CALLING THE KEYBOARD MONITOR 2-3                    |
| 2.5                                    | USING MONITOR AND EDITOR COMMANDS 2-4               |
| 2.5.1                                  | DIRECTORY, FETCH, and LIST Commands 2-4             |
| 2.5.2                                  | RUN, SAVE, and WRITE Commands 2-5                   |
| 2.5.3                                  | ERASE Command 2-7                                   |
| 2.5.4                                  | Line Number Command 2-7                             |
| 2.5.5                                  | Number and RESEQUENCE Commands 2-8                  |
| 2.5.6                                  | DELETE Command 2-9                                  |
| <b>CHAPTER 3</b>                       | <b>LOGICAL UNITS</b>                                |
| 3.1                                    | LOGICAL UNIT TABLE 3-1                              |
| 3.2                                    | LOGICAL UNIT NUMBERS 3-2                            |
| 3.3                                    | HOW LOGICAL UNITS ARE ASSIGNED 3-2                  |
| 3.3.1                                  | Assignments Through the Keyboard (DFU/K) 3-2        |
| 3.3.2                                  | Assignments From the Edit Buffer (DFU/B) 3-3        |
| 3.3.3                                  | Assignments From a Named File (DFU,filnam) 3-3      |
| 3.4                                    | HOW LOGICAL UNITS ARE DISPLAYED AND LISTED 3-4      |
| 3.4.1                                  | Display Assignments on the Screen (DFU/D) 3-4       |
| 3.4.2                                  | List Assignments on the Printer (DFU/DL) 3-4        |
| 3.4.3                                  | Display an Expanded Table on the Screen (DFU/E) 3-4 |
| 3.4.4                                  | List an Expanded Table on the Printer (DFU/EL) 3-4  |
| 3.5                                    | ARRANGEMENT OF LOGICAL UNITS ON MEDIA 3-5           |
| 3.6                                    | HOW A DIBOL PROGRAM USES LOGICAL UNIT NUMBERS 3-6   |