

DECserver 200

Hardware Installation/Owner's Guide

Order No. EK-D200C-IN-001

October 1986

This guide explains how to install the DECserver 200 and how to verify its operation. The guide also describes the DECserver 200 controls and indicators. This document is intended for the hardware installer and the server manager.

Supersession/Update Information: This is a new manual.

digital

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.


The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by Digital or its affiliated companies.

Copyright © 1986 by Digital Equipment Corporation
All Rights Reserved.

The postage prepaid Reader's Comments form on the last page of this document requests the user's critical evaluation to assist us in preparing future documentation.

The following are trademarks of Digital Equipment Corporation:

DEC	MASSBUS	RT
DECconnect	MicroPDP-11	ThinWire
DECmate	MicroRSX	TOPS-10
DECnet	MicroVAX	TOPS-20
DECserver	MicroVMS	ULTRIX
DECUS	PDP	UNIBUS
DECwriter	PKOS	VAX
DIBOL	Professional	VAXcluster
	Rainbow	VAX/VMS
LA50 (LA100, et al.)	RSTS	VMS
LN01 (LN03, et al.)	RSX	VT
LQ02 (LQ03, et al.)	RSX-11M-PLUS	Work Processor

Bell is a trademark of Bell Telephone Companies.

IBM is a registered trademark of International Business Machines Corporation.

PC/XT and Personal Computer AT are trademarks of International Business Machines Corporation.

TEFLON is a trademark of Dupont.

This manual was produced by Networks and Communications Publications.

Contents

Preface

1 Introduction to the DECserver 200

1.1	DECserver 200 Models	1-1
1.2	Functions of the DECserver 200	1-2
1.2.1	DECserver 200/MC (DSRVB-Ax)	1-3
1.2.2	DECserver 200/DL (DSRVB-Bx)	1-4
1.3	Hardware Installation Overview	1-5
1.3.1	Connecting the DECserver 200 to the Ethernet Network	1-5
1.3.2	Connecting Port Devices to the DECserver 200/MC	1-8
1.3.3	Connecting Port Devices to the DECserver 200/DL	1-10
1.4	DECserver 200 Software	1-12

2 Contents of Shipment

2.1	Number of Boxes	2-1
2.2	Contents of the DECserver 200 Box	2-1
2.3	Contents of the Accessories Box(es)	2-2

3 Site Preparation

3.1	Arranging for Software Installation	3-1
3.2	Placing the DECserver 200	3-2
3.2.1	Offices	3-2
3.2.2	Rack Mount	3-2
3.2.3	Satellite Equipment Rooms (SER)	3-2
3.3	Cable Configuration Rules	3-3
3.4	Prefabrication Checks	3-5

4 DECserver 200 Installation

4.1	Introduction	4-1
4.2	Verifying the Voltage Select Switch Setting	4-1
4.3	Connecting the Transceiver Cable	4-3
4.4	Before Connecting Power	4-6
4.5	Connecting Power	4-7
4.6	Verifying Operation	4-8
4.7	Connecting Device Cables	4-9
4.7.1	Connecting Device Cables to the DECserver 200/50C	4-9
4.7.2	Connecting Device Cables to the DECserver 200/DL	4-11
4.8	Verifying System Installation	4-16

5 What To Do if You Have Problems

5.1	Introduction	5-1
5.2	Diagnosing Server Problems	5-1
5.3	D1 LED Off	5-2
5.4	D2 LED Off	5-3
5.5	D2 LED Blinking	5-4
5.5.1	Error Messages 920 and 921	5-4
5.5.2	Error Messages 922 and 923	5-5
5.5.3	Error Messages 930 and 931	5-5
5.5.4	Error Message 937	5-5
5.5.5	Error Messages 941, 942, and 950	5-6
5.5.6	No Messages on Console Terminal	5-7
5.6	T3 LED Blinking	5-8
5.6.1	Down-Line Load Starts, Then Fails	5-8
5.6.2	Down-Line Load Does Not Start	5-8

A Controls and Indicators

A.1	Controls	A-1
A.1.1	Software Reset Switch (S1)	A-1
A.1.2	Voltage Select Switch	A-1
A.1.3	Circuit Breaker	A-2
A.2	Status Indicator LEDs	A-2

B Port Devices Supported by DECserver 200

C Ordering Information

C.1	DECserver 200 Hardware Units	C-1
C.2	DECserver 200 Country Kits	C-1
C.3	DECserver 200 Accessories	C-2

C.4	DEC OFFICE Cable (BC16E) and Adapters	C-3
C.5	Transceiver Cables	C-3
C.6	Device Cables	C-4

D Cable Structure

D.1	DECserver 200/MC Device Connectors (J1 through J8)	D-1
D.2	Serial Line Circuit Standards	D-2
D.3	Device Cables Used With DECserver 200/MC	D-3
D.3.1	BC22D Shielded Null Modem Cable (Data Leads Only)	D-3
D.3.2	BC22E or BC22F Shielded Straight-Through Cable (Full Modem)	D-4
D.3.3	BC22R Shielded Null Modem Cable	D-5
D.3.4	BC17D Shielded Null Modem Cable	D-6
D.3.5	DECserver 200/MC Port Loopback Connector	D-7
D.4	DECserver 200/DL Device Connector (J1)	D-8
D.5	Device Cables and Adapters Used With DECserver 200/DL	D-9
D.5.1	BC16C 36-Conductor Cable (Data Leads Only)	D-9
D.5.2	H3101 36-pin Loopback Connector	D-10
D.5.3	H3102 36-pin Cable Coupler	D-11
D.5.4	H3106 36-pin to 50-pin Adapter	D-12
D.5.5	H3104 Cable Concentrator	D-13
D.5.6	H3103 MMJ Loopback Connector	D-14
D.5.7	BC16E-xx 6-Conductor DEC OFFICE Cable	D-15
D.5.8	H8572 6 Pin Cable Coupler	D-16
D.5.9	H8571-xx DEC473 to RS-232-C Passive Adapters	D-17

E DECserver 200 Specifications

E.1	Power	E-1
E.2	Environment	E-1
E.2.1	Temperature	E-1
E.2.2	Altitude	E-2
E.2.3	Relative Humidity	E-2
E.2.4	Physical Size of the DECserver 200	E-2
E.2.5	Space Requirements	E-2

F Service Options

F.1	Hardware Services	F-1
F.1.1	Digital On-Site Service	F-7
F.1.2	DECmailer	F-1
F.2	Installation Service	F-1
F.3	Software Services	F-1
F.3.1	Software Product Service Agreements	F-1
F.3.2	Training	F-3

G Connecting to Etherjack

Figuras

1-1	DECserver 200 (Models DSRVB-Ax and OSRVB-Bx)	1-1
1-2	DECserver 200/MC	1-3
1-3	DECserver 200/DL	1-4
1-4	Standard Ethernet Coaxial Cable Connection	1-6
1-5	ThinWire Ethernet Coaxial Cable Connection	1-7
1-6	DECserver 200/MC Port Device Connections	1-8
1-7	DECserver 200/DL Port Device Connections	1-10
1-8	DECserver 200/DL Accessories	1-11
2-1	DECserver 200 Shipping Box Contents	2-1
4-1	DECserver 200 Hardware Verification	4-8
A-1	Controls and Indicators	A-4
D-1	Pin Numbers — DECserver 200/MC Device Connectors (J1 through J8)	D-1
D-2	Pin Assignments — BC22D Shielded Null Modem Cable	D-3
D-3	Pin Assignments — BC22E or BC22F Shielded Straight-Through Cable	D-4
D-4	Pin Assignments — BC22R Shielded Null Modem Cable	D-5
D-5	Pin Assignments — BC17D Shielded Null Modem Cable	D-6
D-6	Wiring Diagram — DECserver 200/MC Port Loopback Connector	D-7
D-7	Pin Numbers — DECserver 200/DL Device Connector (J1)	D-8
D-8	Wiring Diagram — BC16C 36-Conductor Cable	D-9
D-9	Wiring Diagram — H3101 Loopback Connector	D-10
D-10	Wiring Diagram — H3102 36-Pin Cable Coupler	D-11
D-11	Wiring Diagram — H3106 Cable Adapter	D-12
D-12	Wiring Diagram — H3104 Cable Concentrator	D-13
D-13	Wiring Diagram — H3103 M/J Loopback Connector	D-14
D-14	Wiring Diagram — BC16E-xx Cable	D-15
D-15	Wiring Diagram — H8572 Cable Coupler	D-16
D-16	Wiring Diagram — H8571-A Adapter	D-17
D-17	Wiring Diagram — H8571-B Adapter	D-17

Tablas

1-1	Device Cables	1-9
3-1	Maximum Cable Lengths	3-3
3-1	Status LEDs/Indicators	3-2
A-1	Status LEDs	A-2
D-1	Circuit Standards	D-2
D-2	DECserver 200/DL Device Connector (J1) Pin Definitions	D-8
E-1	DECserver 200 Power Ratings	E-1

Preface

This guide explains how to install the DECserver 200, models DSRVB-Ax and DSRVB-Bx, and how to verify their operation. The guide also tells how to order Digital services and products that support the DECserver 200.

The only tool required for installation is a small flat-blade screwdriver.

You should keep this guide with your DECserver 200 unit.

Intended Audience

- Server Manager
- Hardware Installer

How to Use This Guide

Before you install the DECserver 200, it is recommended that you read Chapters 1, 2, and 3. These chapters provide a functional overview of the DECserver 200 and the installation process, including important site preparation information. Chapter 4 provides procedures to install and verify the DECserver 200. If problems occur during verification, refer to the troubleshooting procedures in Chapter 5. The appendixes offer additional information that can be useful during installation.

Structure of This Guide

This manual contains five chapters and seven appendixes, as follows:

- Chapter 1** Introduces the DECserver 200 from a functional point of view and describes the installation process and the software requirements.
- Chapter 2** Describes the contents of the DECserver 200 shipment and provides instructions for getting help if the equipment is damaged.

- Chapter 3** Discusses important site preparation information that must be considered before the DECserver 200 installation begins.
- Chapter 4** Provides an illustrated step-by-step procedure for installing and verifying the operation of the DECserver 200.
- Chapter 5** Provides help in isolating problems that can occur during the installation of the DECserver 200 and provides procedures to correct them.
- Appendix A** Describes the controls and indicators on the DECserver 200.
- Appendix B** Lists the devices supported by the DECserver 200.
- Appendix C** Lists the order codes for the DECserver 200 and related hardware products.
- Appendix D** Provides device cable wiring diagrams for users who want to assemble and use their own cables.
- Appendix E** Provides DECserver 200 specifications.
- Appendix F** Describes the Digital hardware and software service options that are available for the DECserver 200.
- Appendix G** Describes how to connect the DECserver 200 transceiver cable to another transceiver cable mounted in an Etherjack junction box.

Other DECserver 200 Documents

Ordering information for the following documents is in the release notes that accompany the server software:

- *DECserver 200 Software Installation Guide*
Describes the installation of server software and the configuration of DECserver 200 on load hosts.
- *DECserver 200 Management Guide*
Describes how to set up, manage, monitor, and troubleshoot the DECserver 200.
- *DECserver 200 User's Guide*
Summarizes the DECserver 200 user's environment.
- *DECserver 200 User's Reference Card*
Provides a ready reference of the syntax for the DECserver 200 commands.
- *DECserver 200 Identification Card*
Provides space to record unique identification data for each DECserver 200.
- *Terminal Server Commands and Messages Guide*
Describes the terminal server command set and the terminal server messages.

- *LATplus/VMS Service Node Management Guide*

Discusses the management of a VAX/VMS or a MicroVMS system that is operating as a service node in a LAT network.

Associated Documents

- *DECserver 200 Technical Manual*

Describes the DECserver 200 hardware and module logic and the self-test and initialize programs.


Introduction to the DECserver 200

1.1 DECserver 200 Models

The DECserver 200 is a full-function, eight-line, Ethernet-based server that provides the interface between eight asynchronous serial data communications channels and an Ethernet or IEEE 802.3 local area network. There are two models of the DECserver 200: model DSRVB-Ax (DECserver 200/MC) and model DSRVB-Bx (DECserver 200/DL). Both models are shown in Figure 1-1.

When references are made to features that are applicable to both models, this guide refers to the model as DECserver 200.

- DECserver 200/MC (model DSRVB-Ax*) — Supports RS-232-C (EIA 232) connections with full-modem control.
- DECserver 200/DL (model DSRVB-Bx*) — Supports devices that require data leads only for operation.

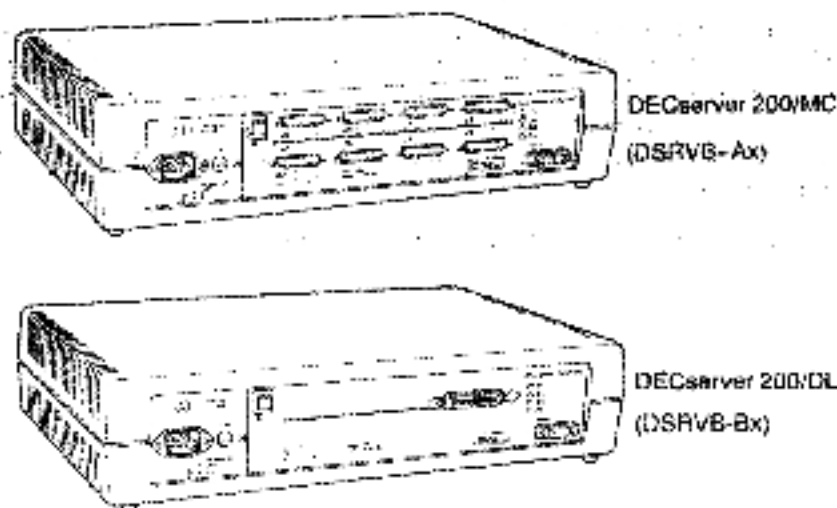

100-0473

Figure 1-1: DECserver 200 (Models DSRVB-Ax and DSRVB-Bx)

*The letter "A" or "B" replaces the "x" in the model designation to represent the following input voltage requirements:

Model	Input Voltages	Model	Input Voltages
DSRVB-AA	100—120 Vac	DSRVB-BA	100—120 Vac
DSRVB-AB	220—240 Vac	DSRVB-BB	220—240 Vac

1.2 Functions of the DECserver 200

Copyright © 1987 Digital Equipment Corporation

The DECserver 200 allows any combination of eight locally attached devices access to each other and to remote computer systems on a Local Area Transport (LAT) network. Each device is logically connected to the computer systems and to their resources. For a list of devices supported by the DECserver 200, see Appendix B.

DECserver 200 offers the following features:

- Permits fast, easy connections between the devices attached locally to the server ports and the remote devices on the network.
- Manages device traffic and leaves computer systems more time for applications tasks (as compared to traditional character-oriented interfaces, such as the DZ11).
- Reduces and simplifies cabling required for connecting devices to a network.
- DECserver 200/MC supports dial-in and dial-out modems.
- Provides access to Digital and to non-Digital host systems on the LAT network.

You can install the DECserver 200 in a variety of environments, including offices and computer rooms. The server can be placed on a desk or table, or can be mounted in a standard rack cabinet. Digital can also provide you with a wall/partition mounting bracket to mount the server directly onto an office wall or to suspend the server from partitioned office walls. This bracket must be ordered separately. See Appendix C for ordering information.

The following sections further define the features of both models

1.2.1 DECserver 200/MC (DSRVB-Axx)

The DECserver 200/MC, shown in Figure 1-2, supports full-duplex, asynchronous devices that are compatible with V.28/RS-232-C (EIA232) standards. These devices include terminals, printers, modems, personal computers, and host systems. This model has eight 25-pin connectors (J1 through J8) for connecting devices to each of the server's eight serial-line ports. Each device is logically connected (through the server ports) to the computer systems on the network and their resources. Devices attached to another server can also access personal computers, dial-out modems, printers, and host systems that are attached locally to the DECserver 200.

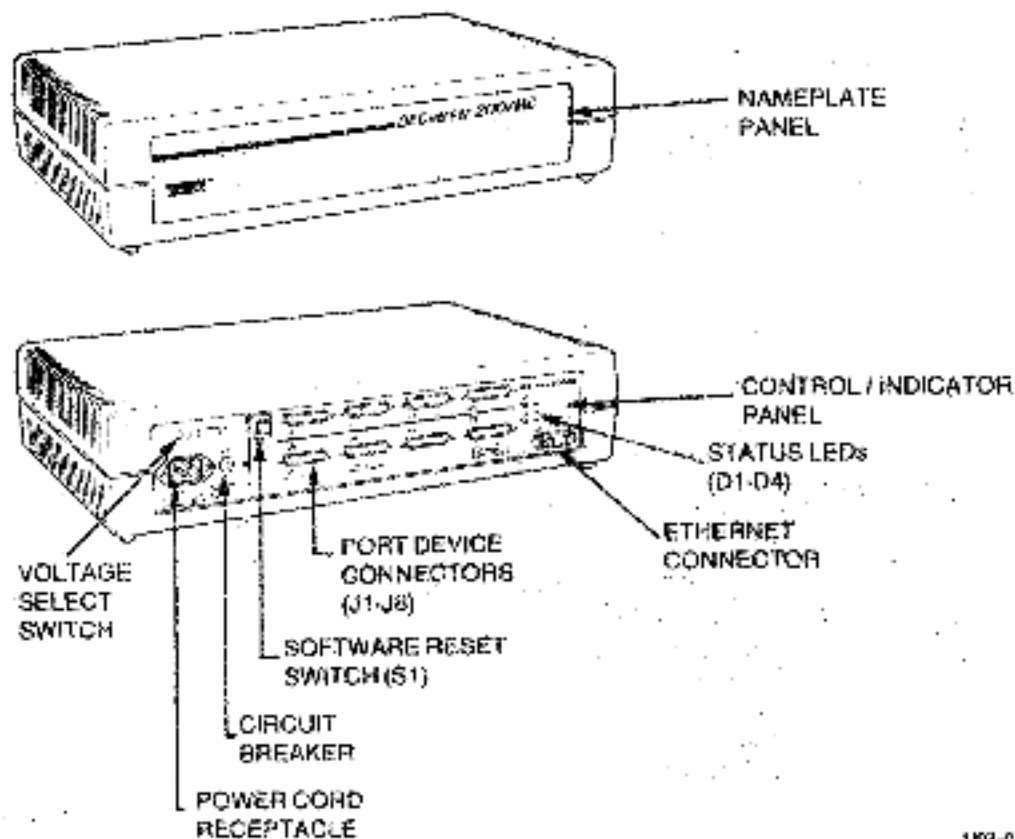



Figure 1-2: DECserver 200/MC

NOTE

For a description of DECserver 200 controls and indicators, see Appendix A in this manual.

1.2.2 DECserver 200/DL (DSRYB-Bx)

The DECserver 200/DL, shown in Figure 1-3, supports devices (asynchronous devices supporting RS-423, DEC423, and CCITT-V.10 standards) such as terminals, printers, and personal computers (in terminal emulation mode) that require data leads only for operation. This model has one 36-pin connector (J1) for connecting devices to each of the server's eight serial-line ports. Only one data lead from each server port is attached to this connector. The DECserver 200/DL does not support connections to modems or host systems.

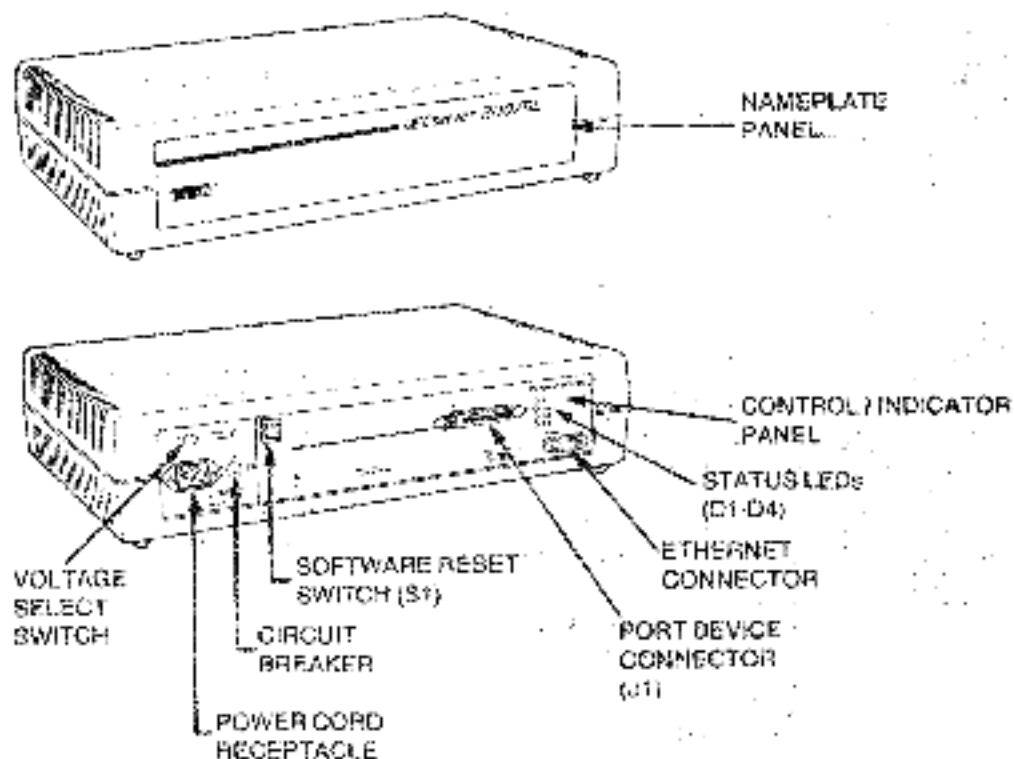

KG-0401

Figure 1-3: DECserver 200/DL

NOTE

For a description of DECserver 200 controls and indicators, see Appendix A in this manual.

1.3 Hardware Installation Overview

Installing the DECserver 200 hardware consists of first connecting the server to the Ethernet network, then verifying the hardware installation. The device cables are connected to the server after the hardware installation is verified. The following sections provide an overview of the methods used to complete the connections.


NOTE

The DECserver 200 is considered operational when the server hardware is successfully installed, and the system installation verification procedure is performed on one DECserver 200 unit. The system comprises the installed DECserver 200 hardware with the DECserver 200 server software running on the hardware unit. See the appropriate DECserver 200 Software Installation Guide for details about the system verification procedure.

1.3.1 Connecting the DECserver 200 to the Ethernet Network

A transceiver cable connects the server to the Ethernet network (see Figures 1-4 and 1-5). The transceiver cable can be connected to any of the following:

- Another transceiver cable section. This cable can be secured in an Etherjack junction box.
- A DELNI Local Network Interconnect.
- A transceiver on a standard Ethernet coaxial cable for Digital baseband networks or a DECOM for Digital broadband networks.
- A ThinWire Ethernet Station Adapter (DESTA) on a ThinWire Ethernet coaxial cable (see Figure 1-5).
- A standard rack cabinet in a Satellite Equipment Room (SER) for DECconnect systems. See the *DECconnect Planning and Configuration Guide* for installing the DECserver 200 in DECconnect systems.

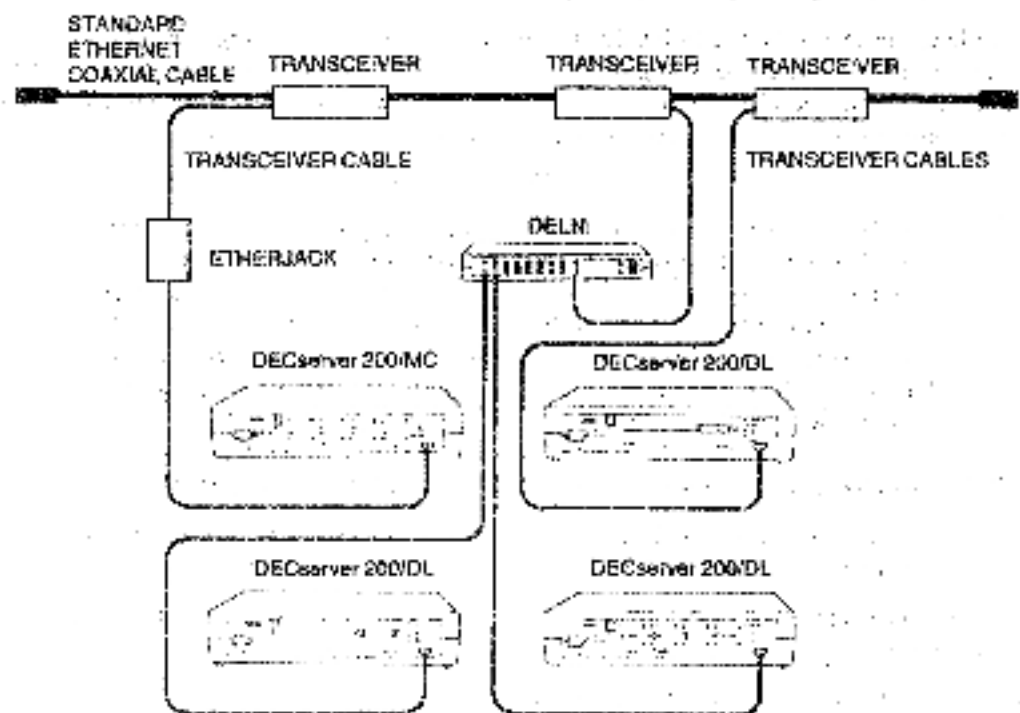


LE01-0482

Figure 1-4: Standard Ethernet Coaxial Cable Connection.

NOTE

The DECserver 200 is compatible with Digital baseband and broadband Ethernet products and with Ethernet and IEEE 802.3 specifications.

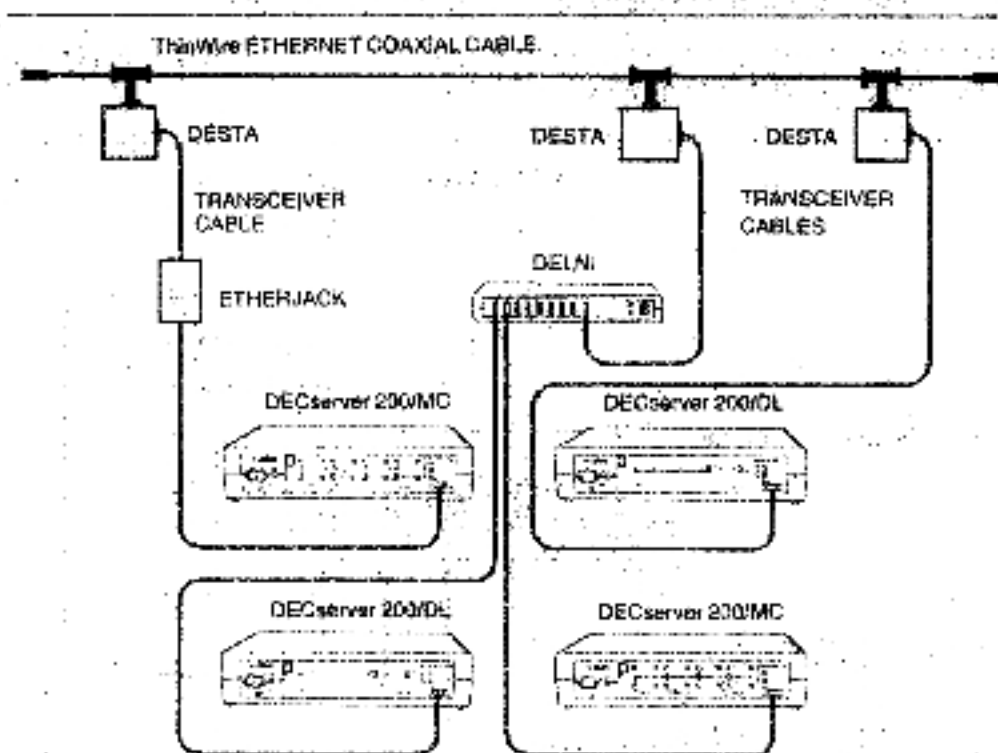

UK3-0483

Figure 1-5: ThinWire Ethernet Coaxial Cable Connection

The DELNI can stand alone or be connected to the Ethernet coaxial cable. If you are connecting the DELNI to the Ethernet coaxial cable or to an Etherjack junction box, allow for an additional transceiver cable.

Make sure the transceiver connection is ready before the server installation begins. This means that the Etherjack, the DELNI, the DECOM, the DESTA, or the transceiver is installed, and the required transceiver cabling is in place, tested, and tagged. See the appropriate product installation guide to install these products.

See Appendix C for a listing of all DECserver 200 hardware options and order codes.

1.3.2 Connecting Port Devices to the DECserver 200/MC

You need one device cable for each port device you connect to the DECserver 200/MC (see Figure 1-8). Table 1-1 lists available cable types.

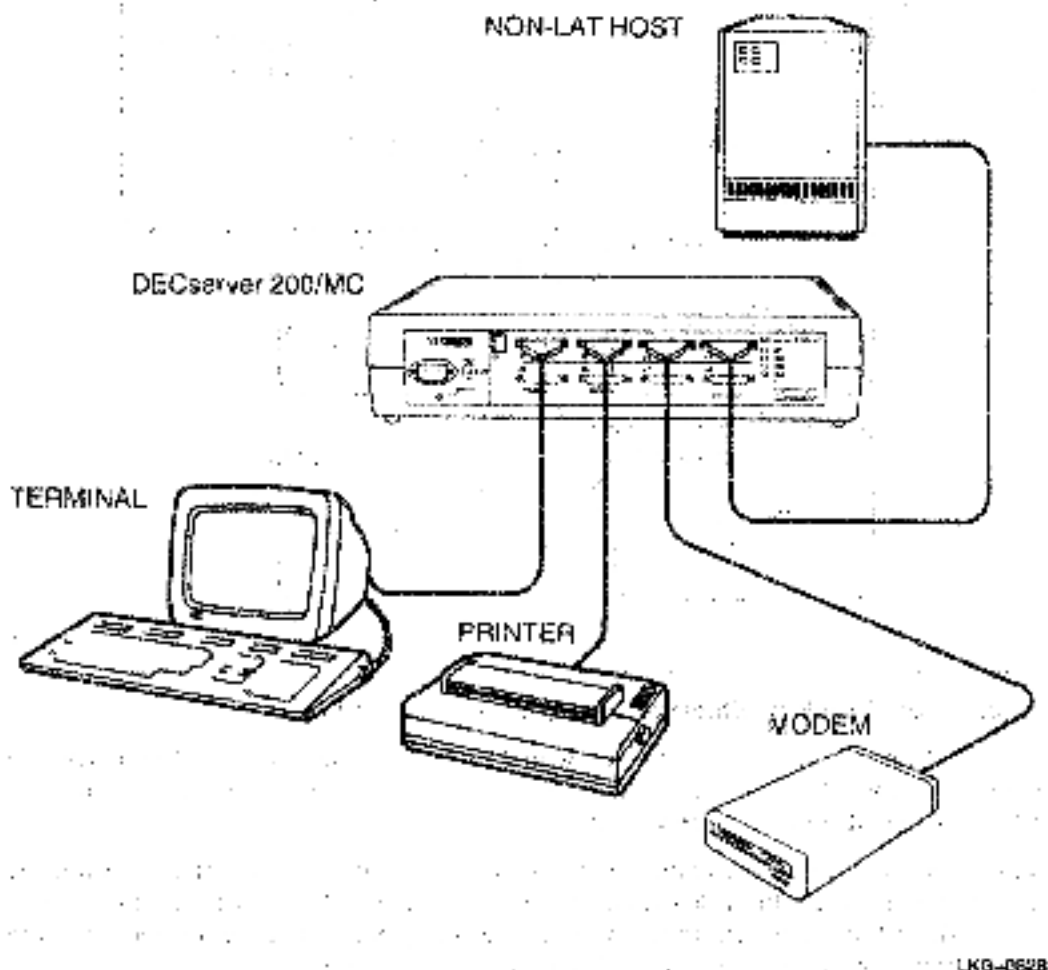


Figure 1-8: DECserver 200/MC Port Device Connections

Table 1-1: Device Cables

Cable Type	Description	For Connecting
BC22D	Null modem cable	Printers, terminals, and personal computers that are NOT utilizing modem control signals for operation
BC22R*	Null modem cable	Printers, terminals, and personal computers that ARE utilizing modem control signals for operation
BC22E or BC22F	Modem cable	Dial-in or dial-out modems

*Digital recommends the BC22R cable to connect Data Terminal Equipment (DTE) devices that use full-modem control signals for operation. However, another cable type, the BC17D, is available that supports most of the functions supported by the BC22R cable. See Appendix D for more information.

The device cables can be ordered from Digital (see Appendix C for ordering information). If you are using your own cables or assembling your own cables, refer to Appendix D for cable configuration information.

If you are using existing device cables, make sure the cables are accessible at the DECserver 200/300 installation site before the installation begins.

1.3.3 Connecting Port Devices to the DECserver 200/DL

The DECserver 200/DL provides a single 36-pin connector that contains the data leads for all eight ports. You will need an H3104-B DECserver 200/DL Adapter kit to connect port devices to the server (see Figure 1-7). This kit contains an H3104 cable concentrator, an H3103 MMJ loopback connector, and a BC16C-10 (10-foot) 36-conductor cable. The cable concentrator has eight 6-pin modified modular jacks that accept BC16E-xx DEC OFFICE cables for connecting port devices to the DECserver 200/DL. These accessories, and others shown in Figure 1-8, are available from Digital to customize your DECserver 200/DL configuration. See Appendix C for ordering information.


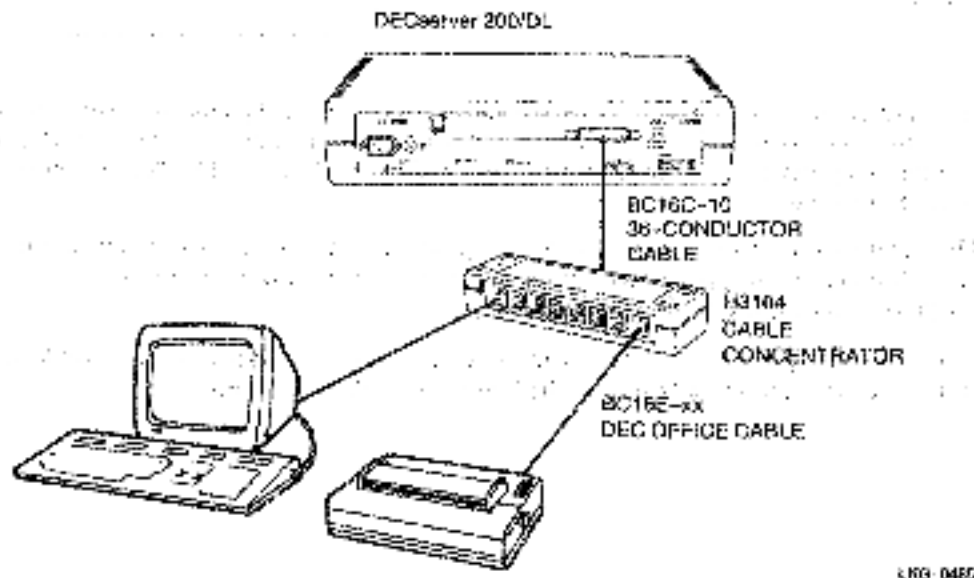


Figure 1-7: DECserver 200/DL Port Device Connections

If you are using or assembling your own cables, refer to Appendix D for cable configuration information.

If you are using existing device cables, make sure the cables are accessible at the DECserver 200/DL installation site before the installation begins.

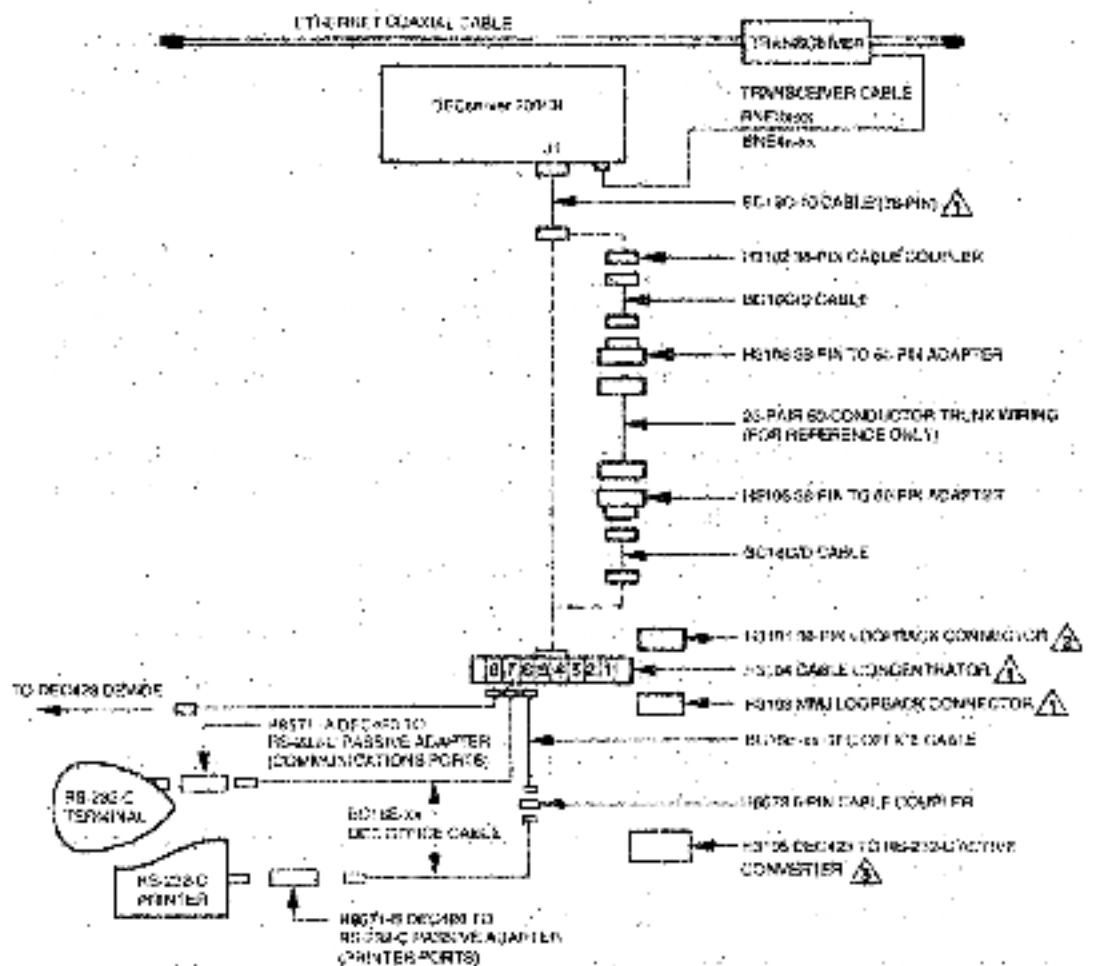

ALSO AVAILABLE (NOT SHOWN)

- H3240 50 FOOT SPIRAL OF UNTERMINATED 50 OHM CABLE FOR CUSTOM WIRING APPLICATIONS.
- H3251 CRIMPING TOOL FOR ATTACHING Wires TO UNTERMINATED 50 OHM CABLES.
- H3270 PACKAGE OF 50 MMJ CONNECTORS USED WITH THE H3251 CRIMPING TOOL TO TERMINATE CUSTOM CABLE LENGTHS FROM 14120 SPIRAL.

- ⚠ PART OF H3104-B DEC425 or 200/DL ADAPTER KIT
- ⚠ SHIPPED WITH EACH DEC425 or 200/DL LINT.
- ⚠ DEPENDING ON THE DATA SIGNAL RATES AND CABLE LENGTH, SOME APPLICATIONS MAY REQUIRE THE USE OF THE H3105 DEC425 TO RS-232C ACTIVE CONVERTER. SEE YOUR DIGITAL SALES REPRESENTATIVE FOR MORE INFORMATION.

LKG-0488

Figure 1-8: DECserver 200/DL Accessories

1.4 DECserver 200 Software

The basic software required for installing and operating the DECserver 200 follows:

- DECserver 200 distribution software — Installed on each DECserver 200 load host
- DECnet Phase IV software — Installed on each DECserver 200 load host (not required for ULTRIX systems)
- LAT service node software — Installed on all LAT service nodes that communicate with DECserver 200 devices

You must install the distribution software on a load host that runs DECnet Phase IV software. The distribution software includes a server image file that is down-line loaded to DECserver 200s. The load host down-line loads the server image whenever required, and provides the server image to any number of servers. The server image, running on the DECserver 200, constitutes the server software that enables the server to perform its functions.

The LAT service node software supports the LAT architecture and must be installed on each service node. The packaging of the LAT service node software depends on the operating system running on the service node.

- VAX/VMS or MicroVMS operating system (Versions 4.2 through 4.5) — LAT service node software (LATplus/VMS) is contained in the DECserver 200 software kit. For later versions, the LAT service node software is part of the operating system.
- ULTRIX-32/32m operating system — LAT service node software is included with the operating system.
- RSX-11M-PLUS or MicroRSX operating system — LAT service node software is included with DECnet-RSX software.
- TOPS-10 or TOPS-20 operating system — LAT service node software is included with the operating system.

All software must be installed and verified before you can operate the server.

For more information, see the DECserver 200 Software Product Description that applies to the specific operating system.

2

Contents of Shipment

2.1 Number of Boxes

A single DECserver 200 shipment consists of one or more boxes, depending on the optional equipment ordered. Be sure you received all your ordered equipment. Check each item for damage.

2.2 Contents of the DECserver 200 Box

Check the box, see Figure 2-1, for the following items:

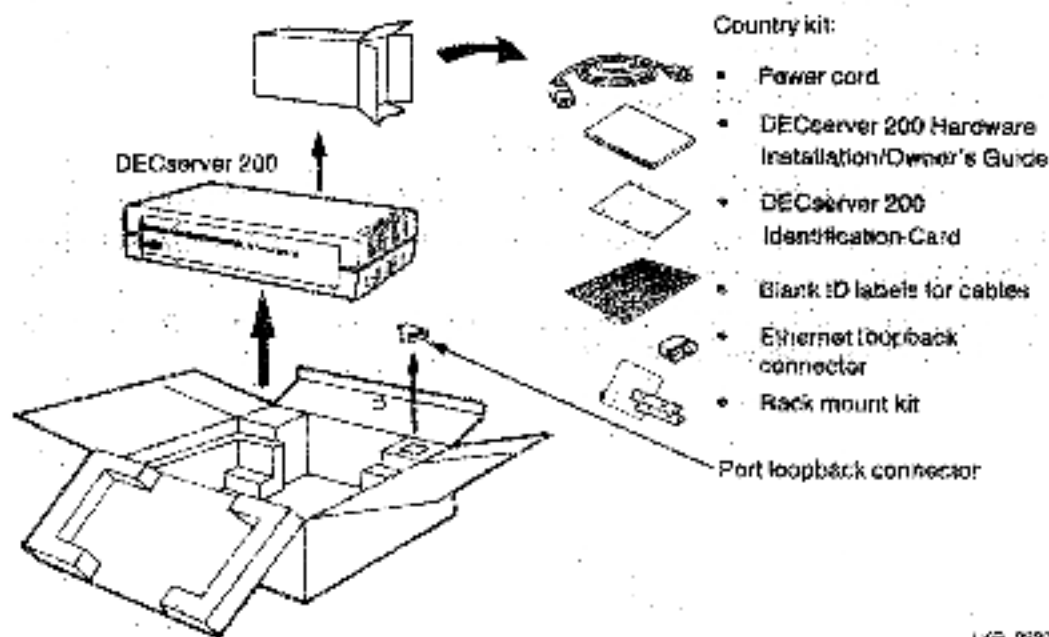


Figure 2-1: DECserver 200 Shipping Box Contents

IN CASE OF DAMAGE:

- Stop unpacking.
- Contact your Digital sales representative and delivery agent.

IF PARTS ARE MISSING:

- Identify missing part(s).
- Contact your Digital sales representative.

NOTE

Save the box and packing material in case you need to return the unit.

2.3 Contents of the Accessories Box(es)

The number of boxes and their contents depends on the options you ordered. Open the accessories box(es) and check the contents against the ordered items that are listed in your bill of materials.

IN CASE OF DAMAGE:

- Stop unpacking.
- Contact your Digital sales representative and delivery agent.

IF PARTS ARE MISSING:

- Identify missing part(s).
- Contact your Digital sales representative.

NOTE

Save the box(es) and packing material in case you need to return items.

If you received an Etherjack junction box kit, install it now by following the installation instructions provided with the kit.

If you received a wall/partition mounting bracket kit, install it now by following the installation instructions provided with the kit.

3
Site Preparation

11

12

13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

3.2 Placing the DECserver 200

The server can be placed in various locations, including offices and computer rooms, as long as the environmental requirements are met. See Appendix E, DECserver 200 Specifications.

3.2.1 Offices

Allow 15 centimeters (6 inches) of airspace around the server air vents, and place the server on a desk or table that is at least 45 centimeters (18 inches) above the floor. This allows adequate ventilation for cooling fans and reduces exposure to excess dust from foot traffic.

NOTE

- A wall/partition mounting bracket kit is also available from Digital that allows you to mount the server directly to a wall or to suspend it from partitioned office walls. Installation instructions are provided with the kit (see Appendix C for ordering information).

3.2.2 Rack Mount

The server can be rack mounted in a standard rack cabinet. To install, refer to the installation instructions provided with the rack mount kit.

3.2.3 Satellite Equipment Rooms (SER)

The SER is a component of Digital's DECconnect System. It provides a central location for communications devices (such as DECserver 200s) that connect ThinWire Ethernet and twisted-pair cable to a standard Ethernet network. The SER can also be configured as the center of a stand-alone network, and provide a base from which to expand as network requirements increase. If you are installing the DECserver 200 in such an environment, or as part of a DECconnect System installation, refer to the *DECconnect System Installation and Verification Guide*.

3.3 Cable Configuration Rules

Ensure that the transceiver cables, the device cables, and the server power cable do not exceed the maximum lengths described in Table 3-1 and in the configuration rules below.

Table 3-1: Maximum Cable Lengths

From	To	Maximum Cable Length	Cable Type
Transceiver	Server	50 m (164 ft) See rules 1 and 2	BNE3X-xx* Transceiver cable
Transceiver	Server	12.5 m (41 ft) See rules 1 and 2	BNE4X-xx* Office transceiver cable
Device	Server	See rule 3	Depends on specific device (see Appendix D)
Wall outlet	Server	1.8 m (6 ft)	Server power cable (included in D5RVB-xx country kit)

Basic configuration rules:

1. **Maximum length for the transceiver cable cannot exceed 50 meters (164 feet).** This maximum length can be reduced due to the internal cabling equivalency of a device (such as a DELNI) that is connected between the server and the transceiver, or due to the use of office transceiver cable:
 - Cabling equivalency is a measure of the internal timing delay of a device, expressed in meters of transceiver cable. This cabling equivalency must be subtracted from the 50-meter maximum. For example, if a device has a 5-meter cabling equivalency, then its maximum allowable transceiver cable length is (50 m - 5 m) or 45 meters.
 - Office transceiver cable (BNE4X-xx), due to its smaller diameter, has a signal loss that is four times that of the (BNE3X-xx) transceiver cable. Therefore, if office transceiver cable is used, the maximum transceiver cable distance must be divided by 4. This means the maximum office transceiver cable length allowed is 12.5 meters*.

* BNE3X-xx transceiver cable and BNE4X-xx office transceiver cable can be interconnected. However, the cable attenuation (signal loss) for the office transceiver cable is greater than that of BNE3X-xx transceiver cable by a factor of four (for example, 2 meters, 6.6 feet, of office transceiver cable is electrically equivalent to 8 meters, 26.2 feet, of BNE3X-xx transceiver cable).

If the configuration includes a device and the device has any internal cabling equivalency, this should be subtracted from the 50-meter maximum before dividing by 4. For example, if a device has a 10-meter cabling equivalency and is attached to its transceiver using office transceiver cable, then the maximum allowable transceiver length is $(50 \text{ m} - 10 \text{ m})/4$ or 10 meters.

- 2 When connecting the server to a configuration that includes a DELNI, allow 5-meters cabling equivalency loss for the DELNI.
- 3 Maximum allowable lengths for device cables should not exceed guidelines set by RS-232-C (EIA232) specifications.

3.4 Preinstallation Checks

Before beginning the server installation, use the following checklists to ensure that site preparation is complete:

Hardware

- The appropriate baseband or broadband network interface (for example, an Etherjack junction box, a DELNI, a DECOM, a BESTA, or Ethernet transceiver) is installed, and the required transceiver cabling is in place, tested, and tagged. If the device is not installed, ensure that arrangements for the installation are made before the server installation begins.
- The arrangements were made to connect the server's transceiver cable to the appropriate baseband or broadband network interface.
- The wall/partition mounting bracket kit or rack mount kit is installed (if required) as described in the kit documentation.
- The transceiver cables are available in the appropriate lengths.
- The device cables are available in the appropriate lengths or existing device cables you plan to use are available at the server installation site.
- If you are installing a DECserver 200/DL, be sure that any additional accessories required to support your configuration are available at the server installation site.
- The devices (terminals, printers, personal computers, modems, hosts) are ready to be connected.
- At least one device with a keyboard (such as a terminal or a personal computer in terminal emulation mode) is available for installation troubleshooting, if necessary, and for system installation verification (as described in the appropriate DECserver 200 Software Installation Guide).

Software

- The DECserver 200 Identification Card was filled out (as described in Section 3.1) and given to the system/network manager.
- The system/network manager installed or will install the distribution software on the load host(s).
- DECnet (Phase IV) is installed and running on the load host(s). (This does not apply to ULTRIX load hosts.)
- The system/network manager installed or will install the LAT service node software (if required).

Suitable Environment

The items listed in this checklist must conform to the specifications described in Appendix E of this guide.

- The power outlet matches the power requirements of the server you ordered and is within 1.8 meters (6 feet) of the installation site.
- The temperature, altitude, and humidity ranges are correct.
- The space is adequate for ventilation and for maintenance access.
- The location is at least 45 centimeters (18 inches) above the floor surface.

Service

- The service contracts (optional) are in place. See Appendix F for more information on service options.

4.1 Introduction

This chapter explains how to install, power up, and verify the operation of the DECserver 200. Before you begin these procedures, read and follow the instructions in Chapter 3, Site Preparation. During this installation procedure, complete the instructions in each section before going on to the next section.

IMPORTANT

To avoid damage to the equipment, **DO NOT** connect the server power cord until instructed in the following procedures.

4.2 Verifying the Voltage Select Switch Setting

- 1 Locate the removable voltage label on the server's control/indicator panel.

Note the operating range indicated by the arrow on the label. This is the factory-set operating range of the server.




L405-1530

- 2 Peel the voltage label from the server, exposing the voltage select switch.



L405-0424


- 3 Verify that the voltage select switch is set to the operating range indicated by the label, and that this is the correct setting for your power source. (See your electrician if you are not sure.)

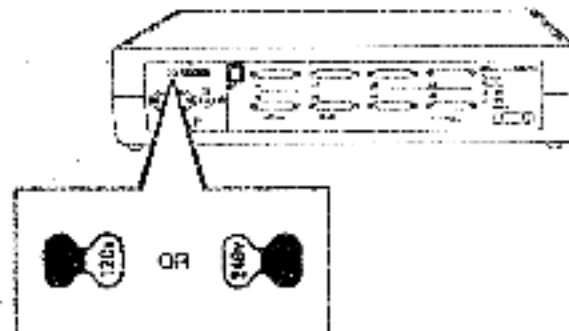

L405-0326


4.3 Connecting the Transceiver Cable

- 1 Unlock the slide latch on the server's Ethernet connector.

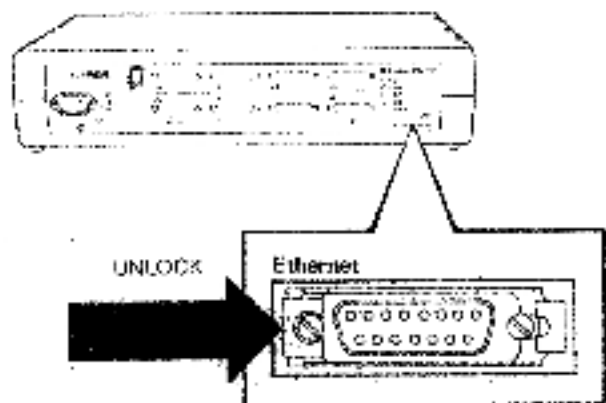

LNK-0577

- 2 Connect the transceiver cable to the server's Ethernet connector. The cable can have a straight or a right-angle end connector.

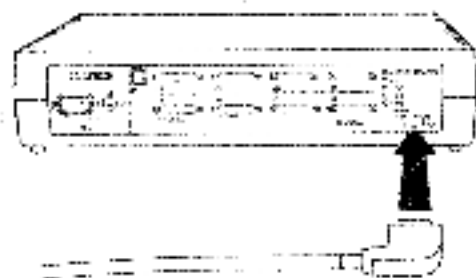

LNK-0549


- 3 Lock the slide latch on the Ethernet connector.

Tug gently on the cable to ensure it is securely connected.



LNK-0577

4. Unlock the slide latch at the other end of the transceiver cable.

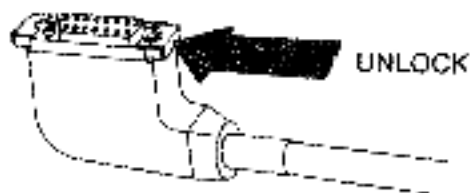


TW252

5. The other end of the transceiver cable connects to the appropriate baseband or broadband network interface. The connection is to one of the following:

- Another transceiver cable in an Etherjack junction box. See Appendix G for details on connecting to the Etherjack junction box.

Lock the slide latch after connecting the cable.

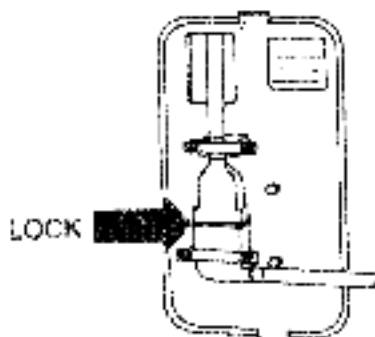


OR

TW379

- A cable port on a DELNI local network interconnect (as shown), or to a DECOM.

Lock the slide latch after connecting the cable.

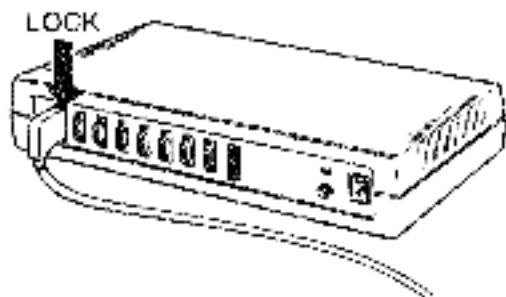


OR

TW350


- The cable port on an Ethernet Transceiver.
Lock the slide latch after connecting the cable.

OR

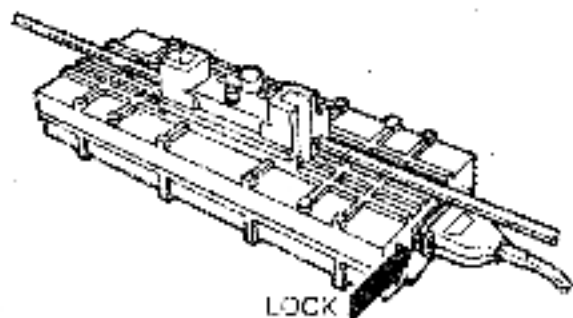

LKG-0478

- The cable port on a DESTA ThinWire Ethernet station adapter.
Lock the slide latch after connecting the cable.

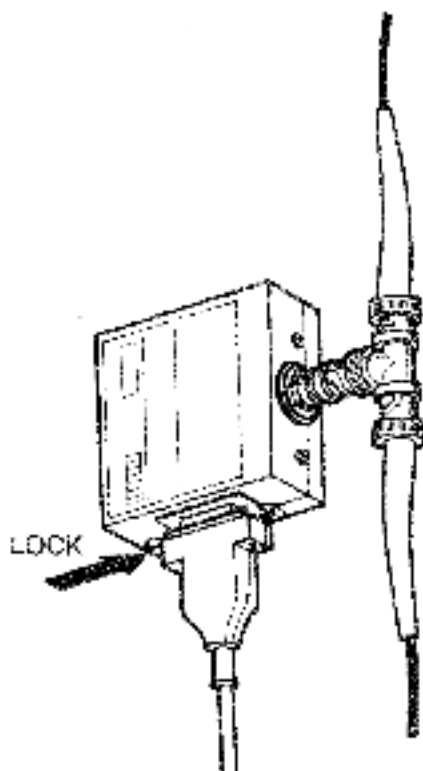

LKG-0490

4.4 Before Connecting Power

- 1 Make sure the transceiver cable connections are secure at both ends of the cable. If the transceiver cable is not connected when you plug in the power cord, the server will fail the diagnostic self-test.
- 2 Check with your system manager that the software installation and the server configuration are complete. For example, the distribution software is installed on the load host(s), and the DECserver 200 is configured in the load host database, if required by the load host(s).

NOTE


If the distribution software installation is not complete, the load host cannot send the server image to the server. The server does not operate without software. Wait for notification that the software installation is completed.

4.5 Connecting Power

The server does not have a power ON/OFF switch. Plugging in the server power cord applies power directly to the server, illuminates the D1 Status LED, starts the server self-test, and allows the server image to be down-line loaded from a load host. The server self-test will fail if the transceiver cable is not connected.

To connect the server power cord, proceed as follows:

- 1 Plug one end of the power cord into the server receptacle.

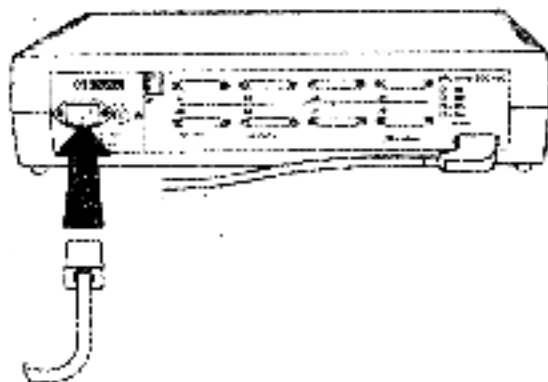

LKG-0344

- 2 Plug the other end of the power cord into the wall outlet.




TW387

4.6 Verifying Operation

Proper operation of the server is verified by the status of the four Light Emitting Diodes (LEDs) on the server's control/indicator panel.

Whenever power is applied to the unit, the server performs a diagnostic self-test and initiates a request for a down-line load of the server image from a load host. The server self-test normally takes about 20 seconds to complete, but the down-line loading of the server image could take longer if the network is busy.

Allow up to 2 minutes for the server self-test and down-line loading of the server image to complete, then compare the state of the four status LEDs on the server with those shown in Figure 4-1:

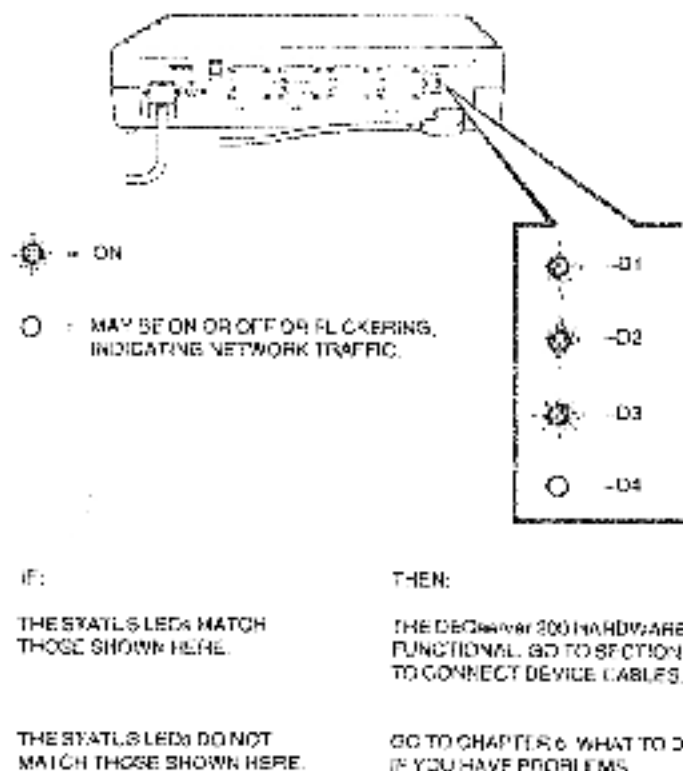

U63-0343

Figure 4-1: DECserver 200 Hardware Verification

NOTE

For definitions of the status LEDs on the server, see Appendix A.

4.7 Connecting Device Cables

Before connecting the device cables to the server, contact the server manager to determine if certain devices were designated to specific ports on the server. Make a list that identifies the server, and the server port location for each device you connect to the server.


If you are connecting device cables to a DECserver 200/MC, go to Section 4.7.1.

If you are connecting device cables to a DECserver 200/DL, go to Section 4.7.2.

4.7.1 Connecting Device Cables to the DECserver 200/MC


- 1 Determine which server connector (J1 through J8) to use for each device.

Note that server ports (1 through 8) correspond to connectors (J1 through J8) on the DECserver 200/MC control/indicator panel.

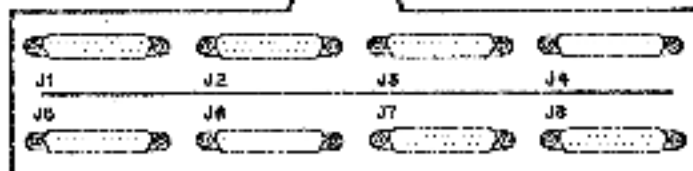

UKG-0346

- 2 Make two labels for each cable, marking each label with source and destination information similar to the sample label shown.

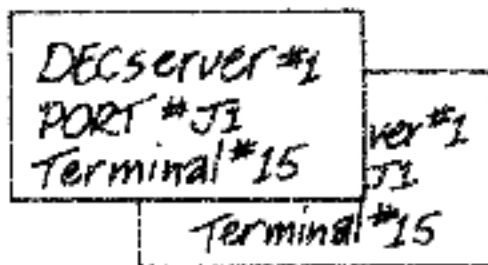

UKG-0347


- 3 Attach one label at both ends of each device cable.



TK224


- 4 Connect one end of the cable to the appropriate device, as marked on the label.

Tighten the connector screws.

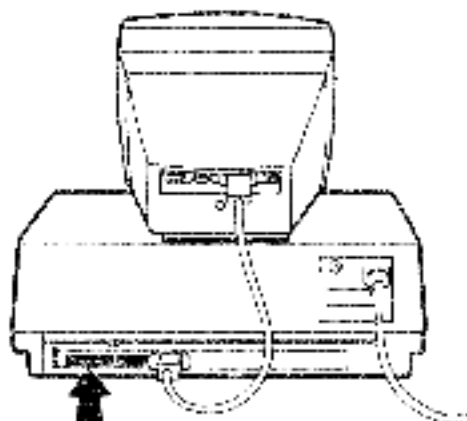

- 5 Connect the other end of the cable to the server connector marked on the label.

Tighten the connector screws.

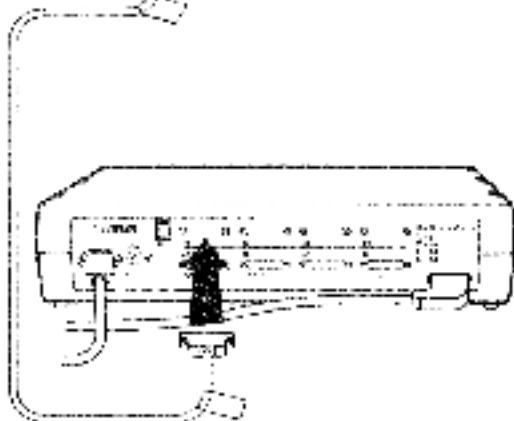

K7-2048

Install all other device cables in the same way. The number of cables you install depends on the number of devices you connect to the server.

After installing the device cables to all of your DECserver 200 units, go to Section 4.8

4.7.2 Connecting Device Cables to the DECserver 200/DL

Before beginning this procedure, refer to Figure 1-8 to ensure you have all of the DECserver 200/DL accessories required for connecting device cables to your DECserver 200/DL configuration. Note that some devices require H8571-x adapters for converting 25-pin and 9-pin D-connectors to Modified Modular Jacks (MMJs). These connectors are common to most RS-232-C devices, such as terminals, personal computers and printers.

To connect the device cables to the DECserver 200/DL, proceed as follows:

1. Locate (if required) the H8571-x DEC425 to RS-232-C passive adapters in one of the accessories boxes you received with your unit:

- H8571-A — Used with 25-pin D-connectors found on most terminals, printers, and personal computers.



LEG-0488


- H8571-B — Used with 9-pin D-connectors found on some printers and on RS-232-C devices.



LEG-0489

2. Connect the H8571-A adapters (if required) to the communications port of all devices that use a 25-pin device connector.

Connect the H8571-B adapters (if required) to the port of all devices that use a 9-pin device connector.

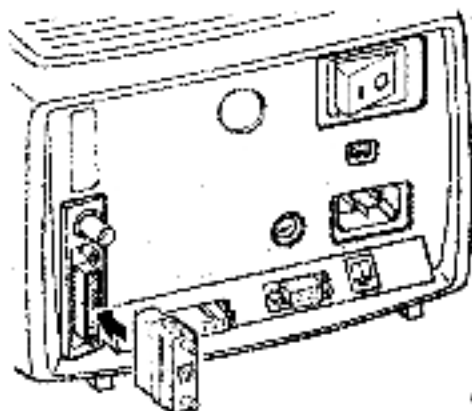

LEG-0490

- 3 Locate the H3104-B DECserver 200/101 adapter kit in one of the accessories boxes you received with your unit.


Be sure the kit contains the following items:

- BC16C-10 36-conductor cable



UKC-0481

- H3104 Cable Concentrator

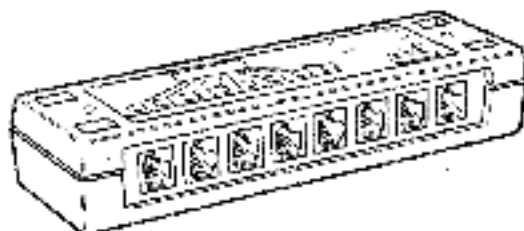

18G-0499

- H3103 MMJ Loopback Connector

The H3103 MMJ loopback connector is not used during the DECserver 200 installation. Save it in case you need to troubleshoot the server as described in the *DECserver 200 Management Guide*.




LKG 0498

- 4 Connect one end of the BC16C-10 36-conductor cable to connector J1, on the server. The cable can have a straight or right angle end connector.




LKC-0494

- 5 Lock the cable plug to connector J1 using the spring latches provided on the J1 connector.

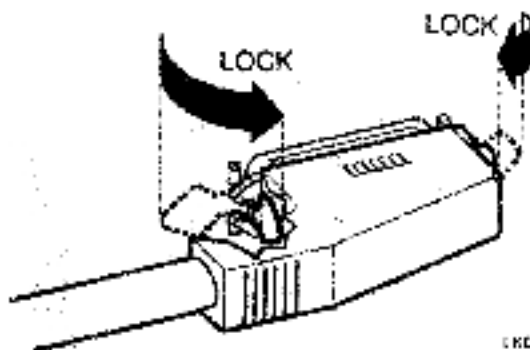


LKB-0456

- 6 Connect the other end of the BC16C-10 36-conductor cable to connector J1, on the H3104 cable concentrator.

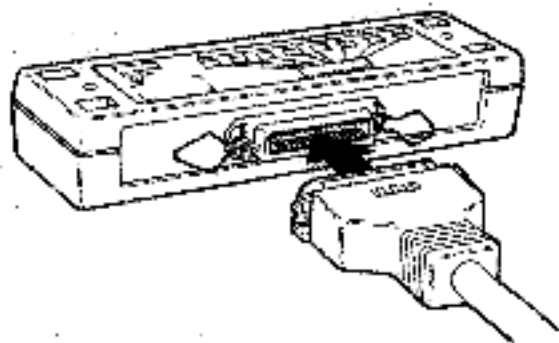

LKB-0186



- 7 Lock the cable plug to connector J1 with the spring latches provided on the J1 connector.

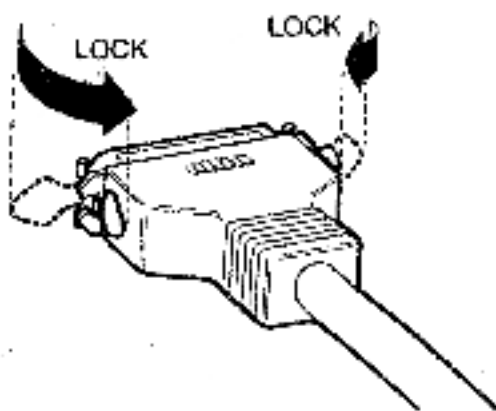

LKB-0457


- 8 Set the H3104 cable concentrator in place (on a desk or table) with the decal facing up.

Note: that the decal on the H3104 cable concentrator represents the server port assignments (1 through 8) for the eight MMJ's (J2 through J9) of the cable concentrator.

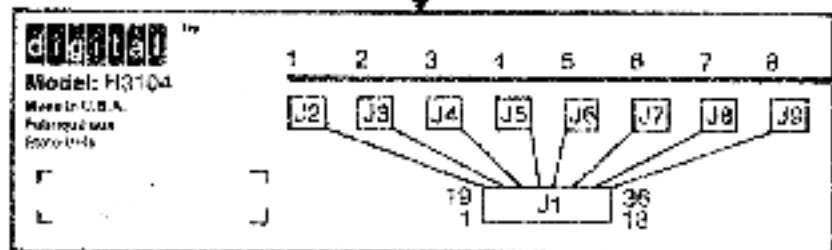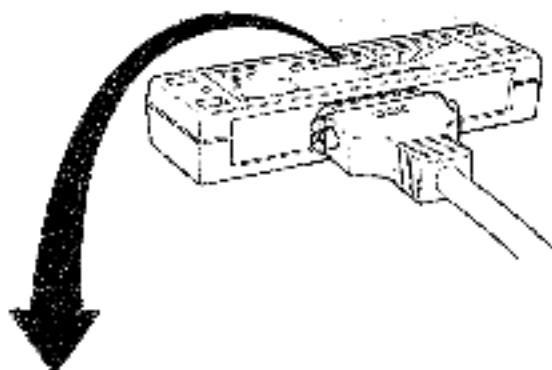

UKG-0428

- 9 Determine which server port (1 through 8) to use for each device.

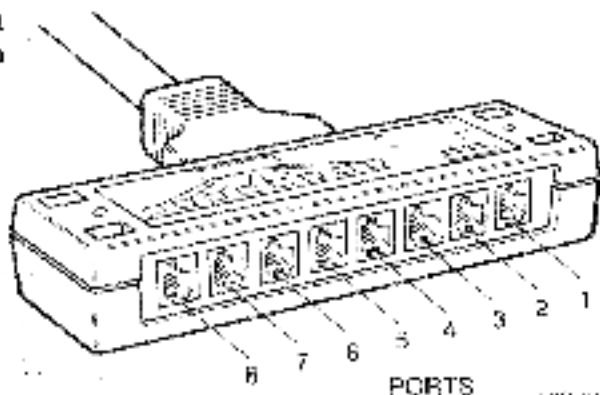


UKG-0429

- 10 Locate the BC16F-xx 6-conductor cables (DEC OFFICE cables) in one of the accessories boxes you received with your unit.



UKG-0430

- 11 Make two labels for each cable, marking each label with source and destination information similar to the sample label shown.

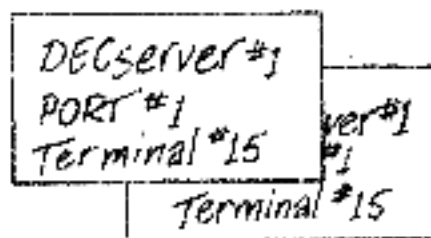


LKS-0501

- 12 Attach one label at both ends of each BC16E-xx cable.




LKS-0602

- 13 Connect one end of the cable to the cable concentrator MMJ that corresponds to the server port marked on the label.

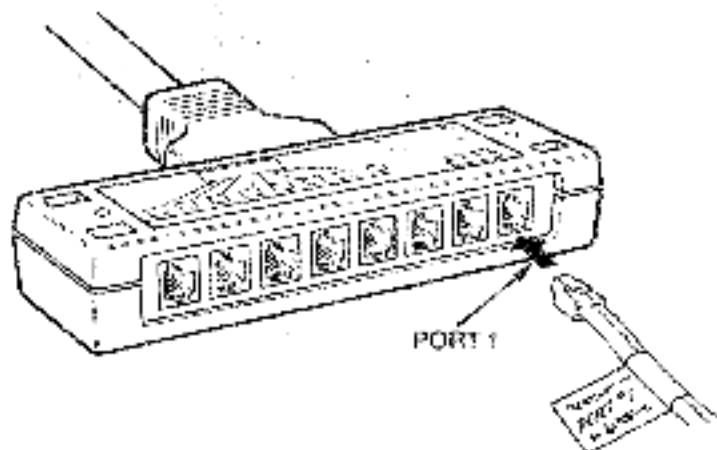

LKS-0603

- 14 Connect the other end of the cable to the H8571-x adapter, or to the appropriate device connector, as marked on the label.

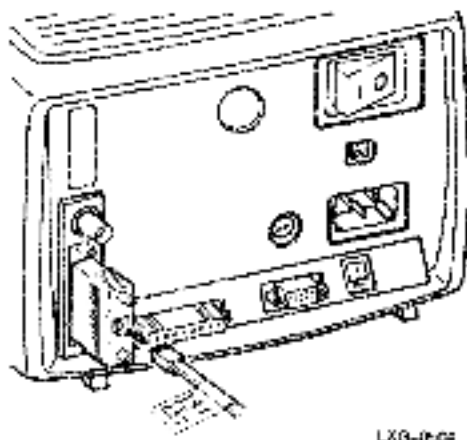

Install all other device cables in the same way. The number of cables you install depends on the number of devices you connect to the server.


After installing the device cables to all of your DECserver 200 units, go to Section 4.8.

4.8 Verifying System Installation

After you install all of the DECserver 200 units, inform the server manager that the server installation is complete. At this time the system installation verification (as described in the appropriate DECserver 200 Software Installation Guide) should be performed on one of the DECserver 200 hardware units. Also, provide the server manager with the list that shows the server port location for each device connected to the server.

5

What to Do if You Have Problems

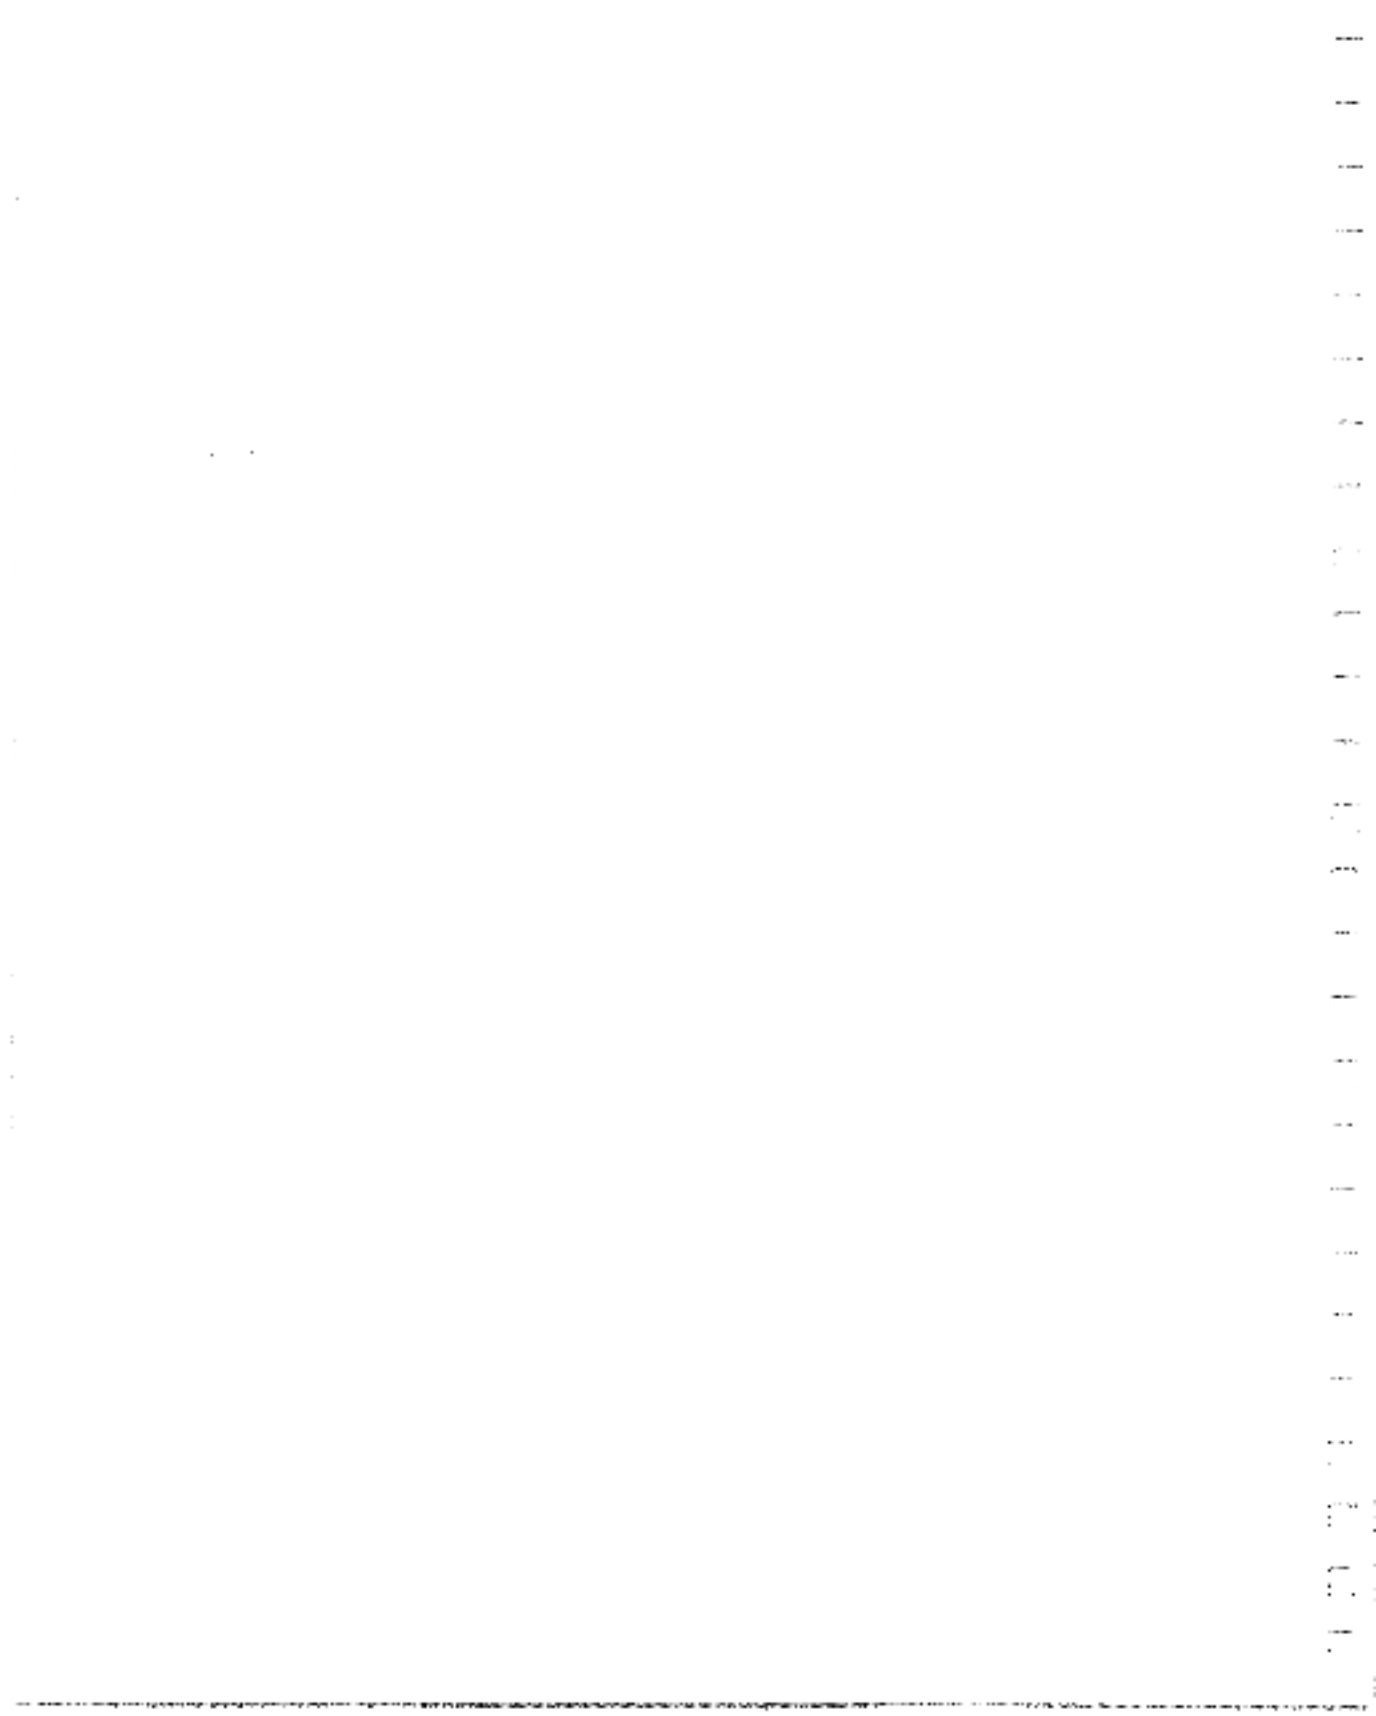

5.1 Introduction

This chapter helps you identify and correct problems that can be encountered during the initial installation of the DECserver 200. The troubleshooting procedures are for diagnosing and correcting hardware related problems only.

After diagnosing and correcting the problem, return to Section 4.6 to verify the correct operation of the server, then continue with the installation.

NOTE

Notify the server manager if the troubleshooting procedures indicate the problem is software related or if the procedures do not correct the problem. Additional troubleshooting information is provided in the *DECserver 200 Management Guide*.

5.2 Diagnosing Server Problems

The four status LEDs, located on the server's control/indicator panel, indicate the status of the server and are also used for diagnosing server problems. Compare the state of the status LEDs on the server with those shown in Table 5-1 and go to the section indicated.

NOTE

All four status LEDs illuminate for 1 second (lamp check) whenever you power up the server from a power-off state. After powering up the server, allow up to 2 minutes to elapse before determining the state of the status LEDs.

Table 5-1: Status LEDs/Indications

LED Name	LED Definition	State	Indication	Corrective Action
D1	Power ON/OFF	ON	The server's dc voltages are correct	—
		OFF	The server's dc voltages are NOT correct	Go to Section 5.3
D2	Diagnostic	ON	Self-test passed	—
		OFF	Fatal error if LED remains OFF within 2 minutes after power-up	Go to Section 5.4
		Blinking	Nonfatal error	Go to Section 5.5
D3	Software	ON	Server image successfully loaded	—
		OFF	Down-line load in progress	—
		Blinking	Multiple load failure	Go to Section 5.6
D4	Network activity	ON *	Indicates activity on the network.	—

* Can be ON or OFF or Blinking, depending on the amount of traffic on the network.

5.3 D1 LED Off

Problem Power is not reaching the DECserver 200.

Correction Ensure that the voltage select switch is set to the correct voltage for your country. Section 1.2 in this guide provides information about changing the voltage setting, if necessary.

Correction Secure the power cable at the server and at the wall outlet.

Correction Check the wall outlet using another appliance or light, or plug the server power cord into another outlet. If no power is available, check the wall outlet's circuit breaker.

Correction Determine if the server circuit breaker has tripped (refer to Appendix A). If it has, press in on the white button to reset the breaker. If the circuit breaker trips more than once, notify the server manager that the server must be returned to Digital for repair or replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

Correction Replace a defective server power cable with a new cable.

Problem The DECserver 200 is defective.

Correction Notify the server manager that the server must be returned to Digital for repair or for replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

5.4 D2 LED Off

Problem A hardware error occurred that makes the DECserver 200 nonoperational.

Correction There is no corrective procedure for this problem. Notify the server manager that the server must be returned to Digital for repair or for replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

5.5 D2 LED Blinking

If the D2 LED is blinking after power-up, it indicates the server has a nonfatal problem detected during self-test. To isolate the problem, connect a console terminal to port 1 of the server. The primary problem indicator in this case is the error message that appears on the console terminal.

To isolate and diagnose the problem, do the following:

- 1 Connect a console terminal to port 1 of the server, then power up the terminal.
- 2 Configure the terminal to operate with a speed of 9600 bits per second and with a character size of 8 bits with no parity. (Refer to the specific terminal user's guide if you need help setting up the terminal parameters.)
- 3 Unplug the server power cord at the wall outlet, then reinsert it.
- 4 Read the error message that appears on the terminal display. (If no message appears on the terminal display, refer to Section 5.5.6.)

The following sections list the error messages that occur in conjunction with the D2 LED blinking. Locate the section that describes the displayed error message and follow the recommended corrective actions.

5.5.1 Error Messages 920 and 921

Local -920- Parameter checksum error on port *n*
Local -921- Factory-set parameters applied to port *n*

Problem These messages indicate a port checksum error. The permanent characteristics for the indicated port do not pass the internal checksum test. The factory-set defaults are in effect.

Correction Reset the server characteristics using the software reset switch (S1), located on the server's control/indicator panel (see Figure A-1). Press and hold this switch in while you unplug and then reinsert the server power cord. This action causes the factory-set defaults for port characteristics to be reloaded into the server's permanent database. If this action fails to correct the problem, the server's nonvolatile memory used to store the characteristics is faulty. Notify the server manager that the server must be returned to Digital for repair or for replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

5.5.2 Error Messages 922 and 923

Local -922- Port hardware error on port *x*

Local -923- Port *x* has been disabled

Problem These messages indicate a port hardware error.

Correction There is no corrective procedure for this condition. Notify the server manager that the server must be returned to Digital for repair or for replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

5.5.3 Error Messages 930 and 931

Local -930- Server parameters checksum error

Local -931- Factory-set server parameters applied

Problem The server characteristics in the server's permanent database are not operational. The factory-set defaults are now in effect.

Correction Reset the server characteristics using the software reset switch (S1), located on the server's control/indicator panel (see Figure A-1). Press and hold this switch while you unplug and then reinsert the server power cord. If this action fails to correct the problem, the memory used to store the characteristics is faulty. Notify the server manager that the server must be returned to Digital for repair or for replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

5.5.4 Error Message 932

Local -932- Hardware revision level checksum error

Problem The server's nonvolatile memory is faulty.

Correction There is no correction for this problem. Any performance enhancements based on hardware revisions are not operational. Notify the server manager that the server must be returned to Digital for repair or for replacement. (Refer to the *DECserver 200 Management Guide* for information about returning the unit to Digital.)

5.5.5 Error Messages 941, 942, and 950

Local -941- Transceiver loopback error
Local -942- Image load not attempted
Local -950- Troubleshooting procedures should be followed

Problem There is a fault in the transceiver cabling between the server and the coaxial cable.

Correction First, check the transceiver cable that runs from the server to the transceiver, to the DELNI, or to the Etherjack. Ensure the connection is secure at both ends of the cable. Check the cable for any signs of damage. If the cable appears damaged, replace it.

Correction If the above actions do not correct the problem, use the Ethernet loopback connector (order code 12-22196-01) you received with the DECserver 200 shipment, and do the following:

- 1 Disconnect the transceiver cable from the server.
- 2 Plug the Ethernet loopback connector into the Ethernet connector on the server.
- 3 Initialize the server by pressing **CONTROL** on your console terminal, or by unplugging the server power cord from the wall outlet and then reinserting it.
- 4 Wait 20 seconds for the diagnostic test to complete, then observe the status of the D2 LED:
 - a. If the D2 LED continues to blink and the error messages reappear after the self-test (within 10 or 15 seconds), the server is faulty and must be returned to Digital for repair or for replacement. Notify the server manager.
 - b. If the D2 LED glows steadily, go to step 5 to isolate and to determine the faulty unit.

NOTE

When using the Ethernet loopback connector to troubleshoot the DECserver 200, if the results cause the D2 LED to glow steadily, the server attempts to down-line load the server image. Since the server is disconnected from the network, the down-line load fails and the server responds by causing the D3 LED to blink and issues messages 902 and 912 to the console terminal.

- 5 Unplug the Ethernet loopback connector from the Ethernet connector on the server.
- 6 Reconnect the transceiver cable to the Ethernet connector on the server.
- 7 Disconnect the other end of the transceiver cable from the DELNI, from the Etherjack, or from the transceiver on the Ethernet coaxial cable.
- 8 Plug the Ethernet loopback connector into the transceiver cable.
- 9 Initialize the server by pressing **CTRL-D** on your console terminal, or by unplugging the server power cord from the wall outlet and then reinserting it.
 - a. If the D2 LED continues to blink, the transceiver cable is faulty and must be replaced.
 - b. If the D2 LED glows steadily, the faulty unit is the device that the transceiver cable was connected to (the DELNI, the Etherjack extension, the DECOM, the DESTA, or the transceiver). Notify the server manager so that arrangements can be made for repair or for replacement of the faulty device.

5.5.6 No Messages on Console Terminal

The console terminal has no display when the server initializes.

Problem The port to which the console terminal is physically connected is not defined as the console port.

Correction Ensure the console terminal is physically connected to port 1 on the server.

Problem The console terminal is faulty.

Correction Replace the console terminal with another and set the device parameters as described at the beginning of Section 5.5.

Problem The internal characteristics for the console terminal are not set up correctly.

Correction Reset the internal characteristics for the console terminal as described at the beginning of Section 5.5.

NOTE

For server installation, the console terminal must be configured to operate with a speed of 9600 bits per second and with a character size of 8 bits with no parity.

5.6 D3 LED Blinking

If the D3 LED is blinking after power-up, it indicates the server has a down-line loading problem. To isolate and to diagnose the problem, do the following:

- 1 Connect a terminal to port 1 of the server, then power up the terminal.
- 2 Configure the terminal to operate with a speed of 9600 bits per second and a character size of 8 bits with no parity (refer to the specific terminal user's guide if you need help setting up the terminal parameters).
- 3 Press **CTRL-P** on the console terminal keyboard. Pressing **CTRL-P** restarts the server self-test and starts the down-line loading of the server image from a load host.
- 4 Read the message that appears on the terminal display.

The following order of 900-series messages on the console terminal indicate down-line loading problems. Each is covered in the following sections.

5.6.1 Down-line Load Starts, Then Fails

The following sequence of messages appears on the console terminal at various time intervals:

```
Local -902- Waiting for image load
Local -903- Loading from host host address
Local -912- Load failure, timeout
```

Problem The host system (addressed in error message) failed to complete the down-line load to the server.

Correction Copy the error message exactly as it appears on the console terminal display and notify the server manager.

5.6.2 Down-line Load Does Not Start

The following sequence of messages appears on the console terminal at various time intervals:


```
Local -902- Waiting for image load
Local -912- Load failure, timeout
```

Problem Load host(s) not responding to server down-line load request within the allotted timeout period.

Correction Copy the error message exactly as it appears on the console terminal display and notify the server manager.

A


Controls and Indicators

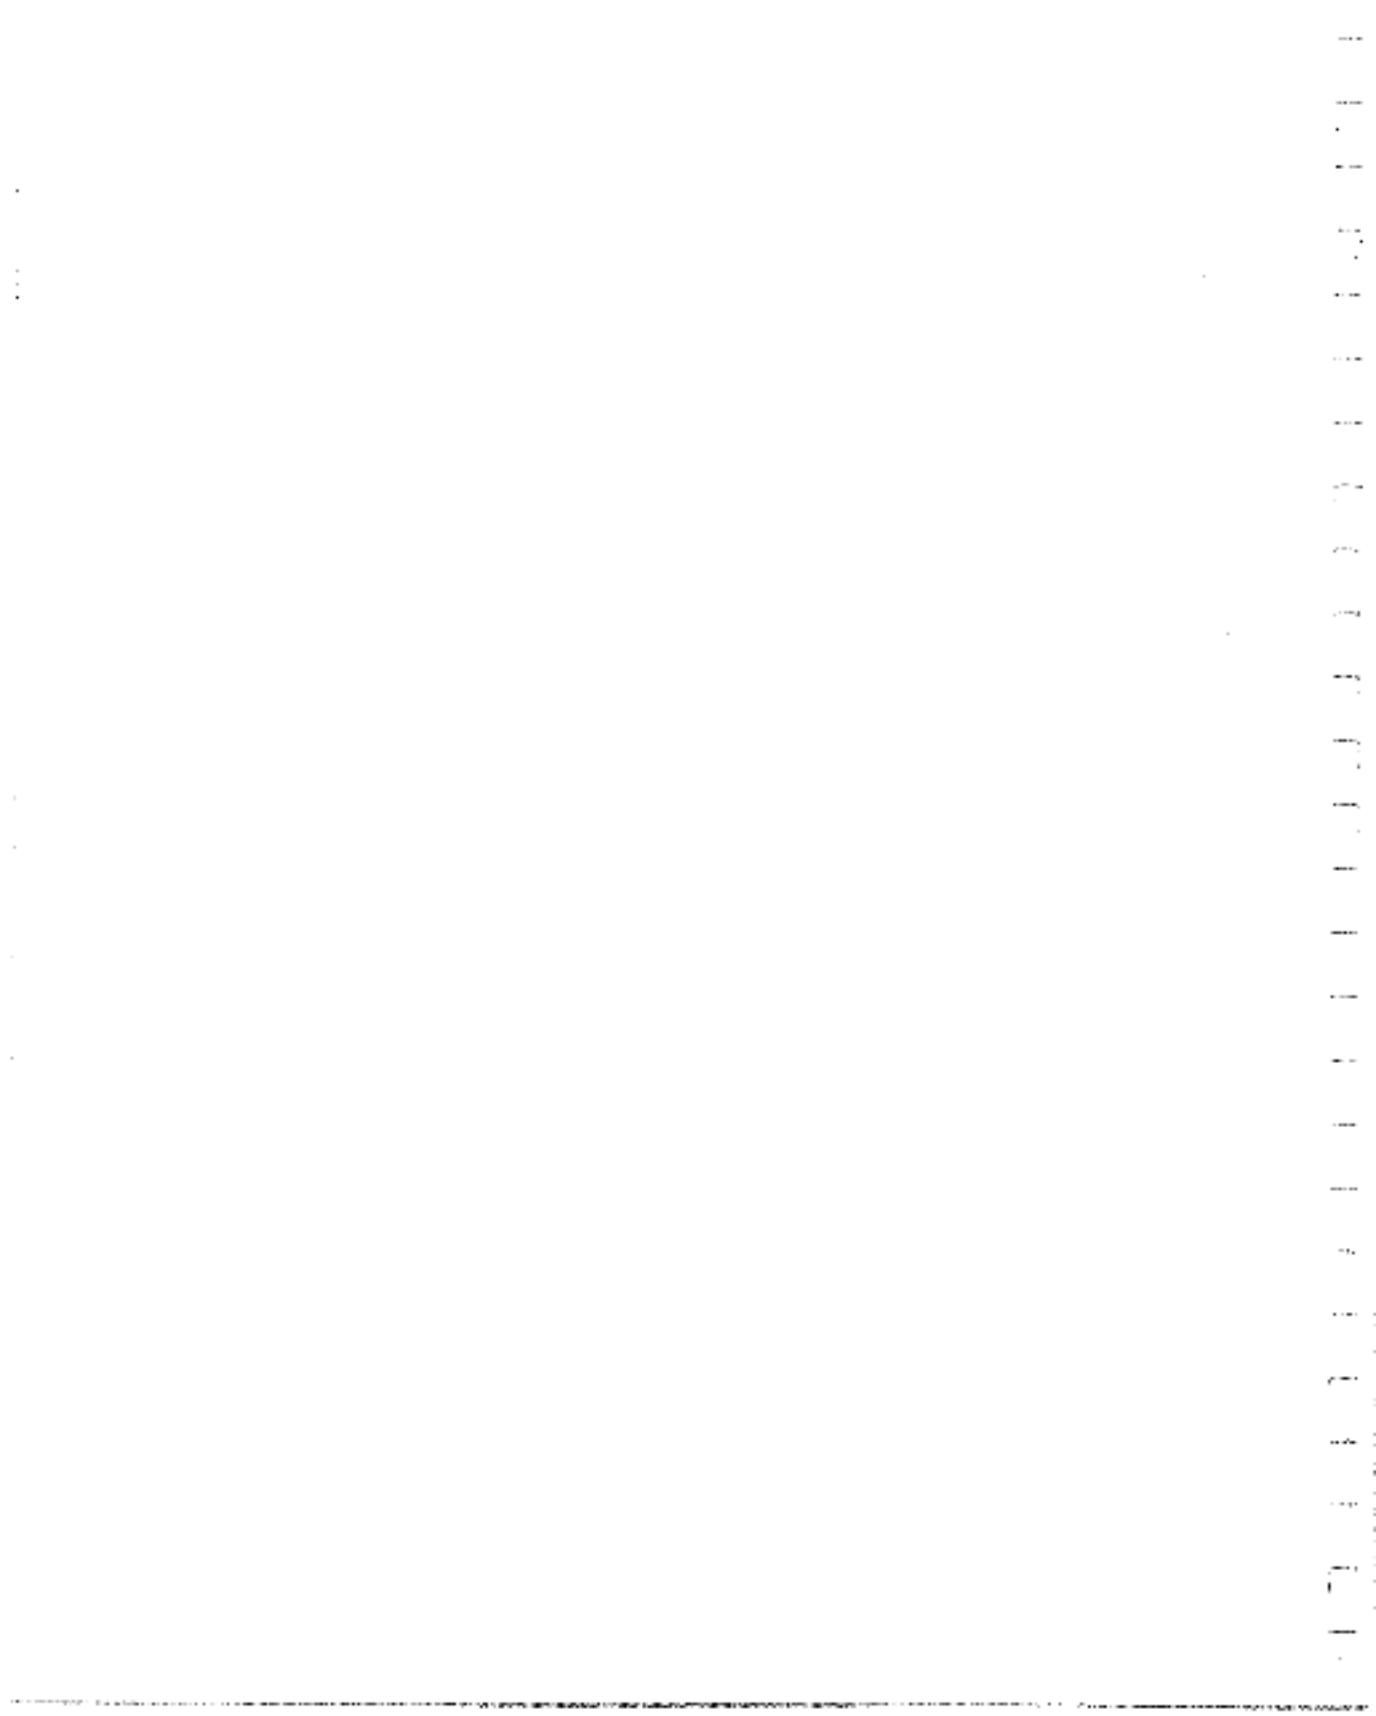

This appendix describes the DECserver 200 controls and indicators. The descriptions and the locations apply to both models of the DECserver 200.

A.1 Controls

All the DECserver 200 controls are located on the server's control/indicator panel (see Figure A-1). There are no user controls inside the server.

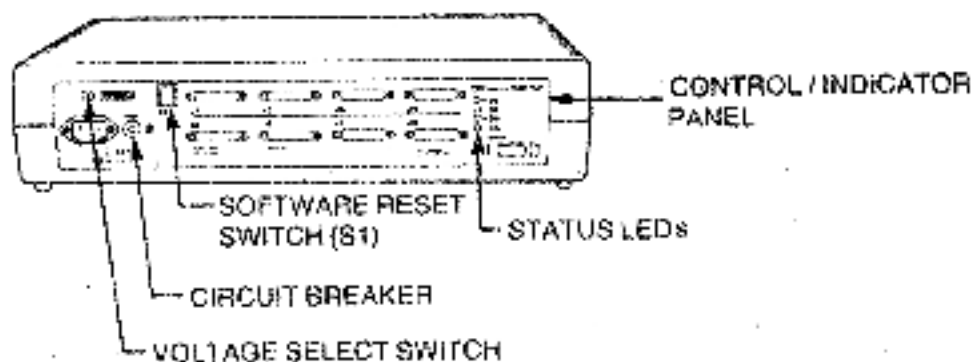

LKB-0369

Figure A-1: Controls and Indicators

A.1.1 Software Reset Switch (S1)

The software reset switch (S1), located on the server's control/indicator panel, is used to restore factory-set characteristics to the server's permanent database. This switch is not used during the installation of the DECserver 200.

Refer to the *DECserver 200 Management Guide* for instructions on the use of this switch.

A.1.2 Voltage Select Switch

The voltage select switch is used to set the server input voltage to the range required for operation in your country. This switch was factory set for the correct power source for your country. Do not change this switch unless you are sure that the switch setting is incorrect (see your electrician if you are not sure). Section 4.2 provides information about changing the server voltage setting, if necessary.

A.1.3 Circuit Breaker

The circuit breaker provides overcurrent protection for the server. If an overcurrent condition within the server causes the circuit breaker to trip, the white center portion of the circuit breaker pops out as a visual indication, and the AC current is cut off from the server. The circuit breaker can be reset by pressing in on the white center portion of the breaker.

IMPORTANT

If the circuit breaker trips, do NOT attempt to reset it more than once. Contact Digital Field Service or return the unit to Digital for repair.

A.2 Status Indicator LEDs


There are four status indicator LEDs (Light Emitting Diodes) located on the server's control/indicator panel. They are defined in Table A-1, as follows:

Table A-1: Status LEDs

LED Name	LED Definition	State	Indication
D1	Power ON/OFF	ON	The server's dc voltages are correct
		OFF	The server's dc voltages are NOT correct
D2	Diagnostic	ON	Self-test passed
		OFF	Fatal error or test-in-progress
		Blinking	Nonfatal error
D3	Software	ON	Server image successfully loaded
		OFF	Down-time load in progress
		Blinking	Multiple-load failure
D4	Network activity	ON*	Indicates activity on the network

*Can be ON or OFF or flickering, depending on the amount of traffic on the network.

B **Port Devices Supported by DECserver 200**

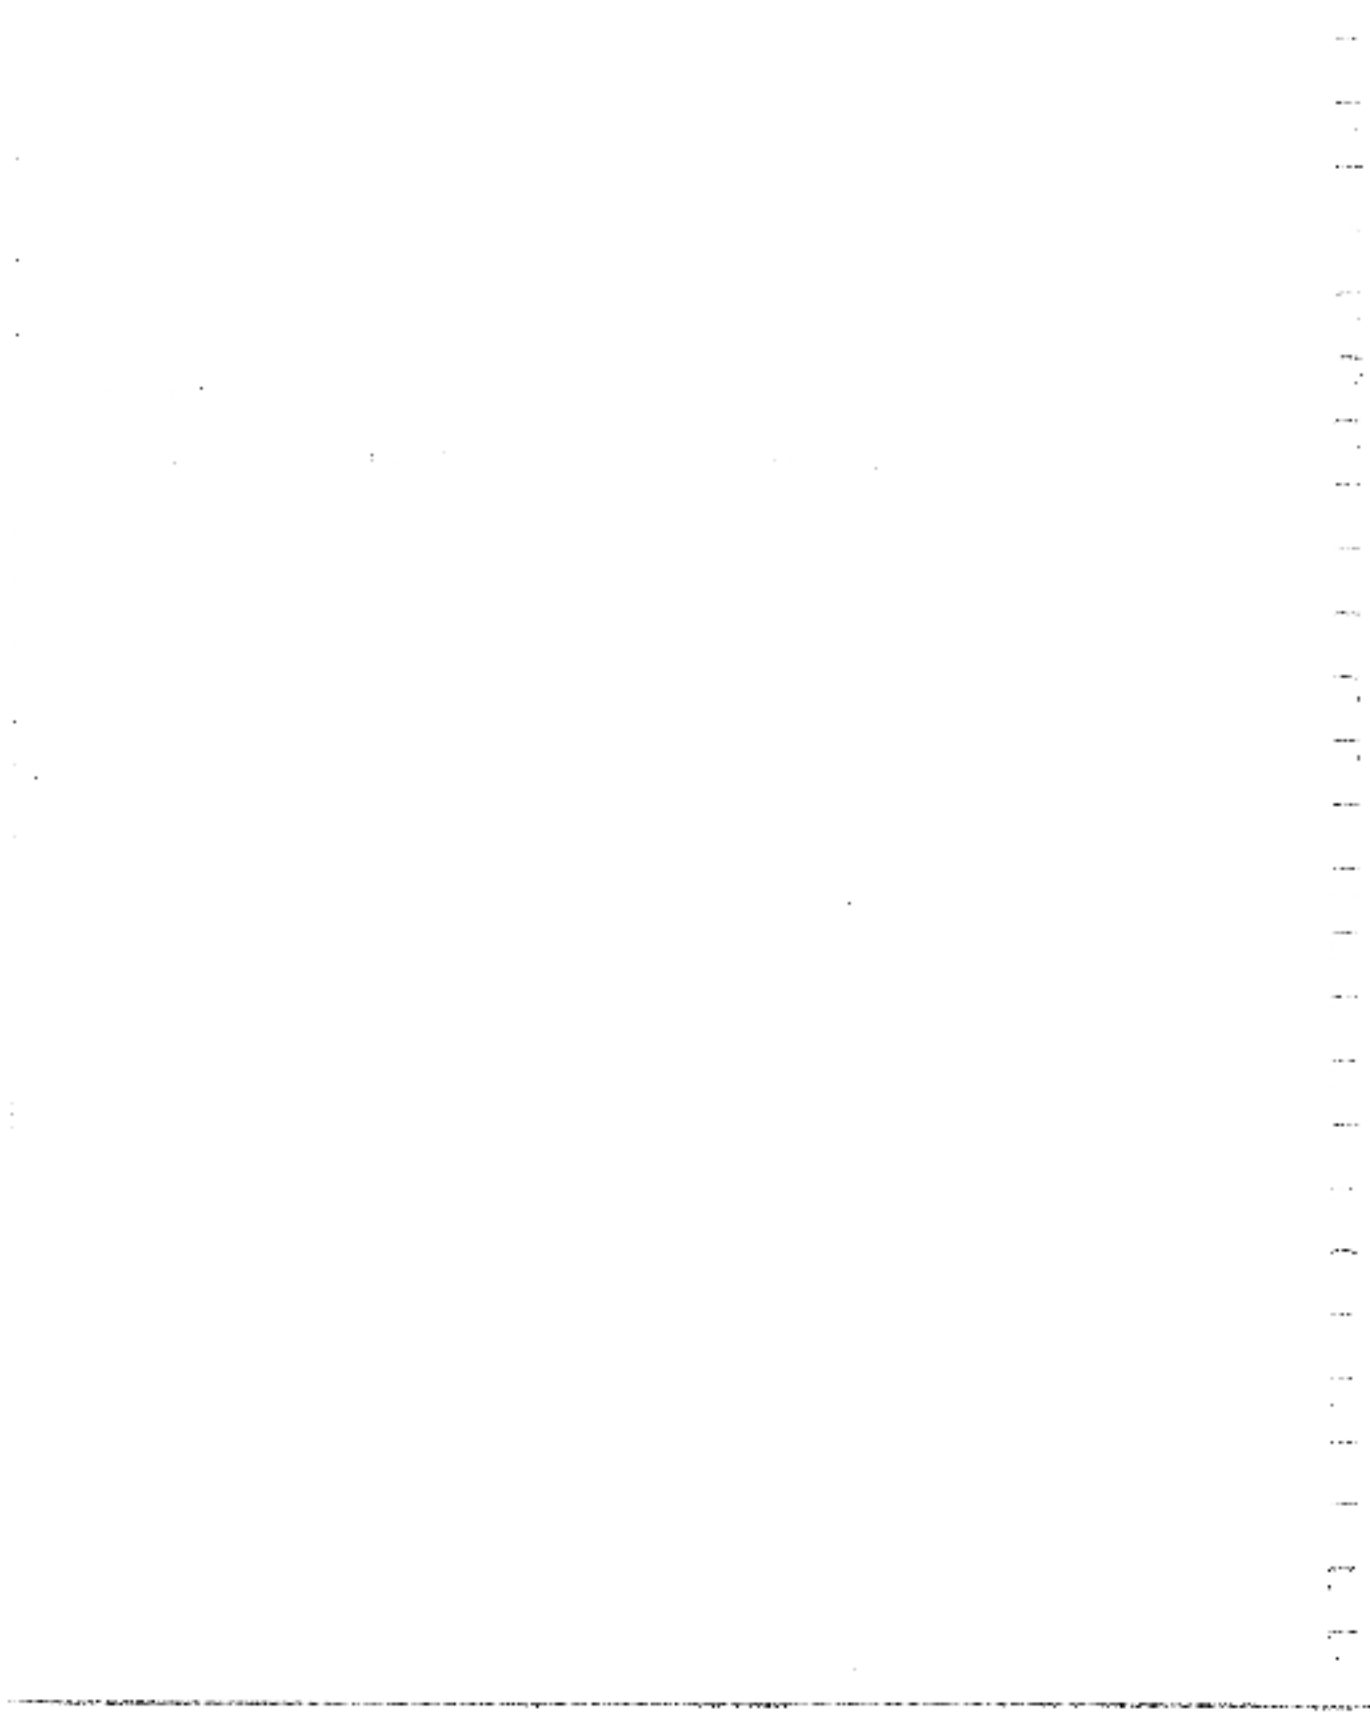

This appendix lists port devices that are supported by DECserver 200. For the latest listing of supported devices, see the DECserver 200 Software Product Description that applies to your operating system.

Devices supported by DECserver 200 include:

- **Terminals** — DECserver 200 supports Digital and non-Digital terminals that generate both 7- and 8-bit characters.

Digital terminals supported by DECserver 200 include:

- LA12, LA100, and LA120
- LA34, LA36, and LA38
- VT50, VT52, VT5X and VT6X (In VT52 mode)
- VT100 series
- VT200 series
- GIG)

- **Personal Computers** — DECserver 200 supports Digital and non-Digital personal computers in either terminal emulation mode or in file transfer mode.

Digital personal computers supported by DECserver 200 include:

- VT180
- Professional 300 series
- Rainbow 100 series
- DECmate I, II, and III

Non-Digital personal computers supported by DECserver 200 include:

- IBM PC, IBM PCXT, and IBM Personal Computer AT

- **Printers** — DECserver 200 supports Digital and non-Digital printers that use RS-232-C (EIA232) serial ports.

Digital printers supported by DECserver 200 include:

- LA50, LA100 (Letterprinter), LA180, and LA210
- LCP01 (Ink Jet Printer)
- LN01s*, LN03s* (Laser Printers)
- LQP02, LQP03 (Letter Quality Printers)
- LXY12-DA, LXY22-DA (Graphics Printers)

* With RS-232-C serial line option.


- **Modems** — DECserver 200/MC (Model DSRV8-Ax) provides full-duplex modem control and supports all asynchronous, full-duplex Digital modems, in both dial-in and dial-out modes.

Digital modems supported by DECserver 200 include:

- DF02 (300 bps)
- DF03 (300/1200 bps)
- DF112 (300/1200 bps)
- DF124 (1200/2400 bps)
- DF224 (300/600/1200/2400 bps)

Non-Digital modems supported by DECserver 200/MC include modems compatible with BELL 103 and BELL 212A, and modems that conform to CCITT V.21, V.21 bis, V.22, and V.22 bis.

C
Ordering Information

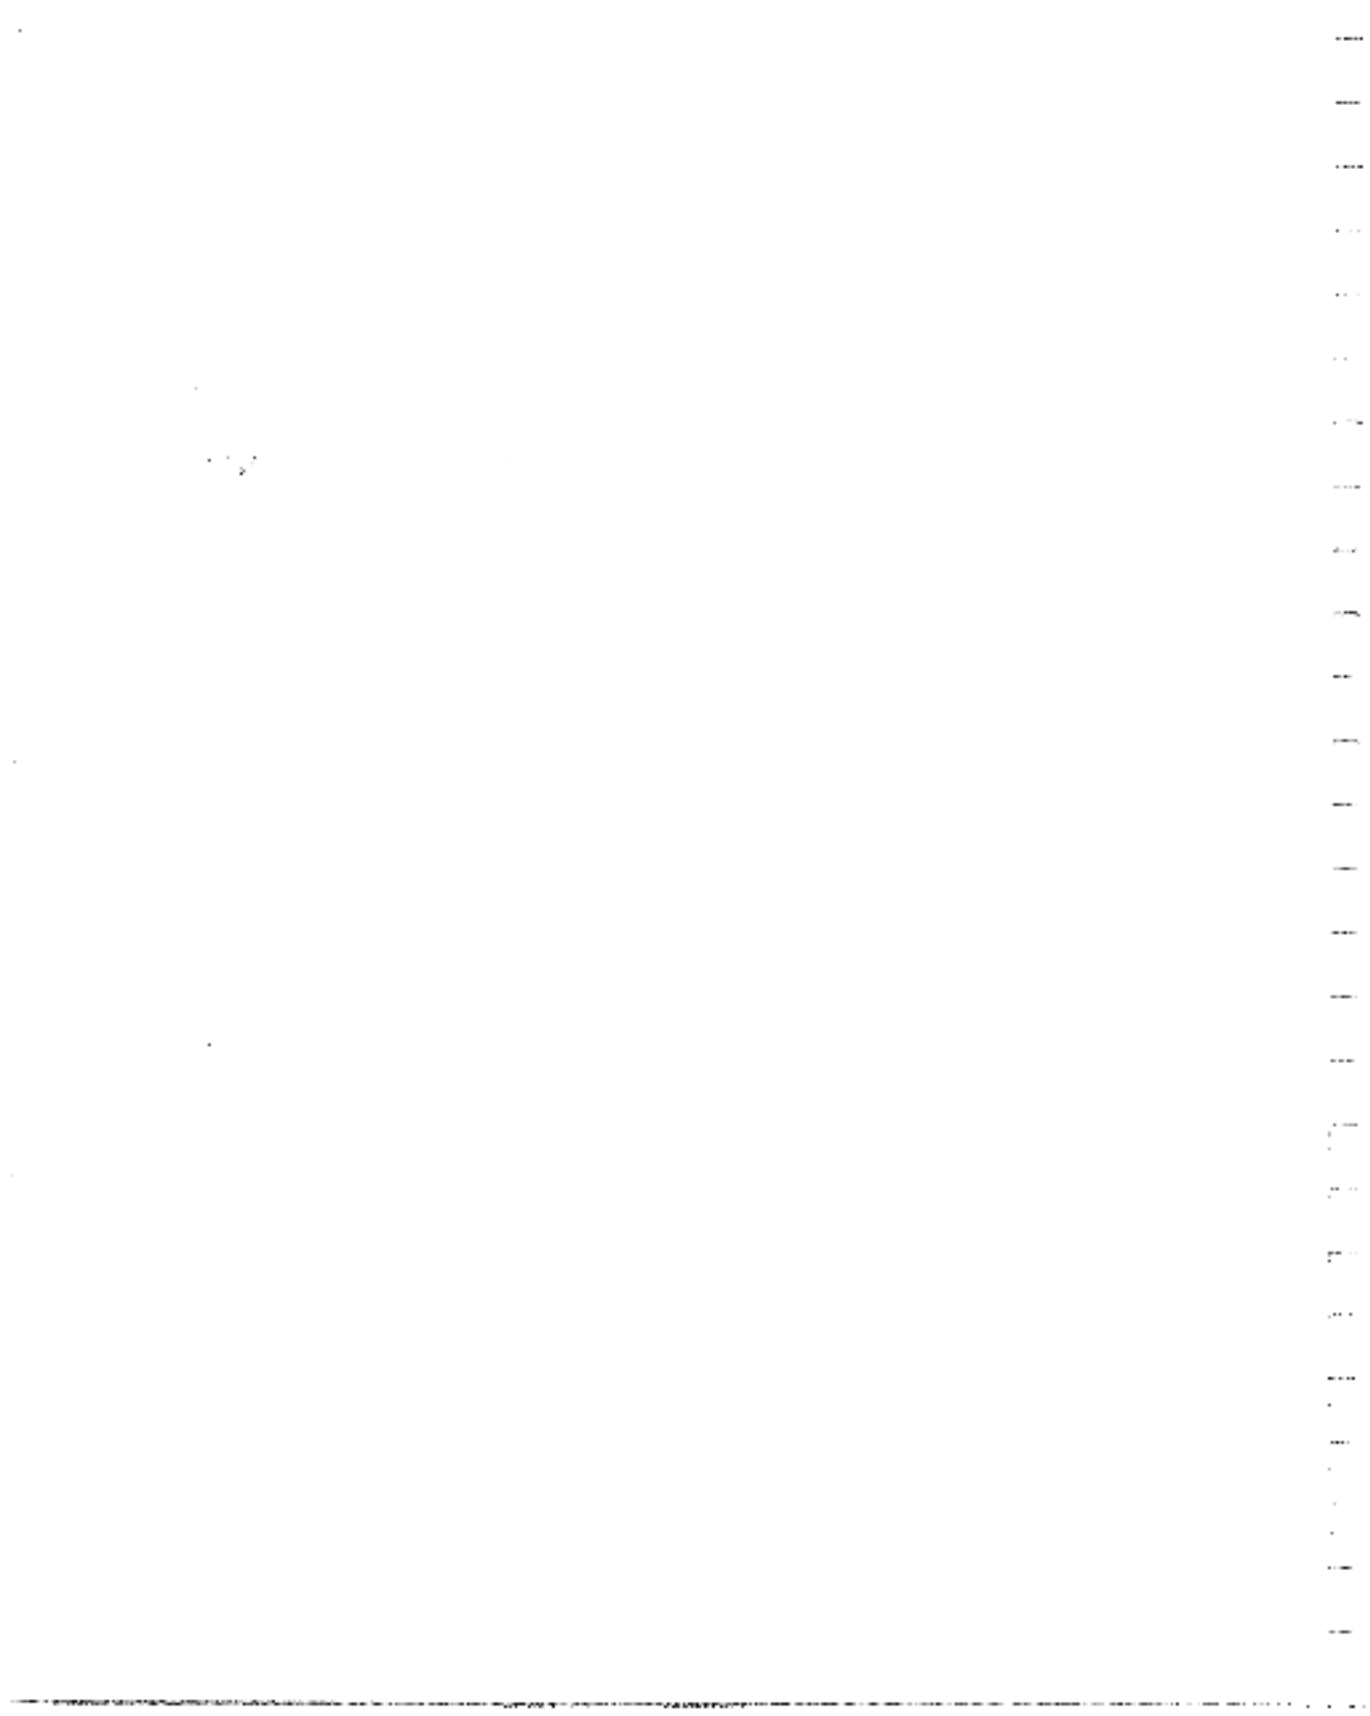

This appendix lists order codes for DECserver 200 related hardware products. See your Digital sales representative to purchase equipment.

For a listing of software options, see the DECserver 200 Software Product Description that applies to your operating system.

C.1 DECserver 200 Hardware Units

Description	Order Code
DECserver 200/MC	
120 Vac (includes DSRVB-KA country kit)	DSRVB-AA
240 Vac	DSRVB-AB
DECserver 200/DL	
120 Vac (includes DSRVB-KA country kit)	DSRVB-BA
240 Vac	DSRVB-BB

C.2 DECserver 200 Country Kits

Each kit includes a power cord, the documentation, an Ethernet loopback connector, and a rack mount kit. (You will need one kit for each DECserver 200.)

Country	Order Code
Australia	DSRVB-KZ
Belgium	DSRVB-LA
Canada (English and French)	DSRVB-KA
Denmark	DSRVB-KD
Finland	DSRVB-LA
France	DSRVB-LA
Germany	DSRVB-KG
Holland	DSRVB-LA
Italy	DSRVB-KI
India	DSRVB-LJ
Israel	DSRVB-KY
Japan	DSRVB-KJ
New Zealand	DSRVB-KZ

(continued on next page)

Country	Order Code
Norway	DSRVB-LA
Spain	DSRVB-LA
Sweden	DSRVB-LA
Switzerland (French and German)	DSRVB-LB
United Kingdom	DSRVB-KE
United States	DSRVB-KA

C.3 DECserver 200 Accessories

Description	Order code
Ethernet turnaround connector — For testing transceiver and transceiver cable.	H4080
Ethernet loopback connector — For loopback testing the DECserver 200 Ethernet port and transceiver cable.	12-22196-01
Port loopback connector — For loopback testing the DECserver 200/MC ports.	12-15336-08
36-pin loopback connector — For loopback testing the DECserver 200/DL 36-pin port connector, the BC16C/D cable, and other 36-pin components.	H3101
36-pin cable coupler	H3102
36-pin to 50-pin adapter	H3106
Etherjack kit — For covering and securing transceiver cable connections.	DEXJK
Wall/partition mounting bracket kit — For mounting the DECserver 200 to walls or office partitions.	H039
Rack mount kit — For mounting the DECserver 200 in standard rack cabinets.	H041-AA
DECserver 200/DL adapter kit — Includes one BC16C-10 cable, one H3104 cable concentrator, and one H3103 MMJ loopback connector	H3104-B
DEC123 to RS-232-C active converter	H3105

C.4 DEC OFFICE Cable (BC16E) and Adapters

The following products are available to support the RS423 signaling used with the DECserver 200/DL, and to adapt from RS-232-C signaling.

Description	Order Code
10 ft terminated 6-conductor cable	BC16E-10
25 ft terminated 6-conductor cable	BC16E-25
50 ft terminated 6-conductor cable	BC16E-50
1000 ft terminated 6-conductor cable	BC16E-1000
MMJ loopback connector	H3103
Package of 50 MMPs	H8220
100 ft spool of unterminated 6-conductor cable	H8240
Crimping tool for 6-conductor cable	H8241
25-pin passive adapter	H8571-A
9-pin passive adapter	H8571-B
6-conductor cable coupler	H8572

C.5 Transceiver Cables

BNE3x-xx transceiver cable — Available in FEP versions, for use in return air conduits, and in PVC versions, for use in nonenvironmental airspaces. The large diameter of this cable results in a lower signal loss per length of cable than the smaller diameter office transceiver cable. Two styles of connectors are available: a straight connector and a right-angle connector.

The following cables are available:

- BNE3A-xx PVC, straight-connector transceiver cable
- BNE3B-xx PVC, right-angle connector transceiver cable
- BNE3C-xx FEP, straight-connector transceiver cable
- BNE3D-xx FEP, right-angle connector transceiver cable
- BNE3H-xx PVC, straight-connector, 802.3-compliant transceiver cable
- BNE3K-xx PVC, right-angle connector, 802.3-compliant transceiver cable
- BNE3L-xx FEP, straight-connector, 802.3-compliant transceiver cable
- BNE3M-xx FEP, right-angle connector, 802.3-compliant transceiver cable

The preceding cables are available in 5 meters (16.4 feet), 10 meters (32.8 feet), 20 meters (65.6 feet), and 40 meters (131.2 feet) lengths.

BNE4x-xx office transceiver cable -- Available in PVC versions for use in nonenvironmental airspaces. The smaller diameter of this cable makes it ideal for use in office environments, however the smaller diameter of the cable also results in a cable signal loss that is four times greater than that of BNE3x-xx transceiver cables. Two styles of connectors are available: a straight connector and a right-angle connector.

The following cables are available:

- **BNE4A-xx PVC**, straight-connector transceiver cable
- **BNE4B-xx PVC**, right-angle connector transceiver cable
- **BNE4C-xx PVC**, straight-connector, 802.3-compliant transceiver cable
- **BNE4D-xx PVC**, right-angle connector, 802.3-compliant transceiver cable

The preceding cables are available in 2 meters (6.6 feet) and 5 meters (16.4 feet) lengths.

C.6 Device Cables

The following device cables are available:

PVC, shielded 36-conductor cable with one right-angle 36-pin D-connector and one straight 36-pin connector.

Length	Order Code
10 ft (3.0 m)	BC16C-10
25 ft (7.6 m)	BC16C-25
50 ft (15.2 m)	BC16C-50
100 ft (30.5 m)	BC16C-A0
250 ft (76.2 m)	BC16C-B5

PVC, shielded 36-conductor cable with two right-angle 36-pin D-connector.

Length	Order Code
10 ft (3.0 m)	BC16D-10
25 ft (7.6 m)	BC16D-25
50 ft (15.2 m)	BC16D-50
100 ft (30.5 m)	BC16D-A0
250 ft (76.2 m)	BC16D-B5

Null modem cable, round, 6-wire, fully shielded, EIA RS-232-C/CCITT V.28, female-to-female molded connectors

Length	Order Code
10 ft (3.0 m)	BC22D-10
25 ft (7.6 m)	BC22D-25
35 ft (10.7 m)	BC22D-35
50 ft (15.2 m)	BC22D-50
75 ft (22.9 m)	BC22D-75
100 ft (30.5 m)	BC22D-A0
150 ft (45.7 m)	BC22D-A5
200 ft (61.0 m)	BC22D-B0
250 ft (76.2 m)	BC22D-B5

Modem cable, round, 16-wire, fully shielded, EIA RS-232-C/CCITT V.28, male-to-female molded connectors

Length	Order Code
10 ft (3.0 m)	BC22E-10
25 ft (7.6 m)	BC22E-25
35 ft (10.7 m)	BC22E-35
50 ft (15.2 m)	BC22E-50
75 ft (22.9 m)	BC22E-75
100 ft (30.5 m)	BC22E-A0
150 ft (45.7 m)	BC22E-A5
200 ft (61.0 m)	BC22E-B0
250 ft (76.2 m)	BC22E-B5

Full modem cable, round, 25-wire, fully shielded, EIA RS-232-C/CCITT V.28, male-to-female molded connectors

Length	Order Code
10 ft (3.0 m)	BC22F-10
25 ft (7.6 m)	BC22F-25
35 ft (10.7 m)	BC22F-35
50 ft (15.2 m)	BC22F-50

(continued on next page)

Length

75 ft (22.9 m)

100 ft (30.5 m)

150 ft (45.7 m)

200 ft (61.0 m)

250 ft (76.2 m)

RS-232-C asynchronous, fully shielded null modem (host) cable

Order Code

BC22F-75

BC22F-A0

BC22F-A5

BC22F-B0

BC22F-B5

Length

10 ft (3.0 m)

25 ft (7.6 m)

50 ft (15.2 m)

100 ft (30.5 m)

200 ft (61.0 m)

250 ft (76.2 m)

Order Code

BC22R-10

BC22R-25

BC22R-50


BC22R-A0

BC22R-B0

BC22R-B5

D

Cable Structure

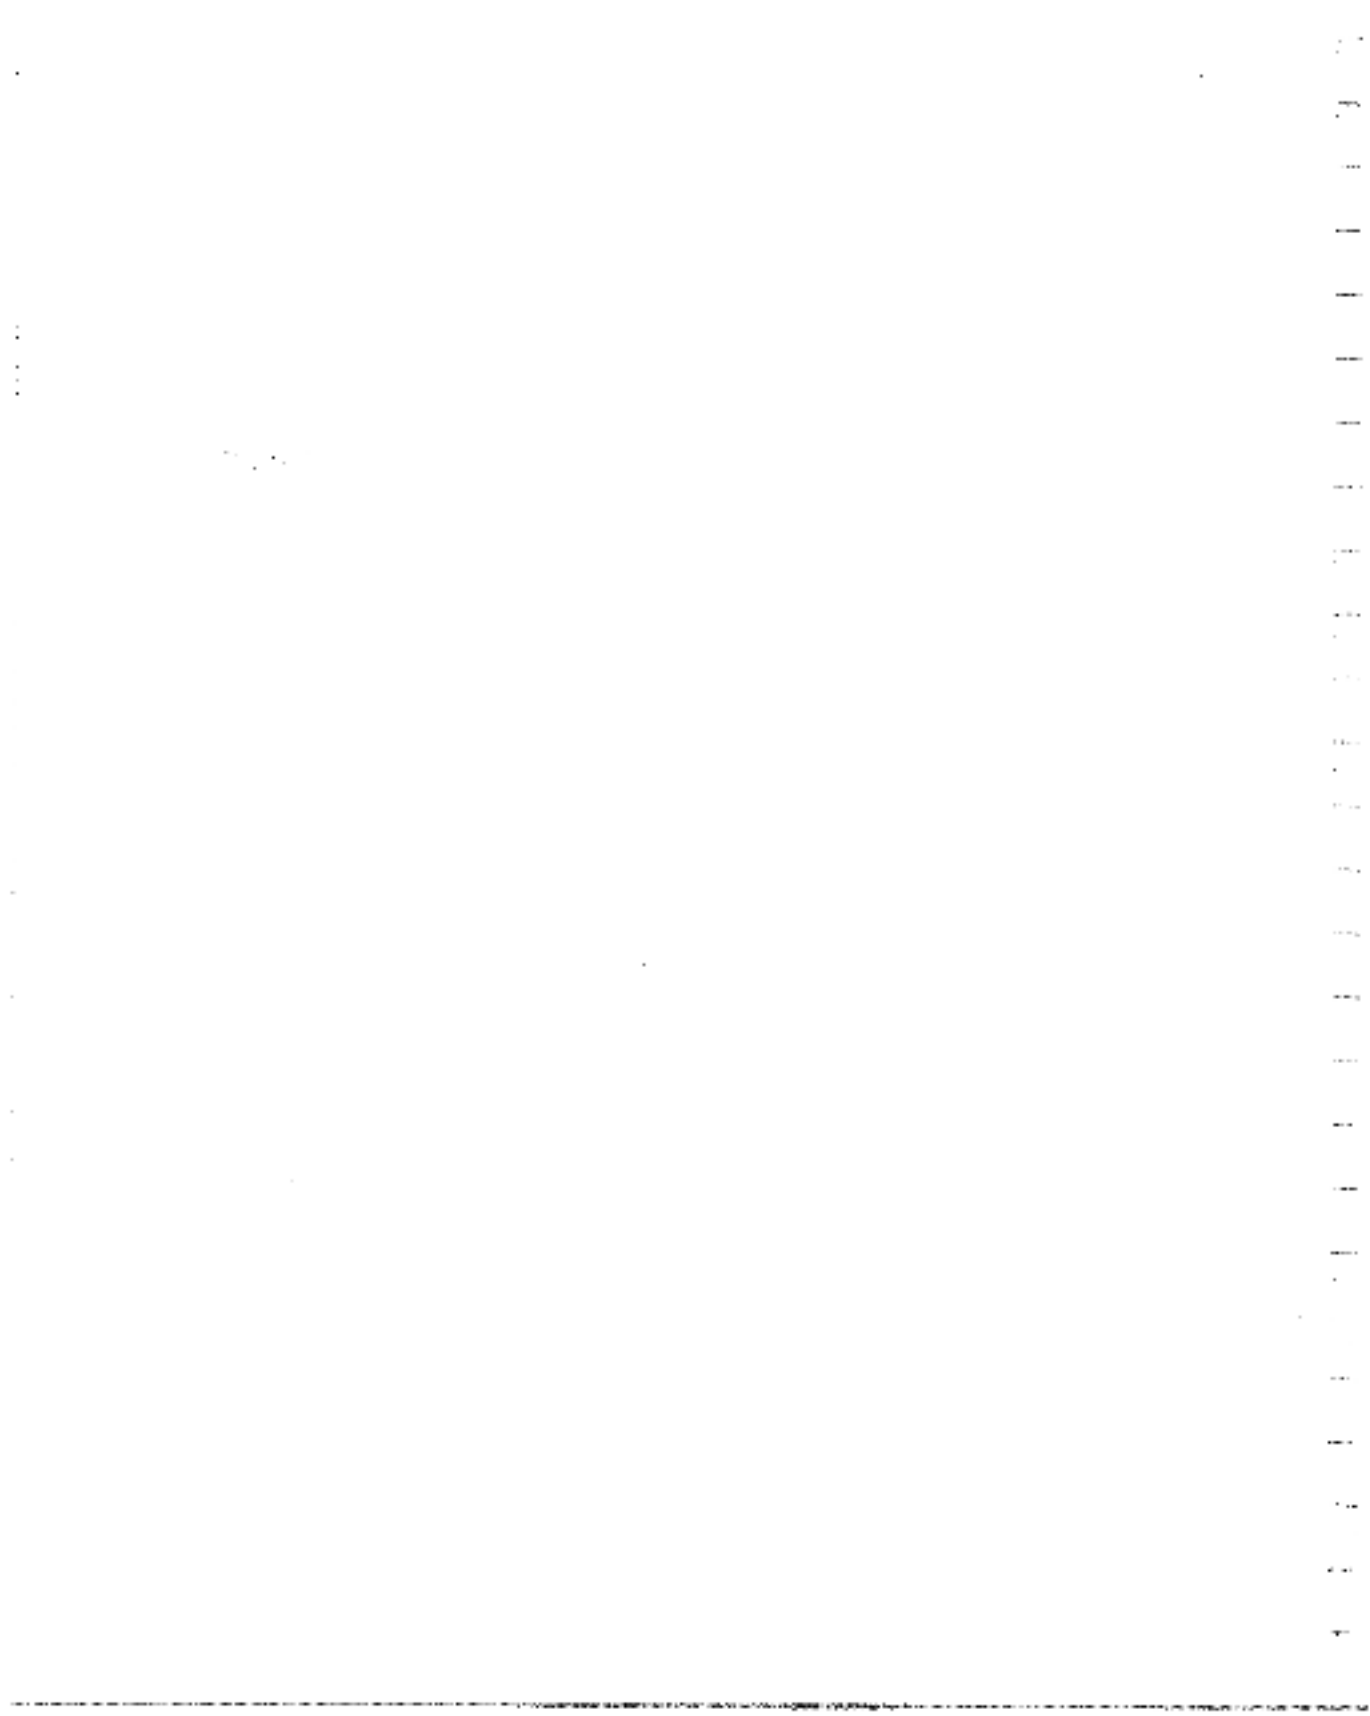


This appendix describes the electrical interface used on both models of the DECserver 200. Wiring diagrams of the individual device cables are provided for use in troubleshooting or for cable building. These cables can be ordered from Digital. See Appendix C for ordering information.

D.1 DECserver 200/MC Device Connectors (J1 through J8)

The control/indicator panel of the DECserver 200/MC (model DSRVB-Ax) contains a bank of eight 25-pin D-subconnectors (J1 through J8) used to connect devices to the server ports. Although all 25 pins are populated on each connector, only 11 pins are used (see Table D-1).

The pin numbers for these connectors, as viewed from the server's control/indicator panel, are shown in Figure D-1.

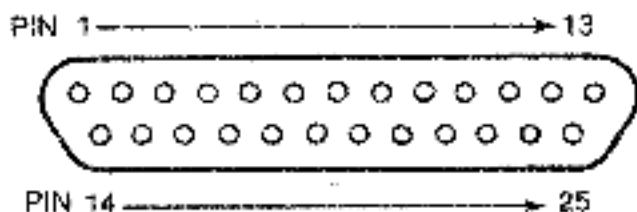

L40-0850

Figure D-1: Pin Numbers — DECserver 200/MC Device Connectors (J1 through J8)

D.2 Serial Line Circuit Standards

DECserver 200/MC pin signals conform to the following serial line circuit standards (Ref: ISO 2110) shown in Table D-1.

Table D-1: Circuit Standards

Pin	Signal	Source	Description	(EIA232) RS-232-C	CCITT V.28
2	TXD	DTE	Transmitted Data	BA	103
3	RXD	DCE	Received Data	BB	104
4	RTS	DTE	Request to Send	CA	105
5	CTS	DCE	Clear to Send	CB	106
6	DSR	DCE	Data Set Ready	CC	107
7	GND	—	Signal Ground	AB	102
8	CD	DCE	Carrier Detect	CF	109
12	SMI	DCE	Speed Mode Indicate	CI	112
20	DTR	DTE	Data Terminal Ready	CD	108.2
22	RI	DCE	Ring Indicator	CB	125
25	DSRS	DTE	Data Signal Rate Select	CH	111


D.3 Device Cables Used With DECserver 200/MC

The cables described in the following sections are used with the DECserver 200/MC only.

D.3.1 BC22D Shielded Null Modem Cable (Data Leads Only)

The BC22D cable can be used to connect any device to the DECserver 200/MC when modem control is disabled in the software. This cable can also be used for devices that implement DTR/DSR flow control or power-off detection using the DSR signal.

Figure D-2 shows the pin numbers and signals used with the BC22D shielded null modem cable.

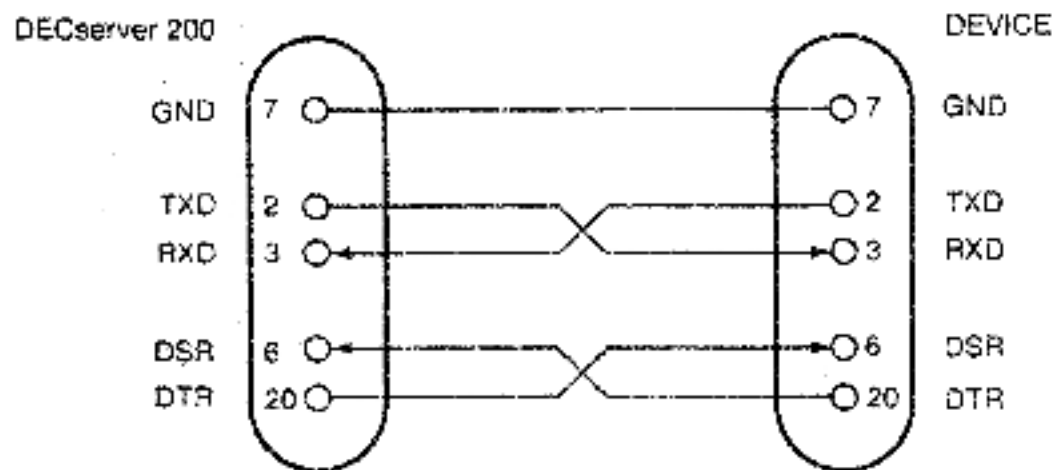


LXS 2952

Figure D-2: Pin Assignments -- BC22D Shielded Null Modem Cable

D.3.2 BC22E or BC22F Shielded Straight-Through Cable (Full-Modem)

The BC22E or BC22F cable can be used for all normal connections to full-duplex modems when the DECserver 200/MC port is connected to a modem.

Figure D-3 shows the pin numbers and signals used with the BC22E or BC22F shielded straight-through cable.

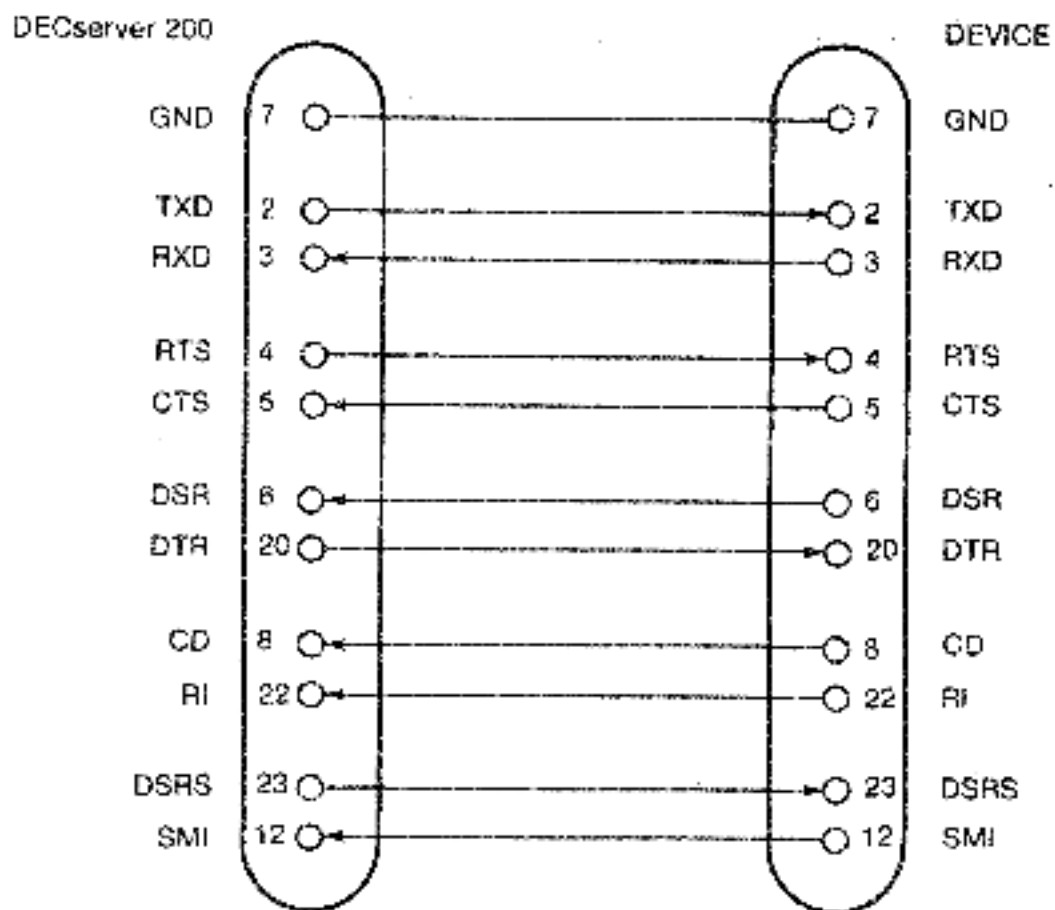

UKG-0058


Figure D-2: Pin Assignments — BC22E or BC22F Shielded Straight-Through Cable

D.3.3 BC22R Shielded Null Modem Cable

The BC22R cable is recommended for connections to non-Digital host systems, devices using CTS/RTS flow control, and data switches that require simulation of RING (RI) and/or Carrier Detect (CD) signals.

Figure D-4 shows the pin numbers and signals that are used with the BC22R shielded null modem cable.

DECserver 200

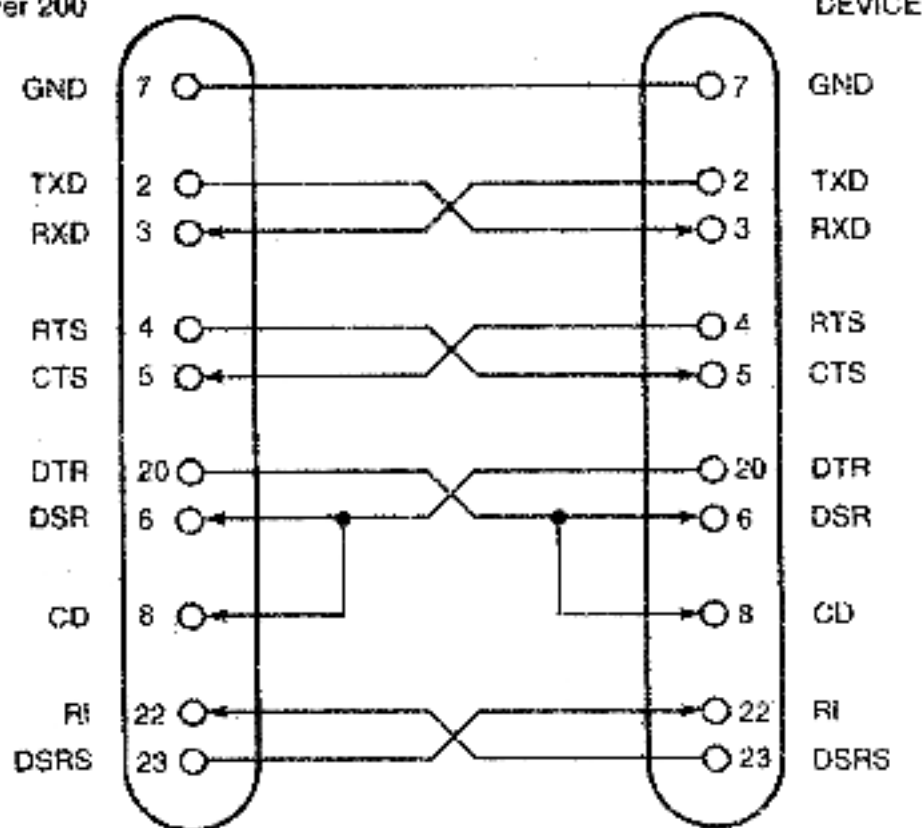

LKD-0354

Figure D-4: Pin Assignments — BC22R Shielded Null Modem Cable

D.3.4 BC17D Shielded Null Modem Cable

The BC17D cable can also be used for connecting non-Digital host systems, terminals, and personal computers to the DECserver 200/MC. However, CTS/RTS flow control and RING enable functions are not supported.

Figure D-5 shows the pin numbers and signals that are used with the BC17D shielded null modem cable.

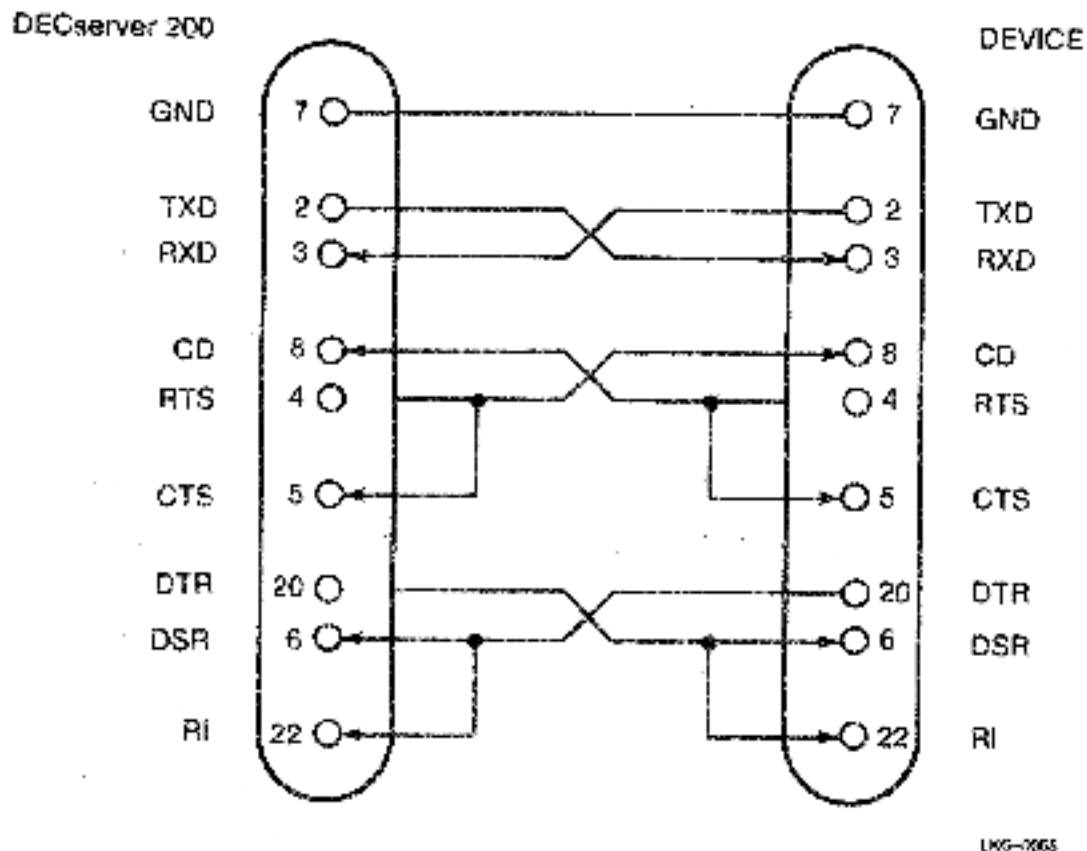



Figure D-5: Pin Assignments — BC17D Shielded Null Modem Cable

D.3.5 DECserver 200/MC Port Loopback Connector

The DECserver 200/MC port loopback connector is used to troubleshoot the DECserver 200/MC ports (as explained in the *DECserver 200 Management Guide*).

Figure D-6 shows the wiring diagram of the port loopback connector and the corresponding signals looped back to the server.

DECserver 200

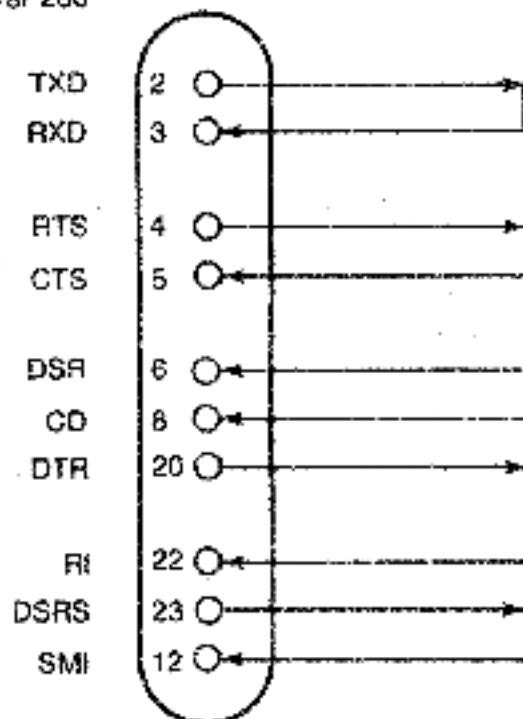

LKG-0340

Figure D-6: Wiring Diagram — DECserver 200/MC Port Loopback Connector

D.4 DECserver 200/DL Device Connector (J1)

The DECserver 200/DL (model DSRVB-Bx) supports devices requiring data leads only for operation. This model provides a single 36-pin connector that contains data leads for eight channels that connect to the eight server ports. The electrical interface for this connector complies with RS423, DEC423, and V.10 specifications. Although all 36 pins are populated on this connector, only 32 pins are used (see Table D-2).

The pin numbers for these connectors, as viewed from the server's control/indicator panel, are shown in Figure D-7.

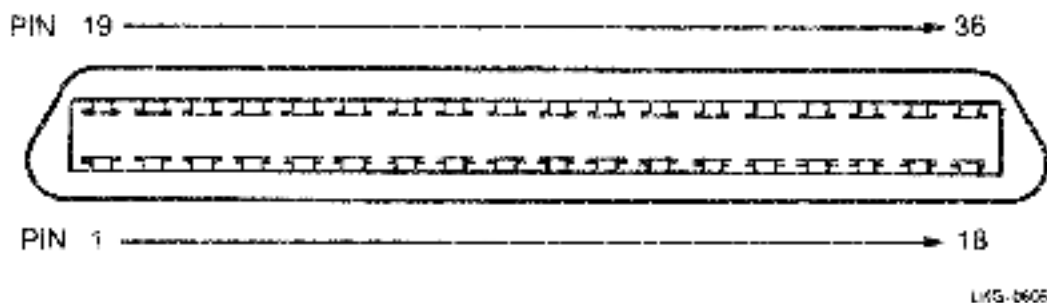


Figure D-7: Pin Numbers — DECserver 200/DL Device Connector (J1)

Table D-2: DECserver 200/DL Device Connector (J1) Pin Definitions

Pin	Channel	Signal	Pin	Channel	Signal
1	1	TXD+	19	1	TXD-
2	1	RXD+	20	1	RXD-
3	2	TXD+	21	2	TXD-
4	2	RXD+	22	2	RXD-
5	3	TXD+	23	3	TXD-
6	3	RXD+	24	3	RXD-
7	4	TXD+	25	4	TXD-
8	4	RXD+	26	4	RXD-
9	5	TXD+	27	5	TXD-
10	5	RXD+	28	5	RXD-
11	6	TXD+	29	6	TXD-
12	6	RXD+	30	6	RXD-
13	7	TXD+	31	7	TXD-
14	7	RXD+	32	7	RXD-
15	8	TXD+	33	8	TXD-
16	8	RXD+	34	8	RXD-
17	Spare		35	Spare	
18	Spare		36	Spare	


D.5 Device Cables and Adapters Used With DECserver 200/DL

The cables and adapters described in the following sections are used with the DECserver 200/DL only.

D.5.1 BC16C 36-Conductor Cable (Data Leads Only)

The BC16C cable is a straight-through 36-conductor cable that is used to connect the DECserver 200/DL ports (via J1) to the H3104 cable concentrator.

A wiring diagram of the BC16C cable is shown in Figure D-8.

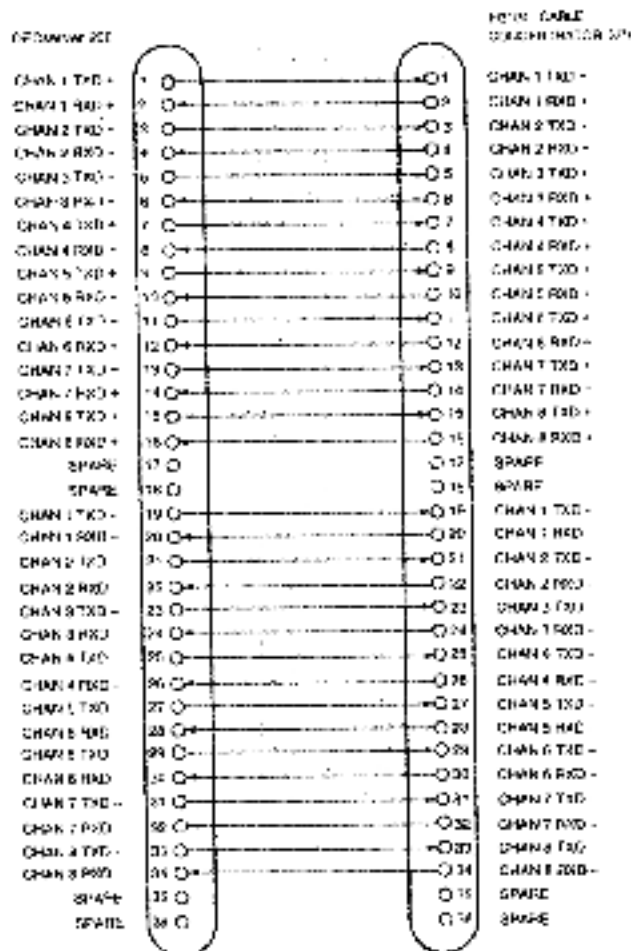

LNG-0606

Figure D-8: Wiring Diagram — BC16C 36-Conductor Cable

D.5.2 H3101 36-pin Loopback Connector

The H3101 loopback connector has one female 36-pin connector and one male 36-pin connector (only one used at a time). The connector is used to loopback test BC16C/D cable or any other 36-pin component used with the DECserver 200/300.

A wiring diagram of the H3101 loopback connector is shown in Figure D-9.




LKG-0007

Figure D-9: Wiring Diagram — H3101 Loopback Connector

D.5.3 H3102 36-pin Cable Coupler

The H3102 cable coupler is used to join two BC16C/D 36-conductor cables.

A wiring diagram of the H3102 cable coupler is shown in Figure D-10.

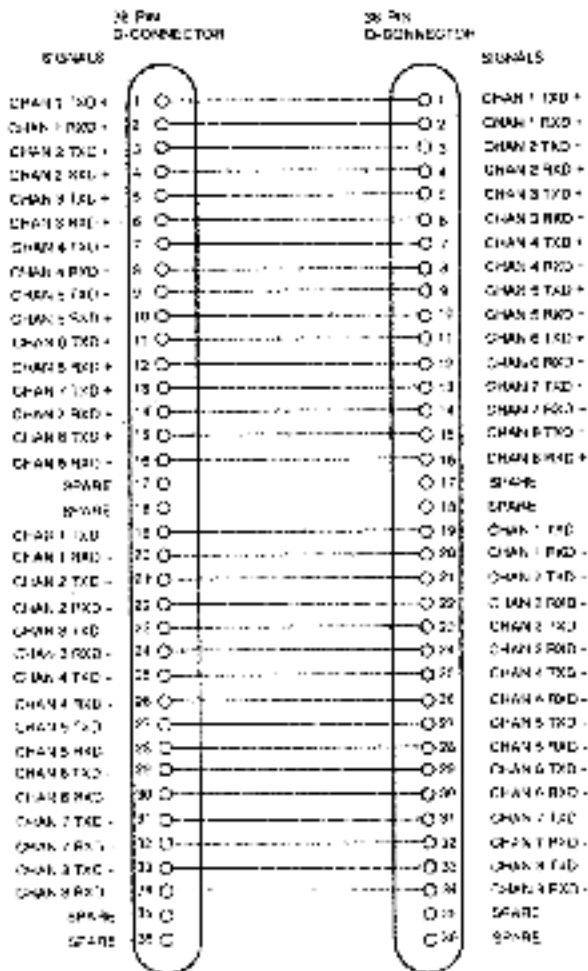


UAG-080A

Figure D-10: Wiring Diagram — H3102 36-Pin Cable Coupler

D.5.4 H3106 36-pin to 50-pin Adapter

The H3106 adapter is used to connect BC16C/D 36-conductor cables to 25-pair (50-conductor) trunk wiring. Both sides of the adapter are female connectors.

A wiring diagram of the H3106 cable adapter is shown in Figure D-11.

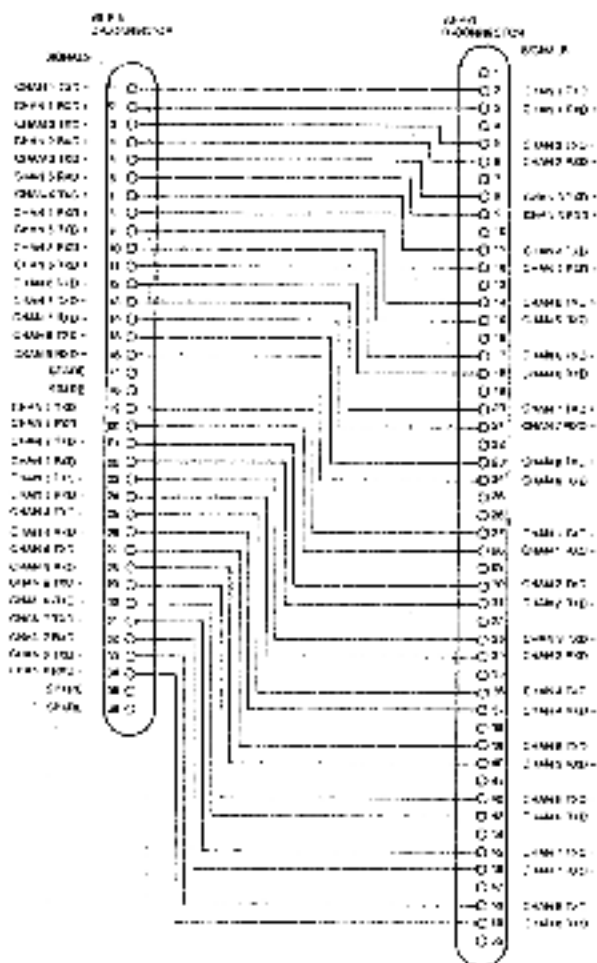


LX6-0509

Figure D-11: Wiring Diagram — H3106 Cable Adapter

D.5.5 H3104 Cable Concentrator

The H3104 cable concentrator has eight female 6-pin Modified Modular Jacks (MMJs) that accept BC16E-xx cables. These connections are physically converted into a single female 36-pin connection that accepts a BC16C/D 36-conductor cable. Note that the H3104 cable concentrator is only available as part of the H3104-B DECserver 200/DE adapter kit.

A wiring diagram of the cable concentrator is shown in Figure D-12.

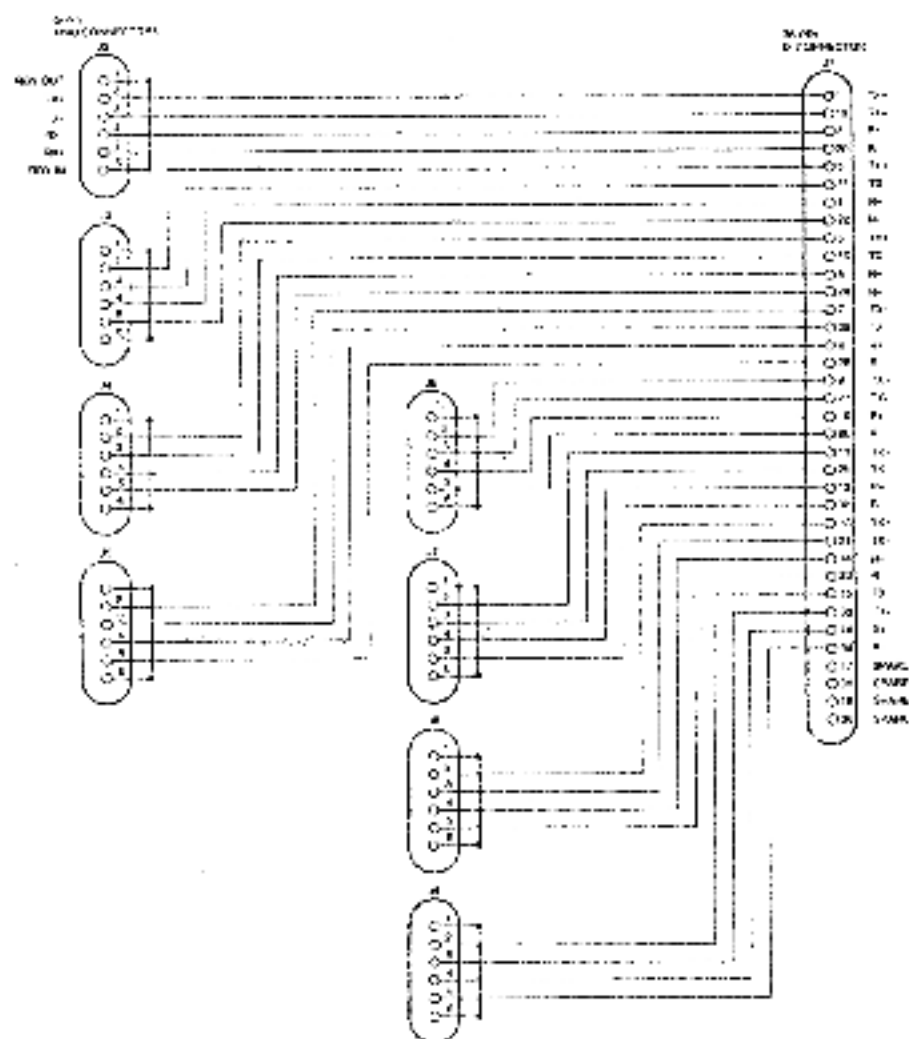


JG-0510

Figure D-12: Wiring Diagram — H3104 Cable Concentrator

D.5.6 H3103 MMJ Loopback Connector

The H3103 MMJ loopback connector is used to loopback signals from the H3104 cable concentrator.

A wiring diagram of the MMJ loopback connector is shown in Figure D-13.

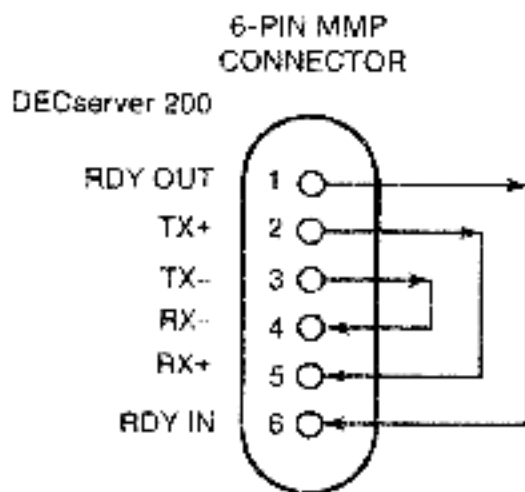


LKG-0442

Figure D-13: Wiring Diagram — H3103 MMJ Loopback Connector

D.5.7 BC16E-xx 6-Conductor DEC OFFICE Cable

The BC16E is an unshielded 6-conductor flat cable. This cable is terminated at both ends with a Modified Modular Plug (MMP).

A wiring diagram of the BC16E-xx cable is shown in Figure D-14.

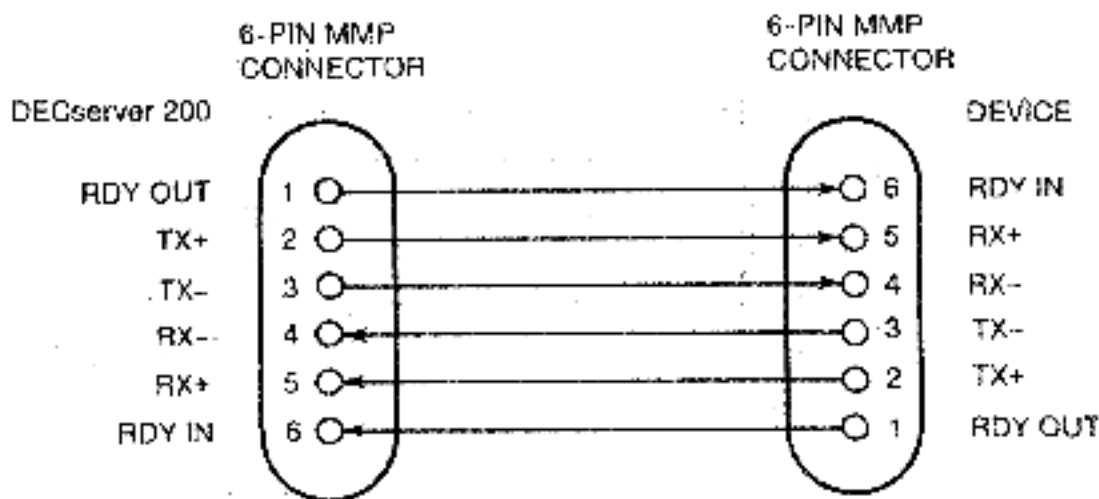

LKG-0447

Figure D-14: Wiring Diagram — BC16E-xx Cable

D.5.8 H8572 6-Pin Cable Coupler

The H8572 cable coupler is used to join two BC16E-xx DEC OFFICE cables. The coupler consists of two back-to-back Modified Modular Jacks (MMJs).

A wiring diagram of the H8572 cable coupler is shown in Figure D-15.

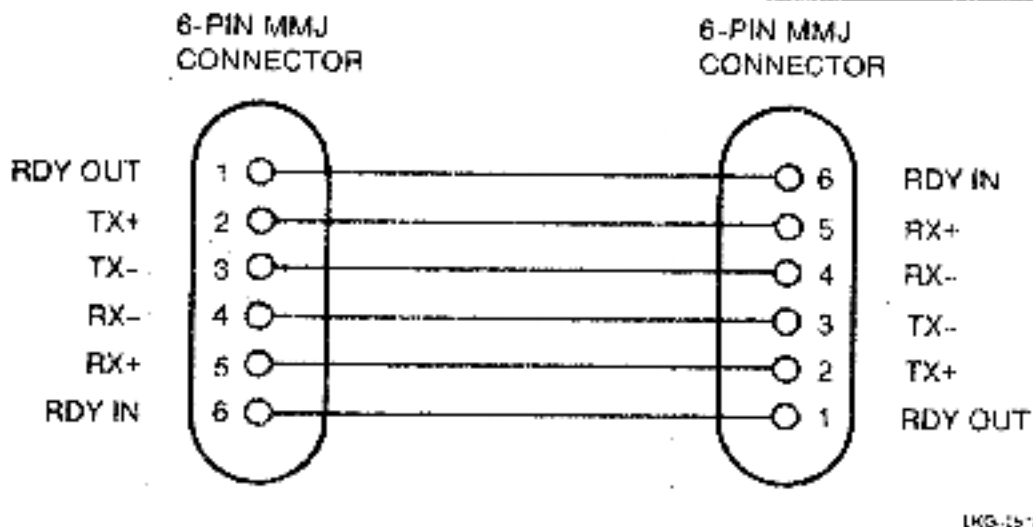


Figure D-15: Wiring Diagram -- H8572 Cable Coupler

D.5.9 H8571-xx DEC423 to RS-232-C Passive Adapters

The H8571 adapters are used to adapt 25-pin and 9-pin D connectors to Modified Modular Jacks (MMJs). Each adapter provides a modified modular jack on one side and a female D connector on the other side. Two models of the adapter are available:

- H8571-A — Used with 25-pin D-connectors found on terminals
- H8571-B — Used with 9-pin D-connectors found on some printers and on some terminal printer ports

Figures D-16 and D-17 show the wiring diagrams for both models of the H8571 adapters.

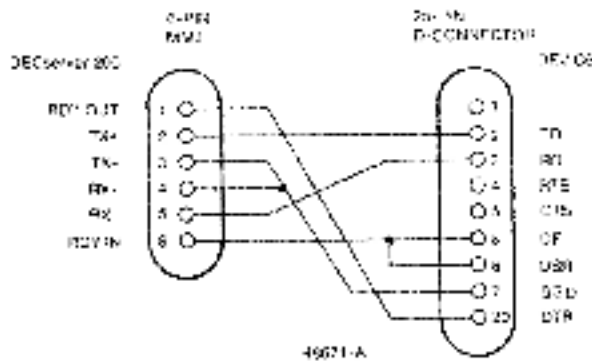


Figure D-16: Wiring Diagram — H8571-A Adapter

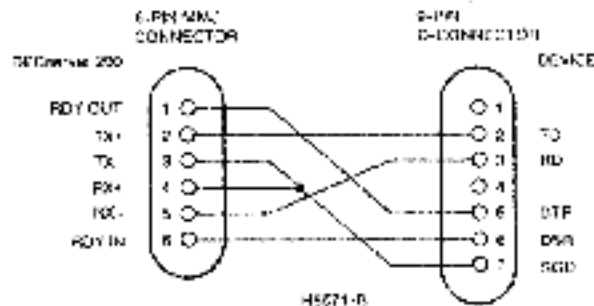


Figure D-17: Wiring Diagram — H8571-B Adapter

1. The first part of the document discusses the importance of maintaining accurate records of all transactions and activities. It emphasizes that proper record-keeping is essential for transparency and accountability, particularly in financial reporting and compliance with regulatory requirements. The text notes that incomplete or inaccurate records can lead to significant legal and financial consequences for the organization.

2. The second part of the document outlines the various methods and tools used to collect and analyze data. It highlights the need for robust data management systems that can handle large volumes of information efficiently. The document also discusses the importance of data security and privacy, ensuring that sensitive information is protected from unauthorized access and breaches. Additionally, it touches upon the use of advanced analytics to derive meaningful insights from the collected data.


3. The third part of the document focuses on the implementation of internal controls and risk management strategies. It stresses that a strong internal control system is crucial for preventing fraud, errors, and misstatements. The document provides a detailed overview of the key components of an effective internal control system, including the establishment of clear policies and procedures, the assignment of responsibilities, and the regular monitoring and evaluation of control effectiveness. It also discusses the role of risk management in identifying, assessing, and mitigating potential risks to the organization's operations and financial stability.

4. The fourth part of the document addresses the importance of communication and collaboration in achieving organizational goals. It emphasizes that clear and consistent communication is essential for ensuring that all employees are aligned with the organization's vision and mission. The document discusses the benefits of fostering a culture of transparency and open communication, where employees feel encouraged to share their ideas and concerns. It also highlights the importance of cross-functional collaboration and teamwork in driving innovation and improving overall organizational performance.

5. The fifth and final part of the document provides a summary of the key findings and recommendations. It reiterates the importance of maintaining accurate records, implementing robust data management systems, strengthening internal controls, and fostering a culture of communication and collaboration. The document concludes by stating that these measures are essential for ensuring the long-term success and sustainability of the organization. It also provides a list of references and resources for further reading on the topics discussed in the document.

E

DECserver 200 Specifications

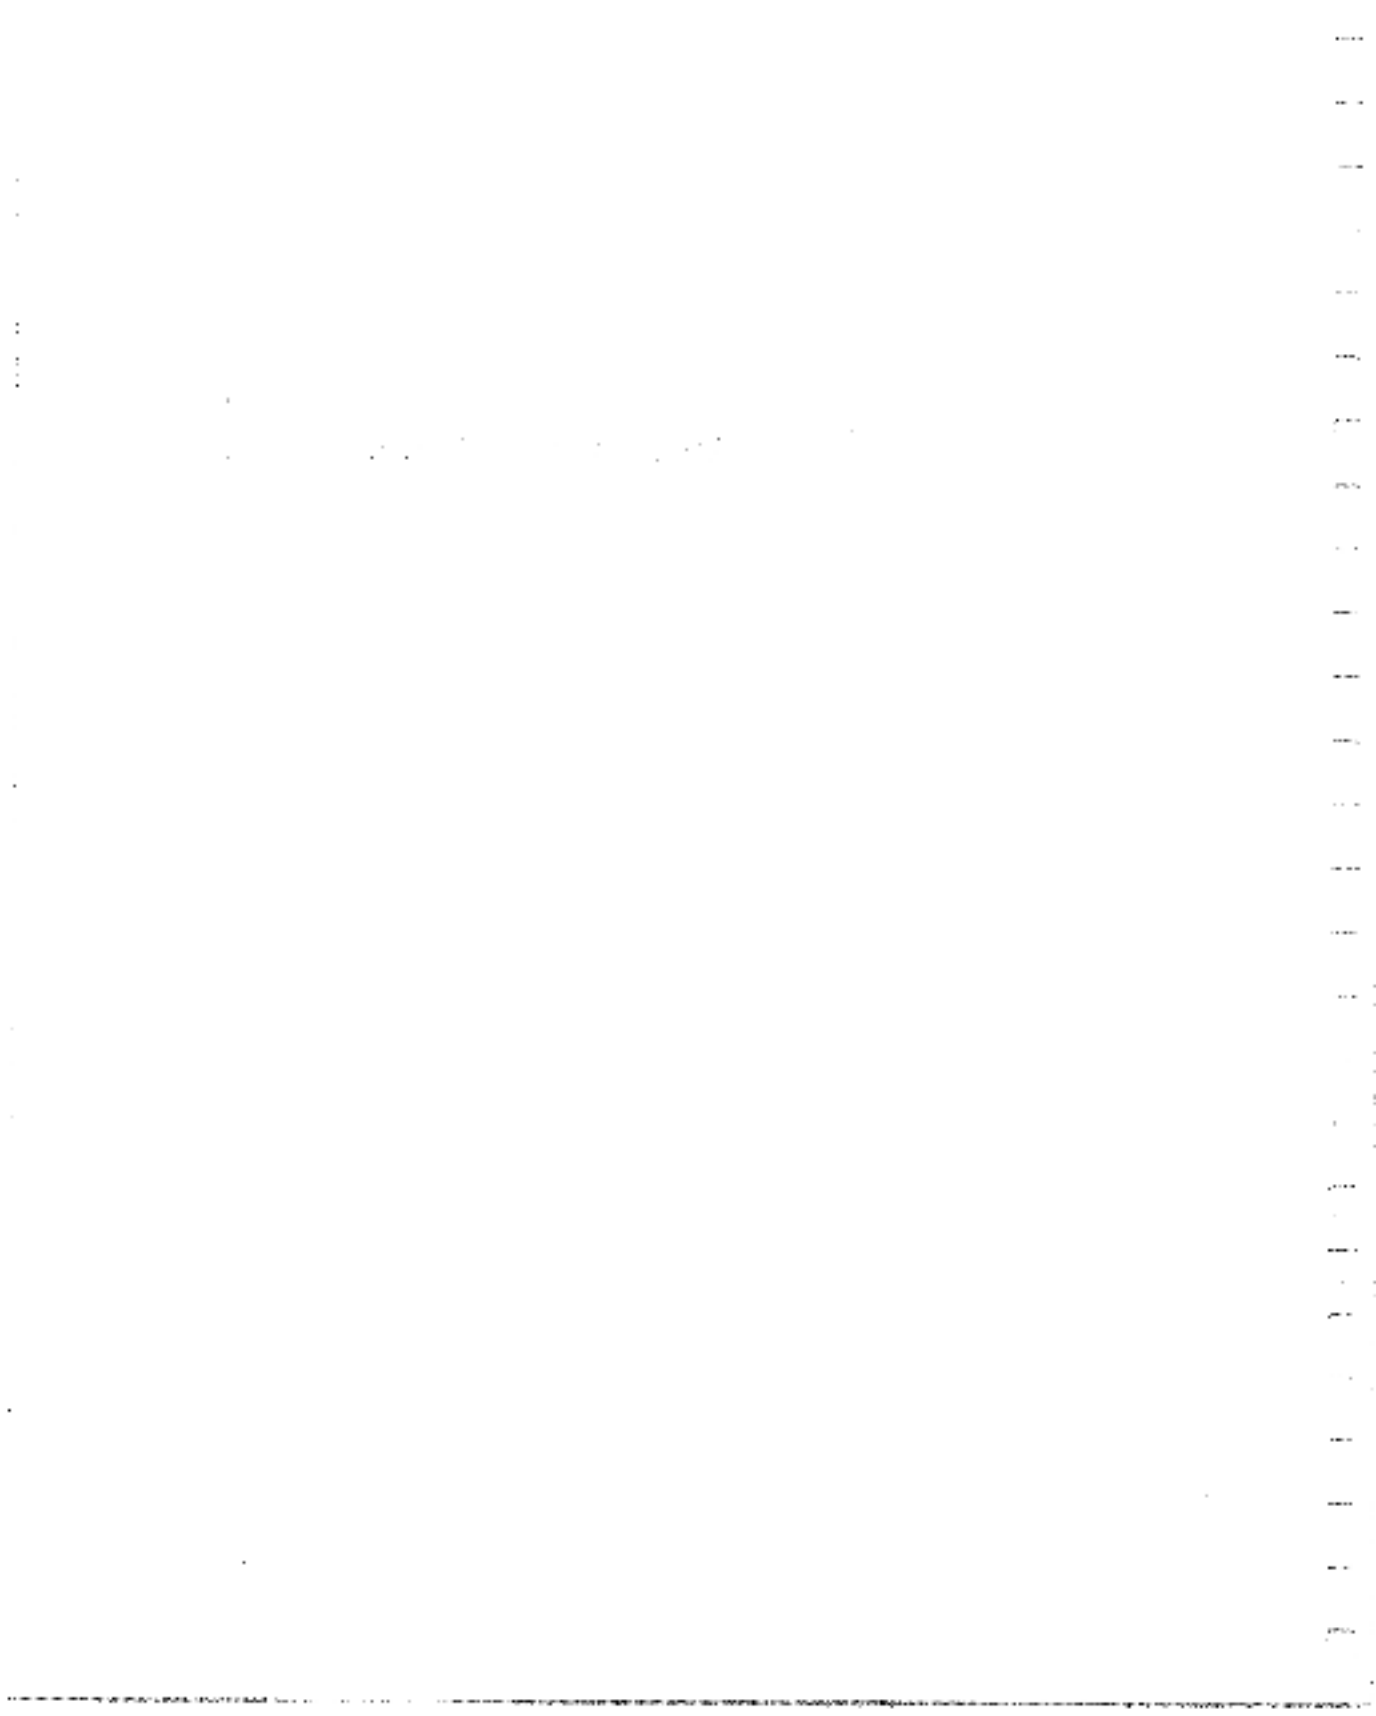

This appendix lists the DECserver 200 specifications. These specifications apply to both models of the DECserver 200 (models DSRVB-Ax and DSRVB-Bx).

E.1 Power

The power requirements for the DECserver 200 are shown in Table E-1.

Table E-1: DECserver 200 Power Ratings

Requirements	DSRVB-AA DSRVB-BA	DSRVB-AB DSRVB-BB
Factory-set nominal voltage	100 to 120 Vac 3-wire, single phase	220 to 240 Vac 1N + PE
Frequency	47 to 63 Hz	47 to 63 Hz
Line current	1.0 A	0.5 A
Power	75 watts	75 watts

Most wall outlets meet one of these sets of requirements. However, you should check with an electrician to make sure the line is grounded (earthed).

E.2 Environment

E.2.1 Temperature

Operating: 5° to 50°C (41° to 122°F)

Nonoperating: -40° to 66°C (-40° to 151°F)

Maximum temperature change per hour: 20°C (36°F)

Rapid temperature changes can affect operation. Therefore, do not operate the server near heating or cooling devices, large windows, or doors that open to the outside.

IMPORTANT

The server must be at operating temperature before you install it. If, during transit, the server is exposed to temperatures above or below the operating temperature, leave the server overnight in the operating environment before operating it.

E.2.2 Altitude

Operating: 2.4 km (8000 ft)

Nonoperating: 9.1 km (30,000 ft)

If you are operating the server above 2.4 kilometers, decrease the operating temperature by 1.8°C Centigrade/1000 meters (1°F Fahrenheit/1000 feet)

E.2.3 Relative Humidity

Operating: 10% to 95% (noncondensing)

Nonoperating: 95% maximum

Low humidity can cause static electricity that can affect server operation. Use a humidifier to correct the problem.

E.2.4 Physical Size of the DECserver 200

Width: 49.3 cm (19.4 in)

Height: 11.7 cm (4.6 in)


Depth: 31.2 cm (12.3 in)

Weight: 5.9 kg (13.0 lb)

E.2.5 Space Requirements

Allow for 15 centimeters (6 inches) of airspace around the server air vents, and place the server at least 45 centimeters (18 inches) above the floor. This allows adequate ventilation for cooling fans and reduces exposure to excess dust from foot traffic.

F
Service Options

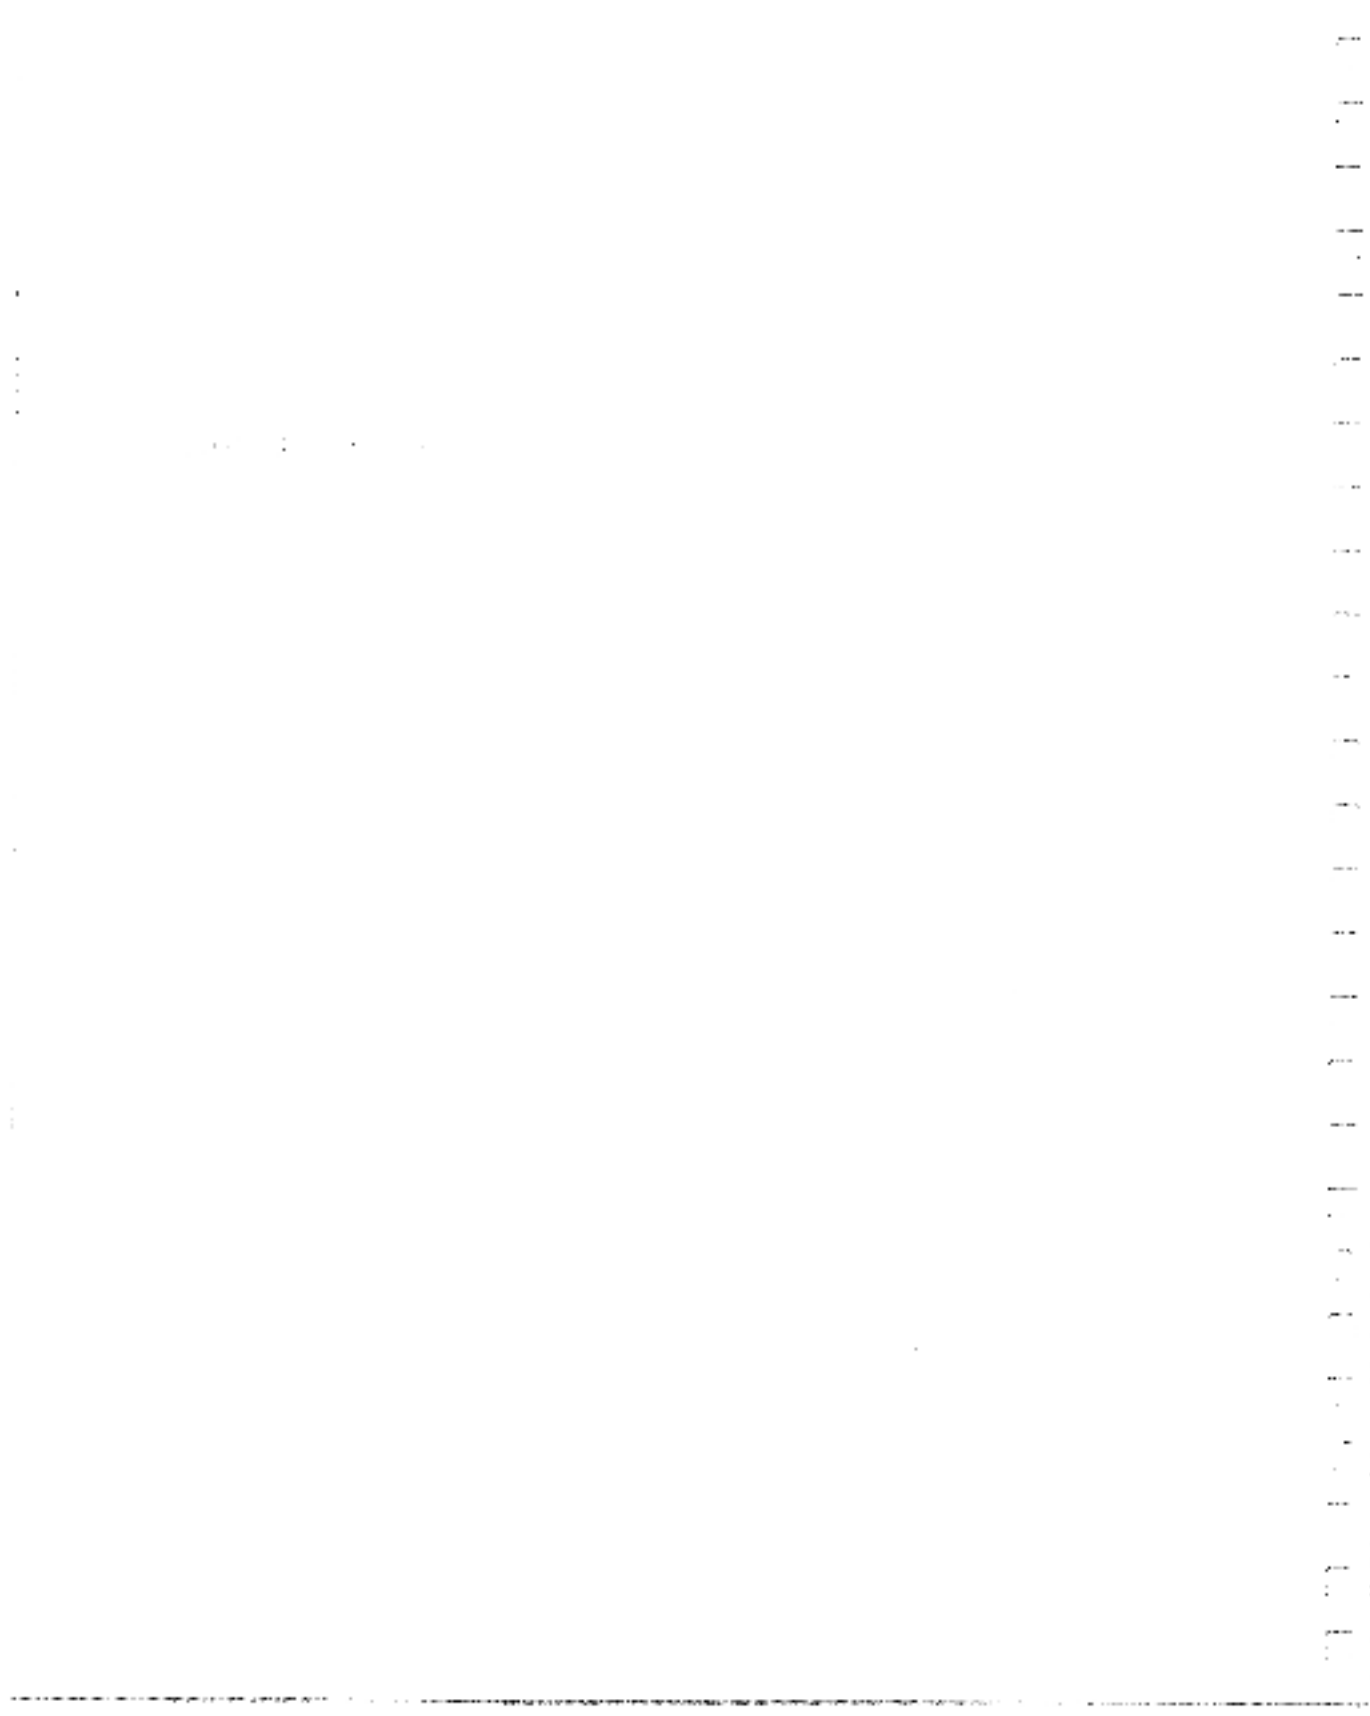

This appendix briefly describes the Digital hardware and software service options that are available to support the DECserver 200. For more information about Digital services, please contact your Digital sales representative.

F.1 Hardware Services

F.1.1 Digital On-Site Service

Digital provides on-site service under a service agreement or on a per-call basis. Trained service specialists perform hardware maintenance at your site.

F.1.2 DECmailer

DECmailer allows you to ship the server to a Customer Return Center for repair.

F.2 Installation Service

Installation service includes services provided by trained service specialists for successful installation of your DECserver 200.


F.3 Software Services

F.3.1 Software Product Service Agreements


Digital offers software product service agreements to support your software. See your Digital sales representative for more details.

F.3.2 Training

Digital Educational Services sells training for installation, maintenance, and management of Digital software. Course formats may vary from seminars to packaged training materials.

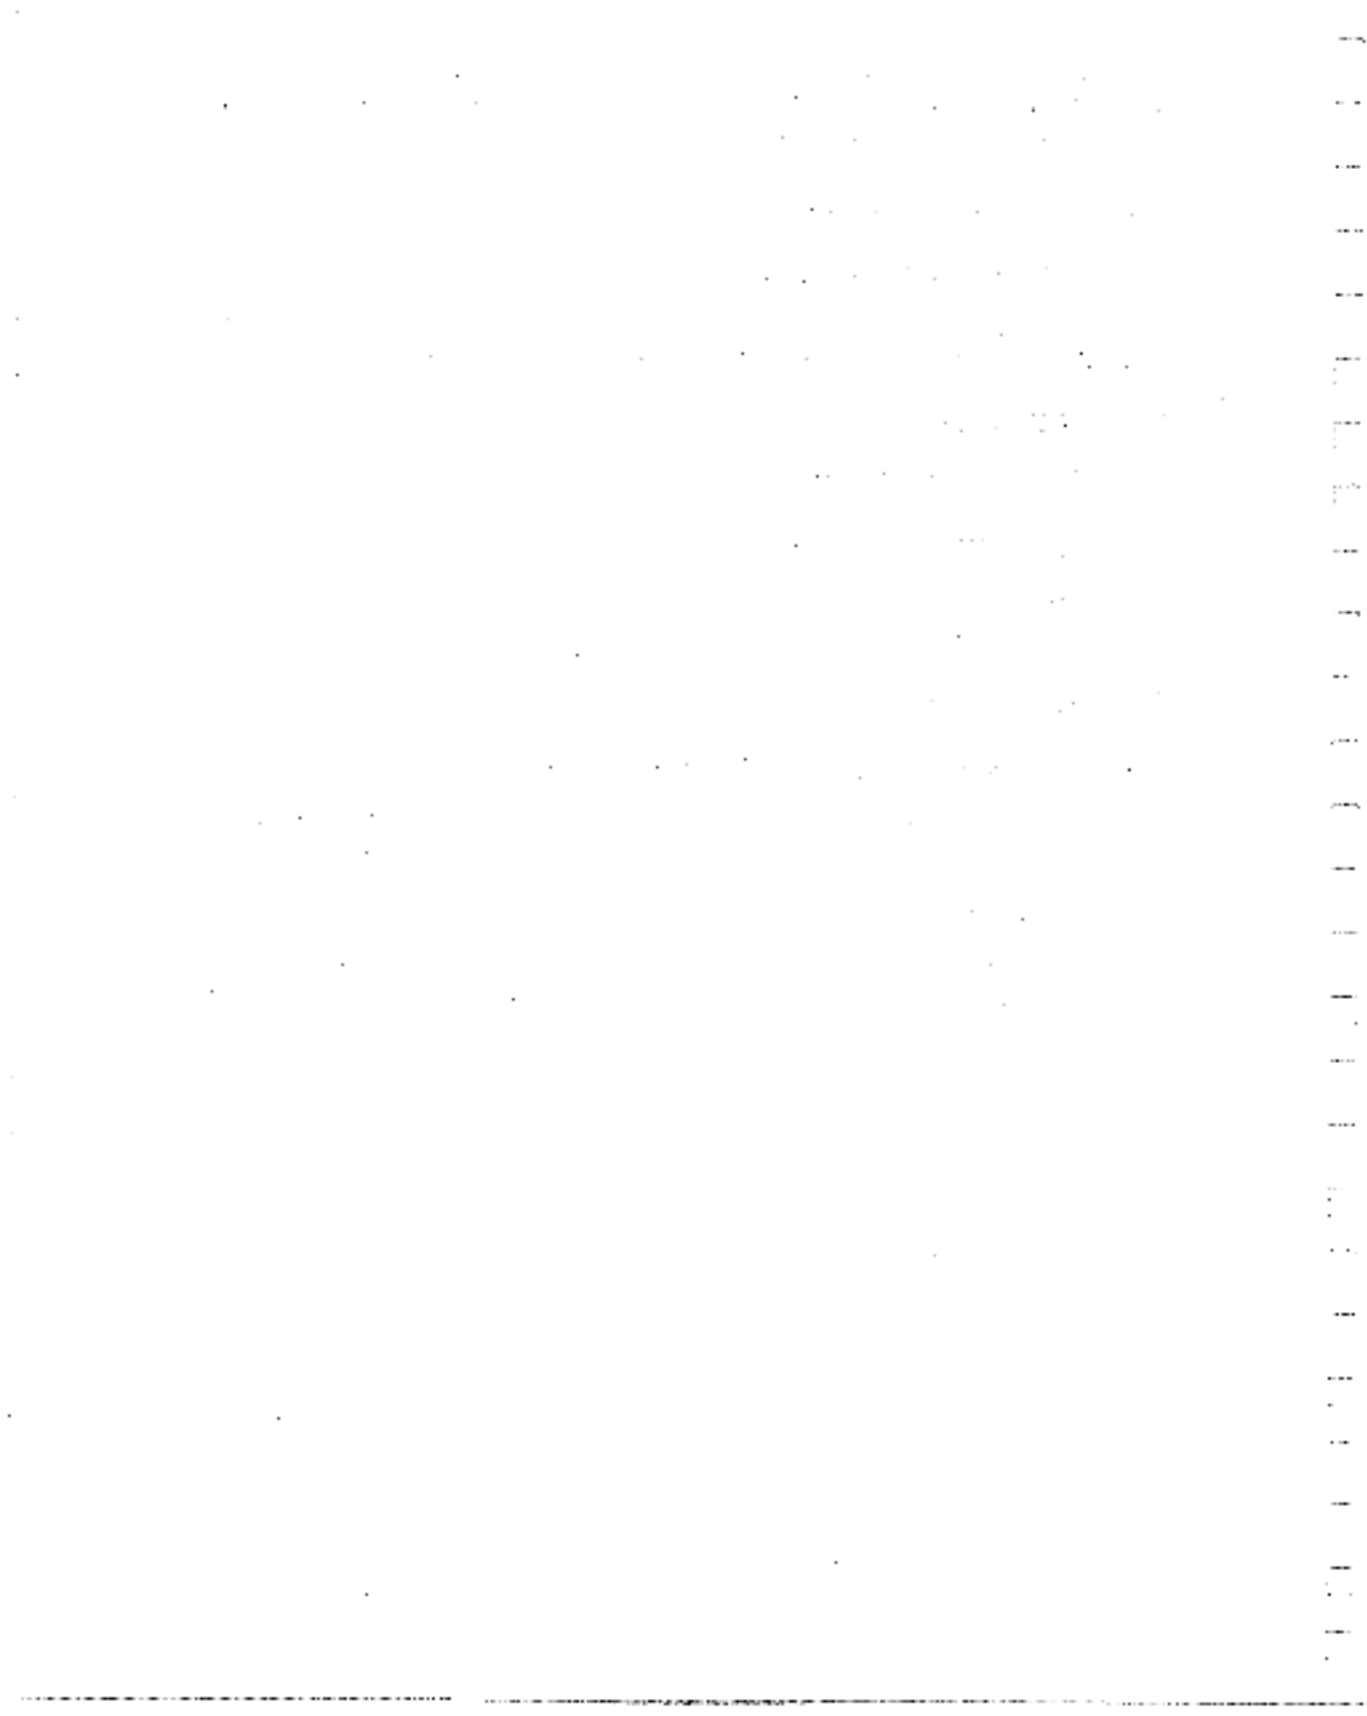

G **Connecting to Etherjack**

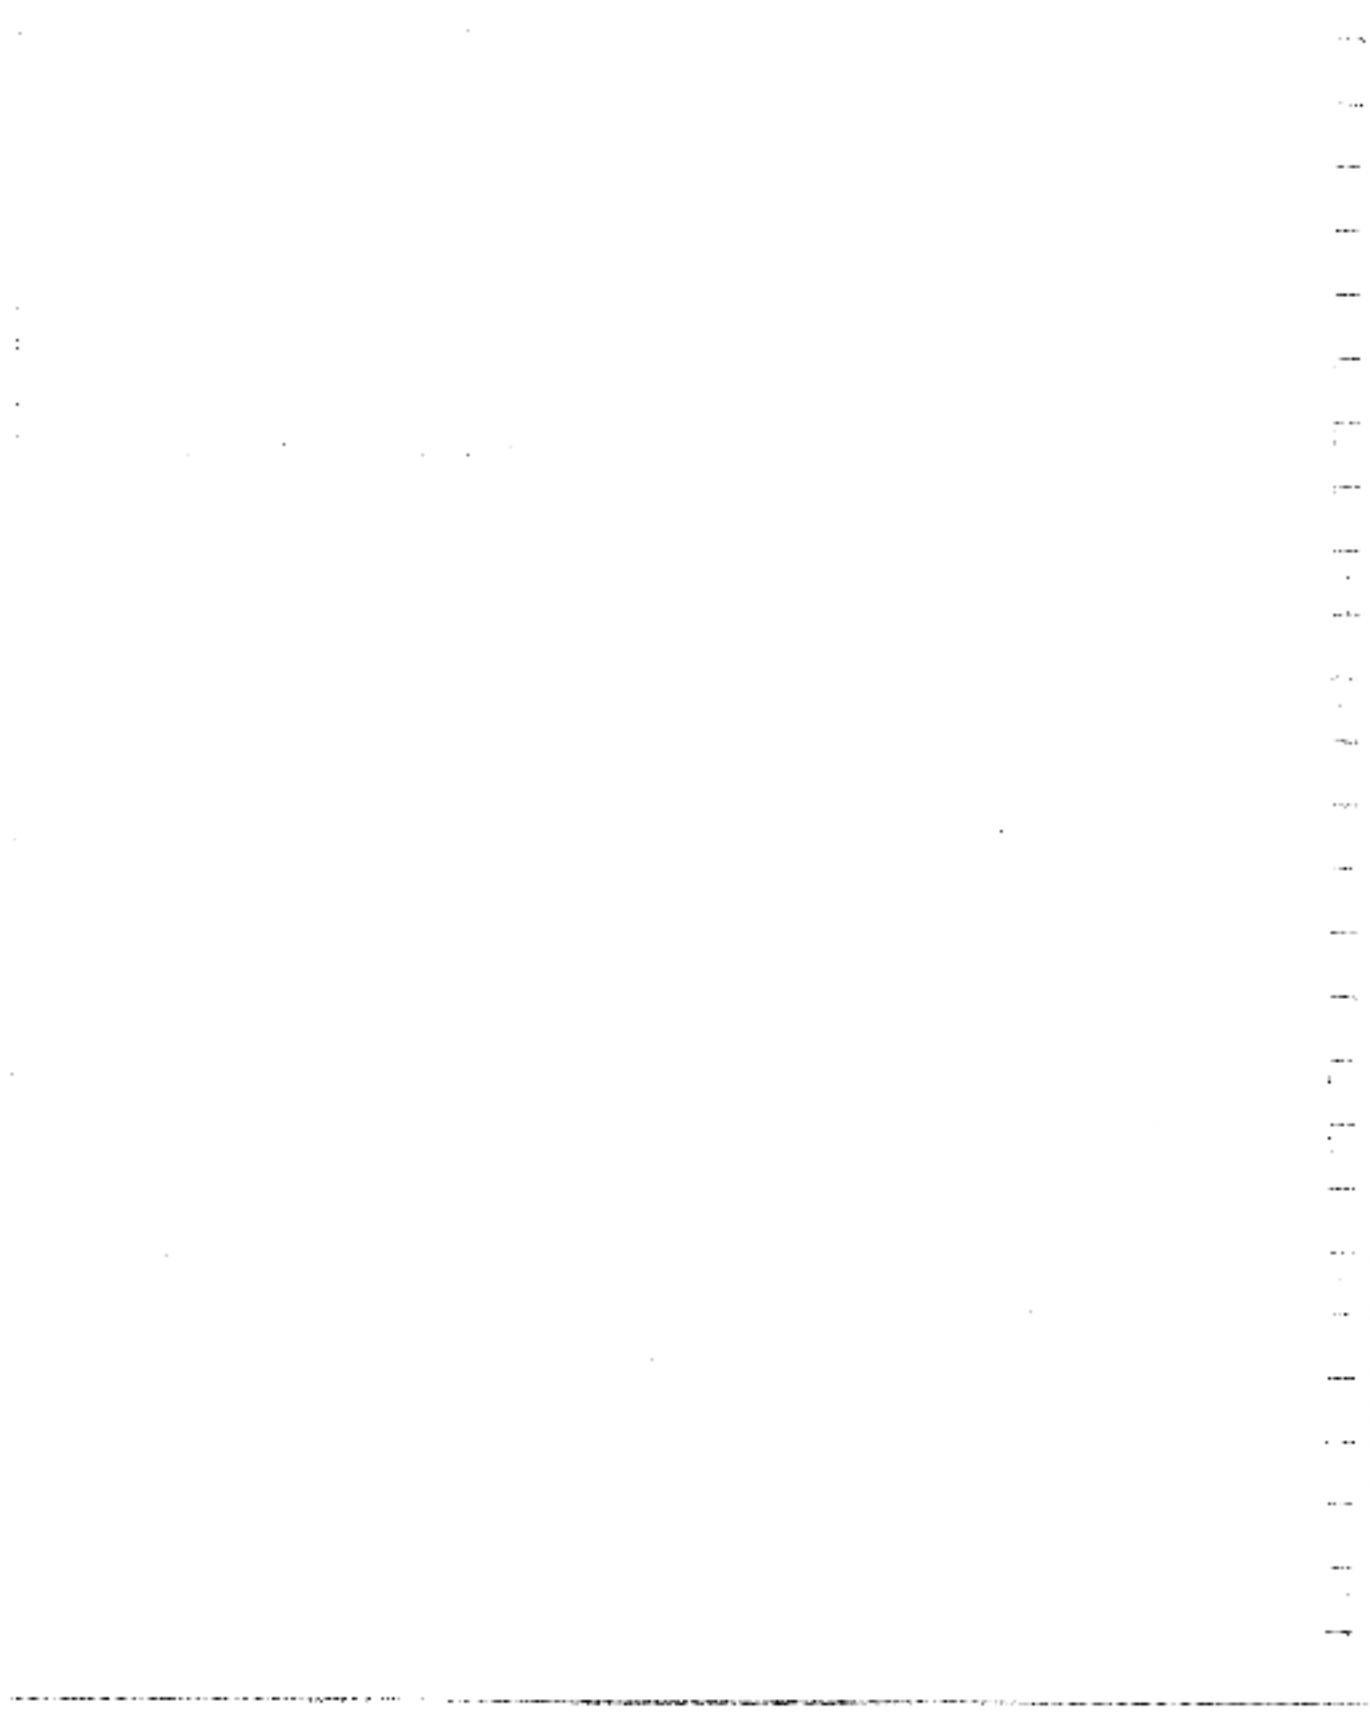

This appendix explains how to connect the server transceiver cable to another transceiver cable mounted in an Etherjack junction box. If the Etherjack junction box has not been installed, install it now before continuing with this procedure. Follow the installation instructions you received with the unit.

To connect your server transceiver cable to the Etherjack junction box, proceed as follows:


- 1 Remove the Etherjack cover by lifting the top of the cover slightly, then pulling it back.



TW391

- 2 Using a flat-blade screwdriver, remove the 2 screws securing the larger retainer bracket, and remove the bracket.

The transceiver cable mounted inside can have a straight or a right-angle connector.

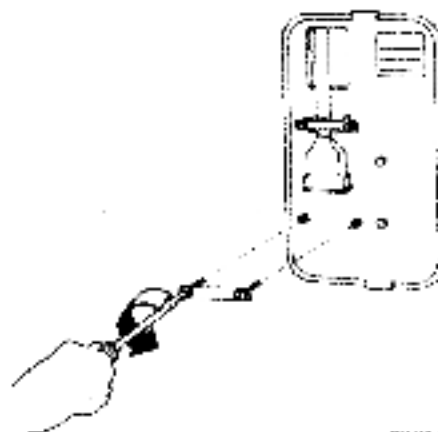

TW401

- 3 Unlock the slide latch on the server transceiver cable.



TW392

- 4 Connect the server transceiver cable to the Etherjack transceiver cable. Note the four possible combinations of straight and right-angle connectors:

Both right-angle connectors


OR



TW383

Right-angle connector to straight connector


OR

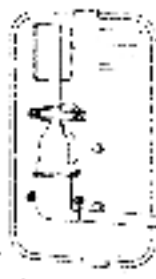

TW384

Both straight connectors

OR

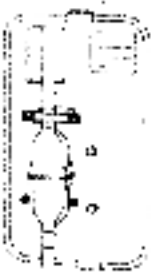


TW385

Straight connector to right-angle connector




TW386

- 5 Push the slide latch on the server transceiver cable connector until the connectors are locked securely.

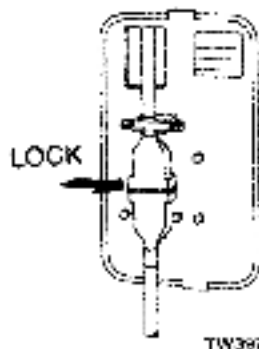

TW397

- 6 Replace the large retainer bracket and the 2 screws. Tighten the 2 screws with the flat-blade screwdriver.

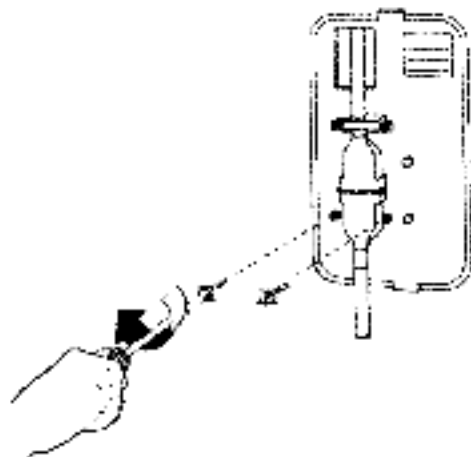


TW400

- 7 Replace the Etherjack cover, ensuring the cables protrude through the slots provided in the cover. Push the top of the cover over the tab in the backplate until it locks in place.



TW398

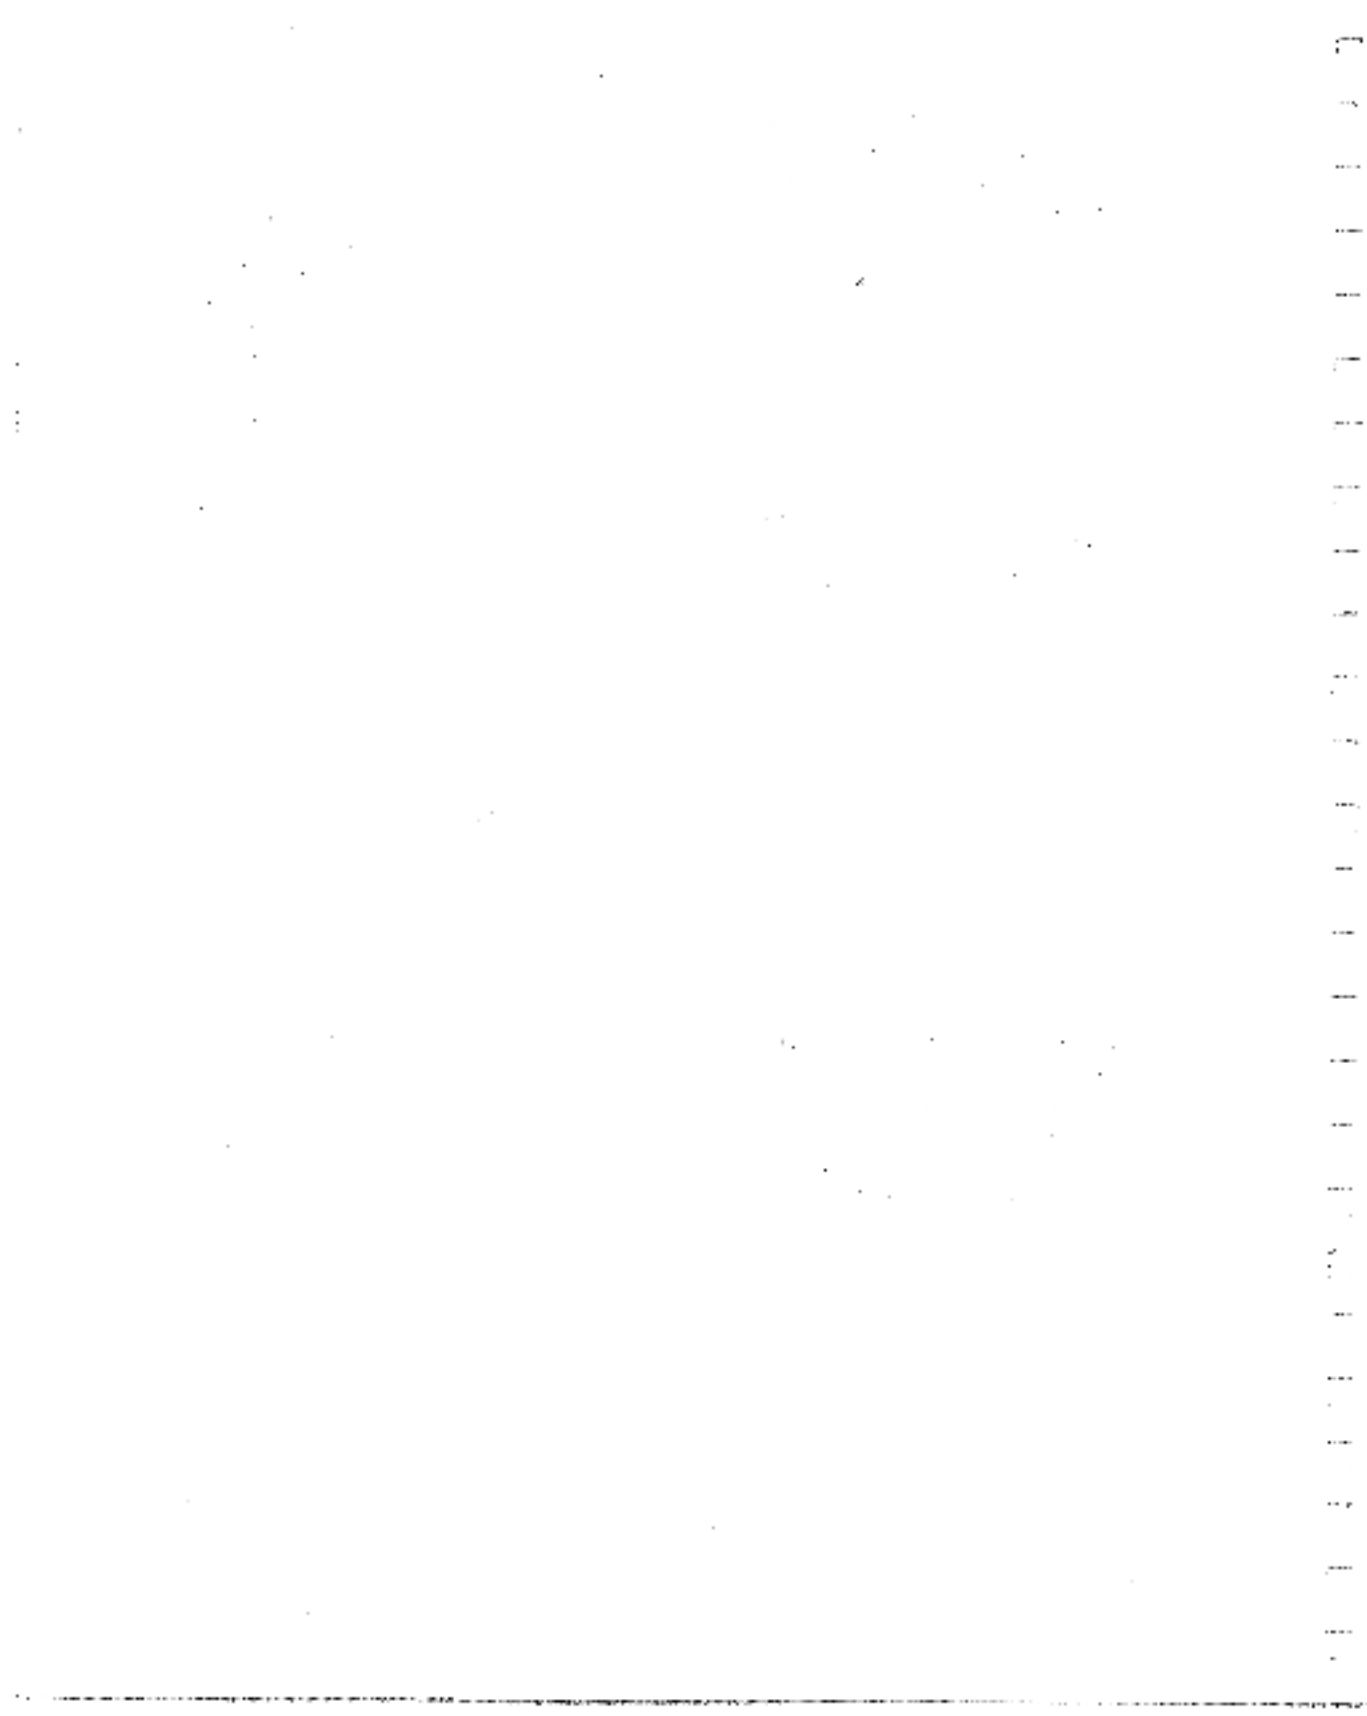

READER'S COMMENTS

What do you think of this manual? Your comments and suggestions will help us to improve the quality and usefulness of our publications.

Please rate this manual:

	Poor			Excellent	
Accuracy	1	2	3	4	5
Readability	1	2	3	4	5
Examples	1	2	3	4	5
Organization	1	2	3	4	5
Completeness	1	2	3	4	5

Did you find errors in this manual? If so, please specify the error(s) and page number(s).

General comments.

Suggestions for improvement:

Name _____ Date _____
Title _____ Department _____
Company _____ Street _____
City _____ State/Country _____ Zip Code _____

DO NOT CUT FOLD HERE AND TAPE



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY LABEL

FIRST CLASS PERMIT NO. 53 MAYNARD MASS

POSTAGE WILL BE PAID BY ADDRESSEE

digital

**Networks and
Communications Publications**
550 King Street
Littleton, MA 01460-1289



DO NOT CUT FOLD HERE



CUT ALONG DOTTED LINE

