

10. Mount the I/O panel (PN 74-26407-13) on the I/O frame and secure it with two screws (Figure 3-5).
11. Install the I/O frame (with the I/O panel) on the CPU rack at the rear bottom of the CPU cabinet.

NOTE: The best location for the I/O frame is at the rear bottom of the CPU cabinet.

12. Mount the I/O panel onto the rear system bulkhead.

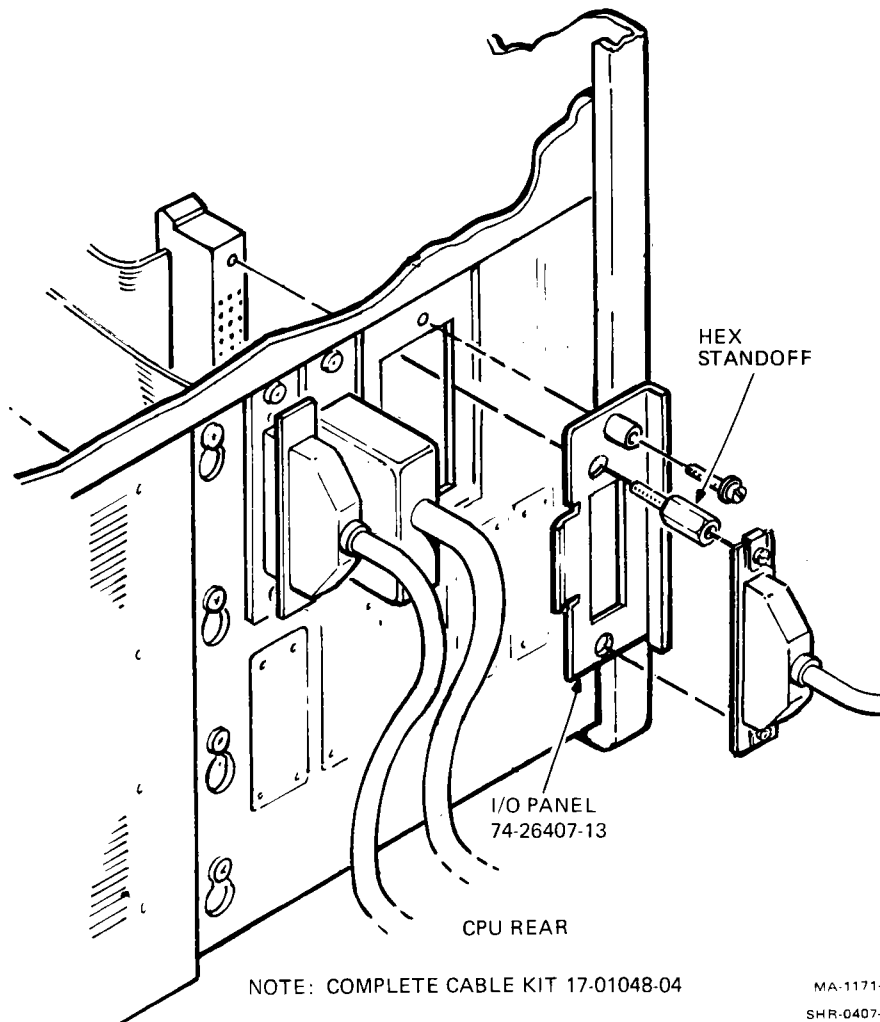


Figure 3-5 Installing Drive Cable on Bulkhead