


INSTALLING THE M7547 CABLING TO DRIVE IN PDP-11/44 SYSTEMS

1. Find the connector key on the straight end of the internal interface cable connector.
2. Plug connector into jack J1 on controller module (Figure 2-5). Be sure that connector keys match up. The reference edge (red) of the cable is positioned on the same side as the arrow on the connector (Figure 1-1).
3. Bend the cable 90 degrees (Figure 2-5). Carefully slide the cable down between the controller module and shielded module.

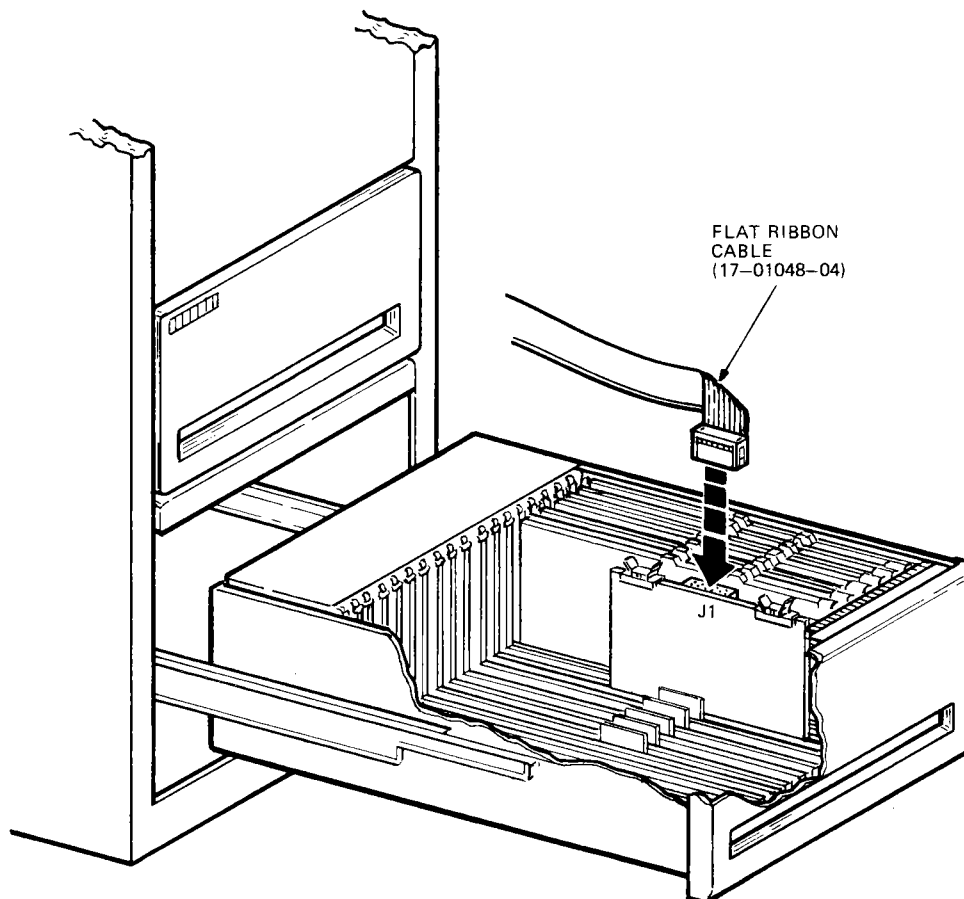

SHR-0397-85

Figure 2-5 Installing Cable in Module