

IDENTIFICATION

Product Code: MAINDEC-08-D1L0
Product Name: Basic PDP-8, 8/I Memory Checkerboard
Date Created: June 10, 1968
Maintainer: Diagnostics Group
Author: J. W. Richardson

1. ABSTRACT

The PDP-8, 8/I Memory Checkerboard diagnostic tests memory for core failure on half-selected lines under worst case conditions. Its use is intended for basic 4K memory systems.

2. REQUIREMENTS

2.1 Equipment

A standard PDP-8 or 8/I

2.2 Storage

There are two versions of this MAINDEC. The Low End program occupies locations 0005 through 0150 octal, and tests memory from 151 through 7700 octal.

The High End program occupies locations 7430 to 7573 octal, and tests memory from 0000 to 7400 octal.

2.3 Preliminary Programs

The RIM loader must be in locations 7756 through 7776 octal.

3. LOADING PROCEDURE

3.1 Method

Load the program with the RIM loader.

- a. Turn off the Teletype reader.
- b. Set the SWITCH REGISTER to 7756.
- c. Press LOAD ADDRESS, and then START.
- d. Place the program tape in the reader and turn on the reader.
- e. When the program has been loaded, stop the computer, turn off the reader, and remove the tape.

4. STARTING PROCEDURE

4.1 Starting Addresses

0005 Low End Checkerboard
7430 High End Checkerboard

4.2 Control Switch Settings

One of the four possible patterns that can be written in memory is obtainable by each of the following SR settings:

- a. 0100 This setting is used for the standard PDP-8 core unit.
- b. 0101 This setting is used for the standard PDP-8/I core unit.
- c. 0000 } These are for special core units from other suppliers.
- d. 0001 }

4.3 Operator Action

With the program in memory, set the SWITCH REGISTER to the starting address, 0005 for Low End or 7430 for High End.

Press LOAD ADDRESS.

Set the SWITCH REGISTER to one of the four settings given in Paragraph 4.2 to obtain the correct pattern. For most PDP-8's, this will be 0100. For most PDP-8/I's, the setting will be 0101.

Press START.

The program will run until an error is detected, or stopped by the operator.

5. OPERATING PROCEDURE

5.1 Operational Switch Settings

See Paragraph 4.2

5.2 Subroutine Abstracts

The program writes the selected pattern into the area of memory to be tested.

The contents of each word are then read, complemented, and written back into the same location, until the contents of the entire area have been complemented. This procedure is repeated 14 times before the contents of each word is checked for incorrect bits.

Error checking begins by reading a location and checking for incorrect bits.

The contents are complemented, written back into the same location, and rechecked for incorrect bits.

The original contents are returned to the location, and the next sequential location is then checked.

After all of memory is tested, the program writes the complement of the pattern and proceeds to check as before.

5.3 Operator Action

See Paragraph 4.3

6. ERRORS

Any location containing an incorrect bit will create an error halt when detected by the program. The contents of a given memory location should always be 0000 or 7777. Anything other than 0000 or 7777 will result in an error halt.

6.1 Error Halts and Description

Two halts are provided for each error, and are described below. Two addresses are given for each halt; the first is for the Low End Test, and the second for the High End Test.

<u>C(MA)</u>	<u>Tag</u>	<u>Description</u>
0124 7546	E1	A memory location does not contain 7777 or 0000. The AC displays the contents of the location in error.
0127 7551	E1A	The AC displays the address of the location in error.

6.2 Error Recovery

<u>Tag</u>	<u>Operator Action</u>
E1	Record the C(AC). Press CONTINUE to reach the next halt.
E1A	Record the C(AC). Press CONTINUE to resume testing with the next sequential memory location.

7. RESTRICTIONS

7.1 Starting Restrictions

None

7.2 Operating Restrictions

None

8. MISCELLANEOUS

8.1 Execution Time

The time to write and test any pattern and its complement is approximately 3 seconds.


9. PROGRAM DESCRIPTION

In a standard core plane, a given core is selected when the combined currents of the x- and y-selection lines produce a magneto motive force which exceeds the threshold for reversing the flux direction of the core. This occurs at the intersection of the activated selection lines. All other cores which are threaded onto the activated lines will be slightly disturbed. Under marginal voltage conditions, such half-selected cores might also reverse polarity if their states are properly established by the pattern which the Checkerboard Test writes into memory.

When a selected core is in the 1 state, the read current will cause it to reverse polarity and become 0. When the core is in the 0 state, the write current will cause it to become 1. Thus, the possibility of a reading error is greatest when all the half-selected cores are in the 1 state; a writing error is most probable when all the half-selected cores are in the 0 state.

If a half-selected core changes polarity, the error will be detected when the memory register containing that core is tested by the program. For a reading error, the contents of that core will appear as a 0 in a field of 1's, and vice versa for a writing error.

Every Checkerboard Test pattern consists of alternating pairs of memory cells; one pair containing 7777's the other containing 0000's. Since memory manufacturers wire their core stacks in different ways, the same pattern of alternations cannot be used for every type of core, and still allow a "worst case" condition, that is, one in which all half-selected cards undergo the greatest possible disturbance which can occur when testing memory. The following pattern is used for the Ferroxcube memories with which most PDP-8's are provided.

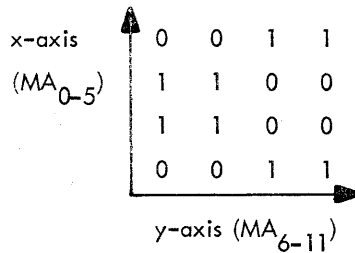

Since the y-axis selection lines are conditioned by the low-order six bits of the memory address register (MA_{6-11}), and the x-axis lines by the high-order bits (MA_{0-5}), the above array is interpreted as follows: (x- and y-axis should be interpreted as shown above).

Positions on the x-axis represent consecutive locations in memory from 00 through 77.

Positions on the y-axis represent consecutive 100_8 's. Thus, the lower left corner represents location 0000. This position contains a 0, which means that the contents of the entire memory cell at address 0000 are 0; likewise, the contents of memory cell 0201 are 1's or 7777. This is determined by reading the third row up on the x-axis, and across one position on the y-axis.

The pattern in memory appears as follows:

<u>Address</u>	<u>Contents</u>
0000	0000
0001	0000
0002	7777
0003	7777
0004	0000
0005	0000
0006	7777
0007	7777
....

The pattern matrix, shows that after 77_8 registers, the pattern will reverse itself, thus:


<u>Address</u>	<u>Contents</u>
0076	7777
0077	7777
0100	7777
0101	7777
0102	0000
0103	0000
0104	7777
0105	7777
0106	0000
0107	0000
....

and so on through memory. The pattern reverses every 100_8 registers.

The patterns generated by the other three switch register settings are defined by the following pattern matrices.


SR Setting

0101

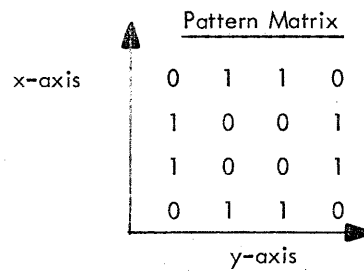


SR Setting

0000

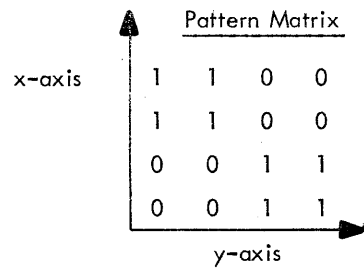

SR Setting

0001

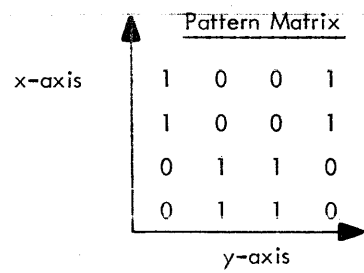

JUN 3

```

/MAINDEC 002: PDP-8 CHECKERBOARD
/
*1          JMP .
           0002
           0003
/
           *7430

7430 7121          CLL CML IAC      /HIGH END TEST
7431 3361          DCA COM
7432 1360          IAU JMP1
7433 3265          DCA SID-2

7434 7604          STX,  LAS
7435 3362          DCA PAT
7436 3363          DCA SA

7437 2361          STB,  ISZ COM
7440 1361          IAU COM
7441 0357          AND DDI      /2
7442 7640          SZA CLA
7443 1356          IAU NOT      /10
7444 1355          IAU NOT
7445 3254          DCA Y        /COMPLEMENT THE PATIERN

7446 1354          STC,  IAU SOT      /400
7447 1363          IAU SA        /TEST FORFINAL ADDRESS
7450 7650          SNA CLA
7451 5232          JMP SIX-2
7452 1362          IAU PAT
7453 0353          AND ROT      /200

7454 0000          Y,    0
7455 1356          IAU NOT      /10-Y LINE PRESETS
7456 1355          IAU NOT      /X LINE TO SNA OR SZA
7457 3262          DCA X
7460 1362          IAU PAI
7461 0357          AND DDI      /2

7462 0000          X,    0
7463 7040          CMA
7464 7420          SNL
7465 5270          JMP DOALL
7466 3763          DCA I SA      /STORE PATTERN AND THE COMPLEMENT

7467 2363          STD,  ISZ SA      /WORD WHEN CHECKING
7470 2362          ISZ PAI
7471 1363          IAU SA
7472 0352          AND BOI      //7
7473 7650          SNA CLA
7474 5246          JMP SIC
7475 5260          JMP X-2
    
```

```

/
/READ AND COMPLEMENT 128 TIMES BEFORE TEST.
/
7476 3364      DOALL,   DCA WRD           /SAVE DATA
7477 1360      IAU MI/
7500 3365      DCA LOOP           /LOOP COUNTER
7501 3363      DCA SA           /ADDRESS COUNTER
7502 1763      LALL,    IAU I SA      /READ
7503 7040      CMA           /COMPLEMENT
7504 3763      DCA I SA           /WRITE BACK
7505 1354      IAU SOI          /400
7506 1363      IAU SA
7507 7650      SNA CLA          /ADDRESS=7700 IF NO SKIP
7510 5313      JMP ,+3
7511 2363      ISE SA           /INCREMENT ADDRESS
7512 5302      JMP LALL          /LOOP
/
7513 2365      ISE LOOP           /128 TIMES WHEN SKIP
7514 5301      JMP LALL-1        /LOOP
7515 1367      IAU JMP2          /JMP2+JMP CCK
7516 3265      DCA SID-2
7517 3363      DCA SA
7520 1364      IAU WRD
/
7521 3364      CCK,    DCA WRD           /CHECK PATIERN
7522 1763      IAU I SA
7523 7041      CMA IAC
7524 1364      IAU WRD
7525 7640      SZA CLA
7526 5342      JMP CC3          /ERROR IN CORE
7527 1364      IAU WRD
7530 7040      CMA
7531 3763      DCA I SA           /COMPLEMENT THE WORD
7532 1763      IAU I SA           /IN CORE
7533 7001      IAC
7534 1364      IAU WRD
7535 7640      SZA CLA          /TEST COMPLEMENT WORD
7536 5342      JMP CC3          /ERROR
7537 1364      CC2,    IAU WRD
7540 7100      CLL
7541 5266      JMP SID-1
7542 1763      CC3,    IAU I SA
7543 7402      E1,     HLI           /ERROR, AC CONTAINS
7544 7200      CLA           /INFORMATION IN ERROR
7545 1363      IAU SA
7546 7402      E1A,    HLI           /AC CONTAINS ADDRESS OF
7547 7300      CLA CLL          /REGISTER IN ERROR
7550 7300      CLA CLL
7551 5337      CC4,    JMP CC2

```

7552 0077
7553 0200
7554 0400
7555 7640
7556 0010
7557 0002
7560 7760
7561 0000
7562 0000
7563 0000
7564 0000
7565 0000
7566 5270
7567 5321

BOT, //
ROT, 200
SOT, 400
HOT, 7640
NOT, 10
DOT, 2
M17, 7760
COM, 0
PAT, 0
SA, 0
WRD, 0
LOOP, 0
JMP1, JMP OUAL
JMP2, JMP CCK
\$

/VARIABLES

THERE ARE NO ERRORS

SYMBOL TABLE

BOT	7522
CCK	7521
CC2	7537
CC3	7542
CC4	7521
COM	7561
DUALL	7476
DOT	7527
E1	7543
E1A	7546
HOT	7525
JMP1	7566
JMP2	7567
LALL	7502
LOOP	7565
M17	7560
NOT	7556
PAT	7562
RQT	7523
SA	7563
SUT	7524
STB	7437
SIC	7446
STD	7467
SIX	7434
WRD	7564
X	7462
Y	7424

SYMBOL TABLE

SIX	7434
SIB	7437
SIC	7446
Y	7454
X	7462
SID	7467
DJALL	7476
LALL	7502
CCK	7521
CC2	7537
CC3	7542
E1	7543
E1A	7546
CC4	7551
BOT	7552
ROT	7553
SOT	7554
HOT	7555
NUT	7556
DOT	7557
M17	7560
CUM	7561
PAT	7562
SA	7563
WRD	7564
LOOP	7565
JMP1	7566
JMP2	7567

/POP-8 CHECKBOARD REV., JAN., 1968
 /COPYRIGHT 1969, DIGITAL EQUIPMENT CORP., MAYNARD, MASS.

```

/
*1          /LOW END TEST
/
0001 5001          JMP          .
0002 7002          0002
0003 0003          0003
0004 7004          0
0005 7121          CLL CML IAC
0006 3144          DCA      COM
0007 1147          TAD      JMP1
0008 3244          DCA      STU=2

0011 7604          STX,     LAS
0012 1146          TAD      MUD
0013 3141          DCA      PAT
0014 1146          TAD      MUD
0015 3143          DCA      SA

0016 2144          STB,     ISZ      COM
0017 1144          TAD      COM
0020 0136          AND      DOT          /2
0021 7640          SZA CLA
0022 1135          TAD      NOT          /10
0023 1132          TAD      HOT
0024 3233          DCA      Y          /COMPLEMENT THE PATIERN

0025 1134          STC,     TAD      POT          /100
0026 1143          TAD      SA          /TEST FOR FINAL ADDRESS
0027 7600          SNA CLA
0030 5007          JMP      STX=2
0031 1141          TAD      PAT
0032 0133          AND      ROT          /200

0033 0000          Y,      0
0034 1135          TAD      NOT          /Y LINE PRESENTS X LINE
0035 1132          TAD      HOT          /TO SNA OR SZA
0036 3041          DCA      X
0037 1141          TAD      PAT
0040 0136          AND      DOT          /2

0041 0000          X,      0
0042 7040          CMA
0043 7420          SNL
0044 5005          JMP      DOALL
0045 3543          DCA I   SA          /STORE PATTERN AND RECOMPLEMENT

0046 2143          STU,     ISZ      SA          /WORD WHEN CHECKING
0047 2141          ISZ      PAT
0050 1143          TAD      SA
0051 0137          AND      BOT          //7
0052 7600          SNA CLA
0053 5025          JMP      STC
  
```

PA-17 V134 28-APR-69 18:21 PAGE 1-1

2054 5057

JNF

X=2

```

/READ AND COMPLEMENT 128 TIMES BEFORE TEST.
/
0055 3145 DOALL, DCA WRD /SAVE DATA
0056 1140 TAD M1/
0057 3142 DCA LOOP /LOOP COUNTER
0060 1146 TAD MUD /END OF PROGRAM+1
0061 3143 DCA SA /ADDRESS COUNTER+1
0062 1543 LALL, TAD I SA /READ
0063 7240 CMA /COMPLEMENT
0064 3543 DCA I SA /WRITE BACK
0065 1134 TAD POT /64 DECIMAL
0066 1143 TAD SA
0067 7650 SNA CLA /ADDRESS=7700 IF NO SKIP
0070 5073 JMP ,+3
0071 2143 ISZ SA /INCREMENT ADDRESS
0072 5062 JMP LALL /LOOP

0073 2142 ISZ LOOP /128 TIMES WHEN SKIP
0074 5060 JMP LALL-2 /LOOP
0075 1150 TAD JMP2 /JMP2=JMP CCK
0076 3044 DCA STU=2
0077 1146 TAD MUD
0100 3143 DCA SA
0101 1145 TAD WRD

```

0102	3145	CC1,	OCA	WRD	/CHECK PATTERN
0103	1543		TAD I	SA	
0104	7641		CMA	IAC	
0105	1145		TAD	WRD	
0106	7640		SZA	CLA	
0107	5123		JMP	CC3	/ERROR IN CORE
0110	1145		TAD	WRD	
0111	7640		CMA		
0112	3543		OCA I	SA	/COMPLEMENT THE WORD
0113	1543		TAD I	SA	/IN CORE
0114	7641		IAC		
0115	1145		TAD	WRD	
0116	7640		SZA	CLA	/TEST COMPLEMENT WORD
0117	5123		JMP	CC3	/ERROR
0120	1145	CC2,	TAD	WRD	
0121	7120		CLL		
0122	5045		JMP	STD-1	
0123	1543	CC3,	TAD I	SA	/ERROR: AC CONTAINS INCORRECT WORD,
0124	7422	E1,	HLT		
0125	7200		CLA		
0126	1145		TAD	SA	/AC CONTAINS ADDRESS OF
0127	7422	E1A,	HLT		/REGISTER IN ERROR
0130	7320		CLA	CLL	
0131	5120	CC4,	JMP	CC2	
0132	7640	HOT,	7640		/CONSTANTS
0133	0200	ROT,	200		
0134	0100	POT,	100		
0135	0010	NOT,	10		
0136	0072	DOT,	2		
0137	0077	BOT,	77		
0140	7700	M17,	7700		/VARIABLES
0141	0000	PAT,	0		
0142	0000	LOUP,	0		
0143	0000	SA,	0		
0144	0000	COM,	0		
0145	0000	WRD,	0		
0146	0151	MUJ,	,+3		
0147	5055	JMP1,	JMP DOALL		
0150	5122	JMP2,	JMP CCK		

*

BOT	0137
CC2	0120
CC3	0123
CC4	0131
CCX	0102
COM	0144
JOAL	0055
JOT	0136
E1	0124
E1A	0127
HOT	0132
JMP1	0147
JMP2	0150
LALL	0062
LOOP	0142
M17	0140
MUD	0146
VOT	0135
PAT	0141
POT	0134
ROT	0133
SA	0143
STB	0016
STC	0025
STD	0046
STX	0011
WRD	0145
X	0041
Y	0033

ERRORS DETECTED: 0

LINKS GENERATED: 2

RUN-TIME: 3 SECONDS

4K CORE USED