


TM03, TU45

TM03/TU45 DATA RELIABAH-E497B-MC  
CZTURBO FICHE 1 OF 1

JUN 1980  
COPYRIGHT © 75.80  
MADE IN USA



The main body of the document is a large, dense grid of data. Each cell in the grid contains a small, structured table or form, likely representing individual data points or test results. The text within these cells is extremely small and difficult to read, but the overall layout is a regular, repeating pattern of data blocks.

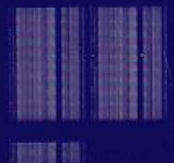

.REM %

IDENTIFICATION

PRODUCT CODE: AC-E496B-MC  
PRODUCT TITLE: CZTURBO TM03/TU45 DATA RELIB  
DATE CREATED: 25 MAY 1978  
UPDATE INFORMATION: DATE 29 FEB 1980 AUTHOR VIJAY ANANDWALA  
MAINTAINER: COMPUTER SPECIAL SYSTEMS  
AUTHOR: CSS DIAGNOSTICS

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS MANUAL.

THE SOFTWARE DESCRIBED IN THIS DOCUMENT IS FURNISHED TO THE PURCHASER UNDER A LICENSE FOR USE ON A SINGLE COMPUTER SYSTEM AND CAN BE COPIED (WITH INCLUSION OF DIGITAL'S COPYRIGHT NOTICE) ONLY FOR USE IN SUCH SYSTEM, EXCEPT AS MAY OTHERWISE BE PROVIDED IN WRITING BY DIGITAL.

DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL.

COPYRIGHT (©) 1975, 1980 BY DIGITAL EQUIPMENT CORPORATION

TABLE OF CONTENTS

| PARAGRAPH | SUBJECT             | PAGE |
|-----------|---------------------|------|
| 1.        | ABSTRACT            | 3    |
| 2.        | REQUIREMENTS        | 3    |
| 3.        | LOADING PROCEDURE   | 3    |
| 4.        | STARTING PROCEDURE  | 4    |
| 5.        | DATA PATTERNS       | 11   |
| 6.        | RANDOMIZATION       | 12   |
| 7.        | DYNAMIC PARAMETERS  | 13   |
| 8.        | CONSOLE SWITCH      | 14   |
| 9.        | ERROR PRINTOUTS     | 19   |
| 10.       | STATISTICS PRINTOUT | 27   |
| 11.       | AUTO SEQUENCE       | 28   |
| 12.       | TESTING PROCEDURES  | 30   |
| 13.       | LISTING             | 32   |

1. ABSTRACT

THIS PROGRAM IS DESIGNED TO BE USED BY AN EXPERIENCED ENGINEER /TECHNICIAN FOR EVALUATION AND DEBUGGING OF MAG TAPE DRIVES. THE PROGRAM IS CAPABLE OF EXERCISING THE TU45 MAGNETIC ON A MASSBUS THROUGH THE TM03 MAG TAPE CONTROLLER. ANY COMBINATION OF TM03'S & TU45'S UP TO A MAXIMUM OF EIGHT (8), MAY BE TESTED BY A SINGLE EXECUTION OF THE PROGRAM. THIS FLEXIBILITY IS POSSIBLE BECAUSE THE PROGRAM HAS NO FIXED PARAMETERS OR TESTING SEQUENCE. THE ENTIRE TEST PLAN, INCLUDING PARAMETERS AND OPERATING SEQUENCE, IS DETERMINED BY THE OPERATOR THROUGH RESPONSES TO TELETYPE REQUESTS AND SETTING OF CONSOLE SWITCHES.

THE PROGRAM PROVIDES FOR TESTING OF ALL TAPE DRIVE FUNCTIONS SUCH AS WRITING,READING,REWINDING,TAPE POSITIONING,EOT - BOT SENSING AND ASSUMES A GOOD RH AND TM03.

HOWEVER; THE RH AND TM03 ARE TESTED SOMEWHAT INTRINSICALLY DURING THE TEST CYCLE IN ORDER TO PROVIDE FULL INFORMATION ABOUT ANY ERROR CONDITIONS DETECTED.

DURING A TEST CYCLE, CHECKS ARE MADE FOR STATUS ERRORS,DATA ERRORS, POSITION ERRORS,WORD COUNT AND CURRENT MEMORY ADDRESS ERRORS WHEREVER APPLICABLE AS DETECTED BY THE RH OR TM03.

2. REQUIREMENTS (HARDWARE)

- A. ANY PDP-11 PROCESSER
- B. 8K OF CORE
- C. TELETYPE
- D. TM03 TAPE CONTROLLER
- E. 1 TO 8 MAG TAPE DRIVES
- F. MASSBUS CONTROLLER

3. LOADING PROCEDURE

USE STANDARD PROCEDURE FOR LOADING BINARY TAPES

4. STARTING PROCEDURE

THERE ARE FOUR (4) STARTING ADDRESSES THAT MAY BE USED;  
200(8), 204(8), 210(8), AND 240(8):

- A. 200(8): THIS ADDRESS MUST BE USED ON INITIAL START FROM LOAD AS ALL PARAMETERS ARE ENTERED FROM HERE. REQUESTS ARE PRINTED ON THE TELETYPE FOR ENTRY OF RH STARTING ADDRESS, VECTOR ADDRESS, DRIVE NUMBER(TM03 ADDRESS), SLAVE NUMBER, DENSITY, PARITY, FORMAT, RECORD COUNT, CHARACTER COUNT, PATTERN NUMBER, TAPE MARK AND STALL FOR READ, WRITE, AND TURNAROUND. ALL RESPONSES SHOULD BE MADE IN OCTAL AND WITHIN THE LIMITS OF THE PARAMETER. A QUESTION MARK (?) WILL BE TYPED IF ANY CHARACTER ENTERED IS NOT BETWEEN 0 THRU 7 (OCTAL). THE CHARACTER MAY BE RETYPED FOLLOWING THE QUESTION MARK. IF THE RESPONSE IS NOT WITHIN ITS LIMITS. A QUESTION MARK (?) IS TYPED AND THE ENTIRE RESPONSE MAY BE REENTERED. SOME RESPONSES REQUIRE MORE THAN ONE (1) CHARACTER, BUT NONE REQUIRES MORE THAN SIX (6). RESPONSES OF MORE THAN ONE CHARACTER NEED NOT HAVE LEADING ZEROS AND SHOULD BE TERMINATED BY A CARRIAGE RETURN IF LESS THAN THE MAXIMUM NUMBER OF CHARACTERS IS INPUT.
- B. 204(8): THIS ADDRESS SHOULD BE USED ANYTIME A RESTART OF THE PROGRAM IS NECESSARY AND THE PARAMETERS ENTERED AT THE INITIAL START OF 200(8) NEED NOT BE CHANGED. ALSO NOTE THAT ANY DATA PATTERN WHICH HAD BEEN GENERATED BY SETTING THE RANDOM DATA SWITCH (CONSOLE SWITCH EIGHT) WILL NOT BE OVERWRITTEN AND THEREFORE IS HELD IN CORE FOR USE UNTIL CONSOLE SWITCH EIGHT(8) IS AGAIN SET AND THAT ALL STATISTICS WILL BE RETAINED.
- C. 210(8): THIS ADDRESS IS THE SAME AS USING 204(8) IN THAT THE PREVIOUSLY SET PARAMETERS ARE USED; HOWEVER, THE DATA PATTERN IS RETURNED TO THE FIXED PATTERN ORIGINALLY CALLED FOR AT THE 200(8) START AND ALL STATISTICS ARE CLEARED TO ZERO.
- D. 240(8): THIS IS A SPECIAL ADDRESS WHICH WILL CAUSE THE PROGRAM TO EXECUTE A PREDETERMINED TEST PLAN ON ALL AVAILABLE DRIVES AND SLAVES. THE ONLY INPUT REQUIRED BY THE OPERATOR IS A RESPONSE TO REQUESTS FOR THE RH ADDRESS, VECTOR ADDRESS, CONTINUOUS OPERATION OF THE SEQUENCE, AND NRZ ONLY.
- E. 300(8): THIS ADDRESS IS TO BE USED AS A RESTART ONLY AND WILL PERFORM JUST AS IN 200(8) EXCEPT THAT THE PARAMETER INPUT LIST IS SHORTENED. THE SHORT PARAMETER LIST CONSISTS OF DRIVE NUMBER, SLAVE NUMBER, DENSITY, PARITY, FORMAT, RECORD COUNT, CHARACTER COUNT, PATTERN, TAPE MARK, AND

INTERCHANGE READ.  
\*\*NOTE SEE ALSO SECTION 8-CONSOLE SWITCH SETTINGS

THE FOLLOWING IS AN EXPLANATION OF THE INITIAL  
START (200 OCTAL) REQUESTS AND RESPONSES:

REGISTER START: THE RESPONSE REQUIRED FOR THIS REQUEST  
IS TO ENTER THE ADDRESS OF THE FIRST RH  
REGISTER (CS1) AS A SIX DIGIT UNIBUS ADDRESS.

VECTOR ADDRESS: THE RESPONSE FOR THIS REQUEST  
IS TO ENTER THE INTERRUPT VECTOR ADDRESS  
USED BY THE RH AS A THREE (3) DIGIT ADDRESS.

DRIVE NUMBER: THE DRIVE NUMBER (MASSBUS ADDRESS  
OF THE TM03) IS ENTERED AS ONE (1)  
OCTAL CHARACTER AND MUST BE WITHIN THE LIMITS  
OF 0 THROUGH 7.

SLAVE NUMBER: THE SLAVE NUMBER IS ENTERED AS ONE  
(1) OCTAL CHARACTER AND MUST BE  
WITHIN THE LIMITS OF 0 THROUGH 7.  
WHEN THE SLAVE NUMBER HAS BEEN  
ENTERED AND IS LEGAL, THE PROGRAM TESTS  
FOR THE PRESENCE OF A SLAVE OF THAT  
NUMBER. IF THE SLAVE IS AVAILABLE  
A PRINTOUT OF 7 CHANNEL, IF APPLICABLE,  
AND ITS SERIAL NUMBER (IN BCD)  
WILL BE MADE TO ASSIST THE OPERATOR  
IN SETTING OF DENSITY, PARITY, AND FORMAT.  
A CHECK IS MADE FOR THE PROPER SETTING  
OF THE DRIVE TYPE REGISTER; IF WRONG, A  
MESSAGE IS PRINTED FOR INFORMATION ONLY.  
IF THE SLAVE IS NOT AVAILABLE,  
A MESSAGE STATING SO WILL BE  
PRINTED AND A NEW SLAVE NUMBER  
REQUEST WILL BE ISSUED. WHEN A  
GOOD SLAVE NUMBER HAS BEEN ENTERED,  
REQUESTS FOR OPERATING DENSITY  
PARITY AND FORMAT ARE MADE FOR THAT  
SLAVE AND SHOULD BE RESPONDED TO  
ACCORDING TO THAT PARTICULAR SLAVE'S  
NEEDS. AS MANY AS EIGHT (8) SLAVE  
NUMBER REQUESTS MAY BE USED, HOW-  
EVER, AT LEAST ONE MUST BE USED.  
THE SLAVE NUMBERS AND THEIR RESPECTIVE  
DENSITY, PARITY AND FORMAT MAY BE ENTERED  
IN ANY ORDER. THE INFORMATION FOR  
EACH SLAVE ENTERED IS LOADED INTO A  
TABLE FOR REFERENCE IN TESTING.  
IF LESS THAN EIGHT(8) SLAVES ARE  
REQUIRED, THEN RESPONDING TO THE  
SLAVE NUMBER REQUEST WITH A CARRIAGE  
RETURN WILL TERMINATE THE SLAVE  
ENTRIES AND CONTINUE TO THE NEXT  
PARAMETER. IT SHOULD BE REMEMBERED

THAT AT LEAST ONE SLAVE NUMBER REQUEST  
MUST BE ENTERED. IF THE FIRST  
REQUEST IS RESPONDED TO BY A CARRIAGE  
RETURN, THEN THE REQUEST WILL BE REPEATED.

4.1 AUTOMATIC MODE OPERATION  
-----

IF THE PROGRAM IS LOADED AND RUN IN AUTOMATIC (CHAIN) MODE  
THE AUTO ACCEPT SEQUENCE TEST PLAN IS RUN. SEE SEC 11. BELOW;  
THE SOFTWARE SWR IS INVOKED WITH A SWITCH SETTING OF 100000 (HALT  
ON ERROR) IF LOADED VIA ACT11. NO OPERATOR INTERVENTION IS REQUIRED.

\*\*EXCEPTION: IF THIS PROGRAM IS LOADED VIA TMDP CHAIN MODE THE  
PROGRAM WILL TEST ALL SLAVES ON THE FIRST AVAILABLE  
DRIVE EXCEPT SLAVE 0.

- DENSITY: THE DENSITY REQUEST IS RESPONDED TO BY ONE (1) OCTAL CHARACTER AND MUST BE WITHIN THE LIMITS OF 0 THRU 4. AS EACH SLAVE NUMBER IS ENTERED, A REQUEST FOR THE OPERATING DENSITY FOR THAT SLAVE IS TYPED. THE RESPONSE MEANINGS ARE AS FOLLOWING:
- A. 3 = 800BPI, NRZI
  - B. 4 = 1600BPI, PE (9 CHANNEL ONLY)
- PARITY: THE PARITY REQUEST IS RESPONDED TO BY ONE (1) OCTAL CHARACTER AND MUST BE EITHER 0 OR 1.
- A. 1 = EVEN PARITY
  - B. 0 = ODD PARITY
- FORMAT: THE FORMAT REQUEST IS RESPONDED TO BY TWO (2) CHARACTERS AND SHOULD BE AS FOLLOWS
- A. 14 = 9 CHANNEL NORMAL (TWO FRAMES PER WORD)
  - B. 15 = CORE DUMP (FOUR FRAMES PER WORD)
  - C. 16 = PDP-15 OR IBM COMPATABLE (TWO FRAMES PER WORD)  
(DATA IS BYTE SWAPPED ON TAPE)
- RECORD COUNT: THIS REQUEST IS RESPONDED TO BY A SIX (6) CHARACTER OCTAL NUMBER FROM 1 TO 177777. REMEMBER LEADING ZEROS ARE NOT REQUIRED AND IF LESS THAN SIX CHARACTERS ARE ENTERED, A CARRIAGE RETURN WILL TERMINATE THE RESPONSE. THE RECORD COUNT IS USED IN CONJUNCTION WITH THE CHARACTER COUNT TO ESTABLISH A BLOCKING FACTOR FOR USE IN READ OR WRITE CYCLES.
- CHARACTER COUNT: THIS RESPONSE IS ENTERED AS FOUR (4) OCTAL CHARACTERS WITHIN THE LIMITS OF 20 THRU 4000. AGAIN LEADING ZEROS ARE NOT REQUIRED AND A CARRIAGE RETURN TERMINATES A LESS THAN FOUR (4) CHARACTER RESPONSE. THE CHARACTER COUNT IN CONJUNCTION WITH THE RECORD COUNT IS USED TO ESTABLISH THE BLOCK SIZE (CHARACTERS PER RECORD, AND RECORDS PER BLOCK) USED IN READ AND WRITE CYCLES. THE SAME BLOCKING IS USED ON ALL AVAILABLE UNITS.

PATTERN NUMBER: THIS RESPONSE IS A TWO (2) CHARACTER OCTAL NUMBER WITHIN THE LIMITS OF 0 THRU 15(8). THE NUMBER ENTERED WILL CAUSE A SPECIFIC DATA PATTERN TO BE USED FOR ALL READING AND WRITING. THIS DATA PATTERN IS NOT CHANGED UNLESS RANDOM DATA IS REQUESTED BY SETTING CONSOLE SWITCH EIGHT (8) TO A ONE. RESETTING OF THE RANDOM DATA SWITCH DOES NOT CAUSE REVERSION TO THE FIXED PATTERN, BUT WILL HOLD THE LAST GENERATED PATTERN UNTIL A RESTART IS DONE FROM LOCATION 200(8), 210(8), OR 300(8). WHEN OPERATING IN NRZ MODE (DENSITY 0-3) THE PROGRAM CONSTRUCTS AND SAVES BOTH AN EXPECTED CRC CHARACTER AND AN LRC CHARACTER FOR COMPARISONS WITH THE HARDWARE GENERATED CHECK CHARACTER IN BOTH READ AND WRITE. THE SELECTION OF DATA PATTERN ZERO (0) HAS A SPECIAL USE. PATTERN NUMBER ZERO (0) WILL CAUSE TO BE READ IN AT THE HIGH SPEED PAPER TAPE READER ANY DATA PATTERN DESIRED. THE EXTERNAL INPUT DATA THROUGH THE READER IS DONE BY PREPARING A PAPER TAPE WITH A PROGRAM CALLED DTC. (CZTUTAO) ANY CONFIGURATION OF BITS AND CHARACTERS MAY BE USED AND A LIMIT OF 377(8) CHARACTERS IS IMPOSED. WHEN EXTERNAL DATA IS INPUT, THE ENTIRE WRITE BUFFER IN CORE IS FILLED WITH THE PATTERN SO THAT ANY SIZE RECORD MAY BE USED. DATA PATTERN PATTERN ZERO (0) EXTERNAL PAPER TAPE NEED ONLY BE READ ONCE AT INITIAL START OF 200(8), AND NEED NOT BE READ AGAIN UNLESS OVERWRITTEN BY RANDOM DATA. BE SURE TO LOAD THE READER BEFORE PRESSING START.

TAPE MARK: THE TAPE MARK REQUEST IS USED TO DETERMINE IF THE OPERATOR WISHES TO HAVE EACH DATA BLOCK SEPERATED BY A TAPE MARK. IF RESPONDED TO BY A ONE (1) THE TAPE MARK WILL BE WRITTEN AND WHEN READING WILL BE EXPECTED AT THE END OF DATA BLOCK. A ZERO (0) RESPONSE WILL DISALLOW TAPE MARK. PLEASE NOTE THAT THE TAPE MARK RECORD INCREASES THE BLOCK SIZE BY ONE (1) RECORD; IN OTHER WORDS, A BLOCK OF 100 RECORDS WILL HAVE THE TAPE MARK AS RECORD 101.

INTERCHANGE READ: THIS REQUEST IS RESPONDED TO BY A SINGLE CHARACTER INPUT OF EITHER ONE (1) OR ZERO (0). A RESPONSE OF ONE (1) WILL CAUSE ALL READING TO BE DONE IN THE INTERCHANGE MODE. A ZERO RESPONSE WILL CAUSE READING IN NORMAL MODE.

SINGLE PASS: THIS REQUEST IS RESPONDED TO BY EITHER A ONE (1) OR A ZERO (0). RESPONSE OF 1, WILL CAUSE THE TEST TO BE STOPPED AFTER THE LAST AVAILABLE DRIVE REACHES END OF TAPE. A RESPONSE OF 0, WILL ALLOW CONTINUOUS RUNNING THROUGH MULTIPLE PASSES. TO RESTART AT END OF PASS, PRESS CONTINUE, OR RESTART AT THE CONSOLE.

STALLS: THE STALL REQUESTS ARE RESPONDED TO BY A SIX (6) CHARACTER OCTAL NUMBER WITHIN THE LIMITS OF 1 THRU 177777. LEADING ZEROS ARE NOT REQUIRED AND AN ENTRY OF LESS THAN SIX (6) CHARACTERS SHOULD BE TERMINATED BY A CARRIAGE RETURN. EACH INCREMENT OF THE VALUE ADDS ABOUT 2.6 MICSEC TO THE DELAY.

READ: THE TIME DELAY BETWEEN EACH RECORD READ

WRITE: THE TIME DELAY BETWEEN EACH RECORD WRITTEN

TURN AROUND: TIME DELAY BETWEEN CHANGES OF TAPE DIRECTION (FORWARD, TO REVERSE, ETC.) AND BETWEEN BLOCKS.

FIXED PARAMETERS: IT SHOULD BE NOTED THAT ALL PARAMTERS EXCEPT FOR THE SLAVE DESCRIPTION VALUES (SLAVE NUMBER, DENSITY, PARITY, AND FORMAT) HAVE NOMINAL VALUES ALREADY STORED IN THE PROGRAM. COUNT, CHARACTER COUNT, TAPE MARK AND STALLS) IS TYPED. ITS PRESENT STORED VALUE IS ALSO PRINTED. IF THESE VALUES NEED NOT BE CHANGED, SIMPLY TYPE A CARRIAGE RETURN AS RESPONSE AND NO CHANGE WILL BE MADE. EACH START OF THE PROGRAM AT 200(8) WILL SHOW THE CURRENT VALUES OF THESE PARAMETERS AS PER THE LAST ENTRY. WHEN A FRESH LOAD OF THE PAPER TAPE IS DONE, THE PARAMETERS WILL REFLECT THE FIXED VALUES STORED IN THE PROGRAM.

A. RECORD COUNT = 200  
B. CHARACTER COUNT = 4000  
C. PATTERN NUMBER = 1  
D. TM=1  
E. INTERCHANGE READ = 0  
F. SINGLE PASS = 0  
G. CRC CORRECTION = 0  
H. READ STALL = 10  
I. WRITE STALL = 10  
J. TURN AROUND STALL = 10

SAMPLE START AT 200(8):

THE FOLLOWING IS A SAMPLE OF THE  
PRINTED REQUESTS AND THEIR RESPONSES.  
RESPONSES ARE ENCLOSED IN PARENS FOR  
CLARITY ONLY AND (CR) MEANS CARRIAGE RETURN

LOAD ADDRESS 200(8), SET CONSOLE SWITCHES, PRESS START SWITCH:

TU45 TAPE DRIVE TEST

REGISTER START=172440(172440)  
VECTOR ADDRESS=224(CR)  
DRIVE NUMBER (4)  
SLAVE NUMBER=(5) SN: 5009  
DENSITY=(3)  
PARITY=(0)  
FORMAT=(14)  
SLAVE NUMBER=(2) 9 CHAN SN: 0022  
DENSITY=(3)  
PARITY=(1)  
FORMAT=(15)  
SLAVE NUMBER=(CR)  
RECORD COUNT=100 (500)(CR)  
CHARACTER COUNT=200 (38)?(7)(CR)  
PATTERN NUMBER=1 (22)  
?  
(6)(CR)  
TM=(0)  
INTERCHANGE READ=(1)  
SINGLE PASS=(0)  
  
ENTER STALLS  
READ=1 (CR)  
WRITE=1 (CR)  
TURN AROUND=1 (3000)(CR)

THE PROGRAM WILL NOW PERFORM THE TEST CYCLE SET IN  
THE CONSOLE SWITCHES ON SLAVE FIVE (5) THEN TWO (2),  
ONE BLOCK ON EACH UNIT PER CYCLE, USING DATA PATTERN  
NUMBER SIX (6) WITH A BLOCKING FACTOR OF 37 CHARACTERS  
PER RECORD AND 500 RECORDS PER BLOCK. THE DELAYS ARE SET  
FOR MINIMUM ON READ AND WRITE, AND APPROXIMATELY .75  
SECONDS ON TURN AROUND.

NO TAPE MARKS WILL BE WRITTEN AND ALL READING  
WILL BE DONE IN INTERCHANGE MODE (MAINT MODE 0001).

5. DATA PATTERNS  
-----

THERE ARE FIFTEEN DATA PATTERN GENERATORS STORED IN CORE AND ANY ONE OF THESE MAY BE SELECTED. THE ONE UNIQUE CASE IS PATTERN ZERO(0); SELECTION OF PATTERN ZERO(0) REQUIRES THAT A PREVIOUSLY PREPARED PAPER TAPE BE ENTERED AT THE HIGH SPEED READER. THIS TAPE CONTAINS A DATA PATTERN OF NO MORE THAN 377 OCTAL CHARACTERS. THE FIRST CHARACTER READ IN IS THE NUMBER OF ACTUAL DATA CHARACTERS THAT ARE CONTAINED ON THE TAPE. EACH DATA CHARACTER MAY BE ANY COMBINATION OF BITS AND WILL BE LOADED INTO CORE AS THEY APPEAR ON THE TAPE. NO MATTER HOW MANY CHARACTERS ARE ON TAPE, THE ENTIRE WRITE BUFFER (4000 CHARACTERS) WILL BE FILLED WITH THE PATTERN ENTERED SO THAT ANY SIZE RECORD CAN BE USED. (SEE DTC CZTUTAO)  
THE PROGRAM GENERATES A CYLIC REDUNDENCY CHECK CHARACTER (CRC) AND A LONGITUDINAL REDUNDENCY CHECK CHARACTER (LRC) FOR COMPARISONS AGAINST THE CRC AND LRC GENERATED BY THE HARDWARE IN NRZI READS OR WRITES.

THE FOLLOWING IS A LIST OF THE DATA PATTERNS AVAILABLE:

DATA0: EXTERNAL INPUT THRU HIGH SPEED READER (SEE DTC)  
DATA1: ALL ONE BITS IN ALL CHARACTERS  
DATA2: ALL ZERO BITS IN ALL CHARACTERS  
DATA3: A ONE BIT WALKING FROM RIGHT TO LEFT IN A FIELD OF ZEROS  
DATA4: A ZERO BIT WALKING FROM RIGHT TO LEFT IN A FIELD OF ONES.  
DATA5: ALTERNATING ONE AND ZERO BITS IN EACH CHARACTER  
DATA6: ALTERNATING ZERO AND ONE BITS IN EACH CHARACTER  
DATA7: SAME AS DATA5 BUT WITH EVERY OTHER CHARACTER COMPLEMENTED  
DATA10: WALKING ONE/ALL ONE IN ALTERNATING CHARACTERS  
DATA11: INCREMENTING CHARACTERS (000-377)  
DATA12: DECREMENTING CHARACTERS (377-000)  
DATA13: ALTERNATING CHARACTERS OF ALL ZERO AND ALL ONE BITS  
DATA14: WALKING ZERO/ALL ZERO IN ALTERNATING CHARACTERS  
DATA15: AUTO SEQUENCE PATTERN 0,0,-1,-1,-1,0,0

6. RANDOMIZATION

THERE ARE THREE (3) VALUES THAT MAY BE GENERATED RANDOMLY; DATA, CHARACTER COUNT, AND RECORD COUNT. THESE ARE NORMALLY SET TO SOME FIXED VALUE BUT MAY BE RANDOMIZED BY SETTING THE APPROPRIATE CONSOLE SWITCHES.

- A. RANDOM DATA: (CONSOLE SWITCH 8)  
GENERATES AN ENTIRE BUFFER, CHARACTER BY CHARACTER, OF RANDOM DATA WHEN SWITCH 8 IS SET TO A ONE. ONCE SET, THE RESETTING OF SWITCH 8 CAUSES THE LAST GENERATED PATTERN TO BE RETAINED IN CORE. A RESTART AT LOCATION 200(8) OR 210(8) WILL CAUSE REVERSION OF THE DATA TO THE FIXED PATTERN REQUESTED INITIALLY. A RESTART AT LOCATION 204(8) WILL HOLD THE LAST GENERATED PATTERN IN CORE UNTIL SWITCH 8 IS AGAIN SET.  
ALTHOUGH THE DATA IS GENERATED AS RANDOM, THE PROGRESSION OF RANDOM CHARACTERS IS ALWAYS THE SAME FROM THE OUTSET OF RANDOMIZATION. THEREFORE IT IS POSSIBLE TO GENERATE ONE TAPE REEL OF RANDOM DATA ON ONE UNIT, RESTART THE PROGRAM TO RE-ESTABLISH THE OUTSET POINT, AND READ THE RANDOM TAPE REEL ON ANOTHER UNIT FOR COMPATABILITY TESTING. IN MULTIDRIVE SYSTEMS THE SAME BLOCK OF DATA, WHETHER RANDOM OR FIXED, IS WRITTEN OR READ ON EACH AVAILABLE UNIT IN THE ORDER THAT THEY WERE ENTERED, BEFORE BEING CHANGED.
- B. RANDOM CHARACTER COUNT: (CONSOLE SWITCH 7)  
GENERATES A DIFFERENT NUMBER OF CHARACTERS PER RECORD TO BE WRITTEN ON EACH BLOCK CYCLE. THE SAME NUMBER OF CHARACTERS PER RECORD IS WRITTEN OR READ ON EACH AVAILABLE UNIT BEFORE BEING CHANGED. RESETTING SWITCH 7 HOLDS THE LAST VALUE GENERATED.
- C. RANDOM RECORD COUNT: (CONSOLE SWITCH 6)  
GENERATES A DIFFERENT NUMBER OF RECORDS FOR EACH BLOCK OF DATA WRITTEN OR READ ON EACH BLOCK CYCLE. THE SAME NUMBER OF RECORDS IS WRITTEN OR READ ON EACH AVAILABLE UNIT BEFORE BEING CHANGED. RESETTING SWITCH 6 HOLDS LAST VALUE GENERATED.

7. DYNAMIC PARAMETERS:

THE THREE (3) STALL VALUES ARE CONSIDERED TO BE DYNAMIC PARAMETERS AS THEY MAY BE CHANGED WHILE THE PROGRAM IS RUNNING BY TYPING A CONTROL B CHARACTER AT THE TELETYPE. AS SOON AS THE BUS IS RELEASED BY THE MAG TAPE OPERATION IN PROGRESS, THE PROGRAM WILL RESPOND TO THE CONTROL C INPUT BY TYPING A REQUEST FOR NEW STALL PARAMETERS. THE LAST VALUES THAT WERE ENTERED WILL BE PRINTED AS THE STORED VALUES AND MAY BE CHANGED BY ENTERING NEW VALUES OR LEFT UNCHANGED BY TYPING A CARRIAGE RETURN. THE YOZZLE STALL IS ALSO DYNAMIC AND CAN BE CHANGED BY TYPING A CONTROL B WHILE DOING A YOZZLE. A YOZZLE STALL REQUEST WILL BE PRINTED AND SHOULD BE RESPONDED TO WITH THE DESIRED VALUE.

8. CONSOLE SWITCH SETTINGS

CONTROL:

- 1) CONTROL G <^G>:  
SELECTS SOFTWARE SWR AND ALLOWS USER TO SELECT NEW SWITCHES.  
THE MACHINE WILL THEN TYPE: SWR=XXXXXXNEW=  
WHERE: XXXXXX IS THE OCTAL CONTENTS OF THE SOFTWARE SWR.  
AFTER THE 'NEW=' HAS BEEN TYPED THEN THE OPERATOR CAN DO ONE  
OF THE FOLLOWING AT THE TTY:  
A) TYPE A NUMBER TO BE LOADED INTO THE SOFTWARE SWR  
B) IF A <CR> IS THE FIRST KEY DEPRESSED THE SOFTWARE SWR  
CONTENTS WILL NOT BE CHANGED.
- 2) CONTROL A <^A>:  
ALTERNATES USAGE OF THE SWR BETWEEN THE HARDWARE SWR & SOFTWARE SWR.
- 3) CONTROL B <^B>:  
SEE SECTION 7 DYNAMIC PARAMETERS
- 4) CONTROL U <^U>:  
DELETES ALL CHARACTERS TYPED IN RESPONSE TO A REQUEST.

THE CONSOLE SWITCHES ARE USED TO SET UP THE TEST CYCLE  
DESIRED, TO GENERATE RANDOM VALUES, AND TO CONTROL ERROR  
RESPONSES. THE SWITCHES SHOULD BE SET IN THE DESIRED  
MANNER BEFORE PRESSING THE START SWITCH BECAUSE THEY  
ARE ALL DYNAMIC AND WILL RUN THE PROGRAM IN ANY  
CONFIGURATION. ALL SWITCHES SET TO ZERO(0) IS NORMAL.

- SW15: 1=STOP ON ERROR  
0=CONTINUE ON ERROR
- SW14: 1=PRINT READ/WRITE STATISTICS  
0=DO NOT PRINT STATS
- SW13: 1=DO NOT CHECK DATA ERRORS  
0=CHECK DATA ERRORS
- SW12: 1=DO NOT CHECK WRITE STATUS ERRORS (NOR CLEAR THEM IF THEY DO OCCUR)  
0=CHECK WRITE STATUS ERRORS
- SW11: 1=DO NOT CHECK READ STATUS ERRORS (NOR CLEAR THEM IF THEY DO OCCUR)  
0=CHECK READ STATUS ERRORS
- SW10: 1=DO NOT PRINT ANY ERRORS (EXCEPT CATASTROPHIC ERRORS)  
0=PRINT ALL ERRORS
- SW9: 1=REWIND ALL AVAILABLE TAPES  
0=DO NOT REWIND
- SW8: 1=GENERATE RANDOM DATA  
0=USED FIXED DATA

SW7: 1-GENERATE RANDOM CHARACTER COUNT  
0=USE FIXED CHARACTER COUNT

SW6: 1=GENERATE RANDOM RECORD COUNT  
0=USED FIXED RECORD COUNT

SW5: 1=YOZZLE ON CURRENT RECORD  
0=DO NOT YOZZLE ON RECORD

SW4: 1=DO WRITE/READ RETRIES  
0=DO NOT RETRY

SW3: 1=DO NOT READ FORWARD  
0=READ FORWARD

SW2: 1=DO NOT READ REVERSE  
0=READ REVERSE

SW1: 1=READ FORWARD FIRST  
0=READ REVERSE FIRST

SW0: 1=DO NOT WRITE  
0=WRITE

SWITCH EXPLANATION AND EXAMPLES:

SW0-3: THESE SWITCHES ARE USED TO CONTROL THE SEQUENCE OF MAG TAPE OPERATIONS PERFORMED ON EACH AVAILABLE UNIT. THE BLOCK OF DATA DESCRIBED THROUGH THE RESPONSES TO TELETYPE REQUESTS AT INITIAL START WILL BE EITHER WRITTEN OR READ FROM EACH AVAILABLE UNIT IN THE ORDER THAT THEY WERE ENTERED. THE SEQUENCE OF OPERATIONS IS CALLED A CYCLE, AND WILL BE PERFORMED CONTINUOUSLY UNTIL STOPPED BY THE OPERATOR. WHEN END OF TAPE IS REACHED, THE UNIT WILL BE REWOUND AND FLAGGED AS UNAVAILABLE FOR TEST UNTIL ALL UNITS HAVE REACH EOT, AT WHICH TIME TESTING IS RESUMED ON ALL AVAILABLE UNITS.

EXAMPLES: 0-3

- A. SW0=0, SW1=0, SW2=1, SW3=1  
WRITE ONLY X RECORDS OF Y CHARACTERS
- B. SW0=0, SW1=0, SW2=1, SW3=0  
WRITE THEN BACKSPACE AND READ FORWARD X RECORDS
- C. SW0=0, SW1=0, SW2=0, SW3=1  
WRITE THEN READ REVERSE X RECORDS.
- D. SW0=0, SW1=0, SW2=0, SW3=0  
WRITE THEN READ REVERSE AND READ FORWARD X RECORDS
- E. SW0=0, SW1=1, SW2=0, SW3=0  
WRITE THEN BACKSPACE AND READ FORWARD THEN REVERSE
- F. SW0=1, SW1=0, SW2=1, SW3=0  
READ TAPE FORWARD X RECORDS
- G. SW0=1, SW1=0, SW2=0, SW3=1  
READ TAPE REVERSE X RECORDS
- H. SW0=1, SW1=0, SW2=0, SW3=0  
READ TAPE REVERSE THEN FORWARD
- I. SW0=1, SW1=1, SW2=0, SW3=0  
READ TAPE FORWARD THEN REVERSE

- SW4: SWITCH FOUR (4), WHEN SET TO A ONE (1), WILL CAUSE ANY DATA RELATED ERROR TO BE RETRIED. THE WRITE RETRY SCHEME CONSISTS OF REWRITING THE RECORD IN THE SAME SPOT ON TAPE FOUR (4) TIMES. IF ALL FOUR (4) REPEATS ARE SUCCESSFUL, THE RECORD IS CONSIDERED AS RECOVERED, AND A TAPE WRITE ERROR IS LOGGED. IF ANY OF THE FOUR (4) REPEATS IS UNSUCCESSFUL, A SKIP ERASE IS DONE, A SUSPECTED BAD TAPE SPOT IS LOGGED AT THIS BLOCK AND RECORD NUMBER, AND A SECOND RETRY OF FOUR REPEATS IS DONE. IF AFTER FOUR (4) RETRIES, THE RECORD CANNOT BE RECOVERED A NOTIFICATION IS PRINTED, AND TESTING IS RESUMED ON THE NEXT RECORD. IF 20(8) BAD TAPE SPOTS ARE FOUND, THE SLAVE WILL BE REWOUND AND REMOVED FROM TESTING WITH AN APPROPRIATE MESSAGE PRINTED. THE READ RETRY SCHEME CONSISTS OF REREADING THE RECORD UP TO EIGHT TIMES. IF ALL EIGHT REREADS ARE BAD, IT IS A HARD ERROR. IF ANY REREAD IS SUCCESSFUL, THIS IS A SOFT ERROR. IF THE ORIGINAL ERROR IS OF THE NON-RETRYABLE TYPE (IE: ILF,RMR,ILR,NEF,CBUSPE), THE RETRY SCHEME IS NOT ENTERED AND A MESSAGE IS PRINTED.
- SW5: SWITCH FIVE (5) WHEN SET DURING A READ FORWARD OR REVERSE WILL CAUSE THE TAPE TO CONTINUOUSLY READ THE CURRENT RECORD BY SPACING EITHER FORWARD OR REVERSE AND REREADING THAT RECORD. THIS TAPE MOVEMENT IS CALLED YOZZLING. THERE IS A SOFTWARE DELAY EXECUTED BETWEEN EACH SPACE/READ OF THE RECORD AND IT MAY BE VARIED BY TYPING CONTROL C ON THE TELETYPE DURING THE EXECUTION OF THE YOZZLE AND RESPONDING TO THE PRINTED REQUEST WITH A SIX (6) DIGIT VALUE. THE YOZZLE STALL IS PRESET TO A VALUE OF 3000 IN THE PROGRAM TO PREVENT EXCESSIVE TAPE WEAR, BUT MAY BE SET TO ANY VALUE THROUGH THE TELETYPE.
- SW6-8: THESE THREE (3) SWITCHES CONTROL THE RANDOMIZATION OF DATA AND BLOCK SIZE AND MAY BE SET AND RESET AT ANY TIME. THE ACTUAL CHANGE WILL TAKE PLACE BETWEEN BLOCK CYCLES.
- SW9: SWITCH NINE (9) WHEN SET WILL CAUSE ALL AVAILABLE TAPE UNITS TO BE REWOUND AT THE END OF THE CURRENT BLOCK CYCLE. TESTING WILL BE RESUMED AT A BLOCK COUNT OF ONE (1) WHEN ALL UNITS HAVE REACHED BOT.

SW10-13: THESE SWITCHES ARE USED TO CONTROL THE  
ERROR HANDLING TO BE DONE ON THE TAPE  
OPERATION DESCRIBED BY SWITCHES 0-3.

- A. SWITCH TEN (10) WHEN SET TO A ONE  
WILL DISALLOW ANY ERROR PRINTOUTS MADE  
ON THE OPERATION IN PROGRESS. CATASTROPHIC  
FAILURES AND INFORMATION PRINTOUTS WILL  
STILL OCCUR. IE: UNIT NOT AVAILABLE, ILLEGAL  
BOT, DROP OR PICK OVERFLOW, AND EOT REWIND.
- B. SWITCH ELEVEN (11) WHEN SET TO A ONE  
WILL DISALLOW THE CHECKING FOR STATUS  
ERRORS ON READ (FORWARD OR REVERSE) OPERATIONS.
- C. SWITCH TWELVE (12) WHEN SET TO A ONE  
WILL DISALLOW THE CHECKING FOR STATUS  
ERRORS ON WRITE OPERATIONS.
- D. SWITCH THIRTEEN (13) WHEN SET TO A ONE  
WILL DISALLOW THE CHECKING OF READ  
DATA. THIS SWITCH HAS NO EFFECT ON  
STATUS CHECKING.

\*\*NOTE THAT WHEN SW11 OR 12 ARE SET, NOT ONLY ARE ERRORS NOT CHECKED, BUT THEY ARE NOT CLEARED EITHER.  
\*\*\*THEREFOR USE CAUTION TO ASSURE THAT OPERATIONS ARE NOT UNEXECUTED DUE TO UNCLEARED ERRORS.  
\*\*\*\*DO NOT SET SW 11 OR 12 TO A ONE (1), DURING A RETRY SEQUENCE.

SW14: SWITCH FOURTEEN (14) WHEN SET TO A ONE (1) WILL  
PRINT THE ACCUMULATED READ/WRITE STATISTICS FOR THE SELECTED  
SLAVE UNDER TEST AT THE END OF THE CURRENT BLOCK  
CYCLE. THE STATISTICS PRINTED ARE THE NUMBER OF BITS  
DROPPED OR PICKED, THE NUMBER OF RETRIES, WRITE ERRORS,  
READ ERRORS, AND DATA ERRORS.

SW15: SWITCH FIFTEEN (15) WHEN SET TO A ONE,  
WILL CAUSE THE PROGRAM TO HALT ON ANY  
ERROR DETECTED BY THE OPERATION IN PROGRESS.  
IF BOTH SWITCH TEN (10) AND FIFTEEN (15)  
ARE SET, THE ACTUAL ERROR DETECTED WILL  
NOT BE PRINTED BUT WILL CAUSE A HALT.  
IF SWITCH TEN (10) IS RESET BEFORE PRESSING  
CONTINUE, THE ERROR WHICH CAUSED THE HALT  
WILL BE PRINTED BEFORE TESTING IS RESUMED.

9. ERROR PRINTOUTS

THERE ARE THREE TYPES OF ERROR PRINTOUTS MADE BY THE PROGRAM; OPERATION ERRORS, DATA ERRORS, AND CONDITION ERRORS. EACH ERROR MESSAGE PRINTED IS PRECEDED BY A TWO LINE HEADER WHICH CONTAINS THE DRIVE NUMBER, SLAVE NUMBER, DENSITY, PARITY, AND FORMAT ON THE FIRST LINE, AND THE BLOCK NUMBER, RECORD NUMBER, RECORD SIZE, AND ERROR TYPE ON THE SECOND.

A. OPERATION ERRORS:

THESE ARE ERRORS WHICH CAN OCCUR AS A DIRECT RESULT OF A TAPE OPERATION.

1. READ/WRITE STATUS ERRORS: THESE ARE DETECTED BY EITHER THE TM03 ITSELF OR BY THE MASSBUS CONTROLLER. ALL STATUS ERRORS WILL BE REPORTED.
2. TAPE POSITION ERRORS: THESE ARE INDICATED BY AN INCORRECT SPACE OR REWIND OPERATION IN WHICH TAPE POSITION BECOMES UNRELIABLE.

B. DATA ERRORS:

DATA ERRORS WILL OCCUR WHEN TAPE IS BEING READ AND THE DATA FROM TAPE DOES NOT MATCH THE EXPECTED DATA. WHEN READING IN THE REVERSE DIRECTION, THE RECORD NUMBERS WILL BE COUNTED DOWN FROM LAST TO FIRST. THE CHARACTER NUMBERS IN REVERSE READS WILL ALSO BE COUNTED DOWN IN ORDER TO REFLECT TAPE POSITION RATHER THAN THE ORDER TRANSFERRED.

BECAUSE DATA RECORDS CAN BE UP TO FOUR THOUSAND CHARACTERS LONG, AN ERROR CONDITION WHICH WILL CAUSE THE ENTIRE RECORD TO READ INCORRECTLY COULD CAUSE A VERY LENGTHY PRINTOUT. THEREFORE, A COUNTER OF SUCCESSIVE BAD CHARACTERS IS EMPLOYED. IF TEN (10) CHARACTERS IN SUCCESSION ARE BAD, A NOTIFICATION IS PRINTED (BAD RECORD) AND THE NEXT TWENTY FIVE (25) CHARACTERS ARE SKIPPED BEFORE CHECKING IS RESUMED. IF THE BAD RECORD CONDITION OCCURS THREE (3) TIMES IN ONE RECORD, THE REST OF THE RECORD IS SKIPPED, DOWN TO THE LAST TEN (10) CHARACTERS WHICH WILL BE CHECKED. THE SKIPPING AND RESUMPTION OF CHECKING WILL ONLY BE DONE ON RECORDS WHICH ARE LONG ENOUGH TO ALLOW IT.

C. CONDITION ERRORS: (CATASTROPHIC)

THESE PRINTOUTS REFLECT THE STATE OF THE TAPE SYSTEM  
EITHER BEFORE OR AFTER AN OPERATION

1. EOT: WHEN EOT (END OF TAPE) IS ENCOUNTERED DURING  
EITHER A READ OR WRITE, THE CYCLE IS COMPLETED  
ON THE SHORTENED BLOCK AFTER WHICH THE SLAVE  
WILL BE REWOUND AND FLAGGED AS UNAVAILABLE  
FOR TESTING UNTIL ALL SLAVES HAVE REACHED EOT AND  
ARE REWOUND. WHEN THE LAST AVAILABLE SLAVE  
HAS REACHED EOT AND BEEN REWOUND TO BOT,  
TESTING WILL BE RESUMED ON ALL SLAVES.
2. ILLEGAL BOT: WHEN A SLAVE ENCOUNTERS BOT DURING  
A READ, WRITE, OR SPACE OPERATION, AN ERROR  
IS PRINTED AND THE PROGRAM HALTED. THIS IS  
A CATASTROPHIC ERROR. TESTING MAY BE RESUMED  
BY PRESSING CONTINUE; BUT A RESTART IS  
SUGGESTED.
3. NO INTERRUPT RETURNED: EACH TAPE OPERATION SHOULD BE  
TERMINATED BY THE SETTING OF AN INTERRUPT IN  
THE CPU. IF NO INTERRUPT IS RETURNED WITHIN  
THE APPROPRIATE TIME, AN ERROR IS PRINTED.
4. NO MEDIUM ON-LINE: BEFORE AN OPERATION IS ATTEMPTED,  
THE TM03 IS CHECKED FOR MOL. IF IT IS NOT  
SET, AN ERROR IS PRINTED, AND THE PROGRAM STOPPED.  
TESTING MAY BE RESUMED BY PRESSING CONTINUE.
5. NO BOT ON REWIND: AS EACH SLAVE IS REWOUND A CHECK  
IS MADE TO ASSURE THAT PROPER POSITION AT BOT  
IS ESTABLISHED. IF BOT IS NOT SET UPON COMPLETION OF  
A REWIND, AN ERROR IS PRINTED AND THE PROGRAM  
WILL HALT. PRESS CONTINUE TO RESUME TESTING.
6. POSITION ERROR: IF POSITION IS LOST DURING A RETRY,  
A MESSAGE IS PRINTED, THE TAPE REWOUND,  
AND REMOVED FROM TESTING UNTIL ALL ARE  
RESTARTED AT BLOCK ONE.
7. BAD TAPE OVERFLOW: IF 20(8) BAD TAPE SPOTS ARE FOUND,  
A MESSAGE IS PRINTED, THE TAPE REWOUND,  
AND REMOVED FROM TESTING UNTIL ALL ARE  
RESTARTED AT BLOCK ONE.
8. HARD READ ERROR: IF ANY HARD READ ERROR IS ENCOUNTERED  
DURING A RETRY, A MESSAGE IS PRINTED  
REGARDLESS OF THE SETTING OF SW10.
9. NON-RETRYABLE: IF ANY NON-RETRYABLE ERROR IS ENCOUNTERED, A  
MESSAGE IS PRINTED REGARDLESS OF THE SETTING OF SW10.

D. EXAMPLES:

GLOSSARY:

BN = CURRENT BLOCK NUMBER  
RN = CURRENT RECORD NUMBER  
RS = RECORD SIZE, IN FRAMES  
WE = WRITE STATUS ERROR  
RE = READ STATUS ERROR  
SE = SPACE ERROR  
TM = TAPE MARK  
F = FORWARD  
R = REVERSE  
CS1 = RH/TU45 CONTROL REGISTER  
WC = RH WORD COUNT  
BA = RH BUS ADDRESS  
FC = TU45 FRAME COUNT  
CS2 = RH CONTROLLER STATUS  
DS = TU45 DRIVE STATUS  
ER = TU45 ERROR REGISTER  
AS = ATTENTION SUMMARY  
CK = TU45 CHECK CHARACTER  
DB = RH DATA BUFFER  
MR = TU45 MAINTENANCE REGISTER  
DT = TU45 DRIVE TYPE  
SN = TU45 SERIAL NUMBER  
TC = TU45 TEST CONTROL  
\*F = DATA FORMAT  
\*P = PARITY  
\*D = DENSITY  
\*PATRN = DATA PATTERN NUMBER (R = RANDOM)

EXAMPLE 1: IN THIS EXAMPLE SLAVE 1 ON TM03 0 WAS OPERATING AT 1600 BPI IN ODD PARITY USING THE NINE CHANNEL NORMAL DATA FORMAT. A WRITE STATUS ERROR WAS DETECTED. THE BAD STATUS INDICATES THAT AN UNCORRECTABLE DATA ERROR (BIT 6 OF ER) AND A PE FORMAT ERROR (BIT 7 OF ER) OCCURED DURING THE WRITE OPERATION OF THE SIXTH (6) RECORD OF THE FIFTY (50) RECORDS IN BLOCK (2). THE SIZE OF THE RECORD WAS TWO HUNDRED (200) FRAMES. THE CHECK CHARACTER REFLECTS THE BAD TRACK.

DRIVE NO. 0 \*SLAVE NO. 1 \*D 4 \*P 0 \*F 14 \*PATRN 1  
\*BN 2 \*RN 6-50 \*RS = 200 \*WE  
CS1 144260  
CS2 100  
DS 150640  
ER 300  
WC 0  
CK 4

EXAMPLE 2: IN THIS EXAMPLE SLAVE 3 ON TM03 1 WAS OPERATING AT 800 BPI IN EVEN PARITY USING THE NINE CHANNEL NORMAL DATA FORMAT. A READ STATUS ERROR WAS DETECTED DURING THE REVERSE READ OF THE TENTH (10) RECORD OF THE 25 RECORDS IN THIS BLOCK (12). THE SIZE OF THE RECORD IS TWENTY (20) FRAMES. THE PRINTOUT INDICATES THE DETECTION OF A VERTICAL PARITY ERROR (VPE: BIT 6 OF ER) AND A CYCLIC REDUNDENCY ERROR (CRC: BIT 15 OF ER). THE CRC CHARACTER, AS RECEIVED, IS NOT AS EXPECTED AND IS PRINTED SHOWING BOTH THE ACTUAL (FIRST) AND THE EXPECTED (LAST).

DRIVE NO. 2 \*SLAVE NO. 3 \*D 3 \*P 1 \*F 14 \*PATRN 3  
\*BN 12 \*RN 10-25 \*RS 20 \*RE R  
CS1 144276  
CS2 100  
DS 150600  
ER 100100  
WC 0  
CRC 767-777

EXAMPLE 3: IN THIS EXAMPLE, THE HEADER IS THE SAME AS IN EXAMPLE TWO (2) EXCEPT THAT THE ERROR TYPE REFLECTS A READ ERROR IN THE FORWARD DIRECTION. IT IS NORMAL FOR THE SYSTEM TO DETECT AN ERROR IN THE FORWARD AND REVERSE DIRECTION AT THE SAME RECORD. REMEMBER THAT IN REVERSE OPERATIONS THE RECORD NUMBER IS COUNTED DOWN SO THAT RECORD NUMBER TEN (10) WILL SHOWN IN THE PROPER POSITION IN BOTH FORWARD AND REVERSE.

DRIVE NO. 2 \*SLAVE NO. 3 \*D 3 \*P 1 \*F 14 \*PATRN 2  
\*BN 12 \*RN 10-25 \*RS 20 \*RE F  
CS1 144270  
CS2 100  
DS 150600  
ER 100100  
WC 0  
CRC 767-777

EXAMPLE 4: IN EXAMPLES 2 AND 3 THE READ OPERATION RESULTED IN BAD STATUS, HOWEVER THE DATA ASSOCIATED WITH THE OPERATION WAS NOT BAD (OR WAS NOT CHECKED: SW 13=1). THIS EXAMPLE (4) SHOWS A PRINTOUT REFLECTING A READ STATUS ERROR ACCOMPANIED BY BAD DATA IN CHARACTERS FOUR (4) AND SIX (6).

DRIVE NO. 2 \*SLAVE NO. 3 \*D 3 \*P 1 \*F 14 \*PATRN 2  
\*BN 12 \*RN 10-25 \*RS 20 \*RE F  
CS1 144270  
CS2 100  
DS 150600  
ER 100100  
WC 0  
CRC 767-777  
CN 4  
G 11111111  
B 10111111  
CN 6  
G 11111111  
B 10111111

EXAMPLE 5: THIS EXAMPLE SHOWS A READ DATA ERROR  
WHICH OCCURRED, WITHOUT AN ACCOMPANING  
STATUS ERROR, WHICH RESULTED IN A BAD RECORD.

DRIVE NO. 3 \*SLAVE NO. 1 \*D 4 \*P 0 \*F 14 \*PATRN R  
\*BN 100 \*RN 66-200 \*RS 2000 \*DE F  
CN 0  
G 11111111  
B 00000000  
CN 1  
G 11111111  
B 00000000  
CN 2  
G 11111111  
B 00000000  
CN 3  
G 11111111  
B 00000000  
CN 4  
G 11111111  
B 00000000  
CN 5  
G 11111111  
B 00000000  
CN 6  
G 11111111  
B 00000000  
CN 7  
G 11111111  
B 00000000  
BAD RECORD

EXAMPLE 6: THE FOLLOWING EXAMPLE SHOWS THE  
RESULT OF A SPACE OPERATION THAT  
SHOULD HAVE SPACED REVERSE OVER  
AN ENTIRE 100 RECORD BLOCK BUT  
WHICH TERMINATED AT THE END OF 40  
RECORDS. LEAVING A POSITION ERROR OF 40

DRIVE NO. 2 \*SLAVE NO. 6 \*D 2 \*P 0 \*F 14  
\*BN 3 \*RN 100-100 \*RS 1000 \*SE R  
ERR AMT 40

EXAMPLE 7: THIS EXAMPLE REFLECTS AN ERROR DETECTED WHILE WRITING A TAPE MARK (TM) AT THE END OF THE CURRENT DATA BLOCK PER OPTION RESPONSE TM=1. NOTE THAT THE TM RECORD NUMBER IS ONE GREATER THAN THE TOTAL NUMBER OF DATA RECORDS IN THE CURRENT BLOCK.

DRIVE NO. 1 \*SLAVE NO. 1 \*D 2 \*P 0 \*F 14  
\*BN 67 \*RN 101-100 \*RS 36 \*WE TM  
CS1 144226  
CS2 300  
DS 150604  
ER 1000  
WC 0

EXAMPLE 8: THIS EXAMPLE SHOWS TWO (2) PRINTOUTS REFLECTING A WRITE RETRY WHICH WAS NOT SUCCESSFUL THE FIRST TIME, BUT WHICH DID RECOVER ON THE SECOND. THE UNSUCCESSFUL RETRY IS LOGGED AS A SUSPECTED BAD TAPE SPOT BY ITS BLOCK AND RECORD NUMBER.

DRIVE NO. 0 \*SLAVE NO. 2 \*D 4 \*P 0 \*F 14 \*PATRN 6  
\*BN 2 \*RN 12-20 \*RS 667 \*WE  
CS1 144260  
CS2 100  
DS 150640  
ER 100  
WC 0  
\*\*\*ORIGINAL ERROR\*\*\*

DRIVE NO. 0 SLAVE NO. 2 \*D 4 \*P 0 \*F 14 \*PATRN 6  
\*BN 2 \*RN 12-20 \*RS 667 \*WE  
CS1 144260  
CS2 100  
DS 150640  
ER 100  
WC 0  
SUSPECT BAD TAPE  
RETRY: 0  
REPT: 0  
RECOVERED  
RETRY: 1

EXAMPLE 9: IF , DURING A WRITE RETRY THE BACKSPACE OR THE ERASE OPERATION RESULT IN AN ERROR, THE ERROR WILL BE PRINTED AND THE PROGRAM HALTED. THIS EXAMPLE SHOWS THE ERROR PRINT FOR A SPACE AND AN ERASE (2 EXAMPLES)

DRIVE NO. 1 \*SLAVE NO. 1 \*D 3 \*P 0 \*F 14  
BN 12 \*RN 8-64 \*RS 500 \*SE RTRY  
ERR AMT 1

DRIVE NO. 1 \*SLAVE NO. 1 \*D 3 \*P 0 \*F 14  
\*BN 12 \*RN 8-64 \*RS 500 \*ERASE  
CS1 144224  
CS2 100  
DS 150600  
ER 400  
WC 0

EXAMPLE 10: THIS EXAMPLE SHOWS THE PRINTOUT FROM A REWIND OPERATION WHICH DOES NOT HAVE BOT SET AT THE END.

DRIVE NO. 2 \*SLAVE NO. 3 \*D 3 \*P 0 \*F 14  
\*BN 66 \*RN 15-20 \*RS 1000  
NOT BOT ON REWIND: HALT

EXAMPLE 11: THIS EXAMPLE SHOWS THE PRINTOUT MADE WHEN THERE IS NO INTERRUPT RETURNED AT THE END OF AN OPERATION.

DRIVE NO. 7 \*SLAVE NO. 7 \*D 2 \*P 1 \*F 14  
\*BN 1 \*RN 25-26 \*RS 1200  
NO INTERRUPT

10. STATISTICS PRINTOUT

THE PROGRAM, THROUGH ITS ERROR CHECKING, IS ABLE TO GATHER CERTAIN STATISTICS ABOUT THE PERFORMANCE OF EACH UNIT UNDER TEST. THIS INFORMATION IS PRINTED OUT WHENEVER A UNIT IS REWOUND FROM END OF TAPE, OR BECAUSE IT IS TO BE REMOVED FROM TESTING DUE TO SOME CATASTROPHIC ERROR. (POSITION LOST, BAD TAPE OVERFLOW) THE STATISTICS MAY BE PRINTED AT ANY TIME BY SETTING SWITCH 14 TO A ONE (1). THIS PRESENTS A PICTURE OF PERFORMANCE UP TO THIS TIME. THE STATISTICS WILL BE CLEARED UPON REWIND OF THE UNIT; BUT NOT BY SETTING SW 14.

STATISTICS PRINT EXAMPLE (A HEADER WILL PRECEED THE STATS)

DROPS: 0 3 0 0 0 6 45 0  
PICKS: 1 0 0 0 0 0 0 2  
RETRY: 1  
WTERR: 2  
REFWD: 3  
SOFT: 2  
HARD: 1  
DEFWD: 0  
REREV: 4  
SOFT: 1  
HARD: 3  
DEREV: 0  
2 BAD TAPE SPOTS  
0 \*BN 1 \*RN 2  
1 \*BN 15 \*RN 100

\*\* NOTE \*\* DROPS AND PICKS REFLECT CORE BIT POSITIONS.  
THE FOLLOWING IS A TABLE OF CORE BITS TO TRACK NUMBER.

|           |   |   |   |   |   |   |   |   |
|-----------|---|---|---|---|---|---|---|---|
| TRACK NO. | 7 | 6 | 5 | 3 | 9 | 1 | 8 | 2 |
| CORE BIT  | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

DROPS: NUMBER OF DATA BITS DROPPED: PER CORE BIT(SEE NOTE ABOVE)  
PICKS: NUMBER OF DATA BITS PICKED UP: PER CORE BIT(SEE NOTE ABOVE)  
RETRY: NUMBER OF WRITE RETRIES  
WTERR: NUMBER OF WRITE ERRORS NOT ASSOCIATED WITH BAD TAPE  
REFWD: NUMBER OF READ FORWARD STATUS ERRORS  
REREV: NUMBER OF READ REVERSE STATUS ERRORS  
SOFT: NUMBER OF RECOVERED READ ERRORS  
HARD: NUMBER OF UNRECOVERED READ ERRORS  
DEFWD: NUMBER OF FORWARD DATA ERRORS WITH NO ASSOCIATED STATUS ERROR  
DEREV: NUMBER OF REVERSE DATA ERRORS WITH NO ASSOCIATED STATUS ERROR

11. AUTO SEQUENCE

THE AUTO SEQUENCE (START AT ADDRESS 240) WILL EXECUTE A PREDETERMINED TEST PLAN ON ALL AVAILABLE SLAVES ON EACH AVAILABLE TMO3. THE ONLY OPERATOR RESPONSE IS TO THE TYPED REQUESTS FOR THE RH ADDRESS, VECTOR, CONTINUOUS OR SINGLE CYCLE, AND NRZ ONLY. ALL SWITCHES REMAIN ACTIVE AND MAY BE USED NORMALLY; HOWEVER THE IDEA IS TO LEAVE ALL SWITCHES DOWN AND ALLOW FULL EXECUTION OF THE TEST PLAN FOR SYSTEM CHECKOUT.

SAMPLE START AT 240(8): AUTO SEQUENCE.

LOAD ADDRESS 240(8), SET SWITCHES TO ZERO, PRESS START:

TU45 AUTO SEQUENCE TEST  
ENTER CONDITIONS IN OCTAL

REGISTER START = 172400(172440)  
VECTOR ADDRESS = 224(CR)  
NRZ ONLY: (0)  
AUTO CONT: (1)

THIS EXAMPLE SHOWS AN AUTO SEQUENCE START WITH THE RH AT BUS ADDRESS 172440 AND A VECTOR OF 224. ALL AVAILABLE HARDWARE WILL BE TESTED CONTINUOUSLY IN BOTH NRZ AND PE MODE.

AS EACH TMO3 AND ITS SLAVES ARE FOUND, A DIVIDER LINE OF ASTERICKS WILL BE PRINTED FOLLOWED BY A PRINTOUT OF THE TMO3 AND ITS SLAVES BEING TESTED. AS EACH TMO3 AND ITS SLAVES ARE FINISHED, ANOTHER DIVIDER IS PRINTED BEFORE TESTING IS RESUMED ON THE NEXT AVAILABLE DRIVE.

WHEN ALL AVAILABLE HARDWARE HAS BEEN TESTED, A PRINTOUT OF END OF SEQUENCE WILL BE DONE AND THE PROGRAM WILL EITHER HALT (AUTO CONT = 0) OR RESTART WITH THE FIRST AVAILABLE UNIT (AUTO CONT = 1).

AUTO SEQUENCE TEST PLAN:

THE AUTO SEQUENCE WILL EXECUTE BOTH AN NRZ AND A PE CYCLE. EACH CYCLE WILL BE STARTED FROM BOT AND CONSIST OF VARIOUS DATA PATTERNS INTENDED TO BE WORST CASE FOR THAT PARTICULAR MODE.

1. NRZ CYCLE:

SIX (6) BLOCKS OF ONE HUNDRED (100) RECORDS OF FOUR THOUSAND (4000) CHARACTERS FOR EACH OF THE FOUR DATA PATTERNS.

PATTERN 1: ALL ONES DATA IN ALL BYTES  
PATTERN 10: WALKING ONE/ALL ONE  
PATTERN 14: WALKING ZERO/ALL ZERO  
RANDOM DATA: RANDOM

2. PE CYCLE: (IF NRZ ONLY = 0)

SIX BLOCKS OF ONE HUNDRED (100) RECORDS OF FOUR THOUSAND (4000) CHARACTERS EACH FOR EACH OF THREE DATA PATTERNS, THEN RANDOM DATA BLOCKS TO END OF TAPE.

PATTERN 10: WALKING ONE/ALL ONE  
PATTERN 14: WALKING ZERO/ALL ZERO  
PATTERN 15: THREE (3) 0 CHARACTERS, TWO (2) ALL CHARACTERS, THREE 0 CHARACTERS, THEN COMPLIMENT PATTERN. REPEATED FOR A FULL BUFFER  
RANDOM DATA: RANDOM

IN CHAIN MODE THIS SEQUENCE TEST PLAN WILL BE EXECUTED ONE TIME AND CONTROL WILL RETURN TO THE MONITOR. SPECIFY NUMBER OF PASSES DESIRED IN CHAIN COMMAND STRING.

12. TESTING PROCEDURES

AS PREVIOUSLY STATED THIS PROGRAM CONTAINS NO FIXED TESTS. THE ENTIRE TEST CYCLE TO BE EXECUTED IS DESCRIBED BY THE OPERATOR THROUGH RESPONSES TO TELETYPE REQUESTS FOR PARAMETERS AND CONSOLE SWITCH SETTINGS FOR OPERATION. THE OPERATION SELECTED WILL BE EXECUTED WITH THE PARAMETERS ENTERED CONTINUOUSLY ON EACH AVAILABLE UNIT, ONE BLOCK AT A TIME, UNTIL STOPPED BY THE OPERATOR. THE OPERATION MAY BE CHANGED DYNAMICALLY BY CHANGING THE CONSOLE SWITCHES AT ANY TIME. THE PROGRAM WILL ATTEMPT TO PERFORM ANY OPERATION SET AND THEREFORE CAUTION SHOULD BE TAKEN TO ASSURE THAT THE UNIT IS CAPABLE OF PERFORMING AS REQUESTED. FOR INSTANCE, ONE SHOULD NOT ATTEMPT TO PERFORM READ OPERATIONS ON A TAPE WHICH HAS NOT BEEN WRITTEN AS THE DATA, IF ANY, IS UNPREDICTABLE. HOWEVER, IF A TAPE HAS BEEN WRITTEN WITH THIS PROGRAM, IT CAN BE READ AS OFTEN AS DESIRED WITHOUT BEING REWRITTEN. THIS IS A GOOD PROCEDURE TO USE FOR TESTING TAPE COMPATIBILITY. SCOPING OF TAPE UNITS BECOMES SIMPLE; BY SETTING THE DESIRED OPERATION AND ITS PARAMETER, A UNIT MAY BE CONTINUOUSLY EXERCISED IN ANY MANNER DESIRED. BY USING THE VARIOUS ERROR CONTROL SWITCHES AND ENTERING THE NEEDED STALL, ANY FUNCTION CAN BE SCOPED RATHER EASILY. RELIABILITY TESTING CAN BE PERFORMED BY USE OF THE RANDOMIZATION CAPABILITY. PERHAPS A CYCLE OF RANDOM TESTING MIGHT BE SET UP AND ALLOWED TO RUN FOR SOME PERIOD OF TIME, THE STATISTICAL COLLECTION OF DROPS AND PICKS IS THEN SIGNIFICANT. INTERMITTANT PROBLEMS CAN BE FOUND BY SETTING THE DESIRED OPERATION IN MOTION AND DISALLOWING ERROR PRINTOUTS WHILE ALLOWING A HALT ON ERROR. THE ERROR THAT CAUSED THE HALT CAN BE PRINTED BY RESETTING CONSOLE SWITCH TEN AND PRESSING CONTINUE. IF SOME PARTICULAR DATA PATTERN SHOULD BE CAUSING DATA ERROR, USE OF THE YOZZLE SWITCH AND ITS ASSOCIATED STALL WILL TO ALLOW SCOPING OF THIS PARTICULAR RECORD.

AS YOU SEE, THERE ARE MYRIAD TESTING PROCEDURES WHICH COULD BE PERFORMED. THE PARAMETERS, TAPE OPERATIONS, ERROR EXAMINATION AND REPORTING ARE ALL AT YOUR DISCRETION.

TRY IT, YOU'LL LIKE IT.

2632  
2633  
2634  
2635  
2636  
2637  
2638  
2639

x

```
.LIST BIN,LOC,SEQ  
.TITLE TM03/TU45 DATA RELIABILITY PROGRAM  
:++B CZTURBO  
:21 FEB 1977  
:R. BARNES  
:REVISED (++) J.G.ADAMS MAY 1977  
:++B  
:++B
```

```
1)INCORRECT RECORD COUNT  
STORED WHEN EOT REACHED ON WRITE  
2)ADJUST STACK PTR ON BAD TAPE OVFLW
```

2640  
2641  
2642  
2643  
2644  
2645  
2646  
2647  
2648  
2649  
2650  
2651  
2652  
2653  
2654  
2655  
2656  
2657  
2658  
2659  
2660  
2661  
2662  
2663  
2664  
2665  
2666  
2667  
2668  
2669  
2670  
2671  
2672  
2673  
2674  
2675  
2676  
2677  
2678  
2679  
2680

```
.MCALL .SACT11, .SEOP, $SAVE, $RESTORE, $CHAIN  
.NLIST MC  
.LIST ME  
.ENABLE ABS,AMA  
  
:CONSOLE SWITCHES*****  
  
:SW15: 1=STOP ON ERROR  
:      0=CONTINUE ON ERROR  
:SW14: 1=PRINT READ/WRITE STATS  
:      0=DO NOT PRINT STATS  
:SW13: 1=DO NOT CHECK DATA  
:      0=CHECK DATA  
:SW12: 1=DO NOT CHECK WRITE ERRORS  
:      0=CHECK WRITE ERRORS  
:SW11: 1=DO NOT CHECK READ ERRORS  
:      0=CHECK READ ERRORS  
:SW10: 1=DO NOT PRINT ERRORS  
:      0=PRINT ERRORS  
:SW9:  1=REWIND TAPE  
:      0=DO NOT REWIND  
:SW8:  1=USE RANDOM DATA  
:      0=USE FIXED DATA PATTERN  
:SW7:  1=USE RANDOM CHARACTER COUNT  
:      0=USE FIXED CHAR COUNT  
:SW6:  1=USE RANDOM RECORD COUNT  
:      0=USE FIXED RECORD COUNT  
:SW5:  1-YOZZLE ON CURRENT RECORD  
:      0=DO NOT YOZZLE  
:SW4:  1=DO BOTH READ AND WRITE RETRIES  
:      0=INHIBIT RETRIES  
:SW3:  1=DO NOT READ FORWARD  
:      0=READ FORWARD  
:SW2:  1=DO NOT READ REVERSE  
:      0=READ REVERSE  
:SW1:  1=READ FORWARD FIRST  
:      0=READ REVERSE FIRST  
:SW0:  1=DO NOT WRITE  
:      0=WRITE  
  
:IF SWR <15::00> = 177777 OR NOT AVAILABLE USE SOFTWARE SWITCH REGISTER
```



```

2729                                     ;REGISTER EQUIVS*****
2730
2731         000000                       R0=%0
2732         000001                       R1=%1
2733         000002                       R2=%2
2734         000003                       R3=%3
2735         000004                       R4=%4
2736         000005                       R5=%5
2737         000006                       SP=%6
2738         000007                       PC=%7
2739         000240                       NGP=240
2740
2741                                     ;TRAP CATCHERS*****
2742
2750         .=20
2751 000020 023754                       .WORD TTOUT           ;SET IOT TRAP TO TTOUT ROUTINE
2752 000022 000340                       .WORD 340             ;PRIORITY LEVEL 7
2753
2754         000004                       TYPE=IOT             ;EQUATE TYPE TO AN IOT INSTRUCTION
2755         000034                       .=34
2756 000034 024126                       .WORD OCTP           ;SET TRAP TRAP TO OCTP ROUTINE
2757 000036 000340                       .WORD 340
2758         104400                       TYPOCT=TRAP         ;EQUATE TYPOCT TO TRAP INSTRUCTION
2759
(1)
(1)
(1)
(1) 000046 005022                       ;ACT11 HOOK *****
(1) 000052 000000                       $SVPC=.             ;SAVE CURRENT LOCATION CTR
(1)         000040                       .=46
(1)         000046 005022                       .WORD $ENDAD        ;SET LOCATION 46
(1)         000052 000000                       .=52
(1)         000052 000000                       .WORD 0              ;SET LOCATION 52 = 0
(1)         000040                       .=$SVPC             ;RESTORE LOCATION CTR
2760
2761         000060                       ;TTY INTERRUPT VECTOR*****
2762 000060 021556                       .=60
2763 000062 000340                       .WORD TTINT         ;TTY INTERRUPT HANDLER ADDRESS
2764                                     .WORD 340           ;PRIORITY LEVEL 7
2765
2766         000176                       ;SOFTWARE SWITCH REGISTER*****
2767         000176 000176                       ;INVOKED IF SWR <15::00> = 177777 OR NOT AVAILAB'LE
2768 000176 000000                       .=176
SWREG: .WORD 0
2769
2770         000200                       ;START ADDRESS*****
2771 000200 000137 003026                       .=200
2772         000200 000137 003026                       JMP START           ;ENTER PARAMETERS VIA TTY
2773
2774         000204                       .=204
2775 000204 000137 003152                       JMP STARTC          ;USE FIXED PARAMETERS; HOLD DATA
2776
2777         000210                       .=210
2778 000210 005037 015064                       CLR RDFL
2779 000214 000137 003160                       JMP STARTA          ;USE FIXED PARAMETERS; NEW DATA
2780
2781                                     ;MAG TAPE INTERRUPT VECTOR*****
2782
2783         000224                       .-224

```

```
2784 000224 022006          MTINT          ;MAG TAPE INTERRUPT HANDLER ADDRESS
2785 000226 000340          340
2786
2787          ;AUTO SEQUENCE START*****
2788
2789          . =240
2790 000240 005237 000736    INC      ASEQF          ;SET AUTO SEQUENCE FLAG
2791 000244 000137 003136    JMP      STAUT         ;GO TO START OF AUTO SEQUENCE
```

```

2793                                     ;SHORT CONVERSATION RESTART*****
2794
2795         000300      000300          . =300
2796 000300      005237      014076      INC      SCVFL          ;SET SHORT CONVERSATION FLAG
2797 000304      000137      003026      JMP      START          ;ENTER SHORT PARAMETER LIST
2798
2799         000510          . =510
2800                                     ;TU45 REGISTER EQUIVS*****
2801
2802 000510      172440      C1:      172440
2803 000512      172442      WC:      172442
2804 000514      172444      BA:      172444
2805 000516      172446      FC:      172446
2806 000520      172450      CS:      172450
2807 000522      172452      DS:      172452
2808 000524      172454      ER:      172454
2809 000526      172456      AS:      172456
2810 000530      172460      CC:      172460
2811 000532      172462      DB:      172462
2812 000534      172464      MR:      172464
2813 000536      172466      DT:      172466
2814 000540      172470      SN:      172470
2815 000542      172472      TC:      172472
2816
2817                                     ;CONSTANTS*****
2818
2819 000544      172440      REGS:      172440          ;STARTING REGISTER ADDRESS (CS1)
2820 000546      000224      VECT:      224          ;VECTOR ADDRESS (RH INTERRUPT)
2821 000550      000000      DVN:      0          ;DRIVE NUMBER
2822 000552      000000      UDES:      0          ;UNIT DESCRIPTION (PARITY,DENSITY,UNIT,FORMAT)
2823 000554      000200      RCNT:      200          ;RECORD COUNTER
2824 000556      174000      FMCNT:      174000          ;NUMBER OF CHAR (4 - 4000) OCTAL IN TWOS COMPLEMENT
2825 000560      000001      PATRN:      1          ;DATA PATTERN SELECTOR (0 - 15) OCTAL
2826 000562      000002      RDCMD:      2          ;READ COMMAND
2827 000564      000001      TMEX:      1          ;TAPE MARK FLAG: 1=TM 0=NO TM
2828 000566      000000      CRCC:      0          ;CRC CORRECTION FLAG (YES=1,NO=0)
2829 000570      000000      INTRF:      0          ;INTERCHANGE READ 1=YES 0=NO
2830 000572      000000      SPFLG:      0          ;SINGLE PASS 1=YES 0=NO
2831 000574      000010      RSTAL:      10          ;READ STALL
2832 000576      000010      WSTAL:      10          ;WRITE STALL
2833 000600      000010      TSTAL:      10          ;TURN AROUND STAL
2834 000602      002000      YSTAL:      2000          ;YOZZLE STAL
2835 000604      000010      RETRY:      10          ;READ RETRY NUMBER
2836 000606      177776      PSW:      177776          ;PROCESSOR STATUS
2837 000610      177570      SWR:      177570          ;CONSOLE SWITCHES
2838 000612      177560      TKS:      177560          ;TTY READ STATUS REGISTER
2839 000614      177562      TKB:      177562          ;TTY READ BUFFER
2840 000616      177564      TPS:      177564          ;TTY PUNCH STATUS REGISTER
2841 000620      177566      TPB:      177566          ;TTY PUNCH OUTPUT REGISTER
2842 000622      177550      PRS:      177550          ;H/S READER STATUS REGISTER
2843 000624      177552      PRB:      177552          ;H/S READER BUFFER
2844 000626      153624      RANBAS:      153624          ;RANDOM NUMBER GENERATOR BASE
2845 000630      032561      RANSAV:      032561          ;RANDOM NUMBER BUFFER
2846 000632      000200      RCSAV:      200          ;RECORD COUNT SAVE
2847 000634      174000      FCSAV:      174000          ;FRAME COUNT SAVE

```

|      |        |        |                          |                                |
|------|--------|--------|--------------------------|--------------------------------|
| 2849 |        |        |                          |                                |
| 2850 |        |        | :FLAGS AND COUNTERS***** |                                |
| 2851 |        |        |                          |                                |
| 2852 | 000636 | 000000 | TINF: 0                  | :TTY ENTRY FLAG                |
| 2853 | 000640 |        | STFLG:                   |                                |
| 2854 | 000640 | 000000 | TOB: 0                   | :TTY OUTPUT BUFFER             |
| 2855 | 000642 | 000000 | TIB: 0                   | :TTY INPUT BUFFER              |
| 2856 | 000644 | 000000 | TEMP1: 0                 | :TEMP STORAGE                  |
| 2857 | 000646 | 000000 | TEMP2: 0                 | :TEMP STORAGE                  |
| 2858 | 000650 | 000000 | TEMP3: 0                 | :TEMP STORAGE                  |
| 2859 | 000652 | 000000 | NRZOF: 0                 | :NRZ ONLY FLAG                 |
| 2860 | 000654 | 000000 | EMADDR: 0                | :ERROR MSG ADDRESS STORAGE     |
| 2861 | 000656 | 000000 | BLCNTR: 0                | :BLOCK COUNTER                 |
| 2862 | 000660 | 000000 | BBC: 0                   | :BAD RECORD COUNTER            |
| 2863 | 000662 | 000000 | EOTREC: 0                | :EOT FLAG                      |
| 2864 | 000664 | 000000 | RTRN: 0                  | :INTERRUPT RETURN STORAGE      |
| 2865 | 000666 | 000000 | HDRFL: 0                 | :HEADER FLAG                   |
| 2866 | 000670 | 000000 | STAL: 0                  | :DELAY STORAGE                 |
| 2867 | 000672 | 000000 | PFLG: 0                  | :PRINT FLAG                    |
| 2868 | 000674 | 000000 | MTC1: 0                  | :MAG TAPE CONT REGISTER BUFFER |
| 2869 | 000676 | 000000 | UNP: 0                   | :UNIT TABLE POINTER            |
| 2870 | 000700 | 000000 | TMFLG: 0                 | :TAPE MARK FLAG                |
| 2871 | 000702 | 000000 | RPCNT: 0                 | :REPEAT COUNTER                |
| 2872 | 000704 | 000000 | RTCNT: 0                 | :RETRY COUNTER                 |
| 2873 | 000706 | 000000 | DERFL: 0                 | :DATA ERROR FLAG               |
| 2874 | 000710 | 000000 | SERFL: 0                 | :STATUS ERROR FLAG             |
| 2875 | 000712 | 000000 | BCNT: 0                  | :BIT COUNTER                   |
| 2876 | 000714 | 000000 | RTYFL: 0                 | :RETRY FLAG                    |
| 2877 | 000716 | 000000 | UPS: 0                   | :UNIT POINTER SAVE             |
| 2878 | 000720 | 000000 | BDPP: 0                  | :BITS DROPPED POINTER          |
| 2879 | 000722 | 000000 | BPKP: 0                  | :BITS PICKED POINTER           |
| 2880 | 000724 | 000000 | ERSAV: 0                 | :ERROR SAVE LOC                |
| 2881 | 000726 | 000000 | BTFLG: 0                 | :BAD TAPE FLAG                 |
| 2882 | 000730 | 000000 | BTSTF: 0                 | :STATISTIC PRINT FLAG          |
| 2883 | 000732 | 000000 | BTPT: 0                  | :BAD TAPE POINTER              |
| 2884 | 000734 | 000000 | ERTFL: 0                 | :ERASE FLAG                    |
| 2885 | 000736 |        | ENDFLG:                  |                                |
| 2886 | 000736 | 000000 | ASEQF: 0                 | :AUTO SEQ FLAG                 |
| 2887 | 000740 | 000000 | ADRVN: 0                 | :UTO SEQ DRIVE NUMBER          |
| 2888 | 000742 | 000000 | ABLNT: 0                 | :AUTO BLOCK COUNTER            |
| 2889 | 000744 | 000000 | ASEQCF: 0                | :AUTO SEQ CONTINUOUS FLAG      |

2891  
2892  
2893  
2894 000746 000000  
2895 000750 000000  
2896 000752 000000  
2897 000754 000000  
2898 000756 000000  
2899 000760 000000  
2900 000762 000000  
2901 000764 000000  
2902 000766 177777  
2903  
2904  
2905  
2906 000770 001210  
2907 000772 001230  
2908 000774 001250  
2909 000776 001270  
2910 001000 001310  
2911 001002 001330  
2912 001004 001350  
2913 001006 001370  
2914 001010 001410  
2915 001012 001430  
2916 001014 001450  
2917 001016 001470  
2918 001020 001510  
2919 001022 001530  
2920 001024 001550  
2921 001026 001570  
2922  
2923  
2924  
2925 001030 001610  
2926 001032 001714  
2927 001034 002020  
2928 001036 002124  
2929 001040 002230  
2930 001042 002334  
2931 001044 002440  
2932 001046 002544  
2933  
2934  
2935  
2936  
2937 001050  
2938 001050 000000  
2939 001052 000000  
2940 001054 000000  
2941 001056 000000  
2942 001060 000000  
2943 001062 000000  
2944 001064 000000  
2945 001066 000000  
2946

:UNIT ORDER AND DESCRIPTION TABLE \*\*\*\*\*

UN1: 0 ;THIS TABLE IS LOADED  
UN2: 0 ;WITH UNIT NUMBERS AND  
UN3: 0 ;THEIR DESCRIPTIONS IN  
UN4: 0 ;THE ORDER THAT THEY  
UN5: 0 ;WILL BE TESTED  
UN6: 0  
UN7: 0  
UN8: 0  
UNX: -1

:UNIT DROPS AND PICKS POINTERS\*\*\*\*\*

PIK1: BP00  
PIK2: BP10  
PIK3: BP20  
PIK4: BP30  
PIK5: BP40  
PIK6: BP50  
PIK7: BP60  
PIK8: BP70  
DRP1: BD00  
DRP2: BD10  
DRP3: BD20  
DRP4: BD30  
DRP5: BD40  
DRP6: BD50  
DRP7: BD60  
DRP8: BD70

:UNIT BAD TAPE POINTERS\*\*\*\*\*

BTADDR: BT00  
BT01  
BT02  
BT03  
BT04  
BT05  
BT06  
BT07

:UNIT WRITE RETRY COUNTER\*\*\*\*\*

:SET START OF STATISTICS TABLE

STTBL:  
RTY1: 0  
RTY2: 0  
RTY3: 0  
RTY4: 0  
RTY5: 0  
RTY6: 0  
RTY7: 0  
RTY8: 0

|      |        |        |         |   |  |
|------|--------|--------|---------|---|--|
| 2947 |        |        |         |   |  |
| 2948 |        |        |         |   |  |
| 2949 | 001070 | 000000 | WTER1:  | 0 |  |
| 2950 | 001072 | 000000 | WTER2:  | 0 |  |
| 2951 | 001074 | 000000 | WTER3:  | 0 |  |
| 2952 | 001076 | 000000 | WTER4:  | 0 |  |
| 2953 | 001100 | 000000 | WTER5:  | 0 |  |
| 2954 | 001102 | 000000 | WTER6:  | 0 |  |
| 2955 | 001104 | 000000 | WTER7:  | 0 |  |
| 2956 | 001106 | 000000 | WTER8:  | 0 |  |
| 2957 |        |        |         |   |  |
| 2958 |        |        |         |   |  |
| 2959 |        |        |         |   |  |
| 2960 | 001110 | 000000 | RDER1:  | 0 |  |
| 2961 | 001112 | 000000 | RDER2:  | 0 |  |
| 2962 | 001114 | 000000 | RDER3:  | 0 |  |
| 2963 | 001116 | 000000 | RDER4:  | 0 |  |
| 2964 | 001120 | 000000 | RDER5:  | 0 |  |
| 2965 | 001122 | 000000 | RDER6:  | 0 |  |
| 2966 | 001124 | 000000 | RDER7:  | 0 |  |
| 2967 | 001126 | 000000 | RDER8:  | 0 |  |
| 2968 |        |        |         |   |  |
| 2969 |        |        |         |   |  |
| 2970 |        |        |         |   |  |
| 2971 | 001130 | 000000 | DATER1: | 0 |  |
| 2972 | 001132 | 000000 |         | 0 |  |
| 2973 | 001134 | 000000 |         | 0 |  |
| 2974 | 001136 | 000000 |         | 0 |  |
| 2975 | 001140 | 000000 |         | 0 |  |
| 2976 | 001142 | 000000 |         | 0 |  |
| 2977 | 001144 | 000000 |         | 0 |  |
| 2978 | 001146 | 000000 |         | 0 |  |
| 2979 |        |        |         |   |  |
| 2980 |        |        |         |   |  |
| 2981 |        |        |         |   |  |
| 2982 | 001150 | 000000 | RDERR1: | 0 |  |
| 2983 | 001152 | 000000 |         | 0 |  |
| 2984 | 001154 | 000000 |         | 0 |  |
| 2985 | 001156 | 000000 |         | 0 |  |
| 2986 | 001160 | 000000 |         | 0 |  |
| 2987 | 001162 | 000000 |         | 0 |  |
| 2988 | 001164 | 000000 |         | 0 |  |
| 2989 | 001166 | 000000 |         | 0 |  |
| 2990 |        |        |         |   |  |
| 2991 |        |        |         |   |  |
| 2992 |        |        |         |   |  |
| 2993 | 001170 | 000000 | DEREV1: | 0 |  |
| 2994 | 001172 | 000000 |         | 0 |  |
| 2995 | 001174 | 000000 |         | 0 |  |
| 2996 | 001176 | 000000 |         | 0 |  |
| 2997 | 001200 | 000000 |         | 0 |  |
| 2998 | 001202 | 000000 |         | 0 |  |
| 2999 | 001204 | 000000 |         | 0 |  |
| 3000 | 001206 | 000000 |         | 0 |  |

```
3002 ;DROPS + PICKS PER CHANNEL PER UNIT*****
3003
3004 001210 000000 BP00: 0
3005 001230 001230 .=.+16
3006 001230 000000 BP10: 0
3007 001250 001250 .=.+16
3008 001250 000000 BP20: 0
3009 001270 001270 .=.+16
3010 001270 000000 BP30: 0
3011 001310 001310 .=.+16
3012 001310 000000 BP40: 0
3013 001330 001330 .=.+16
3014 001330 000000 BP50: 0
3015 001350 001350 .=.+16
3016 001350 000000 BP60: 0
3017 001370 001370 .=.+16
3018 001370 000000 BP70: 0
3019 001410 001410 .=.+16
3020 001410 000000 BD00: 0
3021 001430 001430 .=.+16
3022 001430 000000 BD10: 0
3023 001450 001450 .=.+16
3024 001450 000000 BD20: 0
3025 001470 001470 .=.+16
3026 001470 000000 BD30: 0
3027 001510 001510 .=.+16
3028 001510 000000 BD40: 0
3029 001530 001530 .=.+16
3030 001530 000000 BD50: 0
3031 001550 001550 .=.+16
3032 001550 000000 BD60: 0
3033 001570 001570 .=.+16
3034 001570 000000 BD70: 0
3035 001610 001610 .=.+16
3036
3037
```

|      |        |        |         |   |
|------|--------|--------|---------|---|
| 3039 |        |        |         |   |
| 3040 |        |        |         | :UNIT BAD TAPE COUNTER:16 PER SLAVE*****    |
| 3041 |        |        |         |   |
| 3042 | 001610 | 000000 | BT00:   | 0   |
| 3043 |        | 001714 |         | .=.+102                                     |
| 3044 | 001714 | 000000 | BT01:   | 0   |
| 3045 |        | 002020 |         | .=.+102                                     |
| 3046 | 002020 | 000000 | BT02:   | 0   |
| 3047 |        | 002124 |         | .=.+102                                     |
| 3048 | 002124 | 000000 | BT03:   | 0   |
| 3049 |        | 002230 |         | .=.+102                                     |
| 3050 | 002230 | 000000 | BT04:   | 0   |
| 3051 |        | 002334 |         | .=.+102                                     |
| 3052 | 002334 | 000000 | BT05:   | 0   |
| 3053 |        | 002440 |         | .=.+102                                     |
| 3054 | 002440 | 000000 | BT06:   | 0   |
| 3055 |        | 002544 |         | .=.+102                                     |
| 3056 | 002544 | 000000 | BT07:   | 0   |
| 3057 |        | 002650 |         | .=.+102                                     |
| 3058 |        |        |         |   |
| 3059 |        |        |         | :UNIT END OF TAPE COUNTERS 1 PER SLAVE***** |
| 3060 |        |        |         |   |
| 3061 | 002650 | 000000 | EOTCO:  | 0   |
| 3062 | 002652 | 000000 |         | 0   |
| 3063 | 002654 | 000000 |         | 0   |
| 3064 | 002656 | 000000 |         | 0   |
| 3065 | 002660 | 000000 |         | 0   |
| 3066 | 002662 | 000000 |         | 0   |
| 3067 | 002664 | 000000 |         | 0   |
| 3068 | 002666 | 000000 |         | 0   |
| 3069 |        |        |         |   |
| 3070 |        |        |         | :UNIT READ FORWARD SOFT ERROR*****          |
| 3071 |        |        |         |   |
| 3072 | 002670 | 000000 | RFSOFT: | 0   |
| 3073 | 002672 | 000000 |         | 0   |
| 3074 | 002674 | 000000 |         | 0   |
| 3075 | 002676 | 000000 |         | 0   |
| 3076 | 002700 | 000000 |         | 0   |
| 3077 | 002702 | 000000 |         | 0   |
| 3078 | 002704 | 000000 |         | 0   |
| 3079 | 002706 | 000000 |         | 0   |
| 3080 |        |        |         |   |
| 3081 |        |        |         | :UNIT READ REVERSE SOFT ERROR*****          |
| 3082 |        |        |         |   |
| 3083 | 002710 | 000000 | RRSOFT: | 0   |
| 3084 | 002712 | 000000 |         | 0   |
| 3085 | 002714 | 000000 |         | 0   |
| 3086 | 002716 | 000000 |         | 0   |
| 3087 | 002720 | 000000 |         | 0   |
| 3088 | 002722 | 000000 |         | 0   |
| 3089 | 002724 | 000000 |         | 0   |
| 3090 | 002726 | 000000 |         | 0   |
| 3091 |        |        |         |   |

3093  
3094  
3095  
3096 002730 000000  
3097 002732 000000  
3098 002734 000000  
3099 002736 000000  
3100 002740 000000  
3101 002742 000000  
3102 002744 000000  
3103 002746 000000  
3104  
3105  
3106  
3107 002750 000000  
3108 002752 000000  
3109 002754 000000  
3110 002756 000000  
3111 002760 000000  
3112 002762 000000  
3113 002764 000000  
3114 002766 000000  
3115  
3116 002770  
3117  
3118  
3119  
3120 002770 002770  
3121 002772 014336  
3122 002774 014476  
3123 002776 014516  
3124 003000 014522  
3125 003002 014546  
3126 003004 014556  
3127 003006 014564  
3128 003010 014572  
3129 003012 014620  
3130 003014 014650  
3131 003016 014670  
3132 003020 014712  
3133 003022 014722  
3134 003024 014752  
3135

:UNIT READ FORWARD HARD ERROR\*\*\*\*\*

RFHARD: 0  
0  
0  
0  
0  
0  
0  
0

:UNIT READ REVERSE HARD ERROR\*\*\*\*\*

RRHARD: 0  
0  
0  
0  
0  
0  
0  
0

:SET END OF STATISTICS TABLE  
ENDTBL:

:DATA PATTERN GENERATORS\*\*\*\*\*

|         |       |  |
|---------|-------|--|
| DATBL:  | .     | :ENTRY TABLE                                     |
| DATA0:  | DAT0  | :EXTERNAL INPUT FROM H/S READER(SEE CZTUTAO)     |
| DATA1:  | DAT1  | :ALL ONES  |
| DATA2:  | DAT2  | :ALL ZEROS                                       |
| DATA3:  | DAT3  | :WALKING ONE                                     |
| DATA4:  | DAT4  | :WALKING ZERO                                    |
| DATA5:  | DAT5  | :ALTERNATING ONE/ZERO                            |
| DATA6:  | DAT6  | :ALTERNATING ZERO/ONE                            |
| DATA7:  | DAT7  | :ALTERNATING ONE/ZERO IN ALTERNATING CHARACTERS  |
| DATA10: | DAT10 | :WALKING ONE/ALL ONE IN ALTERNATING CHARACTERS   |
| DATA11: | DAT11 | :ALL BITS 0-377                                  |
| DATA12: | DAT12 | :ALL BITS 377-0                                  |
| DATA13: | DAT13 | :ALTERNATING CHARACTERS 0 AND 377                |
| DATA14: | DAT14 | :WALKING ZERO/ALL ZERO IN ALTERNATING CHARACTERS |
| DATA15: | DAT15 | :AUTO SEQUENCE PATTERN 0,0,-1,-1,-1,0,0          |

3137  
3138  
3139  
3140  
3141  
3142  
3143  
3144  
3145  
3146  
3147  
3148  
3149  
3150  
3151  
3152  
3153  
3154  
3155  
3156  
3157  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
(1)  
3158  
3159  
3160  
3161  
3162  
3163  
3164  
3165  
3166  
3167  
3168  
3169  
3170  
3171  
3172  
3173  
3174  
3175  
3176  
3177  
3178  
3179  
3180

003026 012706 000500  
003032 005037 000736  
003036 005027  
003040 000000  
003042 022737 005022 000042  
003050 001404  
003052 005737 000042  
003056 001413  
003060 000406  
003062 012737 000176 000610  
003070 012777 100000 175512  
003076 005237 003040  
003102 000137 003126  
003106  
003106 122737 000006 000041  
003114 001010  
003116 012704 027356  
003122 000004  
003124 000404  
003126 005237 000736  
003132 000137 022056  
003136 012737 000001 000636  
003144 005037 015064  
003150 000405  
003152 005037 000636  
003156 000432  
003160 005037 000636  
003164 012700 000640  
003170 012701 000076  
003174 105020  
003176 005301

```
.EVEN
:*****
:PROGRAM START AND SEQUENCE FORMATTER:
:
:THIS ROUTINE IS USED TO PERFORM ALL HOUSEKEEPING,
:DECIDE WHICH TRANSPORT TO TEST AND ITS AVAILABILITY,
:LOAD THE WRITE BUFFER WITH THE SELECTED DATA PATTERN,
:GENERATE ANY RANDOM NUMBER AND THEN EXECUTE
:THE TEST CYCLE REQUESTED BY THE SWITCH SETTING.
:AT THE END OF THE TEST CYCLE THE NEXT UNIT IS SELECTED
:AND CHECKED FOR AVAILABILITY AND THE TEST CYCLE IS
:EXECUTED ON IT.
:THE READ WRITE STATS MAY BE PRINTED AT THE END OF
:EACH TEST CYCLE VIA CONSOLE SWITCH FOURTEEN (14).
:*****

:START 200, & 300*****
START:  MOV    #500,SP      ;SET STACK PTR
        CLR    ASEQF      ;CLEAR AUTO SEQUENCE FLAG
        CLR    (PC)+      ;CLEAR CHAIN INDICATOR
CHNFLG: .WORD  0          ;CHAIN MODE INDICATOR
                               ;1/0 = CHAIN/NOT CHAIN MODE
        CMP    #SENDAD,@#42 ;BRANCH IF LOADED VIA ACT11 CHAIN MODE
        BEQ    50$
        TST   @#42        ;BRANCH IF IN DUMP MODE
        BEQ    52$
        BR    51$
50$:   MOV    #SWREG,SWR   ;INVOKE SOFTWARE SWR
        MOV    #100000,@SWR ;WITH HALT ON ERROR SET
51$:   INC    CHNFLG      ;SET CHNFLG = CHAIN MODE
        JMP   3$         ;GO TO CHAIN ADDRESS
52$:   CMPB   #6,@#41     ;BRANCH IF LOADED VIA TMDP
        BNE   STAUT
        MOV   #MSG120,R4  ;ADVISE USER TO REMOVE TMDP FROM SLAVE
        TYPE
        BR    STAUT
3$:    INC    ASEQF      ;SET AUTO SEQUENCE FLAG
        JMP   ASEQO     ;GO TO AUTO SEQUENCER

:START 240*****
STAUT:  MOV    #1,TINF    ;SET TTY ENTRY FLAG
        CLR    RDFL      ;CLEAR RANDOM DATA FLAG
        BR    STARTB

:START 204*****
STARTC: CLR    TINF      ;CLEAR TTY INPUT FLAG
        BR    STARTD

:START 210*****
STARTA: CLR    TINF      ;CLEAR TTY ENTRY FLAG
STARTB: MOV    #STFLG,R0  ;GET STARTING ADDRESS OF FLAGS
        MOV    #ENDFLG-STFLG,R1
1$:    CLRB   (R0)+      ;CLEAR FLAGS AND COUNTERS
        DEC   R1
```

|      |        |        |        |        |             |                  |                                     |
|------|--------|--------|--------|--------|-------------|------------------|-------------------------------------|
| 3181 | 003200 | 001375 |        |        | BNE         | 1\$              |                                     |
| 3182 | 003202 | 012706 | 000500 |        | MOV         | #500,SP          | ;SET STACK POINTER                  |
| 3183 | 003206 | 004737 | 004276 |        | JSR         | PC,RANSET        | ;GO RESET RANDOM BASE               |
| 3184 | 003212 | 012700 | 001050 |        | MOV         | #STTBL,R0        | ;GET STARTING ADDRESS OF STAT TABLE |
| 3185 | 003216 | 012701 | 001720 |        | MOV         | #ENDTBL-STTBL,R1 | ;AND # OF BYTES IN TABLE            |
| 3186 | 003222 | 105020 |        | 2\$:   | CLRB        | (R0)+            | ;CLEAR STATISTIC COUNTERS           |
| 3187 | 003224 | 005301 |        |        | DEC         | R1               |                                     |
| 3188 | 003226 | 001375 |        |        | BNE         | 2\$              |                                     |
| 3189 | 003230 | 012737 | 177777 | 014330 | MOV         | #-1,PATS         | ;PRESET PATTERN                     |
| 3190 | 003236 | 012737 | 000001 | 000656 | STARTE: MOV | #1,BLCNTR        | ;PRESET BLOCK COUNTER               |
| 3191 | 003244 | 013746 | 000004 |        | STARTD: MOV | @#4,-(SP)        | ;SAVE ERROR TRAP VECTOR             |
| 3192 | 003250 | 013746 | 000006 |        | MOV         | @#6,-(SP)        |                                     |
| 3193 | 003254 | 022737 | 000176 | 000610 | COMP        | #SWREG,SWR       | ;BRANCH IF SOFTWARE SWR             |
| 3194 | 003262 | 001413 |        |        | BEQ         | 2\$              | ;ALREADY SELECTED                   |
| 3195 | 003264 | 012737 | 003310 | 000004 | MOV         | #1\$,@#4         | ;SET TIMEOUT TRAP TO 1\$ BELOW      |
| 3196 | 003272 | 005037 | 000006 |        | CLR         | @#6              |                                     |
| 3197 | 003276 | 022777 | 177777 | 175304 | COMP        | #177777,@SWR     | ;BRANCH IF SWR = 177777 TRAP        |
| 3198 | 003304 | 001402 |        |        | BEQ         | 2\$              | ;IF NOT AVAIL (1\$) OTHERWISE       |
| 3199 | 003306 | 000404 |        |        | BR          | 3\$              | ;GO TO 3\$                          |
| 3200 | 003310 | 022626 |        |        | 1\$:        | COMP             | (SP)+,(SP)+                         |
| 3201 | 003312 | 012737 | 000176 | 000610 | 2\$:        | MOV              | #SWREG,SWR                          |
| 3202 | 003320 | 012637 | 000006 |        | 3\$:        | MOV              | (SP)+,@#6                           |
| 3203 | 003324 | 012637 | 000004 |        |             | MOV              | (SP)+,@#4                           |
| 3204 | 003330 | 012706 | 000500 |        |             | MOV              | #500,SP                             |
| 3205 | 003334 | 004737 | 012226 |        |             | JSR              | PC,TINP                             |
| 3206 | 003340 | 012777 | 000040 | 175152 |             | MOV              | #40,@CS                             |
| 3207 | 003346 | 005060 |        |        | STAUTO: CLR | R0               | ;GO GET PARAMETERS FROM TTY         |
| 3208 | 003350 | 022760 | 177777 | 000746 | 1\$:        | COMP             | #-1,UN1(R0)                         |
| 3209 | 003356 | 001406 |        |        |             | BEQ              | 2\$                                 |
| 3210 | 003360 | 042760 | 100000 | 000746 |             | BIC              | #100000,UN1(R0)                     |
| 3211 | 003366 | 062700 | 000002 |        |             | ADD              | #2,R0                               |
| 3212 | 003372 | 000766 |        |        |             | BR               | 1\$                                 |
| 3213 | 003374 | 013703 | 005054 |        | 2\$:        | MOV              | REOTC,R3                            |
| 3214 | 003400 | 000303 |        |        |             | SWAB             | R3                                  |
| 3215 | 003402 | 110337 | 005054 |        |             | MOVB             | R3,REOTC                            |
| 3216 | 003406 | 012777 | 000100 | 175176 | START1:     | MOV              | #100,@TKS                           |
| 3217 | 003414 | 013700 | 000676 |        |             | MOV              | UNP,R0                              |
| 3218 | 003420 | 022760 | 177777 | 000746 | STAR1A:     | COMP             | #-1,UN1(R0)                         |
| 3219 | 003426 | 001404 |        |        |             | BEQ              | STAR1B                              |
| 3220 | 003430 | 016037 | 000746 | 000552 |             | MOV              | UN1(R0),UDES                        |
| 3221 | 003436 | 000446 |        |        |             | BR               | START4                              |
| 3222 | 003440 | 005237 | 000656 |        | STAR1B:     | INC              | BLCNTR                              |
| 3223 | 003444 | 005737 | 000736 |        |             | TST              | ASEQF                               |
| 3224 | 003450 | 001411 |        |        |             | BEQ              | STAR1C                              |
| 3225 | 003452 | 023737 | 000656 | 000742 |             | COMP             | BLCNTR,ABL CNT                      |
| 3226 | 003460 | 001005 |        |        |             | BNE              | STAR1C                              |
| 3227 | 003462 | 005037 | 000656 |        |             | CLR              | BLCNTR                              |
| 3228 | 003466 | 005037 | 000676 |        |             | CLR              | UNP                                 |
| 3229 | 003472 | 000207 |        |        |             | RTS              | PC                                  |
| 3230 | 003474 | 005037 | 000676 |        | STAR1C:     | CLR              | UNP                                 |
| 3231 | 003500 | 005000 |        |        |             | CLR              | R0                                  |
| 3232 | 003502 | 016037 | 000746 | 000552 |             | MOV              | UN1(R0),UDES                        |
| 3233 | 003510 | 032777 | 000200 | 175072 |             | BIT              | #200,@SWR                           |
| 3234 | 003516 | 001402 |        |        |             | BEQ              | START2                              |
| 3235 | 003520 | 004737 | 012142 |        |             | JSR              | PC,CCNTR                            |
| 3236 | 003524 | 032777 | 000400 | 175056 | START2:     | BIT              | #400,@SWR                           |

|      |        |        |        |        |             |               |                                  |
|------|--------|--------|--------|--------|-------------|---------------|----------------------------------|
| 3237 | 003532 | 001402 |        |        | BEQ         | START3        | :IF NOT: BR                      |
| 3238 | 003534 | 004737 | 015022 |        | JSR         | PC,DATR       | :GO GENERATE RANDOM DATA         |
| 3239 | 003540 | 032777 | 000100 | 175042 | START3: BIT | #100,@SWR     | :SEE IF RANDOM RECORD COUNT      |
| 3240 | 003546 | 001402 |        |        | BEQ         | START4        | :IF NOT: BR                      |
| 3241 | 003550 | 004737 | 012202 |        | JSR         | PC,RCNTR      | :GO GENERATE RANDOM RECORD COUNT |
| 3242 | 003554 | 005760 | 000746 |        | START4: TST | UN1(R0)       | :SEE IF REACHED EOT              |
| 3243 | 003560 | 100002 |        |        | BPL         | STAR40        | :IF NOT: BR                      |
| 3244 | 003562 | 000137 | 004264 |        | JMP         | START7        | :ELSE GO TO NEXT UNIT            |
| 3245 | 003566 | 013777 | 000550 | 174724 | STAR40: MOV | DVN,@CS       | :SET DRIVE NUMBER                |
| 3246 | 003574 | 013777 | 000552 | 174740 | MOV         | UDES,@TC      | :SET UNIT NUMBER                 |
| 3247 | 003602 | 105777 | 174714 |        | TSTB        | @DS           | :SEE IF UNIT AVAIL               |
| 3248 | 003606 | 100412 |        |        | BMI         | STAR4A        | :IF SO: BR                       |
| 3249 | 003610 | 005337 | 000670 |        | DEC         | STAL          |                                  |
| 3250 | 003614 | 001357 |        |        | BNE         | START4        | :AWAIT TUR                       |
| 3251 | 003616 | 004737 | 022672 |        | JSR         | PC,PAPRT      | :PRINT HEADER                    |
| 3252 | 003622 | 012704 | 026056 |        | MOV         | #MSG49,R4     |                                  |
| 3253 | 003626 | 000004 |        |        | TYPE        |               | :TYPE MSG                        |
| 3254 | 003630 | 000000 |        |        | HALT        |               | :STOP                            |
| 3255 | 003632 | 000750 |        |        | BR          | START4        | :RETRY                           |
| 3256 | 003634 | 004737 | 014124 |        | STAR4A: JSR | PC,DSUP       | :GO SET UP WRITE DATA            |
| 3257 | 003640 | 004737 | 005426 |        | JSR         | PC,INIT       | :INIT SLAVE                      |
| 3258 | 003644 | 004737 | 005056 |        | JSR         | PC,RWIND      | :REWIND                          |
| 3259 | 003650 | 004737 | 005542 |        | JSR         | PC,WRITE      | :WRITE                           |
| 3260 | 003654 | 013737 | 000600 | 000670 | MOV         | TSTAL,STAL    | :SET TURN AROUND DELAY           |
| 3261 | 003662 | 004737 | 012132 |        | JSR         | PC,STALL      | :DELAY                           |
| 3262 | 003666 | 004737 | 007432 |        | JSR         | PC,RSEQ       | :GO TO READ SEQUENCER            |
| 3263 | 003672 | 013737 | 000600 | 000670 | MOV         | TSTAL,STAL    | :SET TURN AROUND DELAY           |
| 3264 | 003700 | 004737 | 012132 |        | JSR         | PC,STALL      | :DELAY                           |
| 3265 | 003704 | 032777 | 040000 | 174676 | BIT         | #40000,@SWR   | :SEE IF SHOULD PRINT STATISTICS  |
| 3266 | 003712 | 001541 |        |        | BEQ         | START5        | :IF NOT: BR                      |
| 3267 | 003714 | 012700 | 000001 |        | MOV         | #1,R0         | :SET RECORD COUNTER TO 1         |
| 3268 | 003720 | 004737 | 022672 |        | JSR         | PC,PAPRT      | :PRINT CYCLE NUMBER              |
| 3269 | 003724 | 004737 | 003734 |        | JSR         | PC,STP        | :GO PRINT STATS                  |
| 3270 | 003730 | 000137 | 004202 |        | JMP         | STPX          |                                  |
| 3271 | 003734 | 004737 | 017160 |        | STAR4: JSR  | PC,DPPRT      | :PRINT DROPS AND PICKS           |
| 3272 | 003740 | 012704 | 026270 |        | MOV         | #MSG65,R4     |                                  |
| 3273 | 003744 | 000004 |        |        | TYPE        |               | :TYPE MSG                        |
| 3274 | 003746 | 013704 | 000676 |        | MOV         | UNP,R4        |                                  |
| 3275 | 003752 | 016403 | 001050 |        | MOV         | RTY1(R4),R3   |                                  |
| 3276 | 003756 | 104400 |        |        | TYPOCT      |               | :PRINT RETRIES                   |
| 3277 | 003760 | 012704 | 026441 |        | MOV         | #MSG73,R4     |                                  |
| 3278 | 003764 | 000004 |        |        | TYPE        |               | :TYPE MSG                        |
| 3279 | 003766 | 013704 | 000676 |        | MOV         | UNP,R4        |                                  |
| 3280 | 003772 | 016403 | 001070 |        | MOV         | WTER1(R4),R3  |                                  |
| 3281 | 003776 | 104400 |        |        | TYPOCT      |               | :PRINT WRITE ERRORS              |
| 3282 | 004000 | 012704 | 026430 |        | MOV         | #MSG72,R4     |                                  |
| 3283 | 004004 | 000004 |        |        | TYPE        |               | :TYPE MSG                        |
| 3284 | 004006 | 013704 | 000676 |        | MOV         | UNP,R4        |                                  |
| 3285 | 004012 | 016403 | 001110 |        | MOV         | RDER1(R4),R3  |                                  |
| 3286 | 004016 | 104400 |        |        | TYPOCT      |               | :PRINT READ FORWARD ERRORS       |
| 3287 | 004020 | 012704 | 027233 |        | MOV         | #MSG113,R4    |                                  |
| 3288 | 004024 | 000004 |        |        | TYPE        |               | :TYPE MSG                        |
| 3289 | 004026 | 013704 | 000676 |        | MOV         | UNP,R4        |                                  |
| 3290 | 004032 | 016403 | 002670 |        | MOV         | RFSOFT(R4),R3 |                                  |
| 3291 | 004036 | 104400 |        |        | TYPOCT      |               | :PRINT FORWARD SOFT ERRORS       |
| 3292 | 004040 | 012704 | 027244 |        | MOV         | #MSG114,R4    |                                  |

|      |        |        |        |         |             |                |                                  |
|------|--------|--------|--------|---------|-------------|----------------|----------------------------------|
| 3293 | 004044 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3294 | 004046 | 013704 | 000676 |         | MOV         | UNP,R4         |                                  |
| 3295 | 004052 | 016403 | 002730 |         | MOV         | RFHARD(R4),R3  |                                  |
| 3296 | 004056 | 104400 |        |         | TYPOCT      |                | :PRINT HARD FORWARE ERRORS       |
| 3297 | 004060 | 012704 | 026521 |         | MOV         | #MSG77,R4      |                                  |
| 3298 | 004064 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3299 | 004066 | 013704 | 000676 |         | MOV         | UNP,R4         |                                  |
| 3300 | 004072 | 016403 | 001130 |         | MOV         | DATER1(R4),R3  |                                  |
| 3301 | 004076 | 104400 |        |         | TYPOCT      |                | :PRINT DATA ERROR FORWARD NUMBER |
| 3302 | 004100 | 012704 | 026324 |         | MOV         | #MSG68,R4      |                                  |
| 3303 | 004104 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3304 | 004106 | 013704 | 000676 |         | MOV         | UNP,R4         |                                  |
| 3305 | 004112 | 016403 | 001150 |         | MOV         | RDERR1(R4),R3  |                                  |
| 3306 | 004116 | 104400 |        |         | TYPOCT      |                | :PRINT REVESE ERROR NUMBER       |
| 3307 | 004120 | 012704 | 027233 |         | MOV         | #MSG113,R4     |                                  |
| 3308 | 004124 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3309 | 004126 | 013704 | 000676 |         | MOV         | UNP,R4         |                                  |
| 3310 | 004132 | 016403 | 002710 |         | MOV         | RRSOFT(R4),R3  |                                  |
| 3311 | 004136 | 104400 |        |         | TYPOCT      |                | :PRINT REVERSE SOFT ERPOR        |
| 3312 | 004140 | 012704 | 027244 |         | MOV         | #MSG114,R4     |                                  |
| 3313 | 004144 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3314 | 004146 | 013704 | 000676 |         | MOV         | UNP,R4         |                                  |
| 3315 | 004152 | 016403 | 002750 |         | MOV         | RRHARD(R4),R3  |                                  |
| 3316 | 004156 | 104400 |        |         | TYPOCT      |                |                                  |
| 3317 | 004160 | 012704 | 026510 |         | MOV         | #MSG76,R4      |                                  |
| 3318 | 004164 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3319 | 004166 | 013704 | 000676 |         | MOV         | UNP,R4         |                                  |
| 3320 | 004172 | 016403 | 001170 |         | MOV         | DEREV1(R4),R3  |                                  |
| 3321 | 004176 | 104400 |        |         | TYPOCT      |                | :PRINT DATA REVERSE ERROR NUMBER |
| 3322 | 004200 | 000207 |        |         | RTS         | PC             | :RETURN                          |
| 3323 | 004202 | 005237 | 000730 | STPX:   | INC         | BTSTF          | :SET STAT ONLY PRINT             |
| 3324 | 004206 | 004737 | 007342 |         | JSR         | PC,BTPRT       | :PRINT BAD TAPE STATS            |
| 3325 | 004212 | 005037 | 000730 |         | CLR         | BTSTF          | :CLEAR FLAG                      |
| 3326 | 004216 | 017700 | 174366 | START5: | MOV         | @SWR,R0        | :LOAD SWR                        |
| 3327 | 004222 | 042700 | 177762 |         | BIC         | #177762,R0     | :MASK READ/WRITE SWITCHES        |
| 3328 | 004226 | 022700 | 000015 |         | CMP         | #15,R0         | :SEE IF HAVE READ OR WRITE       |
| 3329 | 004232 | 001417 |        |         | BEQ         | START8         | :IF NOT: BR                      |
| 3330 | 004234 | 105777 | 174262 | START6: | TSTB        | @DS            | :SEE IF HAVE UNIT READY          |
| 3331 | 004240 | 100411 |        |         | BMI         | START7         | :IF SO: BR                       |
| 3332 | 004242 | 005337 | 000670 |         | DEC         | STAL           |                                  |
| 3333 | 004246 | 001372 |        |         | BNE         | START6         | :DELAY FOR TUR                   |
| 3334 | 004250 | 004737 | 022672 |         | JSR         | PC,PAPRT       | :PRINT HEADER                    |
| 3335 | 004254 | 012704 | 026056 |         | MOV         | #MSG49,R4      |                                  |
| 3336 | 004260 | 000004 |        |         | TYPE        |                | :TYPE MSG                        |
| 3337 | 004262 | 000000 |        |         | HALT        |                | :STOP                            |
| 3338 | 004264 | 062737 | 000002 | 000676  | START7: ADD | #2,UNP         | :POINT TO NEXT UNIT              |
| 3339 | 004272 | 000137 | 003406 |         | START8: JMP | START1         | :CONTINUE                        |
| 3340 |        |        |        |         |             |                |                                  |
| 3341 |        |        |        |         |             |                |                                  |
| 3342 |        |        |        |         |             |                |                                  |
| 3343 | 004276 | 012737 | 153624 | 000626  | RANSET: MOV | #153624,RANBAS | :RESET BASE                      |
| 3344 | 004304 | 012737 | 032561 | 000630  | MOV         | #32561,RANSAV  | :RESET BUFFER                    |
| 3345 | 004312 | 013737 | 000632 | 000554  | MOV         | RCSAV,RCNT     | :RESET RECORD COUNT              |
| 3346 | 004320 | 013737 | 000634 | 000556  | MOV         | FCSAV,FMCNT    | :RESET FRAME COUNT               |
| 3347 | 004326 | 000207 |        |         | RTS         | PC             |                                  |
| 3348 |        |        |        |         |             |                |                                  |

```

3350
3351
3352
3353
3354
3355
3356
3357
3358
3359
3360
3361
3362 004330 013777 000552 174204 REOT:  MOV    UDES,@TC      ;LOAD TAPE CONTROL REGISTER
3363 004336 012777 000011 174144      MOV    #11,@C1      ;DRIVE CLEAR
3364 004344 105777 174152      1$:   TSTB   @DS          ;WAIT FOR DRY
3365 004350 100375                BPL    1$           ;
3366 004352 012777 000007 174130      MOV    #7,@C1      ;START REWIND
3367 004360 005737 000726      TST   BTFLG        ;SEE IF BAD TAPE OVERFLOW REWIND
3368 004364 001004                BNE   REOT1A       ;IF SO: BR
3369 004366 013700 000662      MOV    EOTREC,R0   ;
3370 004372 042700 100000      BIC   #100000,R0   ;SET RECORD NUMBER OF EOT
3371 004376 005037 000662      REOT1A: CLR   EOTREC    ;CLEAR EOT INDICATOR & REC COUNT
3372 004402 004737 022672      JSR   PC,PAPRT     ;PRINT HEADER
3373 004406 022737 000002 000726      CMP   #2,BTFLG     ;SEE IF POSITION ERROR
3374 004414 001003                BNE   REOT1B       ;IF NOT: BR
3375 004416 012704 027124      MOV   #MSG109,R4   ;SET POSITION ERROR MSG
3376 004422 000406                BR    REOT1F       ;
3377 004424 022737 000001 000726      REOT1B: CMP  #1,BTFLG ;SEE IF BAD TAPE OVERFLOW
3378 004432 001004                BNE   REOT1C       ;IF NOT: BR
3379 004434 012704 026752      MOV   #MSG106,R4   ;SET BAD TAPE OVERFLOW MSG
3380 004440 000004                REOT1F: TYPE      ;TYPE MSG
3381 004442 000412                BR    REOT1E       ;
3382 004444 012704 024756      REOT1C: MOV  #MSG20,R4 ;SET EOT MSG
3383 004450 000004                TYPE      ;TYPE MSG
3384 004452 013704 000676      MOV   UNP,R4       ;
3385 004456 005264 002650      INC   EOTC0(R4)    ;BUMP CNTR
3386 004462 016403 002650      MOV   EOTC0(R4),R3 ;
3387 004466 104400                TYPOCT     ;PRINT EOT CNTR
3388 004470 012704 026777      REOT1E: MOV  #MSG16A,R4 ;
3389 004474 000004                TYPE      ;TYPE MSG
3390 004476 005037 000726      CLR   BTFLG        ;CLEAR BAD TAPE FLAG
3391 004502 004737 003734      JSR   PC,STP        ;PRINT STATS
3392 004506 004737 007342      JSR   PC,BTPRT     ;PRINT BAD TAPE STATS
3393 004512 105777 174004      REOT2: TSTB  @DS          ;BRANCH IF DRY SET
3394 004516 100414                BMI   REOT2A       ;
3395 004520 005337 000670      DEC   STAL         ;
3396 004524 001372                BNE   REOT2        ;WAIT DRY
3397 004526 012737 024615 000654      MOV   #MSG6,EMADDR ;
3398 004534 004737 022672      JSR   PC,PAPRT     ;PRINT HEADER
3399 004540 012704 026232      MOV   #MSG60,R4    ;
3400 004544 000004                TYPE      ;TYPE MSG
3401 004546 000000                HALT       ;
3402 004550 105337 005054      REOT2A: DECB  REOTC     ;SEE IF LAST UNIT TO REACH EOT
3403 004554 001410                BEQ   REOT3        ;IF SO: BR
3404 004556 013700 000676      MOV   UNP,R0       ;
3405 004562 052760 100000 000746      BIS   #100000,UN1(R0) ;SET EOT FLAG

```

|      |        |        |        |        |          |        |                 |                              |
|------|--------|--------|--------|--------|----------|--------|-----------------|------------------------------|
| 3406 | 004570 | 005726 |        |        | TST      | (SP)+  |                 | :RESET STACK POINTER         |
| 3407 | 004572 | 000137 | 004264 |        | JMP      | START7 |                 | :GO TO NEXT UNIT             |
| 3408 | 004576 | 000337 | 005054 |        | REOT3:   | SWAB   | REOTC           |                              |
| 3409 | 004602 | 013700 | 005054 |        |          | MOV    | REOTC,R0        |                              |
| 3410 | 004606 | 000337 | 005054 |        |          | SWAB   | REOTC           |                              |
| 3411 | 004612 | 110037 | 005054 |        |          | MOVB   | R0,REOTC        | :RESTORE EOT UNIT COUNTER    |
| 3412 | 004616 | 005037 | 000676 |        |          | CLR    | UNP             |                              |
| 3413 | 004622 | 013700 | 000676 |        |          | MOV    | UNP,R0          | :POINT TO FIRST UNIT         |
| 3414 | 004626 | 016037 | 000746 | 000552 | REOT4:   | MOV    | UN1(R0),UDES    | :LOAD UNIT DESCRIPTION       |
| 3415 | 004634 | 013777 | 000552 | 173700 |          | MOV    | UDES,@TC        | :LOAD COMMAND REGISTER       |
| 3416 | 004642 | 032777 | 020000 | 173652 | REOT5:   | BIT    | #20000,@DS      |                              |
| 3417 | 004650 | 001374 |        |        |          | BNE    | REOT5           | :AWAIT PIP RESET             |
| 3418 | 004652 | 032777 | 000002 | 173642 |          | BIT    | #2,@DS          | :SEE IF HAVE BOT             |
| 3419 | 004660 | 001012 |        |        |          | BNE    | REOT6           | :IF SO: BR                   |
| 3420 | 004662 | 012700 | 000001 |        |          | MOV    | #1,R0           |                              |
| 3421 | 004666 | 004737 | 022672 |        |          | JSR    | PC,PAPRT        | :PRINT HEADER                |
| 3422 | 004672 | 012704 | 026023 |        |          | MOV    | #MSG48,R4       |                              |
| 3423 | 004676 | 000004 |        |        |          | TYPE   |                 | :TYPE MSG                    |
| 3424 | 004700 | 000000 |        |        |          | HALT   |                 |                              |
| 3425 | 004702 | 013700 | 000676 |        |          | MOV    | UNP,R0          |                              |
| 3426 | 004706 | 042760 | 100000 | 000746 | REOT6:   | BIC    | #100000,UN1(R0) | :CLEAR EOT FLAG              |
| 3427 | 004714 | 062737 | 000002 | 000676 |          | ADD    | #2,UNP          |                              |
| 3428 | 004722 | 013700 | 000676 |        |          | MOV    | UNP,R0          | :POINT TO NEXT UNIT          |
| 3429 | 004726 | 022760 | 177777 | 000746 |          | CMP    | #-1,UN1(R0)     | :BRANCH IF NOT LAST UNIT     |
| 3430 | 004734 | 001334 |        |        |          | BNE    | REOT4           |                              |
| 3431 | 004736 | 005037 | 000676 |        | REOT7:   | CLR    | UNP             | :CLEAR UNIT POINTER          |
| 3432 | 004742 | 005037 | 000636 |        |          | CLR    | TINF            | :CLEAR TTY INPUT FLAG        |
| 3433 | 004746 | 005737 | 000736 |        |          | TST    | ASEQF           | :SEE IF AUTO SEQ             |
| 3434 | 004752 | 001402 |        |        |          | BEQ    | REOTX           | :IF NOT: BR                  |
| 3435 | 004754 | 005726 |        |        |          | TST    | (SP)+           | :RESET STACK POINTER         |
| 3436 | 004756 | 000207 |        |        |          | RTS    | PC              | :RETURN TO AUTO SEQ          |
| 3437 | 004760 | 004737 | 004276 |        | REOTX:   | JSR    | PC,RANSET       | :GO RESET RANDOM BASE        |
| 3438 | 004764 | 012737 | 177777 | 014330 |          | MOV    | #-1,PATS        | :PRESET PATTERN              |
| 3439 | 004772 | 005037 | 015064 |        |          | CLR    | RDFL            | :CLEAR RANDOM FLAG           |
| 3440 | 004776 | 005737 | 000572 |        |          | TST    | SPFLG           | :SEE IF SINGLE PASS          |
| 3441 | 005002 | 001422 |        |        |          | BEQ    | REOTXX          | :IF NOT: BR                  |
| 3442 | 005004 | 012704 | 026633 |        | TEND:    | MOV    | #MSG100,R4      |                              |
| 3443 | 005010 | 000004 |        |        |          | TYPE   |                 | :TYPE MSG                    |
| 3444 | 005012 | 013700 | 000042 |        |          | MOV    | @#42,R0         | :GET ACT11 RETURN ADDRESS    |
| (1)  | 005016 | 001405 |        |        |          | BEQ    | HERE            | :BRANCH IF NOT ACT11         |
| (1)  | 005020 | 000005 |        |        |          | RESET  |                 |                              |
| (1)  | 005022 | 004710 |        |        | \$ENDAD: | JSR    | PC,(R0)         |                              |
| (1)  | 005024 | 000240 |        |        |          | NOP    |                 |                              |
| (1)  | 005026 | 000240 |        |        |          | NOP    |                 |                              |
| (1)  | 005030 | 000240 |        |        |          | NOP    |                 |                              |
| (1)  | 005032 | 000240 |        |        | HERE:    | NOP    |                 |                              |
| 3445 | 005034 | 005737 | 003040 |        |          | TST    | CHNFLG          | :BRANCH IF NOT CHAIN MODE    |
| 3446 | 005040 | 001402 |        |        |          | BEQ    | 1\$             |                              |
| 3447 | 005042 | 000137 | 022056 |        |          | JMP    | ASEQ0           | :RETURN TO AUTO SEQUENCER    |
| 3448 | 005046 | 000000 |        |        | 1\$:     | HALT   |                 |                              |
| 3449 | 005050 | 000137 | 003236 |        | REOTXX:  | JMP    | STARTE          | :RESTART AT BLOCK NUMBER ONE |
| 3450 | 005054 | 000600 |        |        | REOTC:   | 0      |                 | :EOT UNIT COUNTER            |

```

3452
3453
3454
3455
3456
3457
3458
3459
3460
3461 005056 032777 001000 173524 RWND: BIT #1000,@SWR ;SEE IF SHOULD REWIND
3462 005064 001001 BNE RWNDA ;IF SO: BR
3463 005066 000207 RTS PC ;ELSE EXIT
3464 005070 013737 000676 000716 RWNDA: MOV UNP,UPS ;SAVE UNIT POINTER
3465 005076 005037 000676 CLR UNP ;CLEAR POINTER
3466 005102 005037 000662 CLR EOTREC ;CLEAR EDT FLAG
3467 005106 000337 005054 SWAB REOTC
3468 005112 013700 005054 MOV REOTC,R0
3469 005116 000337 005054 SWAB REOTC
3470 005122 110037 005054 MOVB R0,REOTC ;RESTORE EOT UNIT COUNTER
3471 005126 013700 000676 RWND0: MOV UNP,R0 ;POINT TO UNIT ENTRY
3472 005132 022760 177777 000746 CMP #-1,UN1(R0) ;BRANCH IF LAST ENTRY
3473 005140 001445 BEQ RWND2
3474 005142 005760 000746 TST UN1(R0) ;SEE IF ALREADY REWINDING
3475 005146 100433 BMI RWND1A ;IF SO: BR
3476 005150 016037 000746 000552 MOV UN1(R0),UDES ;SET UNIT DESCRIPTION
3477 005156 013777 000552 173356 MOV UDES,@TC ;LOAD COMMAND REGISTER
3478 005164 012777 000011 173316 MOV #11,@C1 ;DRIVE CLEAR
3479 005172 012777 000007 173310 MOV #7,@C1 ;START REWIND
3480 005200 105777 173316 1$: TSTB @DS
3481 005204 100414 BMI RWND1A ;IF DRY: BR
3482 005206 005337 000670 DEC STAL
3483 005212 001372 BNE 1$ ;AWAIT DRY
3484 005214 012737 024615 000654 MOV #MSG6,EMADDR
3485 005222 004737 022672 JSR PC,PAPRT ;PRINT HEADER
3486 005226 012704 026353 MOV #MSG70,R4
3487 005232 000004 TYPE MSG
3488 005234 000000 HALT
3489 005236 042760 100000 000746 RWND1A: BIC #100000,UN1(R0) ;CLEAR EOT FLAG
3490 005244 062737 000002 000676 ADD #2,UNP ;BUMP POINTER
3491 005252 000725 BR RWND0 ;DO NEXT UNIT
3492 005254 005037 000676 RWND2: CLR UNP ;CLEAR POINTER
3493 005260 013700 000676 RWND3: MOV UNP,R0 ;POINT TO UNIT ENTRY
3494 005264 022760 177777 000746 CMP #-1,UN1(R0) ;BRANCH IF LAST ENTRY
3495 005272 001441 BEQ RWNDX
3496 005274 016037 000746 000552 MOV UN1(R0),UDES ;SET UNIT DESCRIPTION
3497 005302 013777 000552 173232 MOV UDES,@TC ;LOAD COMMAND REGISTER
3498 005310 032777 020000 173204 1$: BIT #20000,@DS
3499 005316 001374 BNE 1$ ;AWAIT PIP RESET
3500 005320 013777 000552 173214 MOV UDES,@TC ;LOAD UNIT DESCRIPTION
3501 005326 032777 000002 173166 BIT #2,@DS ;SEE IF HAVE BOT
3502 005334 001407 BEQ RWND6 ;IF NOT: BR
3503 005336 062737 000002 000676 RWND5: ADD #2,UNP ;BUMP POINTER
3504 005344 012777 000011 173136 MOV #11,@C1 ;DRIVE CLEAR
3505 005352 000742 BR RWND3 ;DO NEXT UNIT
3506 005354 012700 000001 RWND6: MOV #1,R0
3507 005360 004737 022672 JSR PC,PAPRT ;PRINT HEADER

```

```

3508 005364 012704 026023      MOV      #MSG48,R4
3509 005370 000004      TYPE
3510 005372 000000      HALT
3511 005374 000760      BR      RWND5
3512 005376 013737 000716 000676 RWNDX: MOV      UPS,UNP
3513 005404 013700 000676      MOV      UNP,R0
3514 005410 016037 000746 000552      MOV      UN1(R0),UDES
3515 005416 013777 000552 173116      MOV      UDES,@TC
3516 005424 000207      RTS      PC
3517
3518
3519
3520
3521
3522
3523
3524
3525
3526 005426 013746 000552 173060 INIT:  MOV      UDES,-(SP)
3527 005432 013777 000550      MOV      DVN,@CS
3528 005440 011677 173076      MOV      (SP),@TC
3529 005444 042716 174377      BIC      #174377,(SP)
3530 005450 022726 001400      CMP      #1400,(SP)+
3531 005454 001005      BNE      1$
3532 005456 032777 000040 173036      BIT      #40,ADS
3533 005464 001425      BEQ      4$
3534 005466 000404      BR      2$
3535 005470 032777 000040 173024 1$:  BIT      #40,ADS
3536 005476 001020      BNE      4$
3537 005500 012777 000011 173002 2$:  MOV      #11,@C1
3538 005506 105777 173010 20$:  TSTB    @DS
3539 005512 100375      BPL      20$
3540 005514 012777 000007 172766      MOV      #7,@C1
3541 005522 105777 172774 10$:  TSTB    @DS
3542 005526 100375      BPL      10$
3543 005530 032777 020000 172764 3$:  BIT      #20000,ADS
3544 005536 001374      BNE      3$
3545 005540 000207      RTS      PC

```

```

:*****
:INITIALIZE SELECTED SALVE
:THIS ROUTINE REWINDS AND SETS THE PROPER DENSITY IF
:THE DENSITY REQUIRED FOR THE TEST IS DIFFERENT FROM
:THE DENSITY AT WHICH THE SLAVE IS SELECTED.
:*****

```

3547  
 3548  
 3549  
 3550  
 3551  
 3552  
 3553  
 3554  
 3555  
 3556  
 3557  
 3558  
 3559  
 3560  
 3561  
 3562  
 3563  
 3564  
 3565  
 3566  
 3567  
 3568  
 3569  
 3570  
 3571  
 3572  
 3573  
 3574  
 3575  
 3576  
 3577  
 3578  
 3579  
 3580  
 3581  
 3582  
 3583  
 3584  
 3585  
 3586  
 3587  
 3588  
 3589  
 3590  
 3591  
 3592  
 3593  
 3594  
 3595  
 3596  
 3597  
 3598  
 3599  
 3600  
 3601  
 3602

005542 032777 000001 173040  
 005550 001402  
 005552 000137 006340  
 005556 013700 000554  
 005562 012737 024610 000654  
 005570 013777 000556 172720  
 005576 012777 027452 172710  
 005604 112737 000060 000674  
 005612 012737 005624 000664  
 005620 000137 021144  
 005624 032777 002000 172670  
 005632 001414  
 005634 005737 000662  
 005640 100411  
 005642 010037 000662  
 005646 052737 100000 000662  
 005654 005337 000662  
 005660 012700 000002  
 005664 032777 010000 172716  
 005672 001002  
 005674 004737 017316  
 005700 013737 000576 000670  
 005706 004737 012132

```

:*****
:WRITE ROUTINE:
:
:THIS ROUTINE IS USED TO WRITE ONTO TAPE THE BLOCK
:OF DATA DESCRIBED BY THE OPERATOR AND SET UP
:IN THE SEQUENCE FORMATTER. THE TAPE UNIT TO BE USED
:HAS BEEN ASSIGNED BY THE SEQUENCE FORMATTER AND
:ITS PARAMETERS SET IN A UNIT DESCRIPTION WORD.
:AS EACH RECORD OF THE BLOCK IS WRITTEN, IT IS CHECKED
:FOR STATUS ERRORS, WORD COUNT ZERO, AND CORRECT CURRENT
:MEMORY ADDRESS. IF THE WRITE OPERATION RESULTS IN
:ANY ERROR CONDITION, A WRITE RETRY OF THAT OPERATION
:MAY BE DONE BY SETTING SWITCH FOUR (4) TO A ONE (1).
:THE RETRY CONSISTS OF A BACKSPACE, ERASE FORWARD, AND
:REWRITE OF THE RECORD. (SEE WRITE RETRY SUBROUTINE)
:AFTER ALL DATA RECORDS IN THE BLOCK HAVE BEEN
:WRITTEN, THE WRITE ROUTINE WILL EXECUTE A WRITE
:TAPE MARK COMMAND IF THE TTY RESPONSE TM=1 WAS
:MADE AT INITIAL START. THE TM IS COUNTED AS TOTAL
:DATA RECORDS PLUS ONE (IE: IF 100 DATA RECORDS; TM=RECORD 101)
:IF THE WRITE OPERATION (DATA OR TM) CAUSES THE SELECTED SLAVE
:TO REACH END OF TAPE (EOT) AND THERE IS TO BE NO READING DONE,
:(SW2 AND SW3 SET TO A 1) THEN THE SLAVE IS REWOUND AND
:FLAGGED AS UNAVAILABLE FOR TESTING UNTIL ALL SLAVES HAVE
:REACHED EOT AND BEEN REWOUND AT WHICH TIME TESTING IS
:RESUMED ON ALL AVAILABLE SLAVES.
:WRITE RETRY MAY BE ALLOWED VIA CONSOLE SWITCH FOUR (4).
:ERROR CHECKING MAY BE DISALLOWED VIA CONSOLE SWITCH
:TWELVE (12).
:WRITING TO TAPE MAY BE DISALLOWED VIA CONSOLE SWITCH
:ZERO (0).
:*****
WRITE: BIT #1,@SWR ;SEE IF SHOULD WRITE
      BEQ WRTE
      JMP WEX ;IF NOT: BR
      WRTE: MOV RCNT,R0 ;R0=RECORD COUNT
      WO: MOV #MSG5,EMADDR ;SET ERROR MSG ADDRESS
      MOV FMCNT,@FC ;LOAD CHAR COUNT
      MOV #WDATA,@BA ;SET DATA ADDR
      MOV #60,MTC1 ;SET WRITE OP COMMAND
      MOV #W1,RTRN ;SET RETURN ADDRESS
      JMP TAPG ;GO EXECUTE COMMAND
      W1: BIT #2000,@DS ;SEE IF EOT
      BEQ W2 ;IF NOT AT EOT: BR
      TST EOTREC ;BRANCH IF WRITTEN PAST EOT
      BMI W2
      MOV R0,EOTREC ;SAVE RECORD COUNT
      BIS #100000,EOTREC ;++B SET EOT INDICATOR
      DEC EOTREC ;++B ADJUST RECORD COUNT
      MOV #2,R0 ;SET TO WRITE 1 LAST RECORD
      W2: BIT #10000,@SWR ;SEE IF SHOULD CHECK ERRORS
      BNE W3 ;IF NOT: BR
      JSR PC,ERCHK ;GO CHECK ERRORS
      W3: MOV WSTAL,STAL ;SET DELAY
      JSR PC,STALL ;DELAY
  
```

|      |        |        |        |        |       |            |                               |
|------|--------|--------|--------|--------|-------|------------|-------------------------------|
| 3603 | 005712 | 005737 | 000714 |        | TST   | RTYFL      | :SEE IF RETRY TIME            |
| 3604 | 005716 | 001401 |        |        | BEQ   | W3A        | :IF NOT: BR                   |
| 3605 | 005720 | 000207 |        |        | RTS   | PC         | :ELSE RETURN                  |
| 3606 | 005722 | 005737 | 000710 | W3A:   | TST   | SERFL      | :SEE IF WRITE ERROR           |
| 3607 | 005726 | 001450 |        |        | BEQ   | W5         | :IF NOT: BR                   |
| 3608 | 005730 | 013704 | 000676 |        | MOV   | UNP,R4     |                               |
| 3609 | 005734 | 005264 | 001070 |        | INC   | WTER1(R4)  | :BUMP WRITE ERROR             |
| 3610 | 005740 | 005037 | 000710 |        | CLR   | SERFL      | :CLEAR STATUS ERROR FLAG      |
| 3611 | 005744 | 032777 | 000020 | 172636 | BIT   | #20,@SWR   | :SEE IF RETRY                 |
| 3612 | 005752 | 001436 |        |        | BEQ   | W5         | :IF NOT: BR                   |
| 3613 | 005754 | 013703 | 000724 |        | MOV   | ERSAV,R3   |                               |
| 3614 | 005760 | 042703 | 102700 |        | BIC   | #102700,R3 | :MASK UNRECOVERABLE ERROR     |
| 3615 | 005764 | 001410 |        |        | BEQ   | W4         | :IF SO: BR                    |
| 3616 | 005766 | 004737 | 022672 |        | JSR   | PC,PAPRT   | :PRINT HEADER                 |
| 3617 | 005772 | 012704 | 026532 |        | MOV   | #MSG78,R4  |                               |
| 3618 | 005776 | 000004 |        |        | TYPE  |            | :TYPE MSG                     |
| 3619 | 006000 | 004737 | 011252 |        | JSR   | PC,NRTP    | :PRINT ER FOR NON-RETRYABLE   |
| 3620 | 006004 | 000421 |        |        | BR    | W5         |                               |
| 3621 | 006006 | 013704 | 000676 | W4:    | MOV   | UNP,R4     |                               |
| 3622 | 006012 | 005264 | 001050 |        | INC   | RTY1(R4)   | :BUMP RETRY CNTR              |
| 3623 | 006016 | 032777 | 002000 | 172564 | BIT   | #2000,@SWR | :SEE IF PRINT ERRORS          |
| 3624 | 006024 | 001003 |        |        | BNE   | W4A        | :IF NOT: BR                   |
| 3625 | 006026 | 012704 | 026246 |        | MOV   | #MSG64,R4  |                               |
| 3626 | 006032 | 000004 |        |        | TYPE  |            | :TYPE MSG                     |
| 3627 | 006034 | 005037 | 000704 | W4A:   | CLR   | RTCNT      | :CLEAR RETRY NUMBER           |
| 3628 | 006040 | 005037 | 000702 |        | CLR   | RPCNT      | :CLEAR REPEAT COUNTER         |
| 3629 | 006044 | 004737 | 006402 |        | JSR   | PC,WRTY    | :GO RETRY WRITE ERROR         |
| 3630 | 006050 | 005037 | 000714 | W5:    | CLR   | RTYFL      | :CLEAR RETRY COUNTER          |
| 3631 | 006054 | 005300 |        |        | DEC   | RO         | :SEE IF DONE ALL              |
| 3632 | 006056 | 001241 |        |        | BNE   | W0         | :IF NOT: BR                   |
| 3633 | 006060 | 005737 | 000564 | W6:    | TST   | TMEX       | :SEE IF TM                    |
| 3634 | 006064 | 001525 |        |        | BEQ   | WEX        | :IF NOT: BR                   |
| 3635 | 006066 | 005237 | 000700 |        | INC   | TMFLG      | :SET TM FLAG                  |
| 3636 | 006072 | 012737 | 026153 | 000654 | WTM:  | MOV        | #MSG54,EMADDR                 |
| 3637 | 006100 | 012737 | 000026 | 000674 |       | MOV        | #26,MTC1                      |
| 3638 | 006106 | 012777 | 000000 | 172402 |       | MOV        | #0,@FC                        |
| 3639 | 006114 | 012777 | 027452 | 172372 |       | MOV        | #WDATA,@BA                    |
| 3640 | 006122 | 012737 | 006134 | 000664 |       | MOV        | #WTMO,RTRN                    |
| 3641 | 006130 | 000137 | 021144 |        | JMP   | TAPG       | :WRITE TM                     |
| 3642 | 006134 | 032777 | 010000 | 172446 | WTMO: | BIT        | #10000,@SWR                   |
| 3643 | 006142 | 001076 |        |        | BNE   | WEX        |                               |
| 3644 | 006144 | 032777 | 000004 | 172350 |       | BIT        | #4,@DS                        |
| 3645 | 006152 | 001011 |        |        | BNE   | WTM1       | :SEE IF TM STATUS             |
| 3646 | 006154 | 012737 | 027452 | 021064 |       | MOV        | #WDATA,CADER                  |
| 3647 | 006162 | 012737 | 000001 | 021072 |       | MOV        | #1,DRVER                      |
| 3648 | 006170 | 004737 | 020136 |        | JSR   | PC,ERPT    | :PRINT TM ERROR               |
| 3649 | 006174 | 000404 |        |        | BR    | WTM2       |                               |
| 3650 | 006176 | 012703 | 027452 |        | WTM1: | MOV        | #WDATA,R3                     |
| 3651 | 006202 | 004737 | 017412 |        | JSR   | PC,ER2     | :GO CHECK FOR OTHER ERRORS    |
| 3652 | 006206 | 005737 | 000714 |        | WTM2: | TST        | RTYFL                         |
| 3653 | 006212 | 001401 |        |        | BEQ   | WTM3       | :IF NOT: BR                   |
| 3654 | 006214 | 000207 |        |        | RTS   | PC         | :ELSE RETURN TO RETRY ROUTINE |
| 3655 | 006216 | 005737 | 000710 |        | WTM3: | TST        | SERFL                         |
| 3656 | 006222 | 001446 |        |        | BEQ   | WEX        | :IF NOT: BR                   |
| 3657 | 006224 | 013704 | 000676 |        | MOV   | UNP,R4     |                               |
| 3658 | 006230 | 005264 | 001070 |        | INC   | WTER1(R4)  | :BUMP WRITE ERROR             |

|      |        |        |        |        |        |      |            |                             |
|------|--------|--------|--------|--------|--------|------|------------|-----------------------------|
| 3659 | 006234 | 032777 | 000020 | 172346 |        | BIT  | #20,@SWR   | :SEE IF SHOULD RETRY        |
| 3660 | 006242 | 001436 |        |        |        | BEQ  | WEX        | :IF NOT: BR                 |
| 3661 | 006244 | 013703 | 000724 |        |        | MOV  | ERSAV,R3   |                             |
| 3662 | 006250 | 042703 | 102700 |        |        | BIC  | #102700,R3 | :MASK UNRECOVERABLE ERROR   |
| 3663 | 006254 | 001410 |        |        |        | BEQ  | WTM4       | :IF SO: BR                  |
| 3664 | 006256 | 004737 | 022672 |        |        | JSR  | PC,PAPRT   | :PRINT HEADER               |
| 3665 | 006262 | 012704 | 026532 |        |        | MOV  | #MSG78,R4  |                             |
| 3666 | 006266 | 000004 |        |        |        | TYPE |            | :TYPE MSG                   |
| 3667 | 006270 | 004737 | 011252 |        |        | JSR  | PC,NRTP    | :PRINT ER FOR NON-RETRYABLE |
| 3668 | 006274 | 000421 |        |        |        | BR   | WEX        |                             |
| 3669 | 006276 | 005037 | 000702 |        | WTM4:  | CLR  | RPCNT      | :CLEAR REPEAT CNTR          |
| 3670 | 006302 | 013704 | 000676 |        |        | MOV  | UNP,R4     |                             |
| 3671 | 006306 | 005264 | 001050 |        |        | INC  | RTY1(R4)   | :BUMP RETRY CNTR            |
| 3672 | 006312 | 005037 | 000704 |        |        | CLR  | RTCNT      | :CLEAR RETRY CNTR           |
| 3673 | 006316 | 032777 | 002000 | 172264 |        | BIT  | #2000,@SWR | :SEE IF PRINT ERRORS        |
| 3674 | 006324 | 001003 |        |        |        | BNE  | WTM4A      | :IF NOT: BR                 |
| 3675 | 006326 | 012704 | 026246 |        |        | MOV  | #MSG64,R4  |                             |
| 3676 | 006332 | 000004 |        |        |        | TYPE |            | :TYPE MSG                   |
| 3677 | 006334 | 004737 | 006402 |        | WTM4A: | JSR  | PC,WRTY    | :GO DO RETRY                |
| 3678 | 006340 | 005037 | 000714 |        | WEX:   | CLR  | RTYFL      | :CLEAR RETRY FLAG           |
| 3679 | 006344 | 005037 | 000700 |        |        | CLR  | TMFLG      | :CLEAR TAPE MARK FLAG       |
| 3680 | 006350 | 005737 | 000662 |        |        | TST  | EOTREC     | :BRANCH IF NOT AT EOT       |
| 3681 | 006354 | 100011 |        |        |        | BPL  | WRWX       |                             |
| 3682 | 006356 | 017703 | 172226 |        | WRW:   | MOV  | @SWR,R3    |                             |
| 3683 | 006362 | 042703 | 177763 |        |        | BIC  | #177763,R3 |                             |
| 3684 | 006366 | 022703 | 000014 |        |        | CMP  | #14,R3     | :SEE IF WRITE ONLY          |
| 3685 | 006372 | 001002 |        |        |        | BNE  | WRWX       | :IF NOT: BR                 |
| 3686 | 006374 | 000137 | 004330 |        |        | JMP  | REOT       | :ELSE REWIND                |
| 3687 | 006400 | 000207 |        |        | WRWX:  | RTS  | PC         | :EXIT                       |

```

3689
3690
3691
3692
3693
3694 006402 012737 000001 000714 WRTY:  MOV #1,RTYFL ;SET RETRY FLAG
3695 006410 004737 007004 WRTY0: JSR PC,WRTSB ;GO SPACE REVERSE FOR REPEAT
3696 006414 005737 000700 1ST TMFLG ;SEE IF TAPE MARK TIME
3697 006420 001003 BNE WRTYTM ;IF SO: BR
3698 006422 004737 005562 JSR PC,W0 ;REWRITE RECORD
3699 006426 000402 BR WRTYR ;GO ON
3700 006430 004737 006072 WRTYTM: JSR PC,WTM ;GO WRITE TAPE MARK AGAIN
3701 006434 005737 000710 WRTYR: TST SERFL ;REWRITE GOOD
3702 006440 001024 BNE WRTY2 ;IF NOT: BR
3703 006442 005237 000702 INC RPCNT ;BUMP REPEAT COUNTER
3704 006446 022737 000003 000702 CMP #3,RPCNT ;SEE IF THREE GOOD REPEATS
3705 006454 001355 BNE WRTY0 ;IF NOT: REPEAT
3706 006456 032777 002000 172124 BIT #2000,@SWR ;SEE IF PRINT
3707 006464 001011 BNE WRTY1 ;IF NOT: BR
3708 006466 012704 026737 MOV #MSG105,R4
3709 006472 000004 TYPE ;TYPE MSG
3710 006474 012704 026270 MOV #MSG65,R4
3711 006500 000004 TYPE ;TYPE MSG
3712 006502 013703 000704 MOV RTCNT,R3
3713 006506 104400 TYPOCT ;PRINT RETRY NUMBER
3714 006510 000207 WRTY1: RTS PC ;RESUME TESTING
3715 006512 013703 000724 WRTY2: MOV ERSAV,R3 ;GET ER
3716 006516 005037 000650 CLR TEMP3 ;CLEAR RECOVERABLE ERROR INDICATOR
3717 006522 042703 102700 BIC #102700,R3 ;MASK RECOVERABLE BITS
3718 006526 001413 BEQ WRTY2A ;IF RECOVERABLE: BR
3719 006530 004737 022672 JSR PC,PAPRT ;PRINT HEADER
3720 006534 012704 026532 MOV #MSG78,R4
3721 006540 000004 TYPE ;TYPE MSG
3722 006542 004737 011252 JSR PC,NRTP ;PRINT ER
3723 006546 012737 000001 000650 MOV #1,TEMP3 ;SET FLAG
3724 006554 000407 BR WRTY2B
3725 006556 032777 002000 172024 WRTY2A: BIT #2000,@SWR ;SEE IF PRINT
3726 006564 001025 BNE WRTY3 ;IF NOT: BR
3727 006566 012704 027156 MOV #MSG110,R4
3728 006572 000004 TYPE ;TYPE MSG
3729 006574 012704 026270 WRTY2B: MOV #MSG65,R4 ;TYPE MSG
3730 006600 000004 TYPE ;TYPE MSG
3731 006602 013703 000704 MOV RTCNT,R3 ;PRINT RETRY NUMBER
3732 006606 104400 TYPOCT ;PRINT RETRY NUMBER
3733 006610 012704 027200 MOV #MSG111,R4 ;TYPE MSG
3734 006614 000004 TYPE ;TYPE MSG
3735 006616 013703 000702 MOV RPCNT,R3 ;PRINT REPEAT NUMBER
3736 006622 104400 TYPOCT ;PRINT REPEAT NUMBER
3737 006624 005737 000650 TST TEMP3 ;SEE IF DID NON-RECOVERABLE
3738 006630 001403 BEQ WRTY3 ;IF NOT: BR
3739 006632 005037 000650 CLR TEMP3 ;CLEAR FLAG
3740 006636 000207 RTS PC ;EXIT
3741 006640 005737 000704 WRTY3: TST RTCNT ;SEE IF FIRST RETRY
3742 006644 001004 BNE WRTY3A ;IF NOT: BR
3743 006646 013704 000676 MOV UNP,R4
3744 006652 005364 001070 DEC WTER1(R4) ;DECREMENT WRITE ERROR CNTR

```

```

3745 006655 013704 000676      WRTY3A: MOV      UNP,R4      ;GET UNIT NUMBER
3746 006662 016437 001030 000732 MOV      BTADDR(R4),BTPT ;GET ADDRESS OF UNIT BAD TAPE CNTR
3747 006670 017704 172036      MOV      @BTPT,R4      ;GET COUNTER
3748 006674 005724      TST      (R4)+        ;SET POINTER OFFSET
3749 006676 010477 172030      MOV      R4,@BTPT
3750 006702 013703 000732      MOV      BTPT,R3
3751 006706 060304      ADD      R3,R4        ;SET ABSOLUTE POINTER
3752 006710 013714 000656      MOV      BLCNTR,(R4)   ;SET BLOCK NUMBER
3753 006714 062704 000040      ADD      #40,R4       ;ADD RCNT OFFSET
3754 006720 013714 000554      MOV      RCNT,(R4)
3755 006724 160014      SUB      R0,(R4)      ;SET RECORD NUMBER
3756 006726 005214      INC      (R4)         ;CORRECT RECORD NUMBER
3757 006730 022777 000040 171774      CMP      #40,@BTPT    ;SEE IF TOO MANY BAD SPOTS
3758 006736 001002      BNE      WRTY4        ;IF NOT: BR
3759 006740 000137 007200      JMP      BTOV         ;ELSE GO TO BAD TAPE OVERFLOW
3760 006744 005237 000704      WRTY4: INC      RTCNT    ;BUMP RETRY COUNTER
3761 006750 022737 000004 000704      CMP      #4,RTCNT    ;SEE IF DONE 4 RETRIES
3762 006756 001410      BEQ      WRTY5        ;IF SO: BR
3763 006760 013704 000676      MOV      UNP,R4
3764 006764 005264 001050      INC      RTY1(R4)    ;BUMP RETRY COUNTER
3765 006770 005237 000734      INC      ERTFL       ;SET ERASE FLAG
3766 006774 000137 006410      JMP      WRTY0        ;DO NEXT RETRY
3767 007000 000137 007416      WRTY5: JMP      BTUR        ;ELSE GO TO BAD TAPE UNRECOVERABLE
3768
3769      ;WRITE RETRY BACKSPACE-ERASE SUBROUTINE*****
3770
3771 007004 005037 000710      WRTSB: CLR      SERFL     ;CLEAR FLAG
3772 007010 013737 000600 000670      MOV      TSTAL,STAL
3773 007016 004737 012132      JSR      PC,STALL    ;DO TURN AROUND DELAY
3774 007022 012737 026301 000654      MOV      #MSG66,EMADDR ;SET ERROR CODE
3775 007030 012777 177777 171460      MOV      #-1,@FC     ;SET TO BACKSPACE 1 RECORD
3776 007036 012777 033460 171450      MOV      #RDATA,@BA  ;SET BA
3777 007044 004737 012062      JSR      PC,BKRT     ;GO BACKSPACE
3778 007050 005737 000710      TST      SERFL       ;SEE IF ERROR
3779 007054 001406      BEQ      WRTSB1     ;IF NOT: BR
3780 007056 012737 000002 000726      WRTSB0: MOV      #2,BTFLG  ;SET FLAG
3781 007064 022626      CMP      (SP)+,(SP)+ ;RESET STACK
3782 007066 000137 004330      JMP      REOT        ;GO REWIND AND REMOVE FROM TESTING
3783 007072 005737 000734      WRTSB1: TST      ERTFL   ;SEE IF SHOULD ERASE
3784 007076 001001      BNE      WRTSB2     ;IF SO: BR
3785 007100 000207      RTS      PC          ;RETURN
3786 007102 005037 000734      WRTSB2: CLR      ERTFL   ;CLEAR ERASE FLAG
3787 007106 005037 000702      CLR      RPCNT      ;CLEAR REPEAT CNTR
3788 007112 005037 000710      CLR      SERFL     ;CLEAR FLAG
3789 007116 012737 026314 000654      MOV      #MSG67,EMADDR ;SET ERROR CODE
3790 007124 005077 171366      CLR      @FC       ;CLEAR FRAME COUNT
3791 007130 012737 000024 000674      MOV      #24,MTC1    ;SET ERASE OP-CODE
3792 007136 012777 027452 171350      MOV      #WDATA,@BA  ;SET BA
3793 007144 012737 007156 000664      MOV      #WRTSB3,RTRN ;SET RETURN ADDRESS
3794 007152 000137 021144      JMP      TAPG        ;GO ERASE
3795 007156 012703 027452      WRTSB3: MOV      #WDATA,R3 ;SET EXPT BA
3796 007162 004737 017412      JSR      PC,ER2     ;GO CHECK ERRORS
3797 007166 005737 000710      TST      SERFL     ;SEE IF ERROR
3798 007172 001737      BEQ      WRTSB1     ;IF NOT: BR
3799 007174 000137 007056      JMP      WRTSB0
3800

```

```

3801                                     ;BAD TAPE OVERFLOW SUBROUTINE*****
3802
3803 007200 005037 000714      BTOV:  CLR      RTYFL      ;CLEAR RETRY FLAG
3804 007204 012737 000001 000726  MOV      #1,BTFLG    ;SET BAD TAPE OVERFLOW FLAG
3805 007212 005726                TST      (SP)+      ;++B ADJUST STACK PTR
3806 007214 000137 004330      JMP      REOT        ;GO REWIND AND REMOVE FROM TESTING
3807 007220 013701 000732      BTOV0: MOV      BTPT,R1 ;SET TABLE POINTER
3808 007224 005721                TST      (R1)+
3809 007226 005000                CLR      R0
3810 007230 010003      BTOV1: MOV      R0,R3
3811 007232 000241                CLC
3812 007234 006003                ROR      R3          ;R3=R3/2 FOR CORRECT NUMBER
3813 007236 104400                TYPOCT          ;PRINT ENTRY NUMBER
3814 007240 012704 024705      MOV      #MSG13+1,R4
3815 007244 000004                TYPE          ;TYPE MSG
3816 007246 011103      MOV      (R1),R3
3817 007250 104400                TYPOCT          ;PRINT BLOCK NUMBER
3818 007252 012704 024712      MOV      #MSG14,R4
3819 007256 000004                TYPE          ;TYPE MSG
3820 007260 062701 000040      ADD      #40,R1     ;SET POINTER OFFSET FOR RECOED NUMBER
3821 007264 012103      MOV      (R1)+,R3
3822 007266 104400                TYPOCT          ;PRINT RECORD NUMBER
3823 007270 162701 000040      SUB      #40,R1     ;RESET POINTER FOR BLOCK NUMBER
3824 007274 005720                TST      (R0)+
3825 007276 020077 171430      CMP      R0,BTPT    ;SEE IF DONE
3826 007302 001404                BEQ      BTOV2      ;IF SO: BR
3827 007304 012704 025237      MOV      #MSG28,R4
3828 007310 000004                TYPE          ;TYPE MSG
3829 007312 000746                BR       BTOV1      ;CONTINUE
3830 007314 005737 000730      BTOV2: TST      BTSTF    ;SEE IF STAT ONLY PRINT
3831 007320 001007                BNE      BTOVX      ;IF SO: BR
3832 007322 012703 000041      MOV      #41,R3     ;SET SIZE OF TABLE
3833 007326 013704 000732      MOV      BTPT,R4    ;SET POINTER
3834 007332 005024      BTOV3: CLR      (R4)+  ;CLEAR TABLE
3835 007334 005303                DEC      R3          ;SEE IF DONE
3836 007336 001375                BNE      BTOV3      ;IF NOT: BR
3837 007340 000207      BTOVX: RTS      PC   ;RETURN
3838

```

```

3840
3841
3842
3843 007342 012704 025237
3844 007346 000004
3845 007350 013704 000676
3846 007354 016437 001030 000732
3847 007362 017703 171344
3848 007366 000241
3849 007370 006003
3850 007372 104400
3851 007374 012704 027212
3852 007400 000004
3853 007402 005777 171324
3854 007406 001001
3855 007410 000207
3856 007412 000137 007220
3857
3858
3859
3860 007416 004737 022672
3861 007422 012704 027040
3862 007426 000004
3863 007430 000207
3864

;BAD TAPE STATISTIC PRINT*****
BTPRT: MOV #MSG28,R4
TYPE ;TYPE MSG
MOV UNP,R4
MOV BTADDR(R4),BTPT ;SET TABLE POINTER
MOV @BTPT,R3
CLC
ROR R3 ;CORRECT NUMBER
TYPOCT ;PRINT NUMBER OF BAD SPOTS
MOV #MSG112,R4
TYPE ;TYPE MSG
TST @BTPT ;SEE IF ANY BAD SPOTS
BNE BTPRT1 ;IF SO: BR
RTS PC ;ELSE RETURN
BTPRT1: JMP BTOV0 ;PRINT STATS

;BAD TAPE UNRECOVERABLE SUBROUTINE*****
BTUR: JSR PC,PAPRT ;PRINT HEADER
MOV #MSG107,R4
TYPE ;TYPE MSG
RTS PC ;RESUME TESTING
  
```

```

3866
3867
3868
3869
3870
3871
3872
3873
3874
3875
3876
3877
3878
3879
3880
3881
3882 007432 012737 000002 000562 RSEQ: MOV #2,RDCMD
3883 007440 017704 171144 MOV @SWR,R4 ;READ SWITCHES
3884 007444 042704 177763 BIC #177763,R4 ;MASK READ BIIS & SEE IF BOTH READS
3885 007450 001004 BNE RSR ;IF NOT: BR
3886 007452 032777 000002 171130 BIT #2,@SWR ;SEE IF READ REVERSE FIRST
3887 007460 001050 BNE RSFR ;IF NOT: BR
3888 007462 032777 000004 171120 RSR: BIT #4,@SWR ;SEE IF SHOULD READ REVERSE
3889 007470 001005 BNE RSF ;IF NOT: BR
3890 007472 012737 010000 000562 MOV #10000,RDCMD ;LOAD READ REVERSE COMMAND
3891 007500 004737 007744 JSR PC,READ ;GO READ REVERSE
3892 007504 032777 000010 171076 RSF: BIT #10,@SWR ;SEE IF SHOULD READ FORWARD
3893 007512 001025 BNE RSEX ;IF NOT: BR
3894 007514 032737 010000 000562 BIT #10000,RDCMD ;SEE IF HAVE READ REVERSE
3895 007522 001406 BEQ RSF0 ;IF NOT: BR
3896 007524 013737 000600 000670 MOV TSTAL,STAL
3897 007532 004737 012132 JSR PC,STALL ;DO READ STALL
3898 007536 000406 BR RSF1
3899 007540 032777 000001 171042 RSF0: BIT #1,@SWR ;SEE IF WRITE
3900 007546 001002 BNE RSF1 ;IF NOT: BR
3901 007550 004737 011706 JSR PC,BKSP ;GO BACKSPACE
3902 007554 012737 000002 000562 RSF1: MOV #2,RDCMD ;LOAD READ FORWARD COMMAND
3903 007562 004737 007744 JSR PC,READ ;GO READ
3904 007566 005737 000662 RSEX: TST EOTREC ;BRANCH IF NOT AT EOT
3905 007572 100002 BPL 1$
3906 007574 000137 004330 JMP REOT ;ELSE GO TO REWIND
3907 007600 000207 1$: RTS PC ;EXIT
3908
3909 007602 012737 010000 000562 RSFR: MOV #10000,RDCMD
3910 007610 032777 000010 170772 BIT #10,@SWR ;SEE IF SHOULD READ FORWARD
3911 007616 001013 BNE RSFR1 ;IF NOT: BR
3912 007620 032777 000001 170762 BIT #1,@SWR ;SEE IF WRITE
3913 007626 001002 BNE PSFR0 ;IF NOT: BR
3914 007630 004737 011706 JSR PC,BKSP ;GO BACKSPACE TO START
3915 007634 012737 000002 000562 RSFR0: MOV #2,RDCMD ;LOAD READ FORWARD COMMAND
3916 007642 004737 007744 JSR PC,READ ;GO READ FORWARD
3917 007646 032777 000004 170734 RSFR1: BIT #4,@SWR ;SEE IF SHOULD READ REVERSE
3918 007654 001344 BNE RSEX ;IF NOT: BR
3919 007656 032737 010000 000562 BIT #10000,RDCMD
3920 007664 001005 BNE RSFR2 ;IF READ REVERSE: BR
3921 007666 013737 000600 000670 MOV TSTAL,STAL ;DO READ STALL

```



3934  
 3935  
 3936  
 3937  
 3938  
 3939  
 3940  
 3941  
 3942  
 3943  
 3944  
 3945  
 3946  
 3947  
 3948  
 3949  
 3950  
 3951  
 3952  
 3953  
 3954  
 3955  
 3956  
 3957  
 3958  
 3959  
 3960  
 3961  
 3962  
 3963  
 3964  
 3965  
 3966  
 3967  
 3968  
 3969  
 3970  
 3971  
 3972  
 3973  
 3974  
 3975  
 3976  
 3977  
 3978  
 3979  
 3980  
 3981  
 3982  
 3983  
 3984  
 3985  
 3986  
 3987  
 3988  
 3989

007744 013700 000554  
 007750 005737 000662  
 007754 100013  
 007756 032737 010000 000562  
 007764 001407  
 007766 042737 100000 000662  
 007774 013703 000662  
 010000 160300  
 010002 005200  
 010004 012737 024615 000654  
 010012 005037 000700  
 010016 032737 010000 000562  
 010024 001406  
 010026 005737 000564  
 010032 001403  
 010034 005237 000700  
 010040 005200  
 010042 013777 000556 170446  
 010050 012777 033460 170436  
 010056 032737 010000 000562  
 010064 001417  
 010066 013703 000556  
 010072 005103  
 010074 032737 000020 000552  
 010102 001402  
 010104 000241  
 010106 006003  
 010110 060377 170400  
 010114 012737 000076 000674  
 010122 000403

```

:*****
:READ ROUTINE:
:
:THIS ROUTINE PERFORMS THE READ OPERATION DETERMINED
:BY THE READ SEQUENCE ROUTINE ONE RECORD AT A TIME.
:AT THE END OF EACH READ OPERATION THE STATUS REGISTER
:IS SCANNED FOR EITHER END OF TAPE OR BEGINNING OF TAPE.
:IF EOT WAS REACHED, CONTROL WILL BE PASSED TO
:THE EOT SUBROUTINE TO REWIND THE UNIT AND FLAG IT
:UNAVAILABLE UNTIL ALL UNITS HAVE REACHED EOT.
:IF BOT WAS REACHED AN ERROR IS PRINTED AND THE
:PROGRAM WILL HALT. TESTING MAY BE RESUMED BY PRESSING
:THE CONTINUE SWITCH.
:IF A TAPE MARK IS EXPECTED (TM=1) THEN THE
:READ ROUTINE EXPECTS THE FIRST RECORD OF A
:READ REVERSE TO BE A TM, AND THE LAST RECORD
:OF A READ FORWARD TO BE A TM. REMEMBER
:THAT THE TM ADDS ONE (1) TO THE TOTAL NUMBER
:OF RECORDS IN A BLOCK.
:CONSOLE SWITCHES ELEVEN (11) AND THIRTEEN (13) DETERMINE WHETHER
:OR NOT TO CHECK FOR STATUS ERRORS (11) OR DATA ERRORS (13),
:CONSOLE SWITCH FIVE (5) IS USED TO CAUSE A CONTINUOUS
:READ AND SPACE (FORWARD OR REVERSE) OF THE CURRENT
:RECORD ON TAPE (YOZZLE).
:*****
  
```

```

READ:  MOV    RCNT,R0      ;LOAD REC CNTR
       TST    EOTREC    ;SEE IF EOT
       BPL    RDA       ;IF NOT: BR
       BIT    #10000,RDCMD ;SEE IF READ FORWARD
       BEQ    RDA       ;IF SU: BR
       BIC    #100000,EOTREC ;CLEAR FLAG
       MOV    EOTREC,R3 ;GET MODIFIED RECORD COUNT
       SUB    R3,R0     ;SET RECORD AT
       INC    R0        ;SET TO PROPER NUMBER OF RECORDS
RDA:   MOV    #MSG6,EMADDR ;SET ERROR MSG ADDRESS
       CLR    TMFLG
       BIT    #10000,RDCMD
       BEQ    RDO       ;IF READ FORWARD: BR
       TST    TMEX      ;SEE IF TM
       BEQ    RDO       ;IF NOT: BR
       INC    TMFLG     ;SET TM FLAG
       INC    R0
RDO:   MOV    FMCNT,@FC   ;LOAD CHAR CNTR
       MOV    #RDATA,@BA ;LOAD DATA ADDR
       BIT    #10000,RDCMD ;SEE IF READ REVERSE
       BEQ    RD1A      ;IF NOT: BR
       MOV    FMCNT,R3
       COM    R3
       BIT    #20,UDES   ;SEE IF CORE DUMP
       BEQ    RD1       ;IF NOT: BR
       CLC
       ROR    R3        ;R3 = FC/2
RD1:   ADD    R3,@BA     ;SET REVERSE BUS ADDRESS
       MOV    #76,MTC1  ;SET READ REVERSE
       BR    RD1B
  
```

```

3990 010124 012737 000070 000674 RD1A: MOV #70,MTC1 ;SET READ FORWARD
3991 010132 012737 010144 000664 RD1B: MOV #RD2,PTRN ;SET INTERRUPT RETURN ADDRESS
3992 010140 000137 021144 RD1D: JMP TAPG ;GO EXECUTE TAPE COMMAND
3993 010144 032737 010000 000562 RD2: BIT #10000,RDCMD ;SEE IF READ REVERSE
3994 010152 001014 BNE RD3 ;IF SO: BR
3995 010154 032777 002000 170340 BIT #2000,@DS ;SEE IF EOT
3996 010162 001410 BEQ RD3 ;IF NOT: BR
3997 010164 005737 000700 TST TMFLG ;SEE IF TM
3998 010170 001005 BNE RD3 ;IF SO: BR
3999 010172 010037 000662 MOV R0,EOTREC
4000 010176 052737 100000 000662 RD3: BIS #100000,EOTREC ;SET EOT FLAG
4001 010204 032777 000002 170310 BIT #2,@DS ;SEE IF AT LOAD POINT
4002 010212 001410 BEQ RD4 ;IF NOT: BR
4003 010214 004737 022672 JSR PC,PAPRT ;PRINT CYCLE NUMBER
4004 010220 012704 025016 MOV #MSG22,R4
4005 010224 000004 TYPE ;TYPE MSG
4006 010226 000000 HALT
4007 010230 000137 003160 JMP STARTA ;RESTART
4008 010234 032777 004000 170346 RD4: BIT #4000,@SWR ;SEE IF SHOULD CHECK ERRORS
4009 010242 001121 BNE RD5 ;IF NOT: BR
4010 010244 005737 000700 TST TMFLG
4011 010250 001472 BEQ RD4B ;IF NO TM EXPT: BR
4012 010252 032777 000004 170242 BIT #4,@DS
4013 010260 001024 BNE RD4A ;IF TM RECVD: BR
4014 010262 012737 033460 021064 MOV #RDATA,CADER ;SAVE EXPT BUS ADDRESS
4015 010270 012737 000002 021072 MOV #2,DRVER ;SET TM STATUS ERROR FLAG
4016 010276 004737 020136 JSR PC,ERPT ;GO PRINT TM ERROR
4017 010302 013704 000676 MOV UNP,R4
4018 010306 032737 010000 000562 BIT #10000,RDCMD ;SEE IF READ REVERSE
4019 010314 001403 BEQ 1$ ;IF NOT: BR
4020 010316 005264 001150 INC RDERR1(R4) ;BUMP READ REVERSE ERROR
4021 010322 000502 BR RD6
4022 010324 005264 001110 1$: INC RDER1(R4) ;BUMP READ FORWARD ERROR
4023 010330 000477 BR RD6
4024 010332 012703 033460 RD4A: MOV #RDATA,R3
4025 010336 032737 010000 000562 BIT #10000,RDCMD ;SEE IF READ REVERSE
4026 010344 001007 BNE RD4A0 ;IF SO: BR
4027 010346 032737 002000 000552 BIT #2000,UDES ;SEE IF IN PE
4028 010354 001025 BNE RD4A2 ;IF SO: BR
4029 010356 062703 000002 ADD #2,R3
4030 010362 000422 BR RD4A2
4031 010364 013704 000556 RD4A0: MOV FMCNT,R4
4032 010370 005104 COM R4
4033 010372 032737 000020 000552 BIT #20,UDES ;SEE IF CORE DUMP
4034 010400 001402 BEQ RD4A1 ;IF NOT: BR
4035 010402 000241 CLC
4036 010404 006004 ROR R4 ;SET TO FC/2
4037 010406 060403 RD4A1: ADD R4,R3 ;SET EXPT BUS ADDRESS
4038 010410 042703 000001 BIC #1,R3 ;MAKE EXPT ADDRESS EVEN
4039 010414 032737 002000 000552 BIT #2000,UDES ;SEE IF IN PE
4040 010422 001002 BNE RD4A2 ;IF SO: BR
4041 010424 162703 000002 SUB #2,R3
4042 010430 004737 017412 RD4A2: JSR PC,ER2
4043 010434 000402 BR RD4C
4044 010436 004737 017316 RD4B: JSR PC,ERCHK ;GO CHECK ERRORS
4045 010442 005737 000710 RD4C: TST SERFL

```

|      |        |        |        |        |           |              |  |                              |
|------|--------|--------|--------|--------|-----------|--------------|--|------------------------------|
| 4046 | 010446 | 001417 |        |        | BEQ       | RD5          |  | ;IF NO ERROR: BR             |
| 4047 | 010450 | 013704 | 000676 |        | MOV       | UNP,R4       |  |                              |
| 4048 | 010454 | 032737 | 010000 | 000562 | BIT       | #10000,RDCMD |  | ;SEE IF READ REVERSE         |
| 4049 | 010462 | 001003 |        |        | BNE       | RD4D         |  | ;IF SO: BR                   |
| 4050 | 010464 | 005264 | 001110 |        | INC       | RDER1(R4)    |  | ;BUMP READ FORWARD ERROR     |
| 4051 | 010470 | 000402 |        |        | BR        | RD4E         |  |                              |
| 4052 | 010472 | 005264 | 001150 |        | RD4D: INC | RDERR1(R4)   |  | ;BUMP READ REVERSE ERROR     |
| 4053 | 010476 | 004737 | 010700 |        | RD4E: JSR | PC,RDRTY     |  | ;GO RETRY                    |
| 4054 | 010502 | 005037 | 000714 |        | CLR       | RTYFL        |  | ;CLEAR RETRY FLAG            |
| 4055 | 010506 | 032777 | 020000 | 170074 | RD5: BIT  | #20000,@SWR  |  | ;SEE IF SHOULD DO DATA CHECK |
| 4056 | 010514 | 001005 |        |        | BNE       | RD6          |  | ;IF NOT: BR                  |
| 4057 | 010516 | 005737 | 000700 |        | TST       | TMFLG        |  |                              |
| 4058 | 010522 | 001002 |        |        | BNE       | RD6          |  |                              |
| 4059 | 010524 | 004737 | 015446 |        | JSR       | PC,DCHK      |  | ;GO CHECK DATA               |
| 4060 | 010530 | 005037 | 000710 |        | RD6: CLR  | SERFL        |  | ;CLEAR STATUS ERROR FLAG     |
| 4061 | 010534 | 004737 | 014272 |        | JSR       | PC,DS3       |  | ;CLEAR BUFFER                |
| 4062 | 010540 | 032777 | 000040 | 170042 | BIT       | #40,@SWR     |  | ;SEE IF SHOULD YOZZLE        |
| 4063 | 010546 | 001402 |        |        | BEQ       | RD7          |  | ;IF NOT: BR                  |
| 4064 | 010550 | 004737 | 011266 |        | JSR       | PC,YOZ       |  | ;ELSE GO YOZZLE              |
| 4065 | 010554 | 013737 | 000574 | 000670 | RD7: MOV  | RSTAL,STAL   |  | ;SET DELAY                   |
| 4066 | 010562 | 004737 | 012132 |        | JSR       | PC,STALL     |  | ;STALL                       |
| 4067 | 010566 | 032737 | 010000 | 000562 | BIT       | #10000,RDCMD |  | ;SEE IF READ REVERSE         |
| 4068 | 010574 | 001403 |        |        | BEQ       | RD7A         |  | ;IF NOT: BR                  |
| 4069 | 010576 | 005037 | 000700 |        | CLR       | TMFLG        |  | ;CLEAR TAPE MARK FLAG        |
| 4070 | 010602 | 000405 |        |        | BR        | RD10         |  |                              |
| 4071 | 010604 | 005737 | 000662 |        | RD7A: TST | EOTREC       |  | ;SEE IF EOT FOUND            |
| 4072 | 010610 | 100002 |        |        | BPL       | RD10         |  | ;IF NOT: BR                  |
| 4073 | 010612 | 012700 | 000001 |        | MOV       | #1,R0        |  | ;SET TO EOT                  |
| 4074 | 010616 | 005300 |        |        | RD10: DEC | R0           |  |                              |
| 4075 | 010620 | 001402 |        |        | BEQ       | RD11         |  | ;IF DONE ALL: BR             |
| 4076 | 010622 | 000137 | 010042 |        | JMP       | RDO          |  |                              |
| 4077 | 010626 | 032737 | 010000 | 000562 | RD11: BIT | #10000,RDCMD |  | ;SEE IF READ REVERSE         |
| 4078 | 010634 | 001016 |        |        | BNE       | RDEX         |  | ;IF SO: BR                   |
| 4079 | 010636 | 005737 | 000662 |        | TST       | EOTREC       |  | ;SEE IF FOUND EOT            |
| 4080 | 010642 | 100413 |        |        | BMI       | RDEX         |  | ;IF SO: BR                   |
| 4081 | 010644 | 005737 | 000564 |        | TST       | TMEX         |  | ;SEE IF TM EXPECTED          |
| 4082 | 010650 | 001410 |        |        | BEQ       | RDEX         |  | ;IF NOT: BR                  |
| 4083 | 010652 | 005737 | 000700 |        | TST       | TMFLG        |  | ;SEE IF TM FOUND             |
| 4084 | 010656 | 001005 |        |        | BNE       | RDEX         |  | ;IF SO: BR                   |
| 4085 | 010660 | 005237 | 000700 |        | INC       | TMFLG        |  | ;ELSE SET FLAG               |
| 4086 | 010664 | 005200 |        |        | INC       | R0           |  | ;SET RECORD COUNT TO ONE     |
| 4087 | 010666 | 000137 | 010042 |        | JMP       | RDO          |  | ;GO READ TM                  |
| 4088 | 010672 | 005037 | 000700 |        | RDEX: CLR | TMFLG        |  |                              |
| 4089 | 010676 | 000207 |        |        | RDX: RTS  | PC           |  | ;EXIT                        |

```
4091
4092
4093
4094
4095
4096
4097
4098
4099
4100
4101
4102 010700 032777 000020 167702 RDRTY: BIT #20,@SWR ;SEE IF RETRY INHIBITED
4103 010706 001001 BNE RDRT0 ;IF NOT: BR
4104 010710 000207 RTS PC ;ELSE RETURN
4105 010712 013703 000724 RDRT0: MOV ERSAV,R3
4106 010716 042703 102700 BIC #102700,R3 ;MARK NON-RECOVERABLE ERROR BITS
4107 010722 001410 BEQ RDRT1 ;IF NOT: BR
4108 010724 004737 022672 JSR PC,PAPRT ;PRINT HEADER
4109 010730 012704 026573 MOV #MSG79,R4
4110 010734 000004 TYPE ;TYPE MSG
4111 010736 004737 011252 JSR PC,NRTP ;PRINT ER FOR NON-RETRYABLE ERROR
4112 010742 000207 RDRT1A: RTS PC ;RETURN
4113 010744 032777 002000 167636 RDRT1: BIT #2000,@SWR ;SEE IF PRINT INHIBITED
4114 010752 001003 BNE RDRT1B ;IF SO: BR
4115 010754 012704 026246 MOV #MSG64,R4
4116 010760 000004 TYPE ;TYPE MSG
4117 010762 005037 000704 RDRT1B: CLR RTCNT ;CLEAR RETRY COUNTER
4118 010766 005037 000710 RDRTG: CLR SERFL ;CLEAR STATUS ERROR FLAG
4119 010772 012737 000002 000714 MOV #2,RTYFL ;SET READ RETRY FLAG
4120 011000 004737 011266 JSR PC,YOZ ;GO TO YOZZLE TO RETRY READ
4121 011004 005737 000710 TST SERFL ;SEE IF RETRY ERROR
4122 011010 001031 BNE RDRT5 ;IF SO: BR
4123 011012 032777 002000 167570 BIT #2000,@SWR
4124 011020 001011 BNE RDRT2
4125 011022 012704 026737 MOV #MSG105,R4
4126 011026 000004 TYPE ;TYPE MSG
4127 011030 012704 026270 MOV #MSG65,R4
4128 011034 000004 TYPE ;TYPE MSG
4129 011036 013703 000704 MOV RTCNT,R3
4130 011042 104400 TYPOCT ;PRINT RETRY NUMBER
4131 011044 013704 000676 RDRT2: MOV UNP,R4
4132 011050 032737 010000 000562 BIT #10000,RDCMD ;SEE IF READ REVERSE
4133 011056 001003 BNE RDRT3 ;IF SO: BR
4134 011060 005264 002670 INC RFSOFT(R4) ;ELSO BUMP FORWARD SOFT ERROR COUNTER
4135 011064 000402 BR RDRT4
4136 011066 005264 002710 RDRT3: INC RRSOFT(R4) ;BUMP ERRORS SOFT CNTR
4137 011072 000207 RDRT4: RTS PC ;RETURN
4138 011074 013703 000724 RDRT5: MOV ERSAV,R3 ;GET ER
4139 011100 005037 000650 CLR TEMP3 ;CLEAR RECOVERABLE ERROR INDICATOR
4140 011104 042703 102700 BIC #102700,R3 ;MASK RECOVERABLE BITS
4141 C'1110 001413 BEQ RDRT5A ;IF RECOVERABLE. BR
4142 011112 004737 022672 JSR PC,PAPRT ;PRINT HEADER
4143 011116 012704 026573 MOV #MSG79,R4
4144 011122 000004 TYPE ;TYPE MSG
4145 011124 004737 011252 JSR PC,NRTP ;PRINT ER
4146 011130 012737 000001 000650 MOV #1,TEMP3 ;SET FLAG
```

|      |        |        |        |        |         |        |              |  |                               |
|------|--------|--------|--------|--------|---------|--------|--------------|--|-------------------------------|
| 4147 | 011136 | 000404 |        |        |         | BR     | RDRT5B       |  |                               |
| 4148 | 011140 | 032777 | 002000 | 167442 | RDRT5A: | BIT    | #2000,@SWR   |  | ;SEE IF PRINT INHIBITED       |
| 4149 | 011146 | 001014 |        |        |         | BNE    | RDRT6        |  | ;IF SO: BR                    |
| 4150 | 011150 | 012704 | 026270 |        | RDRT5B: | MOV    | #MSG65,R4    |  |                               |
| 4151 | 011154 | 000004 |        |        |         | TYPE   |              |  | ;TYPE MSG                     |
| 4152 | 011156 | 013703 | 000704 |        |         | MOV    | RTCNT,R3     |  |                               |
| 4153 | 011162 | 104400 |        |        |         | TYPOCT |              |  | ;PRINT RETRY NUMBER           |
| 4154 | 011164 | 005737 | 000650 |        |         | TST    | TEMP3        |  | ;SEE IF DID NON-RECOVERABLE   |
| 4155 | 011170 | 001403 |        |        |         | BEQ    | RDRT6        |  | ;IF NOT: BR                   |
| 4156 | 011172 | 005037 | 000650 |        |         | CLR    | TEMP3        |  | ;CLEAR FLAG                   |
| 4157 | 011176 | 000207 |        |        |         | RTS    | PC           |  | ;EXIT                         |
| 4158 | 011200 | 005237 | 000704 |        | RDRT6:  | INC    | RTCNT        |  |                               |
| 4159 | 011204 | 023737 | 000704 | 000604 |         | CMP    | RTCNT,RETRY  |  | ;SEE IF DONE 8 RETRIES        |
| 4160 | 011212 | 001265 |        |        |         | BNE    | RDRTG        |  | ;IF NOT: BR                   |
| 4161 | 011214 | 012704 | 027255 |        |         | MOV    | #MSG115,R4   |  |                               |
| 4162 | 011220 | 000004 |        |        |         | TYPE   |              |  | ;TYPE MSG                     |
| 4163 | 011222 | 013704 | 000676 |        |         | MOV    | UNP,R4       |  |                               |
| 4164 | 011226 | 032737 | 010000 | 000562 |         | BIT    | #10000,RDCMD |  | ;SEE IF READ REVERSE          |
| 4165 | 011234 | 001003 |        |        |         | BNE    | RDRT7        |  | ;IF SO: BR                    |
| 4166 | 011236 | 005264 | 002730 |        |         | INC    | RFHARD(R4)   |  | ;BUMP FORWARD HARD ERROR CNTR |
| 4167 | 011242 | 000402 |        |        |         | BR     | RDRTX        |  |                               |
| 4168 | 011244 | 005264 | 002750 |        | RDRT7:  | INC    | RRHARD(R4)   |  | ;BUMP REVERSE HARD ERROR CNTR |
| 4169 | 011250 | 000207 |        |        | RDRTX:  | RTS    | PC           |  | ;RETURN                       |
| 4170 |        |        |        |        |         |        |              |  |                               |
| 4171 | 011252 | 013703 | 000724 |        | NRTP:   | MOV    | ERSAV,R3     |  | ;GET ER REGISTER              |
| 4172 | 011256 | 104400 |        |        |         | TYPOCT |              |  | ;PRINT ER                     |
| 4173 | 011260 | 004737 | 021110 |        |         | JSR    | PC,FRPRT     |  | ;PRINT F OR R                 |
| 4174 | 011264 | 000207 |        |        |         | RTS    | PC           |  | ;RETURN                       |

4176  
4177  
4178  
4179  
4180  
4181  
4182  
4183  
4184  
4185  
4186  
4187  
4188  
4189  
4190  
4191  
4192  
4193  
4194  
4195  
4196  
4197  
4198  
4199  
4200  
4201  
4202  
4203  
4204  
4205  
4206  
4207  
4208  
4209  
4210  
4211  
4212  
4213  
4214  
4215  
4216  
4217  
4218  
4219  
4220  
4221  
4222  
4223  
4224  
4225  
4226  
4227  
4228  
4229  
4230  
4231

011266 013737 000602 000670  
011274 004737 012132  
011300 012777 177777 167210  
011306 032737 010000 000562  
011314 001404  
011316 112737 000030 000674  
011324 000403  
011326 112737 000032 000674  
011334 012737 011354 000664  
011342 012737 177775 000670  
011350 000137 021144  
011354 005737 000700  
011360 001404  
011362 012737 040000 000670  
011370 000403  
011372 013737 000602 000670  
011400 004737 012132  
011404 012777 033460 167102  
011412 032737 010000 000562  
011420 001416  
011422 013703 000556  
011426 005103  
011430 032737 000020 000552  
011436 001401  
011440 000203  
011442 060377 167046  
011446 012737 000076 000674  
011454 000403  
011456 012737 000070 000674  
011464 013777 000556 167024  
011472 012737 011504 000664  
011500 000137 021144  
011504 032777 004000 167076  
011512 001050  
011514 005737 000700  
011520 001443  
011522 032737 010000 000562  
011530 001425  
011532 012703 033460  
011536 013704 000556  
011542 005104  
011544 032737 000020 000552  
011552 001401

```

:*****
:YOZZLE SUBROUTINE:
:
:THIS SUBROUTINE, ENTERED VIA SWITCH FIVE (5), IS USED TO PERFORM
:A CONTINUOUS READ AND SPACE OVER OF THE CURRENT RECORD ON TAPE.
:FULL STATUS AND DATA CHECKING MAY BE PERFORMED
:OR NOT VIA CONSOLE SWITCHES ELEVEN (11) AND THIRTEEN (13).
:A SOFTWARE DELAY IS PERFORMED BETWEEN EACH READ
:AND SPACE OPERATION AND MAY BE VARIED BY TYPING
:CNTRL C ON THE TTY AND ENTERING A VALUE IN RESPONSE
:TO THE PRINTED REQUEST.
:*****
YOZ:  MOV    YSTAL,STAL
      JSR    PC,STALL      ;DO YOZZLE STALL
YOZO: MOV    #-1,@FC      ;SET TO 1 RECORD SPACING
      BIT    #10000,RDCMD ;SEE IF READ REVERSE
      BEQ    YOZA         ;IF NOT: BR
      MOVB  #30,MTC1     ;SET TO SPACE FORWARD
      BR     YOZB
YOZA: MOVB  #32,MTC1     ;SET TO SPACE REVERSE
YOZB: MOV    #YOZC,RTRN  ;SET RETURN ADDRESS
      MOV    #177775,STAL ;SET TIME MULTIPLIER
      JMP    TAPG        ;GO YOZZLE
YOZC: TST    TMFLG      ;SEE IF TM
      BEQ    1$         ;IF NOT: BR
      MOV    #40000,STAL ;SET TM STALL
      BR     2$
1$:  MOV    YSTAL,STAL
2$:  JSR    PC,STALL      ;DO YOZZLE STALL
      MOV    #RDATA,@BA  ;SET BUS ADDRESS
      BIT    #10000,RDCMD ;SEE IF READ REVERSE
      BEQ    YOZC1      ;IF NOT: BR
      MOV    FMCNT,R3
      COM   R3
      BIT    #20,UDES   ;SEE IF CORE DUMP
      BEQ    YOZC0      ;IF NOT: BR
      ASR   R3          ;R3 = FC/2
YOZC0: ADD   R3,@BA     ;SET REVERSE BUS ADDRESS
      MOV   #76,MTC1   ;SET READ REVERSE
      BR   YOZC2
YOZC1: MOV   #70,MTC1  ;SET READ FORWARD
YOZC2: MOV   FMCNT,@FC ;SET CHARACTER COUNT
      MOV   #YOZD,RTRN ;SET RETURN ADDRESS
      JMP   TAPG      ;GO READ
YOZD:  BIT   #4000,@SWR ;SEE IF SHOULD CHECK ERRORS
      BNE  YOZE       ;IF NOT: BR
      TST  TMFLG     ;SEE IF TAPE MARK TIME
      BEQ  YOZD1     ;IF NOT: BR
      BIT  #10000,RDCMD ;SEE IF READ REVERSE
      BEQ  YOZD0     ;IF NOT: BR
      MOV  #RDATA,R3
      MOV  FMCNT,R4
      COM  R4
      BIT  #20,UDES   ;SEE IF CORE DUMP
      BEQ  YOZD4     ;IF NOT: BR

```



4261  
4262  
4263  
4264  
4265  
4266  
4267  
4268  
4269  
4270  
4271  
4272  
4273  
4274  
4275  
4276  
4277  
4278  
4279  
4280  
4281  
4282  
4283  
4284  
4285  
4286  
4287  
4288  
4289  
4290  
4291  
4292  
4293  
4294  
4295  
4296  
4297  
4298  
4299  
4300  
4301  
4302  
4303  
4304  
4305  
4306  
4307  
4308  
4309  
4310  
4311

|        |        |        |        |
|--------|--------|--------|--------|
| 011706 | 013737 | 000600 | 000670 |
| 01,714 | 004737 | 012132 |        |
| 011720 | 012737 | 024645 | 000654 |
| 011726 | 012777 | 033460 | 166560 |
| 011734 | 005737 | 000564 |        |
| 011740 | 001440 |        |        |
| 011742 | 012777 | 177777 | 166546 |
| 011750 | 012737 | 000032 | 000674 |
| 011756 | 012737 | 011770 | 000664 |
| 011764 | 000137 | 021144 |        |
| 011770 | 032777 | 010000 | 166612 |
| 011776 | 001021 |        |        |
| 012000 | 012737 | 026162 | 000654 |
| 012006 | 032777 | 000004 | 166506 |
| 012014 | 001006 |        |        |
| 012016 | 012737 | 033460 | 021064 |
| 012024 | 004737 | 020136 |        |
| 012030 | 000404 |        |        |
| 012032 | 012703 | 033460 |        |
| 012036 | 004737 | 017412 |        |
| 012042 | 013700 | 000554 |        |
| 012046 | 005400 |        |        |
| 012050 | 012737 | 024645 | 000654 |
| 012056 | 010077 | 166434 |        |
| 012062 | 012737 | 000032 | 000674 |
| 012070 | 012737 | 012106 | 000664 |
| 012076 | 010037 | 000670 |        |
| 012102 | 000137 | 021144 |        |
| 012106 | 012703 | 033460 |        |
| 012112 | 004737 | 017412 |        |
| 012116 | 013737 | 000600 | 000670 |
| 012124 | 004737 | 012132 |        |
| 012130 | 000207 |        |        |

```

:*****
:BACKSPACE SUBROUTINE:
:
:THIS SUBROUTINE IS USED TO PERFORM THE
:BACKSPACE OPERATION REQUIRED BY THE READ
:ROUTINE FOR READ FORWARD AFTER WRITING.
:IF A TAPE MARK IS EXPECTED (TM=1) THEN THE SPACE
:ROUTINE ASSUMES THAT THE TM WILL BE FIRST WHEN
:BACKSPACING. THEREFORE TWO OPERATIONS ARE REQUIRED
:TO SPACE OVER A BLOCK. FIRST SPACE OVER THE TM, THEN
:SPACE OVER THE DATA RECORDS.
:A CHECK FOR RECORD COUNT ZERO IS MADE AT THE
:END OF THE SPACE OPERATION TO ASSURE THAT PROPER
:TAPE POSITIONING WAS DONE.
:*****
BKSP:  MOV    TSTAL,STAL
      JSR    PC,STALL           ;DO TURN AROUND STALL
      MOV    #MSG10,EMADDR
      MOV    #RDATA,@BA
      TST    TMEX               ;SEE IF TM
      BEQ    B0                 ;IF NOT: BR
      MOV    #-1,@FC
      MOV    #32,MTC1
      MOV    #BKTM,RTRN
      JMP    TAPG               ;SPACE TO TM
BKTM:  BIT    #10000,@SWR       ;SEE IF SHOULD CHECK ERROR
      BNE    B0                 ;IF NOT: BR
      MOV    #MSG55,EMADDR
      BIT    #4,@DS             ;SEE IF TM
      BNE    BKTMO              ;IF SO: BR
      MOV    #RDATA,CADER
      JSR    PC,ERPT            ;PRINT ERROR
      BR     B0
BKTM0: MOV    #RDATA,R3
      JSR    PC,ER2
B0:    MOV    RCNT,R0
      NEG    R0                 ;BUILD SPACE AMOUNT
      MOV    #MSG10,EMADDR       ;SET ERROR MMSG ADDRESS
      MOV    R0,@FC
BKRT:  MOV    #32,MTC1          ;SET SPACE REVERSE
      MOV    #B1,RTRN           ;SET RETURN ADDRESS
      MOV    R0,STAL            ;SET INTERRUPT TIME MULTIPLIER
      JMP    TAPG               ;GO DO SPACE
B1:    MOV    #RDATA,R3
      JSR    PC,ER2
B2:    MOV    TSTAL,STAL        ;DO STALL
      JSR    PC,STALL           ;STALL
      RTS    PC                 ;EXIT

```

4313  
4314  
4315  
4316  
4317  
4318  
4319  
4320  
4321  
4322  
4323  
4324  
4325  
4326  
4327  
4328  
4329  
4330  
4331  
4332  
4333  
4334

012132 005337 000670  
012136 001375  
012140 000207

STALL: DEC STAL  
BNE STALL ;DELAY  
RTS PC ;EXIT

```
*****  
;STALL ROUTINE:  
;  
;THIS ROUTINE IS USED TO PROVIDE SOFTWARE DELAYS  
;DURING READ, WRITE, TURN AROUND, AND YOZZLE.  
;THE DELAY TIMES MAY BE SET BY THE OPERATOR AT  
;INITIAL START FROM 200(8) OR MAY BE MODIFIED  
;AT ANY TIME BY ENTERING CNTRL C ON THE TTY AND  
;INSERTING NEW VALUES IN RESPONSE TO THE REQUEST.  
;THE READ STALL AND THE WRITE STALL ARE DELAYS  
;EXECUTED BETWEEN EACH RECORD OF THE DATA BLOCK.  
;THE TURN AROUND STALL IS EXECUTED EACH TIME  
;THE DIRECTION OF TAPE MOVEMENT IS CHANGED AND  
;ALSO EACH TIME THE TAPE OPERATION CHANGES FROM  
;WRITE TO READ OR READ TO WRITE. THE YOZZLE  
;STALL IS EXECUTED ONLY DURING THE YOZZLE ROUTINE.  
*****
```

4336  
4337  
4338  
4339  
4340  
4341  
4342  
4343  
4344  
4345  
4346  
4347  
4348  
4349  
4350  
4351  
4352  
4353  
4354  
4355  
4356  
4357  
4358  
4359  
4360  
4361  
4362  
4363  
4364  
4365  
4366  
4367  
4368  
4369  
4370  
4371  
4372  
4373

|        |        |        |        |
|--------|--------|--------|--------|
| 012142 | 012701 | 177760 |        |
| 012146 | 012702 | 175000 |        |
| 012152 | 004737 | 023254 |        |
| 012156 | 042737 | 000001 | 000630 |
| 012164 | 013737 | 000630 | 000556 |
| 012172 | 012737 | 177777 | 014330 |
| 012200 | 000207 |        |        |
| 012202 | 012702 | 000001 |        |
| 012206 | 012701 | 000500 |        |
| 012212 | 004737 | 023254 |        |
| 012216 | 013737 | 000630 | 000554 |
| 012224 | 000207 |        |        |

```
*****  
:RANDOM CHARACTER COUNT GENERATOR:  
:  
:THIS ROUTINE ENTERED VIA CONSOLE SWITCH  
:SEVEN (7) IS USED TO GENERATE A RANDOM  
:CHARACTER COUNT FOR EACH DATA BLOCK.  
:ALL RECORDS WITHIN A GIVEN BLOCK WILL BE  
:THE SAME, BUT EACH BLOCK WILL VARY.  
:THE LIMITS ARE TWENTY (20) TO FOUR THOUSAND  
:(4000) OCTAL CHARACTERS PER RECORD.  
:*****
```

```
CCNTR:  MOV    #-20,R1      ;SET HIGH LIMIT  
        MOV    #-3000,R2  ;SET LOW LIMIT  
        JSR    PC,RANG    ;GO GENERATE NUMBER  
        BIC    #1,RANSV   ;  
        MOV    RANSV,FMCNT ;SET CHAR COUNT  
        MOV    #-1,PATS   ;PRESET DATA PATTERN  
        RTS    PC        ;EXIT
```

```
*****  
:RANDOM RECORD COUNT GENERATOR:  
:  
:THIS ROUTINE ENTERED VIA CONSOLE SWITCH SIX (6)  
:IS USED TO GENERATE A RANDOM NUMBER OF RECORDS  
:FOR EACH BLOCK OF DATA.  
:THE LIMITS ARE ONE (1) TO FIVE HUNDRED (500) OCTAL  
:RECORDS PER BLOCK.  
:*****
```

```
RCNTR:  MOV    #1,R2      ;SET LOW LIMIT  
        MOV    #500,R1   ;SET HIGH LIMIT  
        JSR    PC,RANG    ;GO GENERATE NUMBER  
        MOV    RANSV,RCNT ;SET RECORD COUNT  
        RTS    PC        ;EXIT
```

4375  
 4376  
 4377  
 4378  
 4379  
 4380  
 4381  
 4382  
 4383  
 4384  
 4385  
 4386  
 4387  
 4388  
 4389  
 4390  
 4391  
 4392  
 4393  
 4394  
 4395  
 4396  
 4397  
 4398  
 4399  
 4400  
 4401  
 4402  
 4403  
 4404  
 4405  
 4406  
 4407  
 4408  
 4409  
 4410  
 4411  
 4412  
 4413  
 4414  
 4415  
 4416  
 4417  
 4418  
 4419  
 4420  
 4421  
 4422  
 4423  
 4424  
 4425  
 4426  
 4427  
 4428  
 4429  
 4430

|        |        |        |
|--------|--------|--------|
| 012226 | 005737 | 000636 |
| 012232 | 001002 |        |
| 012234 | 000137 | 013714 |
| 012240 | 005037 | 000676 |
| 012244 | 005037 | 005054 |
| 012250 | 012700 | 000010 |
| 012254 | 012701 | 000746 |
| 012260 | 005021 |        |
| 012262 | 005300 |        |
| 012264 | 001375 |        |

```

:*****
:TEST CONDITION ENTRY ROUTINE:
:
:THIS ROUTINE IS USED TO ALLOW THE OPERATOR
:TO ENTER, AT THE TTY, THE NECESSARY PARAMETERS
:TO RUN THE PROGRAM AS HE WISHES. THE
:ROUTINE IS ONLY ENTERED UPON INITIAL STARTING
:FROM LOCATION 200(8).
:THE MAIN PURPOSE OF THIS ROUTINE IS TO ESTABLISH
:A TABLE OF DEVICES TO BE TESTED. THIS TABLE
:CONSISTS OF AN ENTRY FOR EACH OF ONE (1) TO
:EIGHT (8) DEVICES. EACH ENTRY CONTAINS THE
:SLAVE NUMBER, DENSITY, PARITY, AND
:FORMAT. THE INFORMATION IS ENTERED
:IN RESPONSE TO PRINTED REQUESTS AT THE TTY.
:SLAVES MAY BE ENTERED IN ANY ORDER. EACH
:PARAMETER IS CHECKED FOR LEGALITY BEFORE BEING
:SET INTO THE TABLE.
:THE DRIVE NUMBER REQUEST WILL ALSO CHECK THE MASSBUS
:FOR THE PRESENCE OF THE REQUESTED DRIVE. IF IT IS NOT FOUND,
:A NON-EXIST DRIVE MESSAGE WILL BE PRINTED AND ANOTHER DRIVE
:REQUEST MADE. WHEN THE DRIVE IS FOUND, THE RESPONSE IS STORED
:AND CONTROL PASSED TO THE SLAVE SELECT ROUTINE.
:THE SLAVE SELECT ROUTINE ALSO CHECKS FOR THE PRESENCE OF THE
:SLAVE. IF IT IS NOT PRESENT, A MESSAGE IS PRINTED AND ANOTHER
:REQUEST IS ISSUED. WHEN THE SELECTED SLAVE IS FOUND TO BE
:PRESENT, A MESSAGE IS PRINTED IF IT IS A 7 CHANNEL DRIVE
:TO ASSIST IN SELECTING DENSITY, PARITY, AND FORMAT.
:UPON COMPLETION OF THE DEVICE TABLE, REQUESTS
:ARE PRINTED FOR ENTRY OF THE NUMBER OF CHARACTERS
:PER RECORD AND THE NUMBER OF RECORDS PER BLOCK. THE
:NEXT REQUEST IS FOR A PATTERN NUMBER TO BE USED
:FOR WRITING AND CHECKING OF READ DATA.
:FOLLOWING THE PATTERN REQUEST IS THE TAPE MARK OPTION.
:RESPONDING TO THE REQUEST (TM=) WITH A ONE (1)
:WILL CAUSE THE PROGRAM TO WRITE A TM AT THE
:END OF EACH DATA BLOCK AND TO EXPECT THE
:TM TO BE DETECTED IN EITHER READ FORWARD AND REVERSE
:OR DURING SPACE OPERATION. A RESPONSE OF ZERO (TM=0)
:DISALLOWS WRITING OF THE TM AND CAUSES THE READ
:AND SPACE ROUTINES TO EXPECT NO TM TO BE PRESENT.
:THE LAST REQUESTS ARE FOR ENTRY OF THE DESIRED
:WRITE, READ, AND TURN AROUND STALLS.
:*****

```

```

TINP:  TST      TINP      ;SEE IF SHOULD INPUT FROM TTY
       BNE     1$      ;IF SO. BR
       JMP     TINP4    ;GET SWITCHES
1$:    CLR     UNP      ;CLEAR TABLE POINTER
       CLR     REOTC   ;CLEAR EOT UNIT COUNTER
       MOV     #10,R0  ;SET SIZE OF TABLE
       MOV     #UN1,R1 ;SET START OF TABLE
3$:    CLR     (R1)+   ;CLEAR TABLE
       DEC     R0      ;SEE IF DONE
       BNE     3$      ;IF NOT: BR

```

|      |        |        |        |        |        |              |  |             |
|------|--------|--------|--------|--------|--------|--------------|--|-------------|
| 4431 | 012266 | 012704 | 025306 |        | MOV    | #MSG31,R4    |  |             |
| 4432 | 012272 | 005737 | 000736 |        | TST    | ASEQF        | :SEE IF ALTO SEQ                             |             |
| 4433 | 012276 | 001402 |        |        | BEQ    | 4\$          | :IF NOT: BR                                  |             |
| 4434 | 012300 | 012704 | 025241 |        | MOV    | #MSG30,R4    | :SET AUTO SEQ HDR                            |             |
| 4435 | 012304 | 010446 |        | 4\$:   | MOV    | R4,-(SP)     | :SAVE ADDRESS OF MESSAGE                     |             |
| 4436 | 012306 | 000004 |        |        | TYPE   |              | :TYPE MSG                                    |             |
| 4437 | 012310 | 105036 |        |        | CLRB   | @(SP)+       | :DO NOT TYPE TITLE ON RESTART                |             |
| 4438 | 012312 | 012704 | 025363 |        | MOV    | #MSG31A,R4   | :TYPE INSTRUCTION                            |             |
| 4439 | 012316 | 000004 |        |        | TYPE   |              |  |             |
| 4440 | 012320 | 105037 | 025363 |        | CLRB   | MSG31A       | :DO NOT TYPE STARTUP INSTRUCTIONS ON RESTART |             |
| 4441 | 012324 | 005737 | 014076 |        | TST    | SCVFL        | :SEE IF SHORT CONVERSATION                   |             |
| 4442 | 012330 | 001067 |        |        | BNE    | 6\$          | :IF SO: BR                                   |             |
| 4443 | 012332 | 012704 | 026452 |        | MOV    | #MSG74,R4    |  |             |
| 4444 | 012336 | 000004 |        |        | TYPE   |              | :TYPE MSG                                    |             |
| 4445 | 012340 | 013703 | 000544 |        | MOV    | REGS,R3      |  |             |
| 4446 | 012344 | 104400 |        |        | TYPOCT |              | :PRINT CURRENT REG START                     |             |
| 4447 | 012346 | 012705 | 000544 |        | MOV    | #REGS,R5     | :SAVE ADDRESS LOCATION                       |             |
| 4448 | 012352 | 012701 | 000007 |        | MOV    | #7,R1        | :SET SIZE OF ENTRY                           |             |
| 4449 | 012356 | 012702 | 176400 |        | MOV    | #176400,R2   | :SET UPPER LIMIT                             |             |
| 4450 | 012362 | 012703 | 172300 |        | MOV    | #172300,R3   | :SET LOWER LIMIT                             |             |
| 4451 | 012366 | 004737 | 023442 |        | JSR    | PC,TTR       | :GO GET RESPONSE                             |             |
| 4452 | 012372 | 012704 | 026475 |        | MOV    | #MSG75,R4    |  |             |
| 4453 | 012376 | 000004 |        |        | TYPE   |              | :TYPE MSG                                    |             |
| 4454 | 012400 | 013703 | 000546 |        | MOV    | VECT,R3      |  |             |
| 4455 | 012404 | 104400 |        |        | TYPOCT |              | :PRINT CURRENT VECTOR                        |             |
| 4456 | 012406 | 012705 | 000546 |        | MOV    | #VECT,R5     | :SET SAVE LOCATION                           |             |
| 4457 | 012412 | 012701 | 000004 |        | MOV    | #4,R1        | :SET SIZE OF ENTRY                           |             |
| 4458 | 012416 | 012702 | 000224 |        | MOV    | #224,R2      | :SET UPPER LIMIT                             |             |
| 4459 | 012422 | 012703 | 000150 |        | MOV    | #150,R3      | :SET LOWER LIMIT                             |             |
| 4460 | 012426 | 004737 | 023442 |        | JSR    | PC,TTR       | :GO GET RESPONSE                             |             |
| 4461 | 012432 | 013700 | 000546 |        | MOV    | VECT,R0      | :GET VECTOR ADDRESS                          |             |
| 4462 | 012436 | 012720 | 022006 |        | MOV    | #MTINT,(R0)+ | :LOAD VECTOR WITH HANDLER ADDRESS            |             |
| 4463 | 012442 | 012710 | 000340 |        | MOV    | #340,(R0)    | :LOAD PRIORITY LEVEL                         |             |
| 4464 | 012446 | 013700 | 000544 |        | MOV    | REGS,R0      | :GET STARTING REGISTER ADDRESS               |             |
| 4465 | 012452 | 012701 | 000016 |        | MOV    | #16,R1       | :SET NUMBER OF REGISTERS                     |             |
| 4466 | 012456 | 012702 | 000510 |        | MOV    | #C1,R2       | :GET FIRST ADDRESS LOCATION                  |             |
| 4467 | 012462 | 010022 |        | 5\$:   | MOV    | R0,(R2)+     | :BUILD TABLE OF ADDRESSES                    |             |
| 4468 | 012464 | 062700 | 000002 |        | ADD    | #2,R0        | :BUMP ADDRESS                                |             |
| 4469 | 012470 | 005301 |        |        | DEC    | R1           | :SEE IF DONE                                 |             |
| 4470 | 012472 | 001373 |        |        | BNE    | 5\$          | :IF NOT: BR                                  |             |
| 4471 | 012474 | 005737 | 000736 |        | TST    | ASEQF        | :SEE IF AUTO SEQ                             |             |
| 4472 | 012500 | 001403 |        |        | BEQ    | 6\$          | :IF NOT: BR                                  |             |
| 4473 | 012502 | 005726 |        |        | TST    | (SP)+        | :RESET STACK POINTER                         |             |
| 4474 | 012504 | 000137 | 022024 |        | JMP    | ASEQ         | :GO TO AUTO SEQUENCE                         |             |
| 4475 | 012510 | 012777 | 000040 | 166002 | 6\$:   | MOV          | #40,@CS                                      | :INITIALIZE |
| 4476 | 012516 | 012704 | 026117 |        | MOV    | #MSG52,R4    |  |             |
| 4477 | 012522 | 000004 |        |        | TYPE   |              | :TYPE MSG                                    |             |
| 4478 | 012524 | 012705 | 000550 |        | MOV    | #DVN,R5      | :GET ADDRESS                                 |             |
| 4479 | 012530 | 012701 | 000002 |        | MOV    | #2,R1        | :SET SIZE OF RESPONSE                        |             |
| 4480 | 012534 | 012702 | 000007 |        | MOV    | #7,R2        | :SET UPPER LIMIT                             |             |
| 4481 | 012540 | 012703 | 000000 |        | MOV    | #0,R3        | :SET LOWER LIMIT                             |             |
| 4482 | 012544 | 004737 | 023442 |        | JSR    | PC,TTR       | :GO GET DRIVE NUMBER                         |             |
| 4483 | 012550 | 013777 | 000550 | 165742 | MOV    | DVN,@CS      |  |             |
| 4484 | 012556 | 005777 | 165726 |        | TST    | @C1          | :ACCESS DRIVE                                |             |
| 4485 | 012562 | 032777 | 010000 | 165730 | BIT    | #10000,@CS   | :SEE IF NED                                  |             |
| 4486 | 012570 | 001411 |        |        | BEQ    | TINP0        | :IF NOT: BR                                  |             |

|      |        |        |        |        |             |             |   |
|------|--------|--------|--------|--------|-------------|-------------|---|
| 4487 | 012572 | 012704 | 026407 |        | MOV         | #MSG71,R4   |   |
| 4488 | 012576 | 000004 |        |        | TYPE        |             | ;TYPE MSG                               |
| 4489 | 012600 | 013704 | 000510 |        | MOV         | C1,R4       |   |
| 4490 | 012604 | 005204 |        |        | INC         | R4          |   |
| 4491 | 012606 | 152714 | 000100 |        | BISB        | #100,(R4)   | ;CLEAR TRE                              |
| 4492 | 012612 | 000736 |        |        | BR          | 6S          | ;RETRY DVN                              |
| 4493 | 012614 | 012704 | 025450 | TINPO: | MOV         | #MSG32,R4   |   |
| 4494 | 012620 | 000004 |        |        | TYPE        |             | ;TYPE MSG                               |
| 4495 | 012622 | 005037 | 000646 |        | CLR         | TEMP2       | ;CLEAR BUFFER                           |
| 4496 | 012626 | 012705 | 000646 |        | MOV         | #TEMP2,R5   | ;SET UNIT DESCRIPTION BUFFER ADDRESS    |
| 4497 | 012632 | 012701 | 000002 |        | MOV         | #2,R1       | ;SET NUMBER OF CHARACTERS TO INPUT      |
| 4498 | 012636 | 012702 | 000007 |        | MOV         | #7,R2       | ;SET MAXIMUM LIMIT                      |
| 4499 | 012642 | 012703 | 000000 |        | MOV         | #0,R3       | ;SET MINIMUM LIMIT                      |
| 4500 | 012646 | 004737 | 023442 |        | JSR         | PC,TTR      | ;GO GET UNIT NUMBER                     |
| 4501 | 012652 | 005737 | 000644 |        | TST         | TEMP1       | ;SEE IF HAVE NEW PARAMETER              |
| 4502 | 012656 | 001012 |        |        | BNE         | TINPOB      | ;IF SO: BR                              |
| 4503 | 012660 | 005737 | 000676 |        | TST         | UNP         | ;SEE IF FIRST ENTRY                     |
| 4504 | 012664 | 001753 |        |        | BEQ         | TINPO       |   |
| 4505 | 012666 | 013700 | 000676 |        | MOV         | UNP,R0      |   |
| 4506 | 012672 | 012760 | 177777 | 000746 | MOV         | #-1,UN1(R0) | ;SET END UNIT TABLE                     |
| 4507 | 012700 | 000137 | 013300 |        | JMP         | TINP2C      | ;GO GET RECORD COUNT                    |
| 4508 | 012704 | 013700 | 000676 |        | TINPOB: MOV | UNP,R0      |   |
| 4509 | 012710 | 042760 | 000007 | 000746 | BIC         | #7,UN1(R0)  | ;CLEAR UNIT NUMBER                      |
| 4510 | 012716 | 004737 | 014110 |        | JSR         | PC,TPOS1    | ;GO LOAD UNIT NUMBER TO PROPER POSITION |
| 4511 | 012722 | 012777 | 000040 | 165570 | MOV         | #40,@CS     |   |
| 4512 | 012730 | 013777 | 000550 | 165562 | MOV         | DVN,@CS     |   |
| 4513 | 012736 | 016077 | 000746 | 165576 | MOV         | UN1(R0),@TC | ;LOAD UNIT NUMBER                       |
| 4514 | 012744 | 032777 | 002000 | 165564 | TINPOC: BIT | #2000,@DT   | ;SEE IF SLAVE PRESENT                   |
| 4515 | 012752 | 001004 |        |        | BNE         | TINPOD      | ;IF SO: BR                              |
| 4516 | 012754 | 012704 | 026175 |        | MOV         | #MSG57,R4   |   |
| 4517 | 012760 | 000004 |        |        | TYPE        |             | ;TYPE MSG                               |
| 4518 | 012762 | 000714 |        |        | BR          | TINPO       | ;REDO                                   |
| 4519 | 012764 | 017703 | 165546 |        | TINPOD: MOV | @DT,R3      | ;GET CONTENTS OF DT REG                 |
| 4520 | 012770 | 042703 | 000007 |        | BIC         | #7,R3       | ;CLEAR DRIVE TYPE #                     |
| 4521 | 012774 | 022703 | 142050 |        | CMP         | #142050,R3  | ;SEE IF 9TRK TM03,TU45                  |
| 4522 | 013000 | 001410 |        |        | BEQ         | TINPOE      | ;IF SO: BR                              |
| 4523 | 013002 | 012704 | 026072 |        | MOV         | #MSG50,R4   | ;ILLEGAL DRIVE TYPE                     |
| 4524 | 013006 | 000004 |        |        | TYPE        |             | ;TYPE MSG                               |
| 4525 | 013010 | 017703 | 165522 |        | MOV         | @DT,R3      |   |
| 4526 | 013014 | 042703 | 000007 |        | BIC         | #7,R3       | ;CLEAR SLAVE #                          |
| 4527 | 013020 | 104400 |        |        | TYPOCT      |             | ;PRINT DRIVE TYPE REGISTER              |
| 4528 | 013022 | 012704 | 024637 |        | TINPOE: MOV | #MSG9,R4    |   |
| 4529 | 013026 | 000004 |        |        | TYPE        |             | ;TYPE MSG                               |
| 4530 | 013030 | 017703 | 165504 |        | MOV         | @SN,R3      |   |
| 4531 | 013034 | 004737 | 024442 |        | JSR         | PC,SNPT     | ;PRINT SERIAL NUMBER                    |
| 4532 | 013040 | 012704 | 025471 |        | TINP1: MOV  | #MSG33,R4   |   |
| 4533 | 013044 | 000004 |        |        | TYPE        |             | ;TYPE MSG                               |
| 4534 | 013046 | 005037 | 000646 |        | CLR         | TEMP2       | ;CLEAR BUFFER                           |
| 4535 | 013052 | 012701 | 000002 |        | MOV         | #2,R1       | ;SET NUMBER OF CHARACTERS TO INPUT      |
| 4536 | 013056 | 012702 | 000004 |        | MOV         | #4,R2       | ;SET MAXIMUM LIMIT                      |
| 4537 | 013062 | 012703 | 000003 |        | MOV         | #3,R3       | ;SET MINIMUM LIMIT                      |
| 4538 | 013066 | 004737 | 023442 |        | JSR         | PC,TTR      | ;GO GET DENSITY                         |
| 4539 | 013072 | 005737 | 000644 |        | TST         | TEMP1       | ;SEE IF HAVE NEW PARAMETER              |
| 4540 | 013076 | 001407 |        |        | BEQ         | TINP2       | ;IF NOT: BR                             |
| 4541 | 013100 | 042737 | 003400 | 000552 | BIC         | #3400, UDES | ;ELSE CLEAR OLD PARAMETER               |
| 4542 | 013106 | 012703 | 000010 |        | MOV         | #10,R3      | ;SET POSITION FACTOR                    |

|      |        |        |        |        |             |             |  |                                       |
|------|--------|--------|--------|--------|-------------|-------------|--|---------------------------------------|
| 4543 | 013112 | 004737 | 014100 |        | JSR         | PC,TPOS     |  | :GO LOAD DENSITY INTO PROPER POSITION |
| 4544 | 013116 | 012704 | 025505 |        | TINP2: MOV  | #MSG34,R4   |  |                                       |
| 4545 | 013122 | 000004 |        |        | TYPE        |             |  | :TYPE MSG                             |
| 4546 | 013124 | 005037 | 000646 |        | CLR         | TEMP2       |  | :CLR BUFFER                           |
| 4547 | 013130 | 012701 | 000002 |        | MOV         | #2,R1       |  | :SET NUMBER OF CHARACTERS TO INPUT    |
| 4548 | 013134 | 012702 | 000001 |        | MOV         | #1,R2       |  | :SET MAXIMUM LIMIT                    |
| 4549 | 013140 | 012703 | 000000 |        | MOV         | #0,R3       |  | :SET MINIMUM LIMIT                    |
| 4550 | 013144 | 004737 | 023442 |        | JSR         | PC,TTR      |  | :GO INPUT PARITY                      |
| 4551 | 013150 | 005737 | 000644 |        | TST         | TEMP1       |  | :SEE IF HAVE NEW PARAMETER            |
| 4552 | 013154 | 001407 |        |        | BEQ         | TINP2A      |  | :IF NOT: BR                           |
| 4553 | 013156 | 042737 | 000010 | 000552 | BIC         | #10,UDES    |  | :ELSE CLEAR OLD PARAMETER             |
| 4554 | 013164 | 012703 | 000003 |        | MOV         | #3,R3       |  | :SET POSITION FACTOR                  |
| 4555 | 013170 | 004737 | 014100 |        | JSR         | PC,TPOS     |  | :GO LOAD PARITY TO PROPER POSITION    |
| 4556 | 013174 | 012704 | 026140 |        | TINP2A: MOV | #MSG53,R4   |  |                                       |
| 4557 | 013200 | 000004 |        |        | TYPE        |             |  | :TYPE MSG                             |
| 4558 | 013202 | 005037 | 000646 |        | CLR         | TEMP2       |  |                                       |
| 4559 | 013206 | 012701 | 000003 |        | MOV         | #3,R1       |  |                                       |
| 4560 | 013212 | 012702 | 000017 |        | MOV         | #17,R2      |  |                                       |
| 4561 | 013216 | 012703 | 000000 |        | MOV         | #0,R3       |  |                                       |
| 4562 | 013222 | 004737 | 023442 |        | JSR         | PC,TTR      |  | :GO GET FORMAT                        |
| 4563 | 013226 | 005737 | 000644 |        | TST         | TEMP1       |  | :SEE IF NEW PARAMETER                 |
| 4564 | 013232 | 001407 |        |        | BEQ         | TINP2B      |  | :IF NOT: BR                           |
| 4565 | 013234 | 042737 | 000170 | 000552 | BIC         | #170,UDES   |  |                                       |
| 4566 | 013242 | 012703 | 000004 |        | MOV         | #4,R3       |  |                                       |
| 4567 | 013246 | 004737 | 014100 |        | JSR         | PC,TPOS     |  |                                       |
| 4568 | 013252 | 005237 | 005054 |        | TINP2B: INC | REOTC       |  | :BUMP EOT UNIT COUNTER                |
| 4569 | 013256 | 022737 | 000016 | 000676 | CMP         | #16,UNP     |  | :SEE IF DONE UNITS                    |
| 4570 | 013264 | 001405 |        |        | BEQ         | TINP2C      |  | :IF SO: BR                            |
| 4571 | 013266 | 062737 | 000002 | 000676 | ADD         | #2,UNP      |  | :POINT TO NEXT UNIT                   |
| 4572 | 013274 | 000137 | 012614 |        | JMP         | TINPC       |  | :ELSE LOOK FOR NEXT UNIT              |
| 4573 | 013300 | 005037 | 000676 |        | TINP2C: CLR | UNP         |  | :CLEAR UNIT POINTER                   |
| 4574 | 013304 | 013700 | 005054 |        | MOV         | REOTC,R0    |  |                                       |
| 4575 | 013310 | 000337 | 005054 |        | SWAB        | REOTC       |  |                                       |
| 4576 | 013314 | 110037 | 005054 |        | MOVB        | R0,REOTC    |  | :SET UNIT EOT COUNTER                 |
| 4577 | 013320 | 012704 | 025520 |        | TINP3: MOV  | #MSG35,R4   |  |                                       |
| 4578 | 013324 | 000004 |        |        | TYPE        |             |  | :TYPE MSG                             |
| 4579 | 013326 | 013703 | 000554 |        | MOV         | RCNT,R3     |  |                                       |
| 4580 | 013332 | 104400 |        |        | TYPOCT      |             |  | :PRINT RECORD COUNT                   |
| 4581 | 013334 | 012705 | 000554 |        | MOV         | #RCNT,R5    |  | :SET RECORD COUNT ADDRESS             |
| 4582 | 013340 | 012701 | 000007 |        | MOV         | #7,R1       |  | :SET NUMBER OF CHARACTERS TO INPUT    |
| 4583 | 013344 | 012702 | 177777 |        | MOV         | #-1,R2      |  | :SET MAXIMUM LIMIT                    |
| 4584 | 013350 | 012703 | 000001 |        | MOV         | #1,R3       |  | :SET MINIMUM LIMIT                    |
| 4585 | 013354 | 004737 | 023442 |        | JSR         | PC,TTR      |  | :GO GET RECORD COUNT                  |
| 4586 | 013360 | 013737 | 000554 | 000632 | MOV         | RCNT,RCSAV  |  | :SAVE RECORD COUNT                    |
| 4587 | 013366 | 012704 | 025541 |        | MOV         | #MSG36,R4   |  |                                       |
| 4588 | 013372 | 000004 |        |        | TYPE        |             |  | :TYPE MSG                             |
| 4589 | 013374 | 005437 | 000556 |        | NEG         | FMCNT       |  |                                       |
| 4590 | 013400 | 013703 | 000556 |        | MOV         | FMCNT,R3    |  |                                       |
| 4591 | 013404 | 104400 |        |        | TYPOCT      |             |  | :PRINT CHAR COUNT                     |
| 4592 | 013406 | 012705 | 000556 |        | MOV         | #FMCNT,R5   |  | :SET CHARACTER COUNT ADDRESS          |
| 4593 | 013412 | 012701 | 000007 |        | MOV         | #7,R1       |  | :SET NUMBER OF CHARACTERS TO INPUT    |
| 4594 | 013416 | 012702 | 004000 |        | MOV         | #4000,R2    |  | :SET MAXIMUM LIMIT                    |
| 4595 | 013422 | 012703 | 000004 |        | MOV         | #4,R3       |  | :SET MINIMUM LIMIT                    |
| 4596 | 013426 | 004737 | 023442 |        | JSR         | PC,TTR      |  | :GO GET CHARACTER COUNT               |
| 4597 | 013432 | 005437 | 000556 |        | NEG         | FMCNT       |  | :SET TO TWO'S COMPLIMENT              |
| 4598 | 013436 | 013737 | 000556 | 000634 | MOV         | FMCNT,FCSAV |  | :SAVE FRAME COUNT                     |

|      |        |        |        |             |           |                                    |
|------|--------|--------|--------|-------------|-----------|------------------------------------|
| 4599 | 013444 | 012704 | 025560 | MOV         | #MSG37,R4 | ;PRINT PATTERN NUMBER REQUEST      |
| 4600 | 013450 | 000004 |        | TYPE        |           | ;TYPE MSG                          |
| 4601 | 013452 | 013703 | 000560 | MOV         | PATRN,R3  |                                    |
| 4602 | 013456 | 104400 |        | TYPOCT      |           | ;PRINT PATTERN                     |
| 4603 | 013460 | 005037 | 014474 | C_LR        | DOFL      | ;CLEAR EXTERNAL DATA FLAG          |
| 4604 | 013464 | 012705 | 000560 | MOV         | #PATRN,R5 | ;SET PATTERN NUMBER ADDRESS        |
| 4605 | 013470 | 012701 | 000003 | MOV         | #3,R1     | ;SET NUMBER OF CHARACTERS TO INPUT |
| 4606 | 013474 | 012702 | 000015 | MOV         | #15,R2    | ;SET MAXIMUM LIMIT                 |
| 4607 | 013500 | 012703 | 000000 | MOV         | #0,R3     | ;SET MINIMUM LIMIT                 |
| 4608 | 013504 | 004737 | 023442 | JSR         | PC,TTR    | ;GO GET PATTERN NUMBER             |
| 4609 | 013510 | 012704 | 026335 | MOV         | #MSG69,R4 |                                    |
| 4610 | 013514 | 000004 |        | TYPE        |           | ;TYPE MSG                          |
| 4611 | 013516 | 013703 | 000564 | MOV         | TMEX,R3   |                                    |
| 4612 | 013522 | 104400 |        | TYPOCT      |           | ;PRINT CURRENT TM FLAG SETTING     |
| 4613 | 013524 | 012705 | 000564 | MOV         | #TMEX,R5  | ;GET TM FLAG ADDRESS               |
| 4614 | 013530 | 012701 | 000002 | MOV         | #2,R1     | ;SET SIZE OF RESPONSE              |
| 4615 | 013534 | 012702 | 000001 | MOV         | #1,R2     | ;SET UPPER LIMIT                   |
| 4616 | 013540 | 012703 | 000000 | MOV         | #0,R3     | ;SET LOWER LIMIT                   |
| 4617 | 013544 | 004737 | 023442 | JSR         | PC,TTR    | ;TM 1=YES                          |
| 4618 | 013550 | 012704 | 024771 | MOV         | #MSG21,R4 |                                    |
| 4619 | 013554 | 000004 |        | TYPE        |           | ;TYPE MSG                          |
| 4620 | 013556 | 013703 | 000570 | MOV         | INTRF,R3  |                                    |
| 4621 | 013562 | 104400 |        | TYPOCT      |           | ;PRINT CURRENT SETTING             |
| 4622 | 013564 | 012705 | 000570 | MOV         | #INTRF,R5 | ;GET FLAG ADDRESS                  |
| 4623 | 013570 | 012701 | 000002 | MOV         | #2,R1     | ;SET SIZE OF RESPONSE              |
| 4624 | 013574 | 012702 | 000001 | MOV         | #1,R2     | ;SET UPPER LIMIT                   |
| 4625 | 013600 | 012703 | 000000 | MOV         | #0,R3     | ;SET LOWER LIMIT                   |
| 4626 | 013604 | 004737 | 023442 | JSR         | PC,TTR    | ;GO GET RESPONSE                   |
| 4627 | 013610 | 012704 | 025603 | MOV         | #MSG38,R4 |                                    |
| 4628 | 013614 | 000004 |        | TYPE        |           | ;TYPE MSG                          |
| 4629 | 013616 | 013703 | 000572 | MOV         | SPFLG,R3  |                                    |
| 4630 | 013622 | 104400 |        | TYPOCT      |           | ;PRINT CURRENT SETTING             |
| 4631 | 013624 | 012705 | 000572 | MOV         | #SPFLG,R5 | ;SET ADDRESS OF FLAG               |
| 4632 | 013630 | 012701 | 000002 | MOV         | #2,R1     | ;SET SIZE OF RESPONSE              |
| 4633 | 013634 | 012702 | 000001 | MOV         | #1,R2     | ;SET UPPER LIMIT                   |
| 4634 | 013640 | 012703 | 000000 | MOV         | #0,R3     | ;SET LOWER LIMIT                   |
| 4635 | 013644 | 004737 | 023442 | JSR         | PC,TTR    | ;GO GET RESPONSE                   |
| 4636 | 013650 | 012704 | 025623 | TINP3A: MOV | #MSG39,R4 |                                    |
| 4637 | 013654 | 000004 |        | TYPE        |           | ;TYPE MSG                          |
| 4638 | 013656 | 013703 | 000566 | MOV         | CRCC,R3   |                                    |
| 4639 | 013662 | 104400 |        | TYPOCT      |           |                                    |
| 4640 | 013664 | 012705 | 000566 | MOV         | #CRCC,R5  |                                    |
| 4641 | 013670 | 012701 | 000002 | MOV         | #2,R1     |                                    |
| 4642 | 013674 | 012702 | 000001 | MOV         | #1,R2     |                                    |
| 4643 | 013700 | 012703 | 000000 | MOV         | #0,R3     |                                    |
| 4644 | 013704 | 004737 | 023442 | JSR         | PC,TTR    |                                    |
| 4645 | 013710 | 004737 | 023306 | JSR         | PC,GTSWR  | ;GET SWITCHES                      |
| 4646 | 013714 | 005737 | 014076 | TINP4: TST  | SCVFL     | ;BRANCH IF SHORT CONVERSATION      |
| 4647 | 013720 | 001063 |        | BNE         | TINPX     |                                    |
| 4648 | 013722 | 005737 | 000636 | TINP4: TST  | TINF      | ;BRANCH IF NO TTY INPUT            |
| 4649 | 013726 | 001460 |        | BEQ         | TINPX     |                                    |
| 4650 | 013730 | 012704 | 025663 | MOV         | #MSG40,R4 |                                    |
| 4651 | 013734 | 000004 |        | TYPE        |           | ;TYPE MSG                          |
| 4652 | 013736 | 013703 | 000574 | MOV         | RSTAL,R3  |                                    |
| 4653 | 013742 | 104400 |        | TYPOCT      |           | ;PRINT READ STALL                  |
| 4654 | 013744 | 012705 | 000574 | MOV         | #RSTAL,R5 | ;SET READ STALL ADDRESS            |

|      |        |        |               |        |        |               |   |
|------|--------|--------|---------------|--------|--------|---------------|---|
| 4655 | 013750 | 012701 | 000007        |        | MOV    | #7,R1         | ;SET NUMBER OF LCHARACTERS TO INPUT           |
| 4656 | 013754 | 012702 | 177777        |        | MOV    | #-1,R2        | ;SET MAXIMUM LIMIT                            |
| 4657 | 013760 | 012703 | 000001        |        | MOV    | #1,R3         | ;SET MINIMUM LIMIT                            |
| 4658 | 013764 | 004737 | 023442        |        | JSR    | PC,TTR        | ;GO GET READ STALL                            |
| 4659 | 013770 | 012704 | 025712        |        | MOV    | #MSG41,R4     |   |
| 4660 | 013774 | 000004 |               |        | TYPE   |               | ;TYPE MSG                                     |
| 4661 | 013776 | 013703 | 000576        |        | MOV    | WSTAL,R3      |   |
| 4662 | 014002 | 104400 |               |        | TYPOCT |               | ;PRINT READ STALL                             |
| 4663 | 014004 | 012705 | 000576        |        | MOV    | #WSTAL,R5     | ;SET WRITE STALL ADDRESS                      |
| 4664 | 014010 | 012701 | 000007        |        | MOV    | #7,R1         | ;SET NUMBER OF CHARACTERS TO INPUT            |
| 4665 | 014014 | 012702 | 177777        |        | MOV    | #-1,R2        | ;SET MAXIMUM LIMIT                            |
| 4666 | 014020 | 012703 | 000001        |        | MOV    | #1,R3         | ;SET MINIMUM LIMIT                            |
| 4667 | 014024 | 004737 | 023442        |        | JSR    | PC,TTR        | ;GO GET WRITE STALL                           |
| 4668 | 014030 | 012704 | 025724        |        | MOV    | #MSG42,R4     |   |
| 4669 | 014034 | 000004 |               |        | TYPE   |               | ;TYPE MSG                                     |
| 4670 | 014036 | 013703 | 000600        |        | MOV    | TSTAL,R3      |   |
| 4671 | 014042 | 104400 |               |        | TYPOCT |               | ;PRINT TA STALL                               |
| 4672 | 014044 | 012705 | 000600        |        | MOV    | #TSTAL,R5     | ;SET TURN AROUND STALL ADDRESS                |
| 4673 | 014050 | 012701 | 000007        |        | MOV    | #7,R1         | ;SET NUMBER OF CHARACTERS TO INPUT            |
| 4674 | 014054 | 012702 | 177777        |        | MOV    | #-1,R2        | ;SET MAXIMUM LIMIT                            |
| 4675 | 014060 | 012703 | 000001        |        | MOV    | #1,R3         | ;SET MINIMUM LIMIT                            |
| 4676 | 014064 | 004737 | 023442        |        | JSR    | PC,TTR        | ;GO GET TURN AROUND STALL                     |
| 4677 | 014070 | 005037 | 014076        | TINPX: | CLR    | SCVFL         | ;CLEAR SHORT CONVERSATION FLAG                |
| 4678 | 014074 | 000207 |               |        | RTS    | PC            | ;EXIT   |
| 4679 | 014076 | 000000 |               | SCVFL: | 0      |               | ;SHORT CONVERSATION FLAG                      |
| 4680 |        |        |               |        |        |               |   |
| 4681 |        |        |               |        |        |               | ;UNIT DESCRIPTION POSITIONING SUBROUTINE***** |
| 4682 |        |        |               |        |        |               |   |
| 4683 | 014100 | 006337 | 000646        | TPOS:  | ASL    | TEMP2         | ;POSITION CHARACTER                           |
| 4684 | 014104 | 005303 |               |        | DEC    | R3            | ;SEE IF DONE                                  |
| 4685 | 014106 | 001374 |               |        | BNE    | TPOS          | ;IF NOT: BR                                   |
| 4686 | 014110 | 013700 | 000676        | TPOS1: | MOV    | UNP,R0        | ;LOAD UNIT POINTER                            |
| 4687 | 014114 | 053760 | 000646 000746 |        | BIS    | TEMP2,UN1(R0) | ;LOAD CHARACTER INTO UN1(R0)                  |
| 4688 | 014122 | 000207 |               |        | RTS    | PC            | ;EXIT   |
| 4689 |        |        |               |        |        |               |   |

4691  
4692  
4693  
4694  
4695  
4696  
4697  
4698  
4699  
4700  
4701  
4702  
4703  
4704  
4705  
4706  
4707  
4708  
4709  
4710  
4711  
4712  
4713  
4714  
4715  
4716  
4717  
4718  
4719  
4720  
4721  
4722  
4723  
4724  
4725  
4726  
4727  
4728  
4729  
4730  
4731  
4732  
4733  
4734  
4735  
4736  
4737  
4738  
4739  
4740  
4741  
4742  
4743  
4744  
4745  
4746

014124 005737 015064  
014130 001056  
014132 005737 000736  
014136 001412  
014140 005737 000560  
014144 100007  
014146 004737 015022  
014152 005037 015064  
014156 004737 015066  
014162 000207  
014164 023737 000560 014330  
014172 001^20  
014174 013,03 000552  
014200 042703 175767  
014204 023703 014332  
014210 001403  
014212 010337 014332  
014216 000403  
014220 005737 014334  
014224 001002  
014226 004737 015066  
014232 000207  
014234 005037 014334  
014240 012703 027452  
014244 013701 000560  
014250 010137 014330  
014254 062701 000001  
014260 006301  
014262 004771 002770  
014266 004737 015066  
014272 013702 000556  
014276 006202  
014300 012701 033460  
014304 005021  
014306 005202  
014310 001375  
014312 013737 000552 014332  
014320 042737 175767 014332

DSUP: TST RDFL  
BNE DS2A  
DS0: TST ASEQF  
BEQ DS0C  
TST PATRN  
BPL DS0C  
JSR PC,DATR  
CLR RDFL  
JSR PC,CRCLRC  
RTS PC  
DS0C: CMP PATRN,PATS  
BNE DS0A  
MOV UDES,R3  
BIC #175767,R3  
CMP PARS,R3  
BEQ DS0B  
MOV R3,PARS  
BR TWO  
DS0B: TST CLF  
BNE ONE  
TWO: JSR PC,CRCLRC  
ONE: RTS PC  
DS0A: CLR CLF  
MOV #WDATA,R3  
MOV PATRN,R1  
MOV R1,PATS  
ADD #1,R1  
ASL R1  
DS2A: JSR PC,@DATBL(R1)  
DS3: JSR PC,CRCLRC  
MOV FMCNT,R2  
ASR R2  
MOV #RDATA,R1  
DS4: CLR (R1)+  
INC R2  
BNE DS4  
MOV UDES,PARS  
BIC #175767,PARS

```

:*****
:DATA SETUP ROUTINE:
:
:THIS ROUTINE IS USED TO GENERATE INTO THE ENTIRE
:WRITE BUFFER (4000 OCTAL CHARACTERS) THE DATA PATTERN
:SELECTED BY THE OPERATOR. THERE ARE 15 (8) FIXED
:DATA PATTERNS AVAILABLE AND ONE SELECTION (DATA PATTERN 0)
:WHICH WILL READ ANY PATTERN PRESENTED AT THE
:HIGH SPEED PAPER TAPE READER. THIS TAPE MUST BE PREPARED
:BY USING THE PROGRAM CALLED DTC. (CZTUTAO)
:RANDOM DATA MAY ALSO BE USED VIA CONSOLE
:SWITCH EIGHT (8).
:THIS ROUTINE IS ALSO USED TO CLEAR OUT THE
:READ BUFFER (4000 OCTAL CHARACTERS) BEFORE EACH
:RECORD IS READ.
:*****
:SEE IF DID RANDOM DATA
:IF NOT: BR
:SEE IF AUTO SEQ
:IF NOT: BR
:SEE IF AUTO RANDOM
:IF NOT: BR
:ELSE GO GENERATE RANDOM DATA
:RESET RANDOM DATA FLAG
:GO GENERATE EXPT CRC/LRC
:RETURN
:SEE IF NEW PATTERN
:IF SO: BR
:GET UNIT DESCRIPTION
:MASK EVEN PARITY :DEN 2 BIT
:SEE IF SAME AS LAST TIME
:IF SO: BR
:SAVE PARITY
:EXPT CRC/LRC DONE?
:IF SO :BR
:GO GENERATE EXPT CRC/LRC
:CLEAR EXPT CRC/LRC CAL.DONE FLAG
:R3 = ADDRS OF WRITE BUFFER
:R1 = PATTERN SELECTOR
:BUMP POINTER
:MAKE PATTERN SELECTOR EVEN
:GO GENERATE PATTERN
:GO GENERATE EXPT CRC/LRC
:R2=BUFFER SIZE
:R2=FRAME CMT/2
:R1=READ DATA START
:CLEAR BUFFER
:SEE IF DONE ALL
:IF NOT: BR
:GET UNIT DESCRIPTION
:MASK PARITY :DEN 2 BIT

```

4747 014326 000207  
4748 014330 177777  
4749 014332 000000  
4750 014334 000000  
4751  
4752

PATS: RTS PC :EXIT  
PARS: -1 :PATTERN NUMBER SAVE  
CLF: 0

```

4754
4755                                     ;EXTERNAL DATA INPUT FROM H/S READER (256 CHARACTER MAXIMUM)
4756
4757 014336 005737 014474          DATO:  TST      DOFL      ;SEE IF SHOULD DO EXTERNAL INPUT
4758 014342 001351                BNE      DS2A     ;IF NOT: BR
4759 014344 012737 000001 014474  MOV      #1,DOFL ;SET EXTERNAL FLAG
4760 014352 005077 164244          CLR      @PRS    ;CLEAR READER STATUS
4761 014356 005037 000644          CLR      TEMP1   ;CLEAR FOR USE AS CHARACTER FLAG
4762 014362 052777 000001 164232  DATOA:  BIS      #1,@PRS ;START READER
4763 014370 105777 164226          DATOB:  TSTB    @PRS    ;SEE IF DONE
4764 014374 100375                BPL      DATOB   ;IF NOT : BR
4765 014376 005001                CLR      R1      ;CLEAR SAVE LOCATION
4766 014400 117701 164220          MOVB    @PRB,R1  ;SAVE CHARACTER
4767 014404 005737 000644          TST     TEMP1   ;SEE IF HAVE FOUND START CHARACTER
4768 014410 001011                BNE     DATOC   ;IF SO : BR
4769 014412 105701                TSTB   R1       ;SEE IF CHARACTER IS 0
4770 014414 001762                BEQ    DATOA    ;IF SO : BR
4771 014416 012737 000001 000644  MOV     #1,TEMP1 ;ELSE SET CHARACTER FOUND FLAG
4772 014424 010137 000646          MOV     R1,TEMP2 ;SAVE DATA SIZE
4773 014430 010102                MOV     R1,R2   ;SAVE DATA SIZE
4774 014432 000753                BR     DATOA    ;GO GET FIRST DATA CHAR
4775 014434 110123                DATOC:  MOVB    R1,(R3)+ ;LOAD BUFFER
4776 014436 005302                DEC     R2      ;SEE IF READ ALL
4777 014440 001350                BNE     DATOA   ;IF NOT : BR
4778 014442 012701 027452          DATOD:  MOV     #WDATA,R1 ;R1 = START OF WRITE BUFFER
4779 014446 013702 000646          MOV     TEMP2,R2  ;R2 = SIZE OF DATA FIELD
4780 014452 112123                DATOE:  MOVB    (R1)+,(R3)+ ;REPEAT LOAD OF DATA FIELD
4781 014454 022703 033460          CMP     #RDATA,R3 ;SEE IF DONE
4782 014460 003002                BGT    DATOF    ;IF NOT: BR
4783 014462 000137 014266          JMP     DS2A     ;EXIT
4784 014466 005302                DATOF:  DEC     R2      ;SEE IF AT END OF DATA FIELD
4785 014470 001370                BNE     DATOE   ;IF NOT : BR
4786 014472 000763                BR     DATOD    ;ELSE RESTART FILL
4787 014474 000000                DOFL:  0         ;EXTERNAL DATA FLAG=1 IF ALREADY DONE
4788

```

```

4790
4791
4792 014476 012701 177777
4793 014502 012702 002002
4794 014506 010123
4795 014510 005302
4796 014512 001375
4797 014514 000207
4798
4799
4800
4801 014516 005001
4802 014520 000770
4803
4804
4805
4806 014522 012701 000001
4807 014526 000241
4808 014530 012702 004004
4809 014534 110123
4810 014536 106101
4811 014540 005302
4812 014542 001374
4813 014544 000207
4814
4815
4816
4817 014546 012701 000376
4818 014552 000261
4819 014554 000765
4820
4821
4822
4823
4824 014556 012701 052525
4825 014562 000747
4826
4827
4828
4829 014564 012701 125252
4830 014570 000744
4831
4832
4833
4834 014572 012701 125252
4835 014576 012702 052525
4836 014602 012704 001002
4837 014606 010123
4838 014610 010223
4839 014612 005304
4840 014614 001374
4841 014616 000207
4842
  
```

```

;ALL ONES*****
DAT1:  MOV    #-1,R1          ;R1=DATA
DAT1A: MOV    #2002,R2       ;R2=WORD COUNT +2
1$:   MOV    R1,(R3)+       ;LOAD BUFFER
      DEC    R2             ;SEE IF DONE
      BNE    1$             ;IF NOT: BR
      RTS    PC

;ALL ZEROS*****
DAT2:  CLR    R1             ;R1=DATA
      BR    DAT1A          ;LOAD BUFFER

;WALKING ONE*****
DAT3:  MOV    #1,R1         ;R1=DATA
      CLC
DAT3A: MOV    #4004,R2       ;R2=CHARACTER COUNT+4
1$:   MOVB   R1,(R3)+       ;LOAD BUFFER
      ROLB   R1             ;SET NEXT CHARACTER
      DEC    R2             ;SEE IF DONE
      BNE    1$             ;IF NOT: BR
      RTS    PC

;WALKING ZERO*****
DAT4:  MOV    #376,R1        ;R1=START OF DATA
      SEC
      BR    DAT3A          ;LOAD BUFFER

;ALTERNATING ONE/ZERO*****
DAT5:  MOV    #52525,R1     ;R1=DATA
      BR    DAT1A          ;LOAD BUFFER

;ALTERNATING ZERO/ONE*****
DAT6:  MOV    #125252,R1    ;R1=DATA
      BR    DAT1A          ;LOAD BUFFER

;ONE/ZERO IN ALTERNATING WORDS*****
DAT7:  MOV    #125252,R1    ;SET WORD 1
      MOV    #52525,R2      ;SET WORD 2
      MOV    #1002,R4       ;SET NUMBER OF ENTRIES
1$:   MOV    R1,(R3)+       ;LOAD WORD 1
      MOV    R2,(R3)+       ;LOAD WORD 2
      DEC    R4             ;SEE IF DONE
      BNE    1$             ;IF NOT: BR
      RTS    PC
  
```

```

4844                                     ;WALKING ONE/ALL ONE IN ALTERNATING CHARS****
4845
4846 014620 012702 002002  DAT10: MOV #2002,R2      ;SET BUFFER SIZE
4847 014624 012701 000001  MOV #1,R1        ;SET WALK BASE
4848 014630 000241
4849 014632 012713 177400  1$:  MOV #177400,(R3)   ;LOAD ALL ONE BYTE
4850 014636 050123  BIS R1,(R3)+     ;LOAD WALK BYTE
4851 014640 106101  ROLB R1         ;WALK ONE
4852 014642 005302  DEC R2
4853 014644 001372  BNE 1$         ;DO FULL BUFFER
4854 014646 000207  RTS PC
4855
4856                                     ;ALL BITS 0-377*****
4857
4858 014650 005001  DAT11: CLR R1      ;R1=STARTING DATA
4859 014652 012702 004004  MOV #4004,R2     ;R2=CHARACTER COUNT+4
4860 014656 110123  1$:  MOVB R1,(R3)+ ;LOAD BUFFER
4861 014660 105201  INCB R1         ;BUMP DATA
4862 014662 005302  DEC R2         ;SEE IF DONE
4863 014664 001374  BNE 1$         ;IF NOT: BR
4864 014666 000207  RTS PC         ;RETURN
4865
4866                                     ;ALL BITS 377-0*****
4867
4868 014670 012701 000377  DAT12: MOV #377,R1   ;R1=STARTING DATA
4869 014674 012702 004004  MOV #4004,R2     ;R2=CHARACTER COUNT+4
4870 014700 110123  1$:  MOVB R1,(R3)+ ;LOAD BUFFER
4871 014702 105301  DECB R1        ;BUMP DATA
4872 014704 005302  DEC R2         ;SEE IF DONE
4873 014706 001374  BNE 1$         ;IF NOT: BR
4874 014710 000207  RTS PC         ;RETURN
4875
4876                                     ;ALTERNATING CHARACTERS 0 AND 377*****
4877
4878 014712 012701 000377  DAT13: MOV #377,R1   ;R1 = DATA
4879 014716 000137 014502  JMP DAT1A       ;LOAD BUFFER
4880
4881                                     ;WALKING ZERO/ALL ZERO IN ALTERNATING CHARS*****
4882
4883 014722 012702 002002  DAT14: MOV #2002,R2   ;SET BUFFER SIZE
4884 014726 012701 000376  MOV #376,R1      ;SET WALK BASE
4885 014732 000261
4886 014734 010113  1$:  MOV R1,(R3)   ;LOAD WALK BYTE
4887 014736 042723 177400  BIC #177400,(R3)+ ;CLEAR HIGH BYTE
4888 014742 106101  ROLB R1         ;WALK ZERO BIT
4889 014744 005302  DEC R2
4890 014746 001372  BNE 1$         ;FILL BUFFER
4891 014750 000207  RTS PC         ;RETURN
4892

```

```

4897                                     ;AUTO SEQUENCE PATTERN*****
4898
4899 014752 012702 000200          DAT15: MOV    #200,R2          ;SET NUMBER OF ENTRIES
4900 014756 012701 015002          1$:  MOV    #APATS,R1        ;SET START OF PATTERN
4901 014762 012704 000010          MOV    #10,R4           ;SET SIZE OF PATTERN
4902 014766 012123                 2$:  MOV    (R1)+,(R3)+   ;FILL BUFFER
4903 014770 005304                 DEC    R4                ;SEE IF DONE PATTERN
4904 014772 001375                 BNE    2$                ;IF NOT: BR
4905 014774 005302                 DEC    R2                ;SEE IF DONE BUFER
4906 014776 001367                 BNE    1$                ;IF NOT: BR
4907 015000 000207                 RTS    PC                ;RETURN
4908
4909 015002 000000          APATS: 0
4910 015004 177400          177400
4911 015006 000377          377
4912 015010 000000          0
4913 015012 177777          -1
4914 015014 000377          377
4915 015016 177400          177400
4916 015020 177777          -1
4917
4918                                     ;RANDOM DATA GENERATOR SUBROUTINE*****
4919
4920 015022 013704 000556          DATR: MOV    FMCNT,R4      ;SET NUMBER OF FRAMES
4921 015026 012703 027452          MOV    #WDATA,R3       ;SET ADDRESS OF START OF BUFFER
4922 015032 012701 177777          MOV    #-1,R1          ;SET HIGH LIMIT
4923 015036 005002                 CLR    R2               ;SET LOW LIMIT
4924 015040 004737 023254          1$:  JSR    PC,RANG       ;GO GENERATE NUMBER
4925 015044 013723 000630          MOV    RANSV,(R3)+     ;LOAD BUFFER
4926 015050 005204                 INC    R4               ;SEE IF DONE WHOLE BUFFER
4927 015052 001372                 BNE    1$               ;IF NOT: BR
4928 015054 012737 000001 015064  MOV    #1,RDFL         ;SET RANDOM DATA FLAG
4929 015062 000207                 RTS    PC               ;EXIT
4930 015064 000000          RDFL: 0                ;RANDOM DATA SELECT FLAG

```

```

4932
4933
4934
4935
4936
4937
4938
4939
4940
4941 015066 032737 002000 000552 CRCLRC: BIT #2000, UDES
4942 015074 001105 BNE CL4 ;IF IN PE MODE: BR
4943 015076 012737 177777 014334 MOV #-1, CLF ;SET EXPT CRCLRC CAL.FLAG
4944 015104 013700 000556 MOV FMCNT, R0 ;SET RECORD SIZE
4945 015110 005400 NEG R0
4946 015112 012701 027452 MOV #WDATA, R1 ;SET START OF BUFFER
4947 015116 005037 015440 CLR XORS
4948 015122 111104 CLO: MOV (R1), R4 ;GET CHARACTER
4949 015124 004737 015312 JSR PC, CLP ;GO GET PARITY OF CHARACTER
4950 015130 004737 015414 JSR PC, XOR ;XOR CHARACTER
4951 015134 000241 CLC
4952 015136 006004 ROR R4 ;ROTATE 1 RIGHT
4953 015140 103014 BCC CL2 ;IF NO CARRY: BR
4954 015142 052704 000400 BIS #400, R4 ;SET BIT NINE
4955 015146 000241 CLC
4956 015150 010405 CL1: MOV R4, R5 ;SAVE CHARACTER
4957 015152 042705 177703 BIC #177703, R5
4958 015156 005105 COM R5
4959 015160 042705 177703 BIC #177703, R5
4960 015164 042704 000074 BIC #74, R4
4961 015170 050504 BIS R5, R4 ;COMPLIMENT BITS 2,3,4,5
4962 015172 010437 015440 CL2: MOV R4, XORS
4963 015176 005300 DEC R0
4964 015200 001350 BNE CLO ;BRANCH IF NOT LAST CHAR
4965 015202 013704 015440 CLLAST: MOV XORS, R4
4966 015206 005137 015440 COM XORS
4967 015212 042737 177050 015440 BIC #177050, XORS
4968 015220 042704 177727 BIC #177727, R4 ;COMPLIMENT ALL BUT BITS 3&5
4969 015224 050437 015440 BIS R4, XORS
4970 015230 013737 015440 015442 MOV XORS, EXCRC ;SAVE EXPECTED CRC
4971 015236 013700 000556 MOV FMCNT, R0
4972 015242 005400 NEG R0
4973 015244 012701 027452 MOV #WDATA, R1 ;DO EXPT LRC
4974 015250 005037 015440 CLR XORS
4975 015254 111104 CL3: MOV (R1), R4
4976 015256 004737 015312 JSR PC, CLP ;GET PARITY
4977 015262 004737 015414 JSR PC, XOR ;XOR CHARACTER
4978 015266 005300 DEC R0
4979 015270 001371 BNE CL3 ;DO ALL FOR LRC
4980 015272 013704 015442 MOV EXCRC, R4
4981 015276 004737 015414 JSR PC, XOR ;XOR CRC TO DATA
4982 015302 013737 015440 015444 MOV XORS, EXLRC ;SAVE EXPT LRC
4983 015310 000207 CL4: RTS PC ;RETURN
4984 015312 005704 CLP: TST R4 ;SEE IF 0 CHAR
4985 015314 001010 BNE CLPE ;IF NOT: BR
4986 015316 032737 000010 000552 BIT #10, UDES ;SEE IF EVEN PARITY
4987 015324 001404 BEQ CLPE ;IF NOT: BR
  
```

|      |        |        |        |        |        |            |            |                               |
|------|--------|--------|--------|--------|--------|------------|------------|-------------------------------|
| 4988 | 015326 | 012704 | 000420 |        | MOV    | #420,R4    |            | ;SET 0 CHAR EVEN PARITY       |
| 4989 | 015332 | 005201 |        |        | INC    | R1         |            | ;BUMP POINTER                 |
| 4990 | 015334 | 000207 |        |        | RTS    | PC         |            | ;RETURN                       |
| 4991 | 015336 | 005046 |        | CLPE:  | CLR    | -(SP)      |            | ;CLEAR WORKING SPACE ON STACK |
| 4992 | 015340 | 106304 |        | 1\$:   | ASLB   | R4         |            | ;SHIFT DATA                   |
| 4993 | 015342 | 005516 |        |        | ADC    | (SP)       |            | ;ADDUP # OF 1 BITS            |
| 4994 | 015344 | 105704 |        |        | TSTB   | R4         |            | ;BRANCH IF ALL 0'S LEFT       |
| 4995 | 015346 | 001374 |        |        | BNE    | 1\$        |            |                               |
| 4996 | 015350 | 112104 |        |        | MOVB   | (R1)+,R4   |            |                               |
| 4997 | 015352 | 042704 | 177400 |        | BIC    | #177400,R4 |            |                               |
| 4998 | 015356 | 106026 |        |        | RORB   | (SP)+      |            | ;BRANCH IF ODD # OF 1 BITS    |
| 4999 | 015360 | 103405 |        |        | BCS    | CLP2       |            |                               |
| 5000 | 015362 | 032737 | 000010 | 000552 | BIT    | #10,UDES   |            | ;SEE IF SHOULD BE EVEN PARITY |
| 5001 | 015370 | 001406 |        |        | BEQ    | CLP3       |            | ;IF NOT: BR                   |
| 5002 | 015372 | 000207 |        |        | RTS    | PC         |            | ;ELSE EXIT                    |
| 5003 | 015374 | 032737 | 000010 | 000552 | CLP2:  | BIT        | #10,UDES   | ;SEE IF SHOULD BE ODD PARITY  |
| 5004 | 015402 | 001001 |        |        | BNE    | CLP3       |            | ;IF NOT: BR                   |
| 5005 | 015404 | 000207 |        |        | RTS    | PC         |            | ;ELSE EXIT                    |
| 5006 | 015406 | 052704 | 000400 |        | CLP3:  | BIS        | #400,R4    | ;SET PARITY BIT               |
| 5007 | 015412 | 000207 |        |        | RTS    | PC         |            |                               |
| 5008 |        |        |        |        |        |            |            |                               |
| 5009 | 015414 | 010446 |        |        | XOR:   | MOV        | R4,-(SP)   |                               |
| 5010 | 015416 | 043716 | 015440 |        |        | BIC        | XORS,(SP)  |                               |
| 5011 | 015422 | 040437 | 015440 |        |        | BIC        | R4,XORS    | ;XOR SUBROUTINE: R4 WITH XORS |
| 5012 | 015426 | 052637 | 015440 |        |        | BIS        | (SP)+,XORS |                               |
| 5013 | 015432 | 013704 | 015440 |        |        | MOV        | XORS,R4    |                               |
| 5014 | 015436 | 000207 |        |        |        | RTS        | PC         |                               |
| 5015 |        |        |        |        |        |            |            |                               |
| 5016 | 015440 | 000000 |        |        | XORS:  | 0          |            | ;XOR SAVE                     |
| 5017 | 015442 | 000000 |        |        | EXCRC: | 0          |            | ;EXPECTED CRC                 |
| 5018 | 015444 | 000000 |        |        | EXLRC: | 0          |            | ;EXPECTED LRC                 |
| 5019 |        |        |        |        |        |            |            |                               |

```

5021
5022
5023
5024
5025
5026
5027
5028
5029
5030
5031
5032
5033
5034
5035
5036 015446 005037 000660          DCHK: CLR      BBC          ;CLEAR BAD RECORD CNTR
5037 015452 005037 000706          CLR      DERFL        ;CLEAR DATA ERROR FLAG
5038 015456 013705 000556          MOV      FMCNT,R5     ;LOAD CHAR COUNT
5039 015462 032737 000020 000552  BIT      #20,UDES     ;SEE IF CORE DUMP
5040 015470 001401                    BEQ      DCHK0        ;IF NOT: BR
5041 015472 006205                    ASR      R5           ;R5 = FC/2
5042 015474 012701 027452          DCHK0: MOV      #WDATA,R1 ;SET WRITE DATA ADDR
5043 015500 012702 033460          MOV      #RDATA,R2   ;SET READ DATA ADDR
5044 015504 032737 000010 000552  BIT      #10,UDES     ;SEE IF EVEN PARITY
5045 015512 001430                    BEQ      DFOC0        ;IF NOT: BR
5046 015514 032737 000020 000552  BIT      #20,UDES     ;SEE IF CORE DUMP PARITY
5047 015522 001024                    BNE      DFOC0        ;IF SO: BR
5048 015524 032737 002000 000552  BIT      #2000,UDES   ;SEE IF PE MODE
5049 015532 001020                    BNE      DFOC0        ;IF SO: BR
5050 015534 105711          DFOF: TSTB      (R1)    ;SEE IF 0 CHAR
5051 015536 001404                    BEQ      DFOD         ;IF SO: BR
5052 015540 005201                    INC      R1           ;BUMP POINTER
5053 015542 005205          DFOE: INC      R5           ;SEE IF DONE
5054 015544 001373                    BNE      DFOF         ;IF NOT: BR
5055 015546 000406                    BR       DFOC         ;ELSE CONTINUE
5056 015550 112721 000020          DFOD: MOVB     #20,(R1)+ ;SET 20 IN PLACE OF 0
5057 015554 012737 177777 014330  MOV      #-1,PATS    ;SET PATTERN GENERATE FLAG
5058 015562 000767                    BR       DFOE
5059 015564 013705 000556          DFOC: MOV      FMCNT,R5 ;RESET CHAR CNT
5060 015570 012701 027452          MOV      #WDATA,R1   ;RESET DATA ADDRESS
5061 015574 032737 010000 000562  DFOC0: BIT      #10000,RDCMD ;SEE IF READ REVERSE
5062 015602 001462                    BEQ      DFO          ;IF NOT: BR
5063 015604 013704 000556          DFOB: MOV      FMCNT,R4 ;GET FRAME COUNT
5064 015610 005404                    NEG      R4           ;SET TO WHOLE NUMBER
5065 015612 032737 000020 000552  BIT      #20,UDES     ;SEE IF CORE DUMP
5066 015620 001402                    BEQ      DFOB0       ;IF NOT: BR
5067 015622 000241                    CLC
5068 015624 006004          DFOB0: ROR      R4           ;SET TO FC/2
5069 015626 060401                    ADD      R4,R1        ;POINT TO START OF WRITE DATA
5070 015630 060402                    ADD      R4,R2        ;POINT TO START OF READ DATA
5071 015632 032737 000001 000556  BIT      #1,FMCNT     ;SEE IF ODD FRAME COUNT
5072 015640 001401                    BEQ      DFOA        ;IF NOT: BR
5073 015642 105722                    TSTB    (R2)+        ;BUMP POINTER
5074 015644 032737 000020 000552  DFOA: BIT      #20,UDES     ;SEE IF CORE DUMP
5075 015652 001431                    BEQ      DFOA4       ;IF NOT: BR
5076 015654 000241                    CLC

```

|      |        |        |               |        |      |               |                                      |
|------|--------|--------|---------------|--------|------|---------------|--------------------------------------|
| 5077 | 015656 | 132742 | 000001        |        | BITB | #1, -(R2)     | :SEE IF BIT 0 = 1                    |
| 5078 | 015662 | 001401 |               |        | BEQ  | DF0A0         | :IF NOT: BR                          |
| 5079 | 015664 | 000261 |               |        | SEC  |               |                                      |
| 5080 | 015666 | 106012 |               | DF0A0: | RORB | (R2)          |                                      |
| 5081 | 015670 | 000241 |               |        | CLC  |               |                                      |
| 5082 | 015672 | 132712 | 000001        |        | BITB | #1, (R2)      |                                      |
| 5083 | 015676 | 001401 |               |        | BEQ  | DF0A1         |                                      |
| 5084 | 015700 | 000261 |               |        | SEC  |               |                                      |
| 5085 | 015702 | 106012 |               | DF0A1: | RORB | (R2)          | :POSITION BITS FOR REVERSE CORE DUMP |
| 5086 | 015704 | 000241 |               |        | CLC  |               |                                      |
| 5087 | 015706 | 132712 | 000001        |        | BITB | #1, (R2)      |                                      |
| 5088 | 015712 | 001401 |               |        | BEQ  | DF0A2         |                                      |
| 5089 | 015714 | 000261 |               |        | SEC  |               |                                      |
| 5090 | 015716 | 106012 |               | DF0A2: | RORB | (R2)          |                                      |
| 5091 | 015720 | 000241 |               |        | CLC  |               |                                      |
| 5092 | 015722 | 132712 | 000001        |        | BITB | #1, (R2)      |                                      |
| 5093 | 015726 | 001401 |               |        | BEQ  | DF0A3         |                                      |
| 5094 | 015730 | 000261 |               |        | SEC  |               |                                      |
| 5095 | 015732 | 106012 |               | DF0A3: | RORB | (R2)          |                                      |
| 5096 | 015734 | 005202 |               |        | INC  | R2            | :RESET POINTER                       |
| 5097 | 015736 | 124142 |               | DF0A4: | CMPB | -(R1), -(R2)  | :TEST DATA CHARACTER                 |
| 5098 | 015740 | 001010 |               |        | BNE  | DF1           | :IF NOT GOOD: BR                     |
| 5099 | 015742 | 105037 | 000660        |        | CLRB | BBC           | :CLEAR BAD RECORD COUNTER            |
| 5100 | 015746 | 000411 |               |        | BR   | DF2           |                                      |
| 5101 | 015750 | 122122 |               | DF0:   | CMPB | (R1)+, (R2)+  | :CHECK DATA                          |
| 5102 | 015752 | 001003 |               |        | BNE  | DF1           | :IF BAD: BR                          |
| 5103 | 015754 | 105037 | 000660        |        | CLRB | BBC           | :CLEAR BAD RECORD CNTR               |
| 5104 | 015760 | 000404 |               |        | BR   | DF2           |                                      |
| 5105 | 015762 | 004737 | 016574        | DF1:   | JSR  | PC, DRPKF     | :GO GET DROPS AND PICKS              |
| 5106 | 015766 | 004737 | 016060        |        | JSR  | PC, DERR      | :GO DO PRINT                         |
| 5107 | 015772 | 005205 |               | DF2:   | INC  | R5            | :BUMP CHAR CNTR                      |
| 5108 | 015774 | 001405 |               |        | BEQ  | DF3           | :IF DONE ALL: BR                     |
| 5109 | 015776 | 032737 | 010000 000562 |        | BIT  | #10000, RDCMD | :SEE IF READ REVERSE                 |
| 5110 | 016004 | 001761 |               |        | BEQ  | DF0           | :IF NOT: BR                          |
| 5111 | 016006 | 000716 |               |        | BR   | DF0A          | :ELSE CONTINUE READ REV              |
| 5112 | 016010 | 005037 | 000666        | DF3:   | CLR  | HDRFL         | :CLEAR HEADER FLAG                   |
| 5113 | 016014 | 005737 | 000706        |        | TST  | DERFL         | :SEE IF HAD DATA ERROR               |
| 5114 | 016020 | 001416 |               |        | BEQ  | DFX           | :IF NOT: BR                          |
| 5115 | 016022 | 005737 | 000710        |        | TST  | SERFL         |                                      |
| 5116 | 016026 | 001013 |               |        | BNE  | DFX           | :IF NOT DATA ERROR ONLY: BR          |
| 5117 | 016030 | 013704 | 000676        |        | MOV  | UNP, R4       |                                      |
| 5118 | 016034 | 032737 | 010000 000562 |        | BIT  | #10000, RDCMD | :SEE IF READ REVERSE                 |
| 5119 | 016042 | 001003 |               |        | BNE  | DF4           | :IF SO: BR                           |
| 5120 | 016044 | 005264 | 001130        |        | INC  | DATER1(R4)    | :BUMP DATA ERROR FORWARD COUNTER     |
| 5121 | 016050 | 000402 |               |        | BR   | DFX           |                                      |
| 5122 | 016052 | 005264 | 001170        | DF4:   | INC  | DEREV1(R4)    | :BUMP REVERSE DATA ERROR             |
| 5123 | 016056 | 000207 |               | DFX:   | RTS  | PC            | :EXIT                                |
| 5124 |        |        |               |        |      |               |                                      |

5126  
5127  
5128  
5129  
5130  
5131  
5132  
5133  
5134  
5135  
5136  
5137  
5138  
5139  
5140  
5141  
5142  
5143  
5144  
5145  
5146  
5147  
5148  
5149  
5150  
5151  
5152  
5153  
5154  
5155  
5156  
5157  
5158  
5159  
5160  
5161  
5162  
5163  
5164  
5165  
5166  
5167  
5168  
5169  
5170  
5171  
5172  
5173  
5174  
5175  
5176  
5177  
5178  
5179  
5180  
5181

016060 032777 002000 162522  
016066 001067  
016070 005237 000672  
016074 005737 000666  
016100 001007  
016102 004737 022672  
016106 012704 024564  
016112 000004  
016114 004737 021110  
016120 012704 024603  
016124 000004  
016126 010203  
016130 162703 033460  
016134 005303  
016136 032737 010000 000562  
016144 001402  
016146 010503  
016150 005103  
016152 104400  
016154 012704 024571  
016160 000004  
016162 032737 010000 000562  
016170 001402  
016172 111103  
016174 000401  
016176 114103  
016200 004737 024342  
016204 012704 024576

```
*****  
:DATA ERROR SUBROUTINE:  
:  
:THIS SUBROUTINE IS USED TO PRINT OUT ANY  
:ERRORS FOUND DURING THE DATA CHECK.  
:EACH CHARACTER FOUND BAD WILL BE PRINTED  
:IN BIT FORMAT ALONG WITH ITS EXPECTED CHARACTER.  
:AN ERROR HEADER CONSISTING OF THE UNIT NUMBER,  
:BLOCK NUMBER, RECORD NUMBER, SIZE OF RECORD, AND  
:ERROR TYPE (READ FORWARD, READ REVERSE, WRITE, ETC)  
:IS PRINTED ONLY ONCE FOR EACH RECORD FOUND BAD.  
:A COUNT IS MADE OF THE NUMBER OF SUCCESSIVE BAD  
:CHARACTERS, AND IF TEN (10) SUCCESSIVE BAD CHARACTERS  
:ARE FOUND IN A SINGLE RECORD, A MESSAGE INDICATING  
:A BAD RECORD CONDITION IS PRINTED AND THE NEXT  
:TWENTY (20) CHARACTERS ARE SKIPPED BEFORE CHECKING  
:IS RESUMED. IF THE BAD RECORD CONDITION IS FOUND  
:THREE TIMES IN A RECORD, ALL REMAINING DATA IS  
:SKIPPED EXCEPT THE FINAL TEN (10) CHARACTERS.  
:THIS SKIPPING IS OF COURSE ONLY POSSIBLE IN  
:RECORDS WHICH CONTAIN A SUFFICIENT NUMBER OF CHARACTERS.  
:PRINTING OF ERRORS MAY BE DISALLOWED AT ANY TIME  
:BY SETTING CONSOLE SWITCH TEN (10) TO A ONE.  
:THE OPERATOR MAY CAUSE THE PROGRAM TO HALT ON ANY ERROR  
:BY SETTING CONSOLE SWITCH FIFTEEN (15) TO A ONE.  
:*****  
DERR: BIT #2000,@SWR ;BRANCH IF NO ERROR  
BNE DERR4 ;PRINTOUT DESIRED  
DERR0: INC PFLG ;SET PRINT FLAG  
TST HDRFL ;SEE IF HAVE PRINTED HEADER  
BNE DERR0A ;IF SO: BR  
JSR PC,PAPRT ;PRINT CYCLE NUMBER  
MOV #MSG1,R4 ;LOAD ERROR MSG ADDR  
TYPE ;TYPE MSG  
JSR PC,FRPRT ;PRINT F OR R  
DERR0A: MOV #MSG4,R4 ;TYPE MSG  
MOV R2,R3 ;TYPE MSG  
SUB #RDATA,R3 ;POINT TO CHAR  
DEC R3  
BIT #10000,RDCMD ;SEE IF READ REVERSE  
BEQ DERR0B ;IF NOT: BR  
MOV R5,R3 ;GET CHAR NUMBER  
COM R3  
DERR0B: TYPOCT ;PRINT CHAR NUMBER  
MOV #MSG2,R4  
TYPE ;TYPE MSG  
BIT #10000,RDCMD ;SEE IF READ REVERSE  
BEQ DERR0C ;IF NOT: BR  
MOVB (R1),R3 ;GET CHAR  
BR DERR0D  
DERR0C: MOVB -(R1),R3 ;LOAD EXPECTED DATA  
DERR0D: JSR PC,DOUT ;GO PRINT CHAR  
MOV #MSG3,R4
```

|      |        |        |        |        |         |      |              |                                       |
|------|--------|--------|--------|--------|---------|------|--------------|---------------------------------------|
| 5182 | 016210 | 000004 |        |        |         | TYPE |              | :TYPE MSG                             |
| 5183 | 016212 | 032737 | 010000 | 000562 |         | BIT  | #10000,RDCMD | :SEE IF READ REVERSE                  |
| 5184 | 016220 | 001402 |        |        |         | BEQ  | DERR1        | :IF NOT: BR                           |
| 5185 | 016222 | 111203 |        |        |         | MOVB | (R2),R3      | :GET CHAR                             |
| 5186 | 016224 | 000401 |        |        |         | BR   | DERR2        |                                       |
| 5187 | 016226 | 114203 |        |        |         | MOVB | -(R2),R3     |                                       |
| 5188 | 016230 | 004737 | 024342 |        |         | JSR  | PC,DOUT      | :PRINT BAD CHAR                       |
| 5189 | 016234 | 032737 | 010000 | 000562 |         | BIT  | #10000,RDCMD | :BRANCH IF NOT READ                   |
| 5190 | 016242 | 001001 |        |        |         | BNE  | DERR4        | :REVERSE                              |
| 5191 | 016244 | 122122 |        |        |         | CMPB | (R1)+,(R2)+  | :RESET POINTERS                       |
| 5192 | 016246 | 105237 | 000660 |        |         | INCB | BBC          | :BUMP BAD RECORD CNTR                 |
| 5193 | 016252 | 122737 | 000010 | 000660 |         | CMPB | #10,BBC      | :SEE IF BLD BTH                       |
| 5194 | 016260 | 001123 |        |        |         | BNE  | DEREX        | :IF NOT: BR                           |
| 5195 | 016262 | 032777 | 002000 | 162320 |         | BIT  | #2000,@SWR   | :SEE IF PRINT INHIBIT                 |
| 5196 | 016270 | 001003 |        |        |         | BNE  | 1\$          | :IF SO: BR                            |
| 5197 | 016272 | 012704 | 024717 |        |         | MOV  | #MSG15,R4    |                                       |
| 5198 | 016276 | 000004 |        |        |         | TYPE |              | :TYPE MSG                             |
| 5199 | 016300 | 105037 | 000660 |        | 1\$:    | CLRB | BBC          | :RESET BAD RECORD CNTR                |
| 5200 | 016304 | 000337 | 000660 |        |         | SWAB | BBC          | :POSITION BLD BTH AMOUNT              |
| 5201 | 016310 | 105237 | 000660 |        |         | INCB | BBC          | :BUMP AMOUNT                          |
| 5202 | 016314 | 122737 | 000003 | 000660 |         | CMPB | #3,BBC       | :SEE IF HAD 3 BLD BTHS                |
| 5203 | 016322 | 101054 |        |        |         | BHI  | DERR4B       | :IF NOT: BR                           |
| 5204 | 016324 | 000337 | 000660 |        |         | SWAB | BBC          | :REPOSITION BBC                       |
| 5205 | 016330 | 022705 | 177767 |        |         | CMP  | #177767,R5   | :SEE IF ON LAST EIGHT CHARS           |
| 5206 | 016334 | 101473 |        |        |         | BLOS | DERR6        | :IF SO: BR                            |
| 5207 | 016336 | 012705 | 177767 |        |         | MOV  | #177767,R5   | :SET CHAR CNTR TO 8                   |
| 5208 | 016342 | 032737 | 010000 | 000562 |         | BIT  | #10000,RDCMD | :SEE IF READ REVERSE                  |
| 5209 | 016350 | 001416 |        |        |         | BEQ  | DERR4A       | :IF NOT: BR                           |
| 5210 | 016352 | 012701 | 027452 |        |         | MOV  | #WDATA,R1    | :GET START OF BUFFER                  |
| 5211 | 016356 | 012702 | 033460 |        |         | MOV  | #RDATA,R2    | :GET START OF BUFFER                  |
| 5212 | 016362 | 062701 | 000010 |        |         | ADD  | #10,R1       |                                       |
| 5213 | 016366 | 062702 | 000010 |        |         | ADD  | #10,R2       | :POINT TO START +10                   |
| 5214 | 016372 | 032737 | 000001 | 000556 |         | BIT  | #1,FMCNT     | :SEE IF ODD FRAME COUNT               |
| 5215 | 016400 | 001453 |        |        |         | BEQ  | DEREX        | :IF NOT: BR                           |
| 5216 | 016402 | 105722 |        |        |         | TSTB | (R2)+        | :BUMP POINTER                         |
| 5217 | 016404 | 000451 |        |        |         | BR   | DEREX        |                                       |
| 5218 | 016406 | 013737 | 000556 | 000644 | DERR4A: | MOV  | FMCNT,TEMP1  | :LOAD CHAR COUNT                      |
| 5219 | 016414 | 005137 | 000644 |        |         | COM  | TEMP1        |                                       |
| 5220 | 016420 | 005237 | 000644 |        |         | INC  | TEMP1        |                                       |
| 5221 | 016424 | 162737 | 000010 | 000644 |         | SUB  | #10,TEMP1    | :POINT TO BUFFER -8                   |
| 5222 | 016432 | 013701 | 000644 |        |         | MOV  | TEMP1,R1     | :POINT TO NEXT CHAR                   |
| 5223 | 016436 | 062701 | 027452 |        |         | ADD  | #WDATA,R1    | :POINT TO NEXT WRITE CHAR             |
| 5224 | 016442 | 013702 | 000644 |        |         | MOV  | TEMP1,R2     | :POINT TO END OF READ DATA -8 FORWARD |
| 5225 | 016446 | 062702 | 033460 |        |         | ADD  | #RDATA,R2    | :POINT TO NEXT CHAR                   |
| 5226 | 016452 | 000426 |        |        |         | BR   | DEREX        | :EXIT                                 |
| 5227 | 016454 | 000337 | 000660 |        | DERR4B: | SWAB | BBC          | :REPOSITION BBC                       |
| 5228 | 016460 | 000241 |        |        |         | CLC  |              |                                       |
| 5229 | 016462 | 062705 | 000024 |        |         | ADD  | #24,R5       | :SKIP 20 CHARS                        |
| 5230 | 016466 | 103416 |        |        |         | BCS  | DERR6        | :IF EXCEED RECORD SIZE: BR            |
| 5231 | 016470 | 032737 | 010000 | 000562 |         | BIT  | #10000,RDCMD | :SEE IF READ REVERSE                  |
| 5232 | 016476 | 001405 |        |        |         | BEQ  | DERR5        | :IF NOT: BR                           |
| 5233 | 016500 | 162701 | 000024 |        |         | SUB  | #24,R1       |                                       |
| 5234 | 016504 | 162702 | 000024 |        |         | SUB  | #24,R2       | :RESET POINTERS                       |
| 5235 | 016510 | 000407 |        |        |         | BR   | DEREX        |                                       |
| 5236 | 016512 | 062701 | 000024 |        | DERR5:  | ADD  | #24,R1       | :SKIP 20 CHARS                        |
| 5237 | 016516 | 062702 | 000024 |        |         | ADD  | #24,R2       | :SKIP FORWARD 20 CHARS                |

|      |        |        |        |        |             |            |                              |
|------|--------|--------|--------|--------|-------------|------------|------------------------------|
| 5238 | 016522 | 000402 |        |        | BR          | DEREX      |                              |
| 5239 | 016524 | 012705 | 177777 |        | DERR6: MOV  | #-1,R5     | ;SET TO EOR                  |
| 5240 | 016530 | 005777 | 162054 |        | DEREX: TST  | @SWR       | ;BRANCH IF NOT HALT ON ERROR |
| 5241 | 016534 | 100012 |        |        | BPL         | DEREX1     |                              |
| 5242 | 016536 | 000000 |        |        | HALT        |            |                              |
| 5243 | 016540 | 005737 | 000672 |        | TST         | PFLG       | ;SEE IF PRINTED              |
| 5244 | 016544 | 001006 |        |        | BNE         | DEREX1     | ;IF SO: BR                   |
| 5245 | 016546 | 032777 | 002000 | 162034 | BIT         | #2000,@SWR | ;SEE IF SHOULD PRINT         |
| 5246 | 016554 | 001002 |        |        | BNE         | DEREX1     | ;IF NOT: BR                  |
| 5247 | 016556 | 000137 | 016070 |        | JMP         | DERRO      | ;ELSE PRINT                  |
| 5248 | 016562 | 005037 | 000672 |        | DEREX1: CLR | PFLG       | ;CLEAR FLAG                  |
| 5249 | 016566 | 005237 | 000706 |        | INC         | DERFL      | ;BUMP DATA ERROR FLAG        |
| 5250 | 016572 | 000207 |        |        | RTS         | PC         | ;RETURN                      |
| 5251 |        |        |        |        |             |            |                              |

```

5253
5254
5255
5256
5257
5258
5259
5260
5261
5262
5263
5264
5265
5266
5267
5268
5269
5270
5271 016574 005037 000644
5272 016600 005037 000646
5273 016604 005037 000650
5274 016610 111137 000644
5275 016614 111237 000646
5276 016620 013704 000676
5277 016624 016437 000770 000722
5278 016632 016437 001010 000720
5279 016640 032737 010000 000562
5280 016646 001005
5281 016650 124142
5282 016652 112137 000644
5283 016656 112237 000646
5284 016662 004737 016674
5285 016666 004737 017114
5286 016672 000207
5287 016674 113703 000644
5288 016700 113704 000646
5289 016704 140403
5290 016706 001001
5291 016710 000207
5292 016712 012737 000010 000712
5293 016720 132703 000001
5294 016724 001455
5295 016726 105737 000650
5296 016732 001016
5297 016734 005277 161760
5298 016740 005777 161754
5299 016744 1 0015
5300 016746 005777 002000 161634
5301 016754 001402
5302 016756 004737 022672
5303 016762 004737 017160
5304 016766 000415
5305 016770 005277 161726
5306 016774 005777 161722
5307 017000 100027
5308 017002 032777 002000 161600

```

```

:*****
:DROPS AND PICKS SUBROUTINE:
:
:THIS SUBROUTINE IS USED TO ACCUMULATE FROM
: EACH BAD DATA CHARACTER FOUND THE NUMBER
: OF BITS WHICH WERE EITHER DROPPED OR PICKED UP.
: TWO COUNTERS PER SLAVE ARE USED TO ACCUMULATE THIS
: INFORMATION AND CAN STORE UP TO 32K DROPS
: OR PICKS BEFORE OVERFLOWING. IF OVERFLOW IS
: ABOUT TO OCCUR, THESE ACCUMULATORS ARE
: PRINTED IN OCTAL AND RESET TO ZERO.
: THE CONTENTS OF THE ACCUMULATORS MAY BE
: DISPLAYED AT ANY TIME BY SETTING CONSOLE
: SWITCH FOURTEEN TO A ONE (1). THE PRINTOUT WILL OCCUR
: AT THE END OF THE CURRENT BLOCK CYCLE.
:*****
DRPKF: CLR TEMP1
      CLR TEMP2
      CLR TEMP3
      MOV (R1),TEMP1 ;LOAD GOOD CHAR
      MOV (R2),TEMP2 ;LOAD BAD CHAR
      MOV UNP,R4
      MOV PIK1(R4),BPKP
      MOV DRP1(R4),BDPP
      BIT #10000,RDCMD ;SEE IF READ REVERSE
      BNE DRPK ;IF SO: BR
      CMPB -(R1),-(R2) ;POINT TO CHAR
      MOV (R1)+,TEMP1 ;LOAD GOOD CHAR
      MOV (R2)+,TEMP2 ;LOAD BAD CHAR
DRPK: JSR PC,DROP ;GET DROPS
      JSR PC,PICK ;GET PICKS
      RTS PC ;EXIT
DROP: MOVB TEMP1,R3 ;R3 = GOOD CHAR
      MOVB TEMP2,R4 ;R4 = BAD CHAR
DPC: BICB R4,R3 ;GET DROPS/PICKS
      BNE DPCG ;IF SOME: BR
      RTS PC ;RETURN
DPCG: MOV #10,BCNT ;SET NUMBER TO CHECK
DPC0: BITB #1,R3 ;SEE IF DROPPED OR PICKED THIS BIT
      BEQ DPC2 ;IF NOT: BR
      TSTB TEMP3 ;SEE IF ON PICKS
      BNE DPC1 ;IF SO: BR
      INC @BDPP ;BUMP DROP CNTR
      BPL DPC2 ;IF NO OVERFLOW: BR
      BIT #2000,@SWR ;SEE IF HAVE PRINTED DATA
      BEQ DPC0A ;IF SO: BR
      JSR PC,PAPRT ;PRINT CYCLE NUMBER
DPC0A: JSR PC,DPPRT ;PRINT DROPS AND PICKS
      BR DPC2A
DPC1: INC @BPKP ;BUMP PICK CNTR
      TST @BPKP ;SEE IF OVERFLOW
      BPL DPC2 ;IF NOT: BR
      BIT #2000,@SWR ;SEE IF HAVE PRINTED DATA

```

|      |        |        |        |        |             |               |  |                          |
|------|--------|--------|--------|--------|-------------|---------------|--|--------------------------|
| 5309 | 017010 | 001402 |        |        | BEQ         | DPC1A         |  | :IF SO: BR               |
| 5310 | 017012 | 004737 | 022672 |        | JSR         | PC,PAPRT      |  | :PRINT CYCLE NUMBER      |
| 5311 | 017016 | 004737 | 017160 |        | DPC1A: JSR  | PC,DPPRT      |  | :PRINT DROPS AND PICKS   |
| 5312 | 017022 | 013704 | 000676 |        | DPC2A: MOV  | UNP,R4        |  |                          |
| 5313 | 017026 | 016403 | 001010 |        | MOV         | DRP1(R4),R3   |  | :SET DROP POINTER        |
| 5314 | 017032 | 016404 | 000770 |        | MOV         | PIK1(R4),R4   |  | :SE, PICK POINTER        |
| 5315 | 017036 | 012737 | 000010 | 000712 | MOV         | #10,BCNT      |  | :SET NUMBER OF BITS      |
| 5316 | 017044 | 005023 |        |        | DPC2B: CLR  | (R3)+         |  | :CLEAR DROPS             |
| 5317 | 017046 | 005024 |        |        | CLR         | (R4)+         |  | :CLEAR PICK              |
| 5318 | 017050 | 005337 | 000712 |        | DEC         | BCNT          |  | :SEE IF DONE             |
| 5319 | 017054 | 001373 |        |        | BNE         | DPC2B         |  | :IF NOT: BR              |
| 5320 | 017056 | 000207 |        |        | RTS         | PC            |  | :EXIT                    |
| 5321 | 017060 | 000241 |        |        | DPC2: CLC   |               |  |                          |
| 5322 | 017062 | 106003 |        |        | RORB        | R3            |  | :GET NEXT BIT            |
| 5323 | 017064 | 005337 | 000712 |        | DEC         | BCNT          |  | :SEE IF DONE             |
| 5324 | 017070 | 001410 |        |        | BEQ         | DPC3          |  |                          |
| 5325 | 017072 | 062737 | 000002 | 000722 | ADD         | #2,BPKP       |  |                          |
| 5326 | 017100 | 062737 | 000002 | 000720 | ADD         | #2,BDPP       |  |                          |
| 5327 | 017106 | 000137 | 016720 |        | JMP         | DPC0          |  | :CONTINUE                |
| 5328 | 017112 | 000207 |        |        | DPC3: RTS   | PC            |  | :RETURN                  |
| 5329 | 017114 | 013704 | 000676 |        | PICK: MOV   | UNP,R4        |  | :GET UNIT POINTER        |
| 5330 | 017120 | 016437 | 000770 | 000722 | MOV         | PIK1(R4),BPKP |  | :SET PICK POINTER        |
| 5331 | 017126 | 016437 | 001010 | 000720 | MOV         | DRP1(R4),BDPP |  | :SET DROP POINTER        |
| 5332 | 017134 | 113704 | 000644 |        | MOVB        | TEMP1,R4      |  | :R4 = GOOD CHAR          |
| 5333 | 017140 | 113703 | 000646 |        | MOVB        | TEMP2,R3      |  | :R3 = BAD CHAR           |
| 5334 | 017144 | 112737 | 000001 | 000650 | MOVB        | #1,TEMP3      |  | :SET PICK FLAG           |
| 5335 | 017152 | 004737 | 016704 |        | JSR         | PC,DPC        |  | :GO CHECK PICKS          |
| 5336 | 017156 | 000207 |        |        | RTS         | PC            |  | :EXIT                    |
| 5337 | 017160 | 012704 | 025215 |        | DPPRT: MOV  | #MSG26,R4     |  |                          |
| 5338 | 017164 | 000004 |        |        | TYPE        |               |  | :TYPE MSG                |
| 5339 | 017166 | 013704 | 000676 |        | MOV         | UNP,R4        |  |                          |
| 5340 | 017172 | 016437 | 001010 | 000720 | MOV         | DRP1(R4),BDPP |  | :SET DROP POINTER        |
| 5341 | 017200 | 016437 | 000770 | 000722 | MOV         | PIK1(R4),BPKP |  | :SET PICK POINTER        |
| 5342 | 017206 | 062737 | 000016 | 000720 | ADD         | #16,BDPP      |  |                          |
| 5343 | 017214 | 062737 | 000016 | 000722 | ADD         | #16,BPKP      |  |                          |
| 5344 | 017222 | 012737 | 000010 | 000712 | MOV         | #10,BCNT      |  | :SET NUMBER TO PRINT     |
| 5345 | 017230 | 017703 | 161464 |        | DPPRT0: MOV | @BDPP,R3      |  |                          |
| 5346 | 017234 | 104400 |        |        | TYPOCT      |               |  | :PRINT DROPS             |
| 5347 | 017236 | 005337 | 000712 |        | DEC         | BCNT          |  | :SEE IF DONE             |
| 5348 | 017242 | 001404 |        |        | BEQ         | DPPRT1        |  | :IF NOT: BR              |
| 5349 | 017244 | 162737 | 000002 | 000720 | SUB         | #2,BDPP       |  | :BUMP POINTER            |
| 5350 | 017252 | 000766 |        |        | BR          | DPPRT0        |  | :CONTINUE FOR ALL 8 BITS |
| 5351 | 017254 | 012737 | 000010 | 000712 | DPPRT1: MOV | #10,BCNT      |  | :SET NUMBER TO PRINT     |
| 5352 | 017262 | 012704 | 025226 |        | MOV         | #MSG27,R4     |  |                          |
| 5353 | 017266 | 000004 |        |        | TYPE        |               |  | :TYPE MSG                |
| 5354 | 017270 | 017703 | 161426 |        | DPPRT2: MOV | @BPKP,R3      |  |                          |
| 5355 | 017274 | 104400 |        |        | TYPOCT      |               |  | :PRINT PICKS             |
| 5356 | 017276 | 005337 | 000712 |        | DEC         | BCNT          |  | :SEE IF DONE             |
| 5357 | 017302 | 001404 |        |        | BEQ         | DPPRTX        |  | :IF SO: BR               |
| 5358 | 017304 | 162737 | 000002 | 000722 | SUB         | #2,BPKP       |  | :BUMP POINTER            |
| 5359 | 017312 | 000766 |        |        | BR          | DPPRT2        |  | :CONTINUE FOR ALL 8 BITS |
| 5360 | 017314 | 000207 |        |        | DPPRTX: RTS | PC            |  | :RETURN                  |

5362  
5363  
5364  
5365  
5366  
5367  
5368  
5369  
5370  
5371  
5372  
5373  
5374  
5375  
5376  
5377  
5378  
5379  
5380  
5381  
5382  
5383  
5384  
5385  
5386  
5387  
5388  
5389  
5390  
5391  
5392  
5393  
5394  
5395  
5396  
5397  
5398  
5399  
5400  
5401  
5402  
5403  
5404  
5405  
5406  
5407  
5408  
5409  
5410  
5411  
5412  
5413  
5414  
5415  
5416  
5417

017316 013703 000556  
017322 032703 000001  
017326 001401  
017330 005303  
017332 005403  
017334 032737 000020 000552  
017342 001401  
017344 006203  
017346 032737 000010 000674  
017354 001414  
017356 032737 010000 000562  
017364 001405  
017366 012703 033460  
017372 162703 000002  
017376 000405  
017400 062703 033460  
017404 000402  
017406 062703 027452  
017412 010337 021064  
017416 012704 000007  
017422 012701 021066  
017426 005021  
017430 005304  
017432 001375  
017434 020377 161054  
017440 001402  
017442 005237 021066  
017446 032737 000010 000674  
017454 001006  
017456 005777 161034  
017462 001441

```

;*****
;STATUS CHECK SUBROUTINE:
;
;THIS SUBROUTINE IS USED TO PERFORM A CHECK OF
;BOTH THE MASSBUS CONTROLLER (RH11) AND THE TAPE
;CONTROLLER (TM03). THE RH11 IS CHECKED FOR ERRORS
;AS REFLECTED IN REGISTERS CS1 AND CS2 AND ALSO THAT
;THE BUS ADDRESS (BA) AND WORD COUNT (WC) ARE
;CORRECT. THE TM03 IS CHECKED FOR DRIVE STATIS (DS),
;DRIVE ERRORS (ER), AND PROPER FRAME COUNT. THE SPECIAL
;CHECK CHARACTERS (CRC+LRC) ARE ALSO CHECKED WHEN
;APPROPRIATE (IE: NRZ READ OR WRITE). CERTAIN TYPES
;OF DRIVE ERRORS IN PE OPERATION WILL BE ACCOMPANIED
;BY THE DISPLAY OF THE DEAD TRACK REGISTER (CC). THESE
;TYPES ARE ER BITS 15,10,7,6. THE PRINTOUTS OF BAD
;CRC,LRC,FC, AND BA WILL SHOW BOTH THE EXPECTED AND
;RECEIVED VALUES (IE: EXPT-RCVD). ONLY THOSE REGISTERS
;WHICH ARE IN ERROR WILL BE PRINTED AND ALL PRINTOUTS
;ARE IN OCTAL FORMAT WITH NO LEADING ZEROS. AS IN
;DATA ERRORS, STATUS ERRORS ARE PRECEDED BY HEADER
;DESCRIBING THE HARDWARE UNDER TEST, THE BLOCKING
;INFORMATION, AND THE ERROR TYPE.
;*****
ERCHK: MOV     FMCNT,R3      ;GET FRAME COUNT
        BIT     #1,R3      ;SEE IF ODD
        BEQ     ERO        ;IF NOT: BR
        DEC     R3         ;BUMP COUNT
ERO:    NEG     R3
        BIT     #20,UDES   ;SEE IF CORE DUMP
        BEQ     EROB      ;IF NOT: BR
        ASR     R3         ;SET TO FC/2
EROB:   BIT     #10,MTC1   ;SEE IF WRITE OP
        BEQ     ER1        ;IF SO: BR
        BIT     #10000,RDCMD
        BEQ     EROA
        MOV     #RDATA,R3
        SUB     #2,R3      ;SET POINTER
        BR     ER2
EROA:   ADD     #RDATA,R3  ;BUILD EXPT READ ADDRESS
        BR     ER2
ER1:    ADD     #WDATA,R3  ;BUILD EXPT WRITE ADDRESS
ER2:    MOV     R3,CADER   ;SAVE ADDRESS
        MOV     #7,R4
        MOV     #BAER,R1
ER2A0:  CLR     (R1)+      ;CLEAR FLAGS
        DEC     R4
        BNE    ER2A0
        CMP     R3,@BA     ;SEE IF ADDRESS OK
        BEQ    ER2A1      ;IF SO: BR
        INC     BAER      ;SET BUS ADDRESS ERROR
ER2A1:  BIT     #10,MTC1   ;SEE IF WRITE OPER
        BNE    ER2B      ;IF NOT: BR
ER2A:   TST     @FC        ;SEE IF FC=0
        BEQ    ER3        ;IF SO: BR

```

|      |        |        |        |        |        |     |              |  |  |
|------|--------|--------|--------|--------|--------|-----|--------------|--|--|
| 5418 | 017464 | 005237 | 021074 |        |        | INC | FCER         |  | ;SET FC ERROR                                  |
| 5419 | 017470 | 000436 |        |        |        | BR  | ER3          |  |  |
| 5420 | 017472 | 032737 | 000040 | 000674 | ER2B:  | BIT | #40,MTC1     |  | ;SEE IF SPACE OPER                             |
| 5421 | 017500 | 001766 |        |        |        | BEQ | ER2A         |  | ;IF SO: BR                                     |
| 5422 | 017502 | 005737 | 000700 |        |        | TST | TMFLG        |  | ;SEE IF TM TIME                                |
| 5423 | 017506 | 001011 |        |        |        | BNE | ER2D         |  | ;IF SO: BR                                     |
| 5424 | 017510 | 013703 | 000556 |        |        | MOV | FMCNT,R3     |  |  |
| 5425 | 017514 | 005403 |        |        |        | NEG | R3           |  | ;R3 = EXPT RECORD SIZE                         |
| 5426 | 017516 | 020377 | 160774 |        | ER2C:  | CMP | R3,@FC       |  | ;SEE IF FC = EXPT                              |
| 5427 | 017522 | 001421 |        |        |        | BEQ | ER3          |  | ;IF SO: BR                                     |
| 5428 | 017524 | 005237 | 021074 |        |        | INC | FCER         |  | ;SET FC ERROR FLAG                             |
| 5429 | 017530 | 000416 |        |        |        | BR  | ER3          |  |  |
| 5430 | 017532 | 032737 | 002000 | 000552 | ER2D:  | BIT | #2000,UDES   |  | ;SEE IF PE                                     |
| 5431 | 017540 | 001346 |        |        |        | BNE | ER2A         |  | ;IF SO: BR                                     |
| 5432 | 017542 | 032737 | 010000 | 000562 |        | BIT | #10000,RDCMD |  | ;SEE IF READ REVERSE                           |
| 5433 | 017550 | 001003 |        |        |        | BNE | ER2E         |  | ;IF SO: BR                                     |
| 5434 | 017552 | 012703 | 000002 |        |        | MOV | #2,R3        |  |  |
| 5435 | 017556 | 000757 |        |        |        | BR  | ER2C         |  | ;LOOK FOR EXPT = 2                             |
| 5436 | 017560 | 012703 | 000001 |        | ER2E:  | MOV | #1,R3        |  |  |
| 5437 | 017564 | 000754 |        |        |        | BR  | ER2C         |  | ;GO CHECK FC FOR TM                            |
| 5438 | 017566 | 032777 | 160000 | 160714 | ER3:   | BIT | #160000,@C1  |  | ;SEE IF COUNT ERROR                            |
| 5439 | 017574 | 001437 |        |        |        | SEQ | ER4          |  |  |
| 5440 | 017576 | 017703 | 160716 |        |        | MOV | @CS,R3       |  | ;GET CONT STATUS REG                           |
| 5441 | 017602 | 042703 | 000307 |        |        | BIC | #307,R3      |  | ;MASK OUT IR,OR,UNIT NO. & SEE IF OTHER ERRORS |
| 5442 | 017606 | 001406 |        |        |        | BEQ | ER3A         |  | ;IF NOT: BR                                    |
| 5443 | 017610 | 005737 | 000700 |        |        | TST | TMFLG        |  | ;SEE IF TAPE MARK TIME                         |
| 5444 | 017614 | 001425 |        |        |        | BEQ | ER3B         |  | ;IF NOT: BR                                    |
| 5445 | 017616 | 042703 | 001000 |        |        | BIC | #1000,R3     |  | ;MASK MISSED TRANS & BR IF OTHER ERRORS        |
| 5446 | 017622 | 001022 |        |        |        | BNE | ER3B         |  |  |
| 5447 | 017624 | 032777 | 060000 | 160656 | ER3A:  | BIT | #60000,@C1   |  | ;SEE IF EITHER TRE OR MCPE                     |
| 5448 | 017632 | 001420 |        |        |        | BEQ | ER4          |  | ;IF NOT: BR                                    |
| 5449 | 017634 | 005737 | 000700 |        |        | TST | TMFLG        |  | ;SEE IF TM TIME                                |
| 5450 | 017640 | 001413 |        |        |        | BEQ | ER3B         |  | ;IF NOT: BR                                    |
| 5451 | 017642 | 017703 | 160656 |        |        | MOV | @ER,R3       |  | ;GET ERROR REGISTER                            |
| 5452 | 017646 | 032737 | 000010 | 000552 |        | BIT | #10,UDES     |  | ;SEE IF EVEN PARITY                            |
| 5453 | 017654 | 001402 |        |        |        | BEQ | ER3A1        |  | ;IF NOT: BR                                    |
| 5454 | 017656 | 042703 | 000100 |        |        | BIC | #100,R3      |  | ;MASK PAR                                      |
| 5455 | 017662 | 042703 | 001000 |        | ER3A1: | BIC | #1000,R3     |  | ;MASK FCE                                      |
| 5456 | 017666 | 001402 |        |        |        | BEQ | ER4          |  | ;IF NO ERRORS EXCEPT FCE: BR                   |
| 5457 | 017670 | 005237 | 021070 |        | ER3B:  | INC | CONER        |  | ;SET CONT ERROR FLAG                           |
| 5458 | 017674 | 032777 | 040000 | 160620 | ER4:   | BIT | #40000,@DS   |  | ;SEE IF DRIVE ERROR                            |
| 5459 | 017702 | 001420 |        |        |        | BEQ | ER6          |  | ;IF NOT: BR                                    |
| 5460 | 017704 | 005737 | 000700 |        |        | TST | TMFLG        |  | ;SEE IF TAPE MARK TIME                         |
| 5461 | 017710 | 001413 |        |        |        | BEQ | ER4A         |  | ;IF NOT: BR                                    |
| 5462 | 017712 | 017703 | 160606 |        |        | MOV | @ER,R3       |  | ;GET ER  |
| 5463 | 017716 | 032737 | 000010 | 000552 |        | BIT | #10,UDES     |  | ;SEE IF EVEN PARITY                            |
| 5464 | 017724 | 001402 |        |        |        | BEQ | ER4A1        |  | ;IF NOT: BR                                    |
| 5465 | 017726 | 042703 | 000100 |        |        | BIC | #100,R3      |  | ;MASK PAR                                      |
| 5466 | 017732 | 042703 | 001000 |        | ER4A1: | BIC | #1000,R3     |  | ;MASK OUT FCE & BRANCH IF                      |
| 5467 | 017736 | 001402 |        |        |        | BEQ | ER6          |  | ;NO OTHER ERRORS                               |
| 5468 | 017740 | 005237 | 021072 |        | ER4A:  | INC | DRVER        |  | ;SET DRIVER ERROR FLAG                         |
| 5469 | 017744 | 032737 | 002000 | 000552 | ER6:   | BIT | #2000,UDES   |  |  |
| 5470 | 017752 | 001071 |        |        |        | BNE | ERPT         |  | ;IF IN PE MODE: BR                             |
| 5471 | 017754 | 032777 | 020000 | 160626 |        | BIT | #20000,@SWR  |  | ;SEE IF NO DATA CHECK                          |
| 5472 | 017762 | 001065 |        |        |        | BNE | ERPT         |  | ;IF NOT: BR (ALLOW READ OF UNKNOWN TAPES)      |
| 5473 | 017764 | 032737 | 000040 | 000674 |        | BIT | #40,MTC1     |  | ;SEE IF WRITE OR READ OP                       |

|      |        |        |        |        |         |      |              |                         |
|------|--------|--------|--------|--------|---------|------|--------------|-------------------------|
| 5474 | 017772 | 001461 |        |        |         | BEQ  | ERPT         | :IF NOT: BR             |
| 5475 | 017774 | 005737 | 000700 |        |         | TST  | TMFLG        | :SEE IF TAPE MARK TIME  |
| 5476 | 020000 | 001413 |        |        |         | BEQ  | ER6A         | :IF NOT: BR             |
| 5477 | 020002 | 013737 | 015442 | 021106 |         | MOV  | EXCRC,CRCSV  | :SAVE CRC               |
| 5478 | 020010 | 013737 | 015444 | 021104 |         | MOV  | EXLRC,LRCV   | :SAVE LRC               |
| 5479 | 020016 | 005037 | 015442 |        |         | CLR  | EXCRC        |                         |
| 5480 | 020022 | 012737 | 000023 | 015444 |         | MOV  | #23,EXLRC    | :SET CRC/LRC FOR TM     |
| 5481 | 020030 | 032737 | 000060 | 000552 | ER6A:   | BIT  | #60,UDES     | :SEE IF FORMAT 14       |
| 5482 | 020036 | 001037 |        |        |         | BNE  | ERPT         | :IF NOT: BR             |
| 5483 | 020040 | 017703 | 160464 |        |         | MOV  | @CC,R3       | :GET CRC CHARACTER      |
| 5484 | 020044 | 042703 | 177000 |        |         | BIC  | #177000,R3   |                         |
| 5485 | 020050 | 023703 | 015442 |        |         | CMP  | EXCRC,R3     |                         |
| 5486 | 020054 | 001402 |        |        |         | BEQ  | ER7          | :IF CRC GOOD: BR        |
| 5487 | 020056 | 005237 | 021100 |        |         | INC  | CRCER        | :SET ERROR FLAG         |
| 5488 | 020062 | 017703 | 160446 |        | ER7:    | MOV  | @MR,R3       | :GET LRC                |
| 5489 | 020066 | 000303 |        |        |         | SWAB | R3           |                         |
| 5490 | 020070 | 005703 |        |        |         | TST  | R3           |                         |
| 5491 | 020072 | 100002 |        |        |         | BPL  | ER10         |                         |
| 5492 | 020074 | 052703 | 000400 |        |         | BIS  | #400,R3      |                         |
| 5493 | 020100 | 042703 | 177000 |        | ER10:   | BIC  | #177000,R3   |                         |
| 5494 | 020104 | 023703 | 015444 |        |         | CMP  | EXLRC,R3     |                         |
| 5495 | 020110 | 001412 |        |        |         | BEQ  | ERPT         | :IF LRC GOOD: BR        |
| 5496 | 020112 | 010337 | 021102 |        |         | MOV  | R3,ACTLRC    | :SAVE ACTUAL LRC        |
| 5497 | 020116 | 005237 | 021076 |        |         | INC  | LRCER        | :SET LRC ERROR FLAG     |
| 5498 | 020122 | 032737 | 010000 | 000562 |         | BIT  | #10000,RDCMD | :SEE IF READ REVERSE    |
| 5499 | 020130 | 001402 |        |        |         | BEQ  | ERPT         | :IF NOT: BR             |
| 5500 | 020132 | 005037 | 021076 |        |         | CLR  | LRCER        | :ELSE CLEAR LRC ERROR   |
| 5501 | 020136 | 012703 | 000006 |        | ERPT:   | MOV  | #6,R3        |                         |
| 5502 | 020142 | 005037 | 000710 |        |         | CLR  | SERFL        | :CLEAR ERROR FLAG       |
| 5503 | 020146 | 005037 | 000724 |        |         | CLR  | ERSAV        |                         |
| 5504 | 020152 | 012704 | 021066 |        |         | MOV  | #BAER,R4     |                         |
| 5505 | 020156 | 005724 |        |        | ERPTT:  | TST  | (R4)+        | :SEE IF ANY ERROR       |
| 5506 | 020160 | 001004 |        |        |         | BNE  | ERPTG        | :IF SO: BR              |
| 5507 | 020162 | 005303 |        |        |         | DEC  | R3           |                         |
| 5508 | 020164 | 001374 |        |        |         | BNE  | ERPTT        |                         |
| 5509 | 020166 | 000137 | 021020 |        |         | JMP  | ERPX1        |                         |
| 5510 | 020172 | 005237 | 000710 |        | ERPTG:  | INC  | SERFL        | :SET ERROR FLAG         |
| 5511 | 020176 | 017737 | 160322 | 000724 |         | MOV  | @ER,ERSAV    | :SAVE ERROR REGISTER    |
| 5512 | 020204 | 032777 | 002000 | 160376 |         | BIT  | #2000,@SWR   | :SEE IF PRINT           |
| 5513 | 020212 | 001420 |        |        |         | BEQ  | ERPT0        | :IF SO: BR              |
| 5514 | 020214 | 022737 | 000002 | 000714 |         | CMP  | #2,RTYFL     | :SEE IF READ RETRY      |
| 5515 | 020222 | 001006 |        |        |         | BNE  | ERPTG1       | :IF NOT: BR             |
| 5516 | 020224 | 013703 | 000704 |        |         | MOV  | RTCNT,R3     |                         |
| 5517 | 020230 | 005203 |        |        |         | INC  | R3           | :BUMP RETRY COUNT       |
| 5518 | 020232 | 020337 | 000604 |        |         | CMP  | R3,RETRY     | :SEE IF LAST RETRY      |
| 5519 | 020236 | 001406 |        |        |         | BEQ  | ERPT0        | :IF SO: BR              |
| 5520 | 020240 | 022737 | 000002 | 021072 | ERPTG1: | CMP  | #2,DRVER     | :SEE IF TM STATUS ERROR |
| 5521 | 020246 | 001402 |        |        |         | BEQ  | ERPT0        | :IF SO: BR              |
| 5522 | 020250 | 000137 | 020700 |        |         | JMP  | ERPX0        |                         |
| 5523 | 020254 | 005237 | 000672 |        | ERPT0:  | INC  | PFLG         |                         |
| 5524 | 020260 | 004737 | 022672 |        |         | JSR  | PC,PAPRT     | :PRINT HEADER           |
| 5525 | 020264 | 013704 | 000654 |        |         | MOV  | EMADDR,R4    |                         |
| 5526 | 020270 | 000004 |        |        |         | TYPE |              | :TYPE MSG               |
| 5527 | 020272 | 004737 | 021110 |        |         | JSR  | PC,FRPRT     | :PRINT F OR R           |
| 5528 | 020276 | 005737 | 000700 |        |         | TST  | TMFLG        |                         |
| 5529 | 020302 | 001407 |        |        |         | BEQ  | ERPT1        |                         |

|      |        |        |        |        |         |        |               |                         |
|------|--------|--------|--------|--------|---------|--------|---------------|-------------------------|
| 5530 | 020304 | 022737 | 026153 | 000654 |         | CMP    | #MSG54,EMADDR |                         |
| 5531 | 020312 | 001403 |        |        |         | BEQ    | ERPT1         |                         |
| 5532 | 020314 | 012704 | 026171 |        |         | MOV    | #MSG56,R4     | :PRINT TM               |
| 5533 | 020320 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5534 | 020322 | 005737 | 021070 |        | ERPT1:  | TST    | CONER         |                         |
| 5535 | 020326 | 001414 |        |        |         | BEQ    | ERPT2         | :IF NO CONT ERROR: BR   |
| 5536 | 020330 | 012704 | 025045 |        |         | MOV    | #MSG23,R4     |                         |
| 5537 | 020334 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5538 | 020336 | 017703 | 160146 |        |         | MOV    | @C1,R3        |                         |
| 5539 | 020342 | 104400 |        |        |         | TYPOCT |               | :PRINT CONTROL 1        |
| 5540 | 020344 | 012704 | 025072 |        |         | MOV    | #MSG23D,R4    | :PRINT CS TAG           |
| 5541 | 020350 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5542 | 020352 | 017703 | 160142 |        |         | MOV    | @CS,R3        |                         |
| 5543 | 020356 | 104400 |        |        |         | TYPOCT |               | :PRINT CONT STATUS      |
| 5544 | 020360 | 005737 | 021072 |        | ERPT2:  | TST    | DRVER         |                         |
| 5545 | 020364 | 001414 |        |        |         | BEQ    | ERPT3         | :IF SO DRIVE ERROR: BR  |
| 5546 | 020366 | 012704 | 025100 |        |         | MOV    | #MSG23E,R4    |                         |
| 5547 | 020372 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5548 | 020374 | 017703 | 160122 |        |         | MOV    | @DS,R3        |                         |
| 5549 | 020400 | 104400 |        |        |         | TYPOCT |               | :PRINT DRIVE STATUS     |
| 5550 | 020402 | 012704 | 025105 |        |         | MOV    | #MSG23F,R4    |                         |
| 5551 | 020406 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5552 | 020410 | 017703 | 160110 |        |         | MOV    | @ER,R3        |                         |
| 5553 | 020414 | 104400 |        |        |         | TYPOCT |               | :PRINT DRIVE ERROR      |
| 5554 | 020416 | 005737 | 021066 |        | ERPT3:  | TST    | BAER          |                         |
| 5555 | 020422 | 001416 |        |        |         | BEQ    | ERPT4         | :IF NO BA ERROR: BR     |
| 5556 | 020424 | 012704 | 025060 |        |         | MOV    | #MSG23B,R4    |                         |
| 5557 | 020430 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5558 | 020432 | 017703 | 160056 |        |         | MOV    | @BA,R3        |                         |
| 5559 | 020436 | 104400 |        |        |         | TYPOCT |               | :PRINT BUS ADDRESS      |
| 5560 | 020440 | 012737 | 000255 | 000640 |         | MOV    | #255,TOB      |                         |
| 5561 | 020446 | 004737 | 024064 |        |         | JSR    | PC,TOG        | :PRINT /                |
| 5562 | 020452 | 013703 | 021064 |        |         | MOV    | CADER,R3      |                         |
| 5563 | 020456 | 104400 |        |        |         | TYPOCT |               | :PRINT EXPT BUS ADDRESS |
| 5564 | 020460 | 005737 | 021074 |        | ERPT4:  | TST    | FCER          |                         |
| 5565 | 020464 | 001406 |        |        |         | BEQ    | ERPT5         | :IF NO FC ERROR: BR     |
| 5566 | 020466 | 012704 | 025065 |        |         | MOV    | #MSG23C,R4    |                         |
| 5567 | 020472 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5568 | 020474 | 017703 | 160016 |        |         | MOV    | @FC,R3        |                         |
| 5569 | 020500 | 104400 |        |        |         | TYPOCT |               | :PRINT FRAME COUNT      |
| 5570 | 020502 | 012704 | 025053 |        | ERPT5:  | MOV    | #MSG23A,R4    |                         |
| 5571 | 020506 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5572 | 020510 | 017703 | 157776 |        |         | MOV    | @WC,R3        |                         |
| 5573 | 020514 | 104400 |        |        |         | TYPOCT |               | :PRINT WORD COUNT       |
| 5574 | 020516 | 005737 | 021100 |        |         | TST    | CRCER         |                         |
| 5575 | 020522 | 001420 |        |        |         | BEQ    | ERPT5A        | :IF NO CRC ERROR: BR    |
| 5576 | 020524 | 012704 | 026216 |        |         | MOV    | #MSG58,R4     |                         |
| 5577 | 020530 | 000004 |        |        |         | TYPE   |               | :TYPE MSG               |
| 5578 | 020532 | 017703 | 157772 |        |         | MOV    | @CC,R3        |                         |
| 5579 | 020536 | 042703 | 177000 |        |         | BIC    | #177000,R3    |                         |
| 5580 | 020542 | 104400 |        |        |         | TYPOCT |               | :PRINT ACTUAL CRC       |
| 5581 | 020544 | 012737 | 000255 | 000640 |         | MOV    | #255,TOB      |                         |
| 5582 | 020552 | 004737 | 024064 |        |         | JSR    | PC,TOG        |                         |
| 5583 | 020556 | 013703 | 015442 |        |         | MOV    | EXCRC,R3      |                         |
| 5584 | 020562 | 104400 |        |        |         | TYPOCT |               | :PRINT EXPECTED CRC     |
| 5585 | 020564 | 005737 | 021076 |        | ERPT5A: | TST    | LRCER         |                         |

|      |        |        |        |        |            |             |  |                                  |
|------|--------|--------|--------|--------|------------|-------------|--|----------------------------------|
| 5586 | 020570 | 001416 |        |        | BEQ        | ERPT6       |  | :IF NO LRC ERROR: BR             |
| 5587 | 020572 | 012704 | 026224 |        | MOV        | #MSG59,R4   |  |                                  |
| 5588 | 020576 | 000004 |        |        | TYPE       |             |  | :TYPE MSG                        |
| 5589 | 020600 | 013703 | 021102 |        | MOV        | ACTLRC,R3   |  |                                  |
| 5590 | 020604 | 104400 |        |        | TYPOCT     |             |  | :PRINT ACTUAL LRC                |
| 5591 | 020606 | 012737 | 000255 | 000640 | MOV        | #255,TOB    |  |                                  |
| 5592 | 020614 | 004737 | 024064 |        | JSR        | PC,TOG      |  |                                  |
| 5593 | 020620 | 013703 | 015444 |        | MOV        | EXLRC,R3    |  |                                  |
| 5594 | 020624 | 104400 |        |        | TYPOCT     |             |  | :PRINT EXPECTED LRC              |
| 5595 | 020626 | 005737 | 021072 |        | ERPT6: TST | DRVER       |  |                                  |
| 5596 | 020632 | 001421 |        |        | BEQ        | ERPT7       |  | :IF NO DRIVE ERROR: BR           |
| 5597 | 020634 | 032737 | 002000 | 000552 | BIT        | #2000,UDES  |  |                                  |
| 5598 | 020642 | 001415 |        |        | BEQ        | ERPT7       |  | :IF NO PE: BR                    |
| 5599 | 020644 | 017704 | 157654 |        | MOV        | @ER,R4      |  |                                  |
| 5600 | 020650 | 042704 | 075477 |        | BIC        | #75477,R4   |  | :MASK OUT ALL BUT BITS 15,10,7,6 |
| 5601 | 020654 | 001410 |        |        | BEQ        | ERPT7       |  | :IF NO CONDITIONALS SET: BR      |
| 5602 | 020656 | 012704 | 025117 |        | MOV        | #MSG23H,R4  |  |                                  |
| 5603 | 020662 | 000004 |        |        | TYPE       |             |  | :TYPE MSG                        |
| 5604 | 020664 | 017703 | 157640 |        | MOV        | @CC,R3      |  |                                  |
| 5605 | 020670 | 042703 | 177000 |        | BIC        | #177000,R3  |  | :MASK CC                         |
| 5606 | 020674 | 104400 |        |        | TYPOCT     |             |  | :PRINT CHECK CHARACTERS          |
| 5607 | 020676 | 000240 |        |        | ERPT7: NOP |             |  |                                  |
| 5608 | 020700 | 005777 | 157704 |        | ERPX0: TST | @SWR        |  | :BRANCH IF NOT HALT ON ERROR     |
| 5609 | 020704 | 100012 |        |        | BPL        | ERPX        |  |                                  |
| 5610 | 020706 | 000000 |        |        | HALT       |             |  |                                  |
| 5611 | 020710 | 005737 | 000672 |        | TST        | PFLG        |  | :SEE IF HAVE PRINTED             |
| 5612 | 020714 | 001006 |        |        | BNE        | ERPX        |  | :IF SO: BR                       |
| 5613 | 020716 | 032777 | 002000 | 157664 | BIT        | #2000,@SWR  |  | :SEE IF SHOULD PRINT             |
| 5614 | 020724 | 001002 |        |        | BNE        | ERPX        |  | :IF NOT: BR                      |
| 5615 | 020726 | 000137 | 020254 |        | JMP        | ERPT0       |  | :PRINT ERROR                     |
| 5616 | 020732 | 005037 | 000672 |        | ERPX: CLR  | PFLG        |  |                                  |
| 5617 | 020736 | 005737 | 000566 |        | TST        | CRCC        |  | :BRANCH IF CRC ERROR             |
| 5618 | 020742 | 001007 |        |        | BNE        | 1\$         |  | :CORRECTION DESIRED              |
| 5619 | 020744 | 012777 | 000040 | 157546 | MOV        | #40,@CS     |  | :ELSE INIT                       |
| 5620 | 020752 | 013777 | 000550 | 157540 | MOV        | DVN,@CS     |  | :RESET DRIVE NUMBER              |
| 5621 | 020760 | 000414 |        |        | BR         | 2\$         |  |                                  |
| 5622 | 020762 | 012777 | 000011 | 157520 | 1\$: MOV   | #11,@C1     |  | :DRIVE CLEAR                     |
| 5623 | 020770 | 017704 | 157532 |        | MOV        | @AS,R4      |  |                                  |
| 5624 | 020774 | 010477 | 157526 |        | MOV        | R4,@AS      |  | :CLEAR AS                        |
| 5625 | 021000 | 013704 | 000510 |        | MOV        | C1,R4       |  |                                  |
| 5626 | 021004 | 005204 |        |        | INC        | R4          |  |                                  |
| 5627 | 021006 | 152714 | 000100 |        | BISB       | #100,(R4)   |  | :RESET TRE                       |
| 5628 | 021012 | 013777 | 000552 | 157522 | 2\$: MOV   | UDES,@TC    |  | :RESET TC                        |
| 5629 | 021020 | 032737 | 000040 | 000674 | ERPX1: BIT | #40,MTC1    |  |                                  |
| 5630 | 021026 | 001415 |        |        | BEQ        | ERPX2       |  | :IF NOT READ/WRITE OP: BR        |
| 5631 | 021030 | 005737 | 000700 |        | TST        | TMFLG       |  |                                  |
| 5632 | 021034 | 001412 |        |        | BEQ        | ERPX2       |  | :IF NOT TM TIME: BR              |
| 5633 | 021036 | 032737 | 002000 | 000552 | BIT        | #2000,UDES  |  | :CHECK UDES                      |
| 5634 | 021044 | 001006 |        |        | BNE        | ERPX2       |  | :BR IF PE                        |
| 5635 | 021046 | 013737 | 021106 | 015442 | MOV        | CRCSV,EXCRC |  | :RESTORE CRC                     |
| 5636 | 021054 | 013737 | 021104 | 015444 | MOV        | LRCSV,EXLRC |  | :RESTORE LRC                     |
| 5637 | 021062 | 000207 |        |        | ERPX2: RTS | PC          |  | :EXIT                            |
| 5638 | 021064 | 000000 |        |        | CADER:     | 0           |  | :EXPT ADDRESS SAVE               |
| 5639 | 021066 | 000000 |        |        | BAER:      | 0           |  |                                  |
| 5640 | 021070 | 000000 |        |        | CONER:     | 0           |  |                                  |
| 5641 | 021072 | 000000 |        |        | DRVER:     | 0           |  |                                  |

5642 021074 000000  
 5643 021076 000000  
 5644 021100 000000  
 5645 021102 000000  
 5646 021104 000000  
 5647 021106 000000

FCER: 0  
 LRCER: 0  
 CRCER: 0  
 ACTLRC: 0  
 LRCSV: 0  
 CRCSV: 0

5648  
 5649  
 5650  
 5651  
 5652  
 5653  
 5654  
 5655  
 5656  
 5657

```

:*****
:F FOR FORWARD/R FOR REVERSE PRINT SUBROUTINE:
:
:THIS SUBROUTINE IS USED TO PRINT OUT THE
:TAPE DIRECTION USED WHEN ANY ERROR IS
:DETECTED IN STATUS OF READ OR WRITE, DATA, OR
:SPACING OPERATIONS.
:*****
  
```

5658 021110 032737 000010 000674  
 5659 021116 001411  
 5660 021120 012704 024753  
 5661 021124 032737 000002 000674  
 5662 021132 001002  
 5663 021134 012704 024750  
 5664 021140 000004  
 5665 021142 000207  
 5666

```

FRPRT: BIT #10,MTC1 ;SEE IF WRITE COMMAND
        BEQ 2$ ;IF SO: BR
        MOV #MSG17,R4 ;SET TO TYPE REVERSE MSG
        BIT #2,MTC1 ;BRANCH IF REVERSE
        BNE 1$
        MOV #MSG16,R4 ;SET FORWARD MESSAGE
        1$: TYPE ;TYPE MSG
        2$: RTS PC ;EXIT
  
```

5668  
5669  
5670  
5671  
5672  
5673  
5674  
5675  
5676  
5677  
5678  
5679  
5680  
5681  
5682  
5683  
5684  
5685  
5686  
5687  
5688  
5689  
5690  
5691  
5692  
5693  
5694  
5695  
5696  
5697  
5698  
5699  
5700  
5701  
5702  
5703  
5704  
5705  
5706  
5707  
5708  
5709  
5710  
5711  
5712  
5713  
5714  
5715  
5716  
5717  
5718  
5719  
5720  
5721  
5722  
5723

021144 005037 000644  
021150 013777 000550 157342  
021156 032777 010000 157336  
021164 001026  
021166 005237 000644  
021172 001371  
021174 004737 022672  
021200 032737 000010 000674  
021206 001004  
021210 012704 024610  
021214 000004  
021216 000405  
021220 012704 024615  
021224 000004  
021226 004737 021110  
021232 012704 025175  
021236 000004  
021240 000000  
021242 032777 020000 157252  
021250 001411  
021252 004737 022672  
021256 012704 027300  
021262 000004  
021264 032777 020000 157230 1\$:  
021272 001374  
021274 022737 000026 000674 TAPG3F:  
021302 001003

```

:*****
:TAPE COMMAND EXECUTE SUBROUTINE:
:
:THIS SUBROUTINE IS USED TO EXECUTE THE
:MAG TAPE COMMAND DESCRIBED BY THE READ
:OR WRITE ROUTINE. THE FINAL COMMAND IS
:SENT TO THE DEVICE REGISTER ALONG WITH THE
:INTERRUPT ENABLE AND GO BITS.
:ONCE THE COMMAND IS ISSUED, AN INTERRUPT
:TIMER IS STARTED AND IF NO INTERRUPT IS RETURNED
:BEFORE TIME OUT OCCURS, AN ERROR WILL BE
:PRINTED AND THE PROGRAM STOPPED. TESTING MAY
:BE RESUMED BY PRESSING THE CONTINUE SWITCH.
:TWO INTERRUPT HANDLERS ARE USED, ONE FOR MAG TAPE
:AND ANOTHER FOR TELETYPE (TTY).
:UPON RECEIPT OF A MAG TAPE INTERRUPT, HOUSEKEEPING
:IS PERFORMED AND CONTROL RETURNED TO THE CALLING
:ROUTINE (READ,WRITE,ETC).
:RECEIPT OF A TTY INTERRUPT WILL CAUSE THE
:PROGRAM TO CHECK FOR ENTRY OF A CNTRL C CHARACTER.
:IF NOT CNTRL C, THEN CONTINUATION OF WAIT FOR MAG
:TAPE INTERRUPT IS RETURNED. IF, HOWEVER, THE TTY
:INTERRUPT WAS CAUSED BY ENTRY OF A CNTRL C,
:THEN AT THIS TIME REQUESTS FOR NEW STALL VALUES
:ARE PRINTED AND THE RESPONSES ENTERED. RESUMPTION
:OF TAPE INTERRUPT WAIT IS THEN RESUMED.
:*****
TAPG: CLR TEMP1
MOV DVN,@CS ;SET DRIVE NO.
TAPG0: BIT #10000,@DS ;SEE IF HAVE MCL
BNE TAPG3 ;IF SO: BR
INC TEMP1 ;SEE IF TIMED OUT
BNE TAPG0 ;WAIT FOR READY
JSR PC,PAPRT ;PRINT CYCLE NUMBER
BIT #10,MTC1 ;SEE IF WRITE OP
BNE TAPG1 ;IF NOT: BR
MOV #MSG5,R4
TYPE ;TYPE MSG
BR TAPG2
TAPG1: MOV #MSG6,R4
TYPE ;TYPE MSG
JSR PC,FRPRT ;PRINT F OR R
TAPG2: MOV #MSG25,R4
TYPE ;TYPE MSG
HALT
TAPG3: BIT #20000,@DS ;SEE IF PIP RESET
BEQ TAPG3F ;IF SO: BR
JSR PC,PAPRT ;PRINT HEADER
MOV #MSG116,R4
TYPE ;TYPE MSG
1$: BIT #20000,@DS
BNE 1$ ;AWAIT PIP RESET
TAPG3F: CMP #26,MTC1 ;SEE IF WRITE TM
BNE TAPG3A ;IF NOT: BR

```

|      |        |        |        |        |             |           |                                  |
|------|--------|--------|--------|--------|-------------|-----------|----------------------------------|
| 5724 | 021304 | 012704 | 177777 |        | MOV         | #-1,R4    | :ELSE SET FC FOR -1              |
| 5725 | 021310 | 000406 |        |        | BR          | TAPG3B    |                                  |
| 5726 | 021312 | 013704 | 000556 |        | TAPG3A: MOV | FMCNT,R4  |                                  |
| 5727 | 021316 | 032704 | 000001 |        |             | BIT       | #1,R4                            |
| 5728 | 021322 | 001401 |        |        |             | BEQ       | TAPG3B                           |
| 5729 | 021324 | 005304 |        |        |             | DEC       | R4                               |
| 5730 | 021326 | 000261 |        |        | TAPG3B: SEC |           |                                  |
| 5731 | 021330 | 006004 |        |        |             | ROR       | R4                               |
| 5732 | 021332 | 032737 | 000020 | 000552 |             | BIT       | #20,UDES                         |
| 5733 | 021340 | 001402 |        |        |             | BEQ       | TAPG3C                           |
| 5734 | 021342 | 000261 |        |        |             | SEC       |                                  |
| 5735 | 021344 | 006004 |        |        |             | ROR       | R4                               |
| 5736 | 021346 | 010477 | 157140 |        | TAPG3C: MOV | R4,@WC    | :SET WC = FC/2 FOR NORMAL FORMAT |
| 5737 | 021352 | 012777 | 000011 | 157130 |             | MOV       | #11,@C1                          |
| 5738 | 021360 | 017777 | 157132 | 157130 |             | MOV       | @FC,@FC                          |
| 5739 | 021366 | 005737 | 000570 |        |             | MOV       | @FC,@FC                          |
| 5740 | 021372 | 001407 |        |        |             | TST       | INTRF                            |
| 5741 | 021374 | 032737 | 000040 | 000674 |             | BEQ       | TAPG3D                           |
| 5742 | 021402 | 001403 |        |        |             | BIT       | #40,MTC1                         |
| 5743 | 021404 | 012777 | 000003 | 157122 |             | BEQ       | TAPG3D                           |
| 5744 | 021412 | 013704 | 000674 |        | TAPG3D: MOV | #3,@MR    | :SET WC = FC/4 FOR CORE DUMP     |
| 5745 | 021416 | 042704 | 177707 |        |             | MOV       | MTC1,R4                          |
| 5746 | 021422 | 022704 | 000030 |        |             | BIC       | #177707,R4                       |
| 5747 | 021426 | 001403 |        |        |             | CMP       | #30,R4                           |
| 5748 | 021430 | 012737 | 177740 | 000670 |             | BEQ       | TAPG3E                           |
| 5749 | 021436 | 052737 | 000101 | 000674 | TAPG3E: BIS | #-40,STAL | :SET WORD COUNT                  |
| 5750 | 021444 | 000240 |        |        |             | NOP       |                                  |
| 5751 | 021446 | 013777 | 000674 | 157034 |             | MOV       | #101,MTC1                        |
| 5752 | 021454 | 005077 | 157126 |        |             | MOV       | MTC1,@C1                         |
| 5753 | 021460 | 005037 | 000644 |        |             | CLR       | @PSW                             |
| 5754 | 021464 | 005237 | 000644 |        | TAPG4: INC  | TEMP1     | :EXECUTE COMMAND                 |
| 5755 | 021470 | 001375 |        |        |             | CLR       | TEMP1                            |
| 5756 | 021472 | 005237 | 000670 |        |             | INC       | TEMP1                            |
| 5757 | 021476 | 001372 |        |        |             | BNE       | TAPG4                            |
| 5758 | 021500 | 012777 | 000340 | 157100 | TAPG5: MOV  | #340,@PSW | :SEE IF HAVE TIMED OUT           |
| 5759 | 021506 | 032777 | 002000 | 157074 |             | INC       | TEMP1                            |
| 5760 | 021514 | 001012 |        |        |             | BNE       | TAPG4                            |
| 5761 | 021516 | 004737 | 022672 |        |             | INC       | STAL                             |
| 5762 | 021522 | 013704 | 000654 |        |             | BNE       | TAPG4                            |
| 5763 | 021526 | 000004 |        |        |             | MOV       | #340,@PSW                        |
| 5764 | 021530 | 004737 | 021110 |        |             | BIT       | #2000,@SWR                       |
| 5765 | 021534 | 012704 | 025155 |        |             | BNE       | TAPG6                            |
| 5766 | 021540 | 000004 |        |        |             | JSR       | PC,PAPRT                         |
| 5767 | 021542 | 005777 | 157042 |        | TAPG6: TST  | @SWR      | :DO TIME DELAY MULTIPLIER        |
| 5768 | 021546 | 100001 |        |        |             | MOV       | EMADDR,R4                        |
| 5769 | 021550 | 000000 |        |        |             | TYPE      |                                  |
| 5770 | 021552 | 000137 | 022010 |        |             | JSR       | PC,FRPRT                         |
| 5771 |        |        |        |        |             | MOV       | #MSG24,R4                        |
|      |        |        |        |        |             | TYPE      |                                  |
|      |        |        |        |        | TAPG7: TST  | @SWR      | :TYPE MSG                        |
|      |        |        |        |        |             | BPL       | TAPG7                            |
|      |        |        |        |        |             | HALT      |                                  |
|      |        |        |        |        |             | JMP       | MTINTA                           |
|      |        |        |        |        |             |           | :BRANCH IF NOT HALT ON ERROR     |
|      |        |        |        |        |             |           | :RETURN TO CALLING ROUTINE       |

```

5773
5774
5775 021556 017746 157032
5776 021562 042716 000200
5777 021566 122716 000003
5778 021572 001005
5779 021574 000005
5780 021576 005077 157004
5781 021602 000137 000200
5782 021606 122716 000001
5783 021612 001016
5784 021614 022737 000176 000610
5785 021622 001015
5786 021624 012737 177570 000610
5787 021632 004737 023376
5788 021636 012704 027424
5789 021642 000004
5790 021644 004737 023420
5791 021650 022716 000007
5792 021654 001005
5793 021656 012737 000176 000610
5794 021664 004737 023306
5795 021670 022716 000002
5796 021674 001042
5797 021676 004737 023376
5798 021702 005237 014076
5799 021706 004737 013650
5800 021712 032777 000040 156670
5801 021720 001426
5802 021722 012704 025750
5803 021726 000004
5804 021730 013703 000602
5805 021734 104400
5806 021736 012705 000602
5807 021742 012701 000007
5808 021746 012702 177777
5809 021752 012703 002000
5810 021756 004737 023442
5811 021762 004737 023420
5812 021766 005726
5813 021770 012716 011266
5814 021774 000002
5815 021776 004737 023420
5816 022002 005726
5817 022004 000002
5818
5819
5820 022006 000240
5821 022010 042777 000037 156516
5822 022016 013716 000664
5823 022022 000002

;TTY INTERRUPT HANDLER
TTINT: MOV @TKB,-(SP) ;GET CHARACTER
      BIC #200,(SP) ;STRIP PARITY BIT
      CMPB #3,(SP) ;BRANCH IF NOT ^C
      BNE 1$
      RESET ;RESET ALL I/O
      CLR @PSW ;CLEAR PSW
      JMP @#200 ;RESTART PROGRAM
1$: CMPB #1,(SP) ;BRANCH IF NOT ^A
   BNE 2$
   CMP #SWREG,SWR ;BRANCH IF HARDWARE SWR IS INVOKED
   BNE 3$
   MOV #177570,SWR ;INVOKE HARWARE SWR
   JSR PC,.SAVE ;SAVE REGISTERS ON THE STACK
   MOV #MSG121,R4 ;TYPE 'HARDWARE SWR IN USE'
   TYPE
   JSR PC,.RESTORE ;RESTORE REGISTERS
2$: CMP #7,(SP) ;BRANCH IF NOT ^G
   BNE 4$
3$: MOV #SWREG,SWR ;INVOKE SOFTWARE SWR
   JSR PC,GTSWR ;GET SWITCHES
4$: CMP #2,(SP) ;BRANCH IF NOT ^B
   BNE 6$
   JSR PC,.SAVE ;SAVE REGISTERS ON THE STACK
   INC SCVFL ;SET FLAG
   JSR PC,TINP3A ;GO CHECK CRC CORRECTION
   BIT #40,@SWR ;BRANCH IF NOT YOZZLING
   BEQ 5$
   MOV #MSG44,R4 ;REQUEST NEW YOZZLE STALL
   TYPE ;TYPE MSG
   MOV YSTAL,R3
   TYPOCT ;PRINT PRESENT STALL
   MOV #YSTAL,R5 ;SET ADDRESS OF YSTL
   MOV #7,R1 ;SET NUMBER OF CHAR TO INPUT
   MOV #-1,R2 ;SET MAXIMUM LIMIT
   MOV #2000,R3 ;SET MINIMUM LIMIT
   JSR PC,TTR ;GO GET VALUE
   JSR PC,.RESTORE ;RESTORE REGISTERS
   TST (SP)+ ;POP CHARACTER OF THE STACK
   MOV #YOZ,(SP) ;RETURN TO 'YOZ'
   RTI ;RETURN TO YOZ
5$: JSR PC,.RESTORE
6$: TST (SP)+ ;POP CHARACTER OFF THE STACK
   RTI ;RETURN

;MAG TAPE INTERRUPT HANDLER
MTINT: NOP
MTINTA: BIC #37,@MR ;CLEAR MAINT MODE
        MOV RTRN,(SP) ;SET RETURN TO (RTRN)
        RTI ;RETURN

```

5825  
5826  
5827  
5828  
5829  
5830  
5831  
5832  
5833  
5834  
5835  
5836  
5837  
5838  
5839  
5840  
5841  
5842  
5843  
5844  
5845  
5846  
5847  
5848  
5849  
5850  
5851  
5852  
5853  
5854  
5855  
5856  
5857  
5858  
5859  
5860  
5861  
5862  
5863  
5864  
5865  
5866  
5867  
5868  
5869  
5870

022024 012704 026722  
022030 000004  
022032 012705 000744  
022036 012701 000002  
022042 012702 000001  
022046 012703 000000  
022052 004737 023442  
022056 005037 000740  
022062 004737 022212  
022066 012704 026654  
022072 000004  
022074 012704 026703  
022100 000004  
022102 013703 000740  
022106 104400  
022110 012704 026712  
022114 000004  
022116 012700 000746  
022122 005710  
022124 100403  
022126 012003  
022130 104400  
022132 000773  
022134 004737 022376  
022140 012700 001050  
022144 012701 001720  
022150 105020  
022152 005301  
022154 001375  
022156 004737 022536  
022162 022737 000007 000740  
022170 001403  
022172 005237 000740  
022176 000731  
022200 005737 000744  
022204 001324  
022206 000137 005004

```

:*****
:AUTO SEQUENCE
:
:THIS ROUTINE ENTERED VIA STARTING ADDRESS 240
:WILL EXERCISE ALL AVAILABLE SLAVES ON ALL AVAILABLE
:DRIVES IN BOTH PE AND NRZ ACCORDING TO THE PRESELECTED
:TEST PLAN. IF NRZ ONLY, PE TESTING WILL NOT BE ATTEMPTED.
:*****
ASEQ:  MOV    #MSG104,R4
      TYPE
      MOV    #ASEQCF,R5      ;TYPE MSG
      MOV    #2,R1          ;SET ADDRESS OF ENTRY
      MOV    #1,R2          ;SET SIZE OF ENTRY
      MOV    #0,R3          ;SET UPPER LIMIT
      JSR    PC,TTR         ;SET LOWER LIMIT
      JSR    PC,TTR         ;GO GET INPUT
ASEQ0: CLR    ADRVN         ;CLEAR DRV NUM
ASEQ1: JSR    PC,HRDS       ;GO SELECT HARDWARE CNFIGURATION
      MOV    #MSG101,R4
      TYPE
      MOV    #MSG102,R4    ;TYPE MSG
      TYPE
      MOV    ADRVN,R3      ;TYPE MSG
      TYPOCT
      MOV    #MSG103,R4    ;PRINT TM03
      TYPE
      MOV    #UN1,R0       ;TYPE MSG
      TST    (R0)          ;POINT TO START OF SLAVE TABLE
      BMI   ASEQ3         ;SEE IF END
      MOV    (R0)+,R3      ;IF SO: BR
      TYPOCT
      BR    ASEQ2         ;PRINT SLAVE TABLE
      JSR    PC,AMOD1      ;DO ALL
      MOV    #STTBL,R0     ;GO DO MODE 1(NRZ)
      MOV    #ENDTBL-STTBL,R1 ;POINTER TO THE TABLE
      CLRB  (R0)+         ;AND #OF BYTES IN TABLE
      DEC   R1            ;CLEAR STATISTIC COUNTER
      BNE   -4
      JSR    PC,AMOD2      ;GO DO MODE 2(PE)
ASEQ4: CMP    #7,ADRVN    ;SEE IF DONE ALL DRIVES
      BEQ   ASEQX         ;IF SO: BR
      INC   ADRVN         ;BUMP DRIVE NUMBER
      BR    ASEQ1         ;CONTINUE
ASEQX: TST    ASEQCF      ;SEE IF CONTINUOUS AUTO SEQ
      BNE   ASEQ0         ;++B CONTINUE TESTING
      JMP   TEND

```

```

5872
5873                                     ;SUBROUTINE TO SELECT AUTO SEQUENCE HARDWARE*****
5874
5875 022212 005037 005054          HRDS: CLR      REOTC          ;CLEAR EOT UNIT CNTR
5876 022216 005037 000644          CLR      TEMP1
5877 022222 012777 000040 156270  MOV      #40,@CS          ;INIT
5878 022230 013777 000740 156262  MOV      ADRVN,@CS        ;SET DRIVE
5879 022236 032777 010000 156254  BIT      #10000,@CS       ;TEST FOR NON-EXISTANT DRIVE
5880 022244 001403                    BEQ      2$                ;IF DRIVE AVAIL: BR
5881 022246 005726                    1$:  TST      (SP)+           ;RESET STACK POINTER
5882 022250 000137 022162          JMP      ASEQ4            ;GO SEE IF TRIED ALL DRIVES
5883 022254 005000                    2$:  CLR      R0
5884 022256 012701 000746          MOV      #UN1,R1          ;SET START OF SLAVE TABLE
5885 022262 005737 003040          TST      CHNFLG          ;BRANCH IF NOT IN CHAIN MODE
5886 022266 001410                    BEQ      3$
5887 022270 122737 000006 000041  CMPB    #6,@#41          ;BRANCH IF NOT LOADED VIA TMDP
5888 022276 001004                    BNE     3$
5889 022300 005737 000740          TST      ADRVN           ;BRANCH IF NOT DRIVE 0
5890 022304 001001                    BNE     3$
5891 022306 005200                    INC     R0                ;DO NOT TEST SLAVE 0
5892 022310 010077 156226          3$:  MOV      R0,@TC          ;SELECT SLAVE
5893 022314 032777 010000 156200  BIT      #10000,@DS       ;SEE IF SLAVE AVAIL FOR TEST(MOL)
5894 022322 001403                    BEQ     4$                ;IF NOT: BR
5895 022324 005237 000644          INC     TEMP1            ;SET SLAVE FOUND FLAG
5896 022330 010021                    MOV     R0,(R1)+         ;LOAD SLAVE TABLE
5897 022332 005200                    4$:  INC     R0                ;STEP TO NEXT SLAVE
5898 022334 022700 000010          CMP     #10,R0           ;BRANCH IF ALL SLAVE NOT DONE
5899 022340 001363                    BNE     3$
5900 022342 005737 000644          5$:  TST     TEMP1            ;SEE IF FOUND ANY SLAVES
5901 022346 001737                    BEQ     1$                ;IF NOT: BR
5902 022350 013737 000644 005054  MOV     TEMP1,REOTC       ;SET NUMBER OF UNITS
5903 022356 000337 000644          SWAB   TEMP1
5904 022362 053737 000644 005054  BIS     TEMP1,REOTC       ;SET EOT CNTR
5905 022370 012711 177777          MOV     #-1,(R1)         ;TERMINATE SLAVE TABLE
5906 022374 000207          RTS     PC                ;RETURN TO SEQ

```

```

5908
5909 ;SUBROUTINE TO SELECT NRZ AUTO TEST MODE*****
5910
5911 022376 005037 000656 AMOD1: CLR BLCNTR ;ASSURE BLOCK COUNTER IS 0
5912 022402 012701 000746 MOV #UN1,R1 ;GET START OF SLAVE TABLE
5913 022406 052721 001700 1$: BIS #1700,(R1)+ ;SET ALL SLAVE TO NRZ,NORM,ODD
5914 022412 022711 177777 CMP #-1,(R1) ;LOOP UNTIL REACED END OF TABLE
5915 022416 001373 BNE 1$
5916 022420 004737 005070 JSR PC,RWDA ;GO REWIND ALL AVAIL SLAVES
5917 022424 012737 000006 000742 MOV #6,ABLCNT ;SET NUMBER OF BLOCKS FOR MODE 1
5918 022432 012737 174000 000556 MOV #-4000,FMCNT ;SET FC = 4000
5919 022440 012737 000100 000554 MOV #100,RCNT ;SET REC CNTR = 100
5920 022446 013737 000740 000550 MOV ADRVN,DVN ;SELECT DRIVE
5921 022454 012737 000001 000560 MOV #1,PATRN ;SELECT PATTERN 1
5922 022462 005037 000564 CLR TMEX ;ASSURE NO TMK
5923 022466 005037 000570 CLR INTRF ;ASSURE NORMAL READ
5924 022472 004737 003346 JSR PC,STAUTO ;GO DO AUTO MODE 1
5925 022476 012737 000010 000560 MOV #10,PATRN ;SELECT PATTERN 10
5926 022504 004737 003346 JSR PC,STAUTO ;GO DO PATTERN 10
5927 022510 012737 000014 000560 MOV #14,PATRN ;SELECT PATTERN 14
5928 022516 004737 003346 JSR PC,STAUTO
5929 022522 012737 177777 000560 3$: MOV #-1,PATRN ;SELECT AUTO RANDOM DATA
5930 022530 004737 003346 JSR PC,STAUTO
5931 022534 000207 RTS PC ;RETURN TO SEQ
  
```

```
5933
5934
5935
5936 022536 005037 000656
5937 022542 012701 000746
5938 022546 042711 001700
5939 022552 052721 002300
5940 022556 022711 177777
5941 022562 001371
5942 022564 004737 005070
5943 022570 012737 000006 000742
5944 022576 012737 174000 000556
5945 022604 012737 000100 000554
5946 022612 012737 000010 000560
5947 022620 004737 003346
5948 022624 012737 000014 000560
5949 022632 004737 003346
5950 022636 012737 000015 000560
5951 022644 004737 003346
5952 022650 012737 177777 000742
5953 022656 012737 177777 000560
5954 022664 004737 003346
5955 022670 000207
5956
5957
```

```

;SUBROUTINE TO SELECT PE AUTO TEST MODE*****
AMOD2: CLR BLCNTR ;CLEAR BLOCK CNTR
MOV #UN1,R1 ;SET START OF SLAVE TABLE
1$: BIC #1700,(R1) ;CLEAR NRZ
BIS #2300,(R1)+ ;SET TO PE NORM, ODD
CMP #-1,(R1) ;LOOP UNTIL END OF TABLE
BNE 1$
JSR PC,RWVDA ;REWIND ALL SLAVES
MOV #6,ABL CNT ;SET AUTO BLOCK COUNT
MOV #-4000,FMCNT ;SET FC = 4000
MOV #100,RCNT ;SET REC CNTR TO 100
MOV #10,PATRN ;SELECT PATTERN 10
JSR PC,STAUTO ;GO DO AUTO SEQ
MOV #14,PATRN ;SELECT PATTERN 14
JSR PC,STAUTO
MOV #15,PATRN ;SELECT PATTERN 15
JSR PC,STAUTO
MOV #-1,ABL CNT ;FORCE TO END OF TAPE
MOV #-1,PATRN ;SELECT AUTO RANDOM DATA
JSR PC,STAUTO
3$: RTS ;RETURN TO SEQ
```

5959  
5960  
5961  
5962  
5963  
5964  
5965  
5966  
5967  
5968  
5969  
5970  
5971  
5972  
5973  
5974  
5975  
5976  
5977  
5978  
5979  
5980  
5981  
5982  
5983  
5984  
5985  
5986  
5987  
5988  
5989  
5990  
5991  
5992  
5993  
5994  
5995  
5996  
5997  
5998  
5999  
6000  
6001  
6002  
6003  
6004  
6005  
6006  
6007  
6008  
6009  
6010  
6011  
6012  
6013  
6014

022672 012704 024666  
022676 000004  
022700 013703 000550  
022704 104400  
022706 012704 024652  
022712 000004  
022714 013703 000552  
022720 042703 177770  
022724 104400  
022726 012704 026232  
022732 000004  
022734 013703 000552  
022740 000303  
022742 042703 177770  
022746 104400  
022750 012704 026236  
022754 000004  
022756 005003  
022760 032737 000010 000552  
022766 001402  
022770 012703 000001  
022774 104400  
022776 012704 026242  
023002 000004  
023004 013703 000552  
023010 000241  
023012 006003  
023014 006003  
023016 006003  
023020 006003  
023022 042703 177760  
023026 104400  
023030 012704 024627  
023034 000004  
023036 032777 000400 155544  
023044 001406  
023046 012737 000122 000640  
023054 004737 024064  
023060 000411  
023062 005737 000736

```

:*****
:ERROR HEADER PRINT SUBROUTINE:
:
:THIS ROUTINE IS USED TO PRINT OUT A HEADER
:WITH EACH ERROR MESSAGE. THE PRINT IS IN TWO
: LINES AND CONTAINS THE FOLLOWING INFORMATION.
:LINE 1: DRIVE NO. SLAVE NO. DENSITY PARITY FORMAT
:LINE 2: CURRENT BLOCK NUMBER, RECORD NUMBER IN
:WHICH THE ERROR OCCURED PLUS THE TOTAL NUMBER
:OF RECORDS IN THIS BLOCK, THE RECORD SIZE (NUMBER
:OF CHARACTERS), AND THE ERROR TYPE (READ,WRITE, SPACE, ETC)
:PLUS THE TAPE DIRECTION (FORWARD OR REVERSE).
:ALL NUMBERS ARE IN OCTAL.
:*****
PAPRT:  MOV    #MSG12,R4
        TYPE                   ;TYPE MSG
        MOV    DVN,R3
        TYPOCT                  ;PRINT DRIVE NUMBER
        MOV    #MSG11,R4
        TYPE                   ;TYPE MSG
        MOV    UDES,R3
        BIC    #177770,R3
        TYPOCT                  ;PRINT UNIT NUMBER
        MOV    #MSG60,R4
        TYPE                   ;TYPE MSG
        MOV    UDES,R3
        SWAB   R3
        BIC    #177770,R3
        TYPOCT                  ;PRINT DENSITY
        MOV    #MSG61,R4
        TYPE                   ;TYPE MSG
        CLR    R3
        BIT    #10,UDES
        BEQ    PAPRT0
        MOV    #1,R3
        TYPOCT                  ;PRINT PARITY
PAPRT0: MOV    #MSG62,R4
        TYPE                   ;TYPE MSG
        MOV    UDES,R3
        CLC
        ROR    R3
        ROR    R3
        ROR    R3
        ROR    R3
        BIC    #177760,R3
        TYPOCT                  ;PRINT FORMAT
        MOV    #MSG8,R4
        TYPE                   ;TYPE MSG
        BIT    #400,@SWR
        BEQ    PAPRTB
        MOV    #122,TOB
        JSR    PC,TOG
        BR     PAPRTD
        TST   ASEQF
        ;SEE IF AUTO SEQ

```



```

6054
6055
6056
6057
6058
6059
6060
6061
6062
6063 023254 063737 000630 000626 RANG: ADD RANSAV,RANBAS
6064 023262 063737 000626 000630 ADD RANBAS,RANSAV ;GET NEW NUMBER
6065 023270 023701 000630 CMP RANSAV,R1 ;SEE IF NUMBER TOO BIG
6066 023274 101367 BHI RANG ;IF SO: BR
6067 023276 020237 000630 CMP R2,RANSAV ;SEE IF NUMBER TOO SMALL
6068 023302 101364 BHI RANG ;IF SO: BR
6069 023304 000207 RTS PC ;EXIT
6070
6071 ;SUBROUTINE TO GET NEW SOFTWARE SWR
6072
6073 023306 022737 000176 000610 GTSWR: CMP #SWREG,SWR ;BRANCH IF SOFTWARE SWR
6074 023314 001027 BNE 1$ ;NOT INVOKED
6075 023316 004737 023376 JSR PC,.SAVE ;SAVE REGISTERS ON THE STACK
6076 023322 012704 024544 MOV #SMSWR,R4 ;TYPE 'SWR = '
6077 023326 000004 TYPE ;TYPE MSG
6078 023330 017703 155254 MOV @SWR,R3 ;GET CURRENT SWR
6079 023334 104400 TYPOCT
6080 023336 012704 024554 MOV #SMNEW,R4 ;ASK FOR NEW SETTING
6081 023342 000004 TYPE ;TYPE MSG
6082 023344 013705 000610 MOV SWR,R5 ;TTR ROUTINE RETURNS VALUE TO (R5)
6083 023350 012701 000007 MOV #7,R1 ;LIMIT RESPONSE TO 7 CHARS
6084 023354 012702 177777 MOV #177777,R2 ;BETWEEN 0 AND 177777
6085 023360 02703 000000 MOV #0,R3
6086 023364 004737 023442 JSR PC,TTR ;GET RESPONSE
6087 023370 004737 023420 JSR PC,.RESTORE ;RESTORE REGISTERS
6088 023374 000207 1$: RTS PC ;RETURN
6089
6090 ;:ROUTINE TO SAVE REGISTERS ON THE STACK
(1) 023376 010546 .SAVE: MOV %5,-(SP) ;:R5 IS SAVED AT 12(SP)
(1) 023400 010446 MOV %4,-(SP) ;:R4 IS SAVED AT 10(SP)
(1) 023402 010346 MOV %3,-(SP) ;:R3 IS SAVED AT 6(SP)
(1) 023404 010246 MOV %2,-(SP) ;:R2 IS SAVED AT 4(SP)
(1) 023406 010146 MOV %1,-(SP) ;:R1 IS SAVED AT 2(SP)
(1) 023410 010046 MOV %0,-(SP) ;:R0 IS SAVED AT (SP)
(1) 023412 016646 000014 MOV 14(SP),-(SP) ;:PUSH RETURN PC ON THE STACK
(1) 023416 000207 RTS PC ;:RETURN TO CALLER
6091 ;:ROUTINE TO RESTORE REGISTERS SAVED ON THE STACK
(1) 023420 012666 000014 .RESTORE:MOV (SP)+,14(SP) ;:STORE RETURN PC ON STACK
(1) 023424 012600 MOV (SP)+,%0
(1) 023426 012601 MOV (SP)+,%1
(1) 023430 012602 MOV (SP)+,%2
(1) 023432 012603 MOV (SP)+,%3
(1) 023434 012604 MOV (SP)+,%4
(1) 023436 012605 MCV (SP)+,%5
(1) 023440 000207 RTS PC ;:RETURN

```

```

6093
6094
6095
6096
6097
6098
6099
6100
6101
6102
6103
6104
6105
6106
6107
6108
6109
6110 023442 010146
6111 023444 011601
6112 023446 005037 000644
6113 023452 005000
6114 023454 004737 023674
6115 023460 122737 000003 000642
6116 023466 001003
6117 023470 000005
6118 023472 000137 000200
6119 023476 122737 000015 000642
6120 023504 001004
6121 023506 005737 000644
6122 023512 001457
6123 023514 000451
6124 023516 122737 000025 000642
6125 023524 001004
6126 023526 012704 025237
6127 023532 000004
6128 023534 000743
6129 023536 122737 000177 000642
6130 023544 001011
6131 023546 000241
6132 023550 006000
6133 023552 006200
6134 023554 006200
6135 023556 012704 027354
6136 023562 000004
6137 023564 005201
6138 023566 000732
6139 023570 122737 000060 000642
6140 023576 101027
6141 023600 122737 000070 000642
6142 023606 101423
6143 023610 005237 000644
6144 023614 006300
6145 023616 006300
6146 023620 006300
6147 023622 042737 177770 000642
6148 023630 053700 000642

:*****
:TTY ENTRY SUBROUTINE:
:
:THIS SUBROUTINE IS USED BY THE TEST CONDITION
:ENTRY ROUTINE TO READ THE RESPONSE ENTERED
:AT THE TTY AND CHECK THEM FOR LEGALITY AND
:LIMITS. ALL RESPONSE MUST BE TYPED IN OCTAL
:(0-7) AND MUST FALL WITHIN THE LIMITS SET BY
:THE CALLING ROUTINE.
:IF AN ENTRY IS ILLEGAL OR OUTSIDE THE LIMITS,
:A QUESTION MARK IS TYPED (?) AND THE RESPONSE
:MAY BE REENTERED.
:ENTRIES MAY NOT EXCEED SIX (6) CHARACTERS AND
:MAY BE TERMINATED AT LESS THAN SIX BY TYPING A
:CARRIAGE RETURN
:*****
TTR: MOV R1, -(SP) ;SAVE CHAR COUNT
10$: MOV (SP), R1 ;RESTORE CHAR COUNT (FOR ^U)
CLR TEMP1 ;CLEAR FIRST CHARACTER FLAG
CLR R0
1$: JSR PC, TTIN ;GO READ CHARACTER
CMPB #3, TIB ;BRANCH IF NOT ^C
BNE 11$
RESET
JMP @#200 ;RESTART AT 200
11$: CMPB #15, TIB ;SEE IF CR
BNE 2$ ;IF NOT: BR
TST TEMP1 ;SEE IF FIRST CHARACTER
BEQ 9$ ;IF SO: BR
BR 6$ ;ELSE GO LOAD VALUE
2$: CMPB #25, TIB ;BRANCH IF NOT CONTROL U
BNE 21$
MOV #MSG28, R4 ;TYPE <CR><LF>
TYPE ;TYPE MSG
BR 10$
21$: CMPB #177, TIB ;BRANCH IF NOT 'RUBOUT'
BNE 3$
CLC ;REMOVE LAST CHARACTER
ROR R0
ASR R0
ASR R0
MOV #MSG118, R4 ;TYPE '\ '
TYPE ;TYPE MSG
INC R1 ;DEC CHAR RECEIVED COUNT
BR 1$ ;GET NEXT CHARACTER
3$: CMPB #60, TIB ;SEE IF CHAR IS LESS THAN 0
BHI TIB
4$: CMPB #70, TIB ;SEE IF CHAR IS GREATER THAN 7
BLOS TIB
5$: INC TEMP1 ;SET FIRST CHARACTER FLAG
ASL R0
ASL R0 ;SHIFT 3 LEFT
ASL R0
BIC #177770, TIB ;STRIP ASCII
BIS TIB, R0 ;LOAD CHARACTER

```

6149 023634 005301  
6150 023636 001306  
6151 023640 020002  
6152 023642 101005  
6153 023644 020300  
6154 023646 101003  
6155 023650 010015  
6156 023652 005726  
6157 023654 000207  
6158  
6159 023656 012704 025744  
6160 023662 000004  
6161 023664 005726  
6162 023666 162716 000020  
6163 023672 000207

DEC R1 ;SEE IF DONE  
BNE 1\$ ;IF NOT: BR  
6\$: CMP R0,R2 ;SEE IF EXCEEDED MAXIMUM LIMIT  
BHI T1NER  
7\$: CMP R3,R0 ;SEE IF BELOW MINIMUM LIMIT  
BHI T1NER  
8\$: MOV R0,(R5) ;LOAD VALUE  
9\$: TST (SP)+ ;POP CHAR COUNT OFF STACK  
RTS PC ;EXIT  
  
T1NER: MOV #MSG43,R4  
TYPE ;TYPE MSG  
TST (SP)+ ;POP CHAR COUNT OFF STACK  
SUB #20,(SP) ;RESET SP TO START OF VALUE ROUTINE  
RTS PC ;REDO VALUE ENTRY

```

6165
6166
6167
6168 023674 017746 154706
6169 023700 052777 000340 154700
6170 023706 005277 154700
6171 023712 105777 154674
6172 023716 100375
6173 023720 012677 154662
6174 023724 017737 154664 000642
6175 023732 042737 000200 000642
6176 023740 013737 000642 000640
6177 023746 004737 024064
6178 023752 000207
6179
6180
6181
6182 023754 112437 000640
6183 023760 105737 000640
6184 023764 001436
6185 023766 122737 000045 000640
6186 023774 001407
6187 023776 122737 000041 000640
6188 024004 001436
6189 024006 004737 024064
6190 024012 000760
6191 024014 112737 000015 000640
6192 024022 004737 024064
6193 024026 012703 000006
6194 024032 005037 000640
6195 024036 004737 024064
6196 024042 005303
6197 024044 001372
6198 024046 112737 000012 000640
6199 024054 004737 024064
6200 024060 000735
6201 024062 000002
6202
6203 024064 105777 154526
6204 024070 100375
6205 024072 113777 000640 154520
6206 024100 000207
6207
6208 024102 012703 000002
6209 024106 012737 000007 000640
6210 024114 004737 024064
6211 024120 005303
6212 024122 001371
6213 024124 000713
6214
6215

;TTY READ SUBROUTINE*****
TTIN:  MOV @PSW, -(SP) ;SAVE CURRENT PSW
      BIS #340, @PSW ;SET TO BR7 TO PREVENT INTRPT
      INC @TKS
1$:    TSTB @TKS
      BPL 1$
      MOV (SP)+, @PSW ;RESTORE PSW ,OK TO INTRPT NOW
      MOV @TKB,TIB
      BIC #200,TIB ;STRIP PARITY BIT
      MOV TIB,TOB ;MOVE CHAR TO TTY OUTPUT BFR
      JSR PC,TOG ;ECHO CHARACTER
      RTS PC

;TTY OUTPUT SUBROUTINE*****
TTOUT: MOVB (R4)+,TOB
      TSTB TOB
      BEQ 3$
      CMPB #45,TOB
      BEQ 1$
      CMPB #41,TOB
      BEQ TBELL ;DO BELL
      JSR PC,TOG
      BR TTOUT
1$:    MOVB #15,TOB
      JSR PC,TOG
      MOV #6,R3
2$:    CLR TOB
      JSR PC,TOG
      DEC R3
      BNE 2$ ;DO FILLERS
      MOVB #12,TOB
      JSR PC,TOG
      BR TTOUT
3$:    RTI ;RETURN

TOG:   TSTB @TPS
      BPL TOG
      MOVB TOB,@TPB
      RTS PC ;RETURN

TBELL: MOV #2,R3
1$:    MOV #7,TOB
      JSR PC,TOG
      DEC R3
      BNE 1$
      BR TTOUT

```

```

6217 ;OCTAL OUTPUT SUBROUTINE*****
6218
6219 024126 005037 024340 OCTP: CLR OFL ;CLEAR FLAG FOR LEADING ZERO
6220 024132 010304 MOV R3,R4 ;SEE IF NUMBER IS ZERO
6221 024134 001003 BNE OCTP0 ;IF NOT ZERO: BR
6222 024136 004737 024320 JSR PC,OCTPG1 ;ELSE PRINT ZERO
6223 024142 000447 BR OCTP3 ;SPACE AND EXIT
6224 024144 005704 OCTP0: TSI R4 ;BRANCH IF MSD = 0
6225 024146 100006 BPL OCTP1
6226 024150 012704 000001 MOV #1,R4
6227 024154 004737 024276 JSR PC,OCTPG ;PRINT 1
6228 024160 000137 024172 JMP OCTP2
6229 024164 005004 OCTP1: CLR R4
6230 024166 004737 024276 JSR PC,OCTPG ;PRINT 0
6231 024172 010304 OCTP2: MOV R3,R4
6232 024174 006004 ROR R4
6233 024176 006004 ROR R4 ;POSITION DIGIT
6234 024200 006004 ROR R4
6235 024202 006004 ROR R4
6236 024204 000304 SWAB R4
6237 024206 004737 024276 JSR PC,OCTPG ;PRINT DIGIT 2
6238 024212 010304 MOV R3,R4
6239 024214 006004 ROR R4
6240 024216 000304 SWAB R4
6241 024220 004737 024276 JSR PC,OCTPG ;PRINT DIGIT 3
6242 024224 010304 MOV R3,R4
6243 024226 006104 ROL R4
6244 024230 006104 ROL R4
6245 024232 000304 SWAB R4
6246 024234 004737 024276 JSR PC,OCTPG ;PRINT DIGIT 4
6247 024240 010304 MOV R3,R4
6248 024242 006004 ROR R4
6249 024244 006004 ROR R4
6250 024246 006004 ROR R4
6251 024250 004737 024276 JSR PC,OCTPG
6252 024254 010304 MOV R3,R4
6253 024256 004737 024276 JSR PC,OCTPG ;PRINT DIGIT 5
6254 024262 012737 000240 000640 OCTP3: MOV #240,TOB
6255 024270 004737 024064 JSR PC,TOG ;PRINT SPACE
6256 024274 000002 RTI ;EXIT
6257 024276 042704 177770 OCTPG: BIC #177770,R4
6258 024302 001004 BNE OCTPG0
6259 024304 005737 024340 TST OFL
6260 024310 001001 BNE OCTPG0
6261 024312 000207 RTS PC
6262
6263 024314 005237 024340 OCTPG0: INC OFL
6264 024320 052704 000260 OCTPG1: BIS #260,R4
6265 024324 010437 000640 MOV R4,TOB
6266 024330 004737 024064 JSR PC,TOG
6267 024334 010304 MOV R3,R4
6268 024336 000207 RTS PC
6269 024340 000000 OFL: 0 ;FIRST CHAR FLAG
6270

```

```

6272
6273 ;DATA CHARACTER OUTPUT SUBROUTINE*****
6274
6275 024342 012704 000010 DOUT: MOV #10,R4 ;SET NUMBER TO PRINT
6276 024346 110337 000640 MOVB R3,TOB
6277 024352 105777 154240 1$: TSTB @TPS
6278 024356 100375 BPI 1$
6279 024360 105737 000640 TSTB TOB
6280 024364 100004 BPL 2$
6281 024366 012777 000061 154224 MOV #061,@TPB
6282 024374 000403 BR 3$
6283 024376 012777 000060 154214 2$: MOV #060,@TPB
6284 024404 006337 000640 3$: ASL TOB
6285 024410 005304 DEC R4
6286 024412 001357 BNE 1$
6287 024414 000207 RTS PC
6288
6289 024416 013703 000650 DOUTD: MOV TEMP3,R3
6290 024422 000303 SWAB R3
6291 024424 004737 024342 JSR PC,DOUT
6292 024430 013703 000650 MOV TEMP3,R3
6293 024434 004737 024342 JSR PC,DOUT
6294 024440 000207 RTS PC
6295
6296 ;TU45 SERIAL NUMBER PRINT SUBROUTINE*****
6297
6298 024442 010304 SNPT: MOV R3,R4
6299 024444 000304 SWAB R4
6300 024446 006004 ROR R4
6301 024450 006004 ROR R4
6302 024452 006004 ROR R4
6303 024454 006004 ROR R4
6304 024456 004737 024520 JSR PC,SNPG ;PRINT FIRST DIGIT
6305 024462 010304 MOV R3,R4
6306 024464 000304 SWAB R4
6307 024466 004737 024520 JSR PC,SNPG ;PRINT SECOND DIGIT
6308 024472 010304 MOV R3,R4
6309 024474 006004 ROR R4
6310 024476 006004 ROR R4
6311 024500 006004 ROR R4
6312 024502 006004 ROR R4
6313 024504 004737 024520 JSR PC,SNPG ;PRINT THIRD DIGIT
6314 024510 010304 MOV R3,R4
6315 024512 004737 024520 JSR PC,SNPG ;PRINT FOURTH DIGIT
6316 024516 000207 RTS PC ;EXIT
6317 024520 012737 000260 000640 SNPG: MOV #260,TOB ;SET NUMBER BASE
6318 024526 042704 177760 BIC #177760,R4 ;MASK NUMBER
6319 024532 050437 000640 BIS R4,TOB ;BUILD DIGIT
6320 024536 004737 024064 JSR PC,TOG ;GO TYPE
6321 024542 000207 RTS PC ;RETURN
6322

```

```
6324
6325                                     :ERROR MESSAGES*****
6326
6327 024544 051445 051127 036440 $MSWR: .ASCIZ /%SWR = /
      024552 000040
6328 024554 047040 053505 036440 $MNEW: .ASCIZ / NEW = /
      024562 000040
6329 024564 042052 020105 000 MSG1: .ASCIZ /*DE /
6330 024571 045 035507 000040 MSG2: .ASCIZ /%G: /
6331 024576 041045 020073 000 MSG3: .ASCIZ /%B: /
6332 024603 045 047103 000040 MSG4: .ASCIZ /%CN /
6333 024610 053452 020105 000 MSG5: .ASCIZ /*WE /
6334 024615 052 042522 000040 MSG6: .ASCIZ /*RE /
6335 024622 051052 020123 000 MSG7: .ASCIZ /*RS /
6336 024627 052 040520 051124 MSG8: .ASCIZ /*PATRN /
      024634 020116 000
6337 024637 045 047123 020072 MSG9: .ASCIZ /%SN: /
      024644 000
6338 024645 052 042523 000040 MSG10: .ASCIZ /*SE /
6339 024652 051452 040514 042526 MSG11: .ASCIZ /*SLAVE NO. /
      024660 047040 027117 000040
6340 024666 022445 042045 044522 MSG12: .ASCIZ /%%DRIVE NO. /
      024674 042526 047040 027117
      024702 000040
6341 024704 025045 047102 000040 MSG13: .ASCIZ /*BN /
6342 024712 051052 020116 000 MSG14: .ASCIZ /*RN /
6343 024717 045 020041 020040 MSG15: .ASCIZ /%! BAD RECORD%%/
      024724 020040 020040 020040
      024732 041040 042101 051040
      024740 041505 051117 022504
      024746 000045
6344 024750 043040 000 MSG16: .ASCIZ / F/
6345 024753 040 000122 MSG17: .ASCIZ / R/
6346 024756 020041 047505 020124 MSG20: .ASCIZ /! EOT NO: /
      024764 047516 020072 000
6347
6348 024771 045 047111 042524 MSG21: .ASCIZ /%INTERCHANGE READ = /
      024776 041522 040510 043516
      025004 020105 042522 042101
      025012 036440 000040
6349 025016 020445 046111 042514 MSG22: .ASCIZ /%!ILLEGAL BOT: HALT%%%/
      025024 040507 020114 047502
      025032 035124 044040 046101
      025040 022524 022445 000
6350 025045 045 051503 020061 MSG23: .ASCIZ /%CS1 /
      025052 000
6351 025053 045 041527 000040 MSG23A: .ASCIZ /%WC /
6352 025060 041045 020101 000 MSG23B: .ASCIZ /%BA /
6353 025065 045 041506 000040 MSG23C: .ASCIZ /%FC /
6354 025072 041445 031123 000040 MSG23D: .ASCIZ /%CS2 /
6355 025100 042045 020123 000 MSG23E: .ASCIZ /%DS /
6356 025105 045 051105 000040 MSG23F: .ASCIZ /%ER /
6357 025112 040445 020123 000 MSG23G: .ASCIZ /%AS /
6358 025117 045 045503 000040 MSG23H: .ASCIZ /%CK /
6359 025124 042045 020102 000 MSG23I: .ASCIZ /%DB /
6360 025131 045 051115 000040 MSG23J: .ASCIZ /%MR /
```

|      |        |        |        |        |                |   |
|------|--------|--------|--------|--------|----------------|---|
| 6361 | 025136 | 042045 | 020124 | 000    | MSG23K: .ASCIZ | /%DT /  |
| 6362 | 025143 | 045    | 041524 | 000040 | MSG23L: .ASCIZ | /%TC /  |
| 6363 | 025150 | 051445 | 020116 | 000    | MSG23M: .ASCIZ | /%SN /  |
| 6364 | 025155 | 045    | 047041 | 020117 | MSG24: .ASCIZ  | /%!NO INTERRUPT%/                                       |
|      | 025162 | 047111 | 042524 | 051122 |                |   |
|      | 025170 | 050125 | 022524 | 000    |                |   |
| 6365 | 025175 | 045    | 047041 | 020117 | MSG25: .ASCIZ  | /%!NO MOL: HALT%/                                       |
|      | 025202 | 047515 | 035114 | 044040 |                |   |
|      | 025210 | 046101 | 022524 | 000    |                |   |
| 6366 | 025215 | 045    | 051104 | 050117 | MSG26: .ASCIZ  | /%DROPS: /  |
|      | 025222 | 035123 | 000040 |        |                |   |
| 6367 | 025226 | 050045 | 041511 | 051513 | MSG27: .ASCIZ  | /%PICKS: /  |
|      | 025234 | 020072 | 000    |        |                |   |
| 6368 | 025237 | 045    | 000    |        | MSG28: .ASCIZ  | /%/   |
| 6369 | 025241 | 045    | 052045 | 047515 | MSG30: .ASCIZ  | '%%TM03-TU45 AUTO SEQUENCE (CZTURB0)%';++B              |
|      | 025246 | 026463 | 052524 | 032464 |                |   |
|      | 025254 | 040440 | 052125 | 020117 |                |   |
|      | 025262 | 042523 | 052521 | 047105 |                |   |
|      | 025270 | 042503 | 024040 | 055103 |                |   |
|      | 025276 | 052524 | 041122 | 024460 |                |   |
|      | 025304 | 000045 |        |        |                |   |
| 6370 | 025306 | 022445 | 046524 | 031460 | MSG31: .ASCIZ  | '%%TM03-TU45 DATA RELIABILITY TEST (CZTURB0)%';++B      |
|      | 025314 | 052055 | 032125 | 020065 |                |   |
|      | 025322 | 040504 | 040524 | 051040 |                |   |
|      | 025330 | 046105 | 040511 | 044502 |                |   |
|      | 025336 | 044514 | 054524 | 052040 |                |   |
|      | 025344 | 051505 | 020124 | 041450 |                |   |
|      | 025352 | 052132 | 051125 | 030102 |                |   |
|      | 025360 | 022451 | 000    |        |                |   |
| 6371 | 025363 | 124    | 050131 | 020105 | MSG31A: .ASCIZ | /%TYPE <CR> TO TERMINATE ALL REQUESTS & ^C TO RESTART%/ |
|      | 025370 | 041474 | 037122 | 052040 |                |   |
|      | 025376 | 020117 | 042524 | 046522 |                |   |
|      | 025404 | 047111 | 052101 | 020105 |                |   |
|      | 025412 | 046101 | 020114 | 042522 |                |   |
|      | 025420 | 052521 | 051505 | 051524 |                |   |
|      | 025426 | 023040 | 057040 | 020103 |                |   |
|      | 025434 | 047524 | 051040 | 051505 |                |   |
|      | 025442 | 040524 | 052122 | 000045 |                |   |
| 6372 | 025450 | 051445 | 040514 | 042526 | MSG32: .ASCIZ  | /%SLAVE NUMBER = /                                      |
|      | 025456 | 047040 | 046525 | 042502 |                |   |
|      | 025464 | 020122 | 020075 | 000    |                |   |
| 6373 | 025471 | 045    | 042504 | 051516 | MSG33: .ASCIZ  | /%DENSITY = /   |
|      | 025476 | 052111 | 020131 | 020075 |                |   |
|      | 025504 | 000    |        |        |                |   |
| 6374 | 025505 | 045    | 040520 | 044522 | MSG34: .ASCIZ  | /%PARITY = /  |
|      | 025512 | 054524 | 036440 | 000040 |                |   |
| 6375 | 025520 | 051045 | 041505 | 051117 | MSG35: .ASCIZ  | /%RECORD COUNT - /                                      |
|      | 025526 | 020104 | 047503 | 047125 |                |   |
|      | 025534 | 020124 | 020075 | 000    |                |   |
| 6376 | 025541 | 045    | 044103 | 051101 | MSG36: .ASCIZ  | /%CHAR COUNT = /  |
|      | 025546 | 041440 | 052517 | 052116 |                |   |
|      | 025554 | 036440 | 000040 |        |                |   |
| 6377 | 025560 | 050045 | 052101 | 042524 | MSG37: .ASCIZ  | /%PATTERN NUMBER /                                      |
|      | 025566 | 047122 | 047040 | 046525 |                |   |
|      | 025574 | 042502 | 020122 | 020075 |                |   |
|      | 025602 | 000    |        |        |                |   |

|      |        |        |        |        |        |        |                                   |
|------|--------|--------|--------|--------|--------|--------|-----------------------------------|
| 6378 | 025603 | 045    | 044523 | 043516 | MSG38: | .ASCIZ | /%SINGLE PASS = /                 |
|      | 025610 | 042514 | 050040 | 051501 |        |        |                                   |
|      | 025616 | 020123 | 020075 | 000    |        |        |                                   |
| 6379 | 025623 | 045    | 051103 | 020103 | MSG39: | .ASCIZ | /%CRC CORRECTION (YES=1,NO=0) = / |
|      | 025630 | 047503 | 051122 | 041505 |        |        |                                   |
|      | 025636 | 044524 | 047117 | 024040 |        |        |                                   |
|      | 025644 | 042531 | 036523 | 026061 |        |        |                                   |
|      | 025652 | 047516 | 030075 | 020051 |        |        |                                   |
|      | 025660 | 020075 | 000    |        |        |        |                                   |
| 6380 | 025663 | 045    | 042445 | 052116 | MSG40: | .ASCIZ | /%ENTER STALLS%READ = /           |
|      | 025670 | 051105 | 051440 | 040524 |        |        |                                   |
|      | 025676 | 046114 | 022523 | 042522 |        |        |                                   |
|      | 025704 | 042101 | 036440 | 000040 |        |        |                                   |
| 6381 | 025712 | 053445 | 044522 | 042524 | MSG41: | .ASCIZ | /%WRITE = /                       |
|      | 025720 | 036440 | 000040 |        |        |        |                                   |
| 6382 |        |        |        |        |        |        |                                   |
| 6383 | 025724 | 052045 | 051125 | 020116 | MSG42: | .ASCIZ | /%TURN AROUND = /                 |
|      | 025732 | 051101 | 052517 | 042116 |        |        |                                   |
|      | 025740 | 036440 | 000040 |        |        |        |                                   |
| 6384 | 025744 | 037445 | 000045 |        | MSG43: | .ASCIZ | /%?%/                             |
| 6385 | 025750 | 042445 | 052116 | 051105 | MSG44: | .ASCIZ | /%ENTER YOZZLE STALL = /          |
|      | 025756 | 054440 | 055117 | 046132 |        |        |                                   |
|      | 025764 | 020105 | 052123 | 046101 |        |        |                                   |
|      | 025772 | 020114 | 020075 | 000    |        |        |                                   |
| 6386 | 025777 | 045    | 051105 | 020122 | MSG45: | .ASCIZ | /%ERR AMT /                       |
|      | 026004 | 046501 | 020124 | 000    |        |        |                                   |
| 6387 | 026011 | 045    | 041506 | 000040 | MSG46: | .ASCIZ | /%FC /                            |
| 6388 | 026016 | 041445 | 020101 | 000    | MSG47: | .ASCIZ | /%CA /                            |
| 6389 | 026023 | 045    | 047041 | 020117 | MSG48: | .ASCIZ | /%!NO BOT ON REWIND: HALT%/       |
|      | 026030 | 047502 | 020124 | 047117 |        |        |                                   |
|      | 026036 | 051040 | 053505 | 047111 |        |        |                                   |
|      | 026044 | 035104 | 044040 | 046101 |        |        |                                   |
|      | 026052 | 022524 | 000045 |        |        |        |                                   |
| 6390 | 026056 | 047045 | 052117 | 040440 | MSG49: | .ASCIZ | /%NOT AVAIL /                     |
|      | 026064 | 040526 | 046111 | 000040 |        |        |                                   |
| 6391 | 026072 | 044445 | 046114 | 043505 | MSG50: | .ASCIZ | /%ILLEGAL DRIVE TYPE /            |
|      | 026100 | 046101 | 042040 | 044522 |        |        |                                   |
|      | 026106 | 042526 | 052040 | 050131 |        |        |                                   |
|      | 026114 | 020105 | 000    |        |        |        |                                   |
| 6392 | 026117 | 045    | 051104 | 053111 | MSG52: | .ASCIZ | /%DRIVE NUMBER = /                |
|      | 026124 | 020105 | 052516 | 041115 |        |        |                                   |
|      | 026132 | 051105 | 036440 | 000040 |        |        |                                   |
| 6393 | 026140 | 043045 | 051117 | 040515 | MSG53: | .ASCIZ | /%FORMAT = /                      |
|      | 026146 | 020124 | 020075 | 000    |        |        |                                   |
| 6394 | 026153 | 052    | 042527 | 052040 | MSG54: | .ASCIZ | /*WE TM/                          |
|      | 026160 | 000115 |        |        |        |        |                                   |
| 6395 | 026162 | 051452 | 020105 | 046524 | MSG55: | .ASCIZ | /*SE TM/                          |
|      | 026170 | 000    |        |        |        |        |                                   |
| 6396 | 026171 | 040    | 046524 | 000    | MSG56: | .ASCIZ | / TM/                             |
| 6397 | 026175 | 045    | 047516 | 026516 | MSG57: | .ASCIZ | /%NON-EXIST SLAVE/                |
|      | 026202 | 054105 | 051511 | 020124 |        |        |                                   |
|      | 026210 | 046123 | 053101 | 000105 |        |        |                                   |
| 6398 | 026216 | 041445 | 041522 | 000040 | MSG58: | .ASCIZ | /%CRC /                           |
| 6399 | 026224 | 046045 | 041522 | 000040 | MSG59: | .ASCIZ | /%LRC /                           |
| 6400 | 026232 | 042052 | 000040 |        | MSG60: | .ASCIZ | /*D /                             |
| 6401 | 026236 | 050052 | 000040 |        | MSG61: | .ASCIZ | /*P /                             |

|      |        |        |        |        |  |
|------|--------|--------|--------|--------|--|
| 6402 | 026242 | 043052 | 000040 |        | MSG62: .ASCIZ /*F /                              |
| 6403 | 026246 | 025045 | 051117 | 043511 | MSG64: .ASCIZ /*ORIGINAL ERROR*/                 |
|      | 026254 | 047111 | 046101 | 042440 |  |
|      | 026262 | 051122 | 051117 | 000052 |  |
| 6404 | 026270 | 051045 | 052105 | 054522 | MSG65: .ASCIZ /*RETRY: /                         |
|      | 026276 | 020072 | 000    |        |  |
| 6405 | 026301 | 052    | 051441 | 020105 | MSG66: .ASCIZ /*!SE RTRY /                       |
|      | 026306 | 052122 | 054522 | 000040 |  |
| 6406 | 026314 | 020452 | 051105 | 051501 | MSG67: .ASCIZ /*!ERASE/                          |
|      | 026322 | 000105 |        |        |  |
| 6407 | 026324 | 051045 | 051105 | 053105 | MSG68: .ASCIZ /*REREV: /                         |
|      | 026332 | 020072 | 000    |        |  |
| 6408 | 026335 | 045    | 040524 | 042520 | MSG69: .ASCIZ /*TAPE MARK = /                    |
|      | 026342 | 046440 | 051101 | 020113 |  |
|      | 026350 | 020075 | 000    |        |  |
| 6409 | 026353 | 045    | 047041 | 020117 | MSG70: .ASCIZ /*.NO DRY FROM REWIND: HALT%/      |
|      | 026360 | 051104 | 020131 | 051106 |  |
|      | 026366 | 046517 | 051040 | 053505 |  |
|      | 026374 | 047111 | 035104 | 044040 |  |
|      | 026402 | 046101 | 022524 | 000    |  |
| 6410 | 026407 | 045    | 047516 | 026516 | MSG71: .ASCIZ /*NON-EXIST DRIVE/                 |
|      | 026414 | 054105 | 051511 | 020124 |  |
|      | 026422 | 051104 | 053111 | 000105 |  |
| 6411 | 026430 | 051045 | 043105 | 042127 | MSG72: .ASCIZ /*REFWD: /                         |
|      | 026436 | 020072 | 000    |        |  |
| 6412 | 026441 | 045    | 052127 | 051105 | MSG73: .ASCIZ /*WTERR: /                         |
|      | 026446 | 035122 | 000040 |        |  |
| 6413 | 026452 | 051045 | 043505 | 051511 | MSG74: .ASCIZ /*REGISTER START = /               |
|      | 026460 | 042524 | 020122 | 052123 |  |
|      | 026466 | 051101 | 020124 | 020075 |  |
|      | 026474 | 000    |        |        |  |
| 6414 | 026475 | 045    | 042526 | 052103 | MSG75: .ASCIZ /*VECTOR = /                       |
|      | 026502 | 051117 | 036440 | 000040 |  |
| 6415 | 026510 | 042045 | 051105 | 053105 | MSG76: .ASCIZ /*DEREV: /                         |
|      | 026516 | 020072 | 000    |        |  |
| 6416 | 026521 | 045    | 042504 | 053506 | MSG77: .ASCIZ /*DEFWD: /                         |
|      | 026526 | 035104 | 000040 |        |  |
| 6417 | 026532 | 020445 | 047516 | 026516 | MSG78: .ASCIZ /*!NON-RETRYABLE WRITE ERROR: ER / |
|      | 026540 | 042522 | 051124 | 040531 |  |
|      | 026546 | 046102 | 020105 | 051127 |  |
|      | 026554 | 052111 | 020105 | 051105 |  |
|      | 026562 | 047522 | 035122 | 042440 |  |
|      | 026570 | 020122 | 000    |        |  |
| 6418 | 026573 | 045    | 047041 | 047117 | MSG79: .ASCIZ /*!NON-RETRYABLE READ ERROR: ER /  |
|      | 026600 | 051055 | 052105 | 054522 |  |
|      | 026606 | 041101 | 042514 | 051040 |  |
|      | 026614 | 040505 | 020104 | 051105 |  |
|      | 026622 | 047522 | 035122 | 042440 |  |
|      | 026630 | 020122 | 000    |        |  |
| 6419 | 026633 | 045    | 020441 | 047105 | MSG100: .ASCIZ /*!!END OF PASS %/                |
|      | 026640 | 020104 | 043117 | 050040 |  |
|      | 026646 | 051501 | 020123 | 000045 |  |
| 6420 | 026654 | 022445 | 025052 | 025052 | MSG101: .ASCIZ /*%*****//                        |
|      | 026662 | 025052 | 025052 | 025052 |  |
|      | 026670 | 025052 | 025052 | 025052 |  |
|      | 026676 | 025052 | 025052 | 000    |  |

|      |        |        |        |        |                |   |
|------|--------|--------|--------|--------|----------------|---|
| 6421 | 026703 | 052    | 046524 | 031460 | MSG102: .ASCIZ | /*TM03 /                                      |
|      | 026710 | 000040 |        |        |                |   |
| 6422 | 026712 | 051452 | 040514 | 042526 | MSG103: .ASCIZ | /*SLAVE /                                     |
|      | 026720 | 000040 |        |        |                |   |
| 6423 | 026722 | 040445 | 052125 | 020117 | MSG104: .ASCIZ | /%AUTO CONT: /                                |
|      | 026730 | 047503 | 052116 | 020072 |                |   |
|      | 026736 | 000    |        |        |                |   |
| 6424 | 026737 | 045    | 042522 | 047503 | MSG105: .ASCIZ | /%RECOVERED/                                  |
|      | 026744 | 042526 | 042522 | 000104 |                |   |
| 6425 | 026752 | 020452 | 041041 | 042101 | MSG106: .ASCIZ | /*!.BAD TAPE OVERFLOW/                        |
|      | 026760 | 052040 | 050101 | 020105 |                |   |
|      | 026766 | 053117 | 051105 | 046106 |                |   |
|      | 026774 | 053517 | 000    |        |                |   |
| 6426 | 026777 | 045    | 042522 | 044527 | MSG16A: .ASCIZ | /%REWIND TAPE; RESTART AT BLOCK 1/            |
|      | 027004 | 042116 | 052040 | 050101 |                |   |
|      | 027012 | 035505 | 051040 | 051505 |                |   |
|      | 027020 | 040524 | 052122 | 040440 |                |   |
|      | 027026 | 020124 | 046102 | 041517 |                |   |
|      | 027034 | 020113 | 000061 |        |                |   |
| 6427 | 027040 | 020445 | 052441 | 051116 | MSG107: .ASCIZ | /%!!UNRECOVERABLE BAD SPOT/                   |
|      | 027046 | 041505 | 053117 | 051105 |                |   |
|      | 027054 | 041101 | 042514 | 041040 |                |   |
|      | 027062 | 042101 | 051440 | 047520 |                |   |
|      | 027070 | 000124 |        |        |                |   |
| 6428 | 027072 | 041045 | 042101 | 051040 | .ASCIZ         | /%BAD RECORD LEFT ON TAPE%/                   |
|      | 027100 | 041505 | 051117 | 020104 |                |   |
|      | 027106 | 042514 | 052106 | 047440 |                |   |
|      | 027114 | 020116 | 040524 | 042520 |                |   |
|      | 027122 | 000045 |        |        |                |   |
| 6429 | 027124 | 020452 | 050041 | 051517 | MSG109: .ASCIZ | /*!!POSITION LOST IN RETRY/                   |
|      | 027132 | 052111 | 047511 | 020116 |                |   |
|      | 027140 | 047514 | 052123 | 044440 |                |   |
|      | 027146 | 020116 | 042522 | 051124 |                |   |
|      | 027154 | 000131 |        |        |                |   |
| 6430 | 027155 | 051445 | 051525 | 042520 | MSG110: .ASCIZ | /%SUSPECT BAD TAPE/                           |
|      | 027164 | 052103 | 041040 | 042101 |                |   |
|      | 027172 | 052040 | 050101 | 000105 |                |   |
| 6431 | 027200 | 051045 | 050105 | 040505 | MSG111: .ASCIZ | /%REPEAT: /                                   |
|      | 027206 | 035124 | 000040 |        |                |   |
| 6432 | 027212 | 041040 | 042101 | 052040 | MSG112: .ASCIZ | / BAD TAPE SPOTS%/                            |
|      | 027220 | 050101 | 020105 | 050123 |                |   |
|      | 027226 | 052117 | 022523 | 000    |                |   |
| 6433 |        |        |        |        |                |   |
| 6434 | 027233 | 045    | 051440 | 043117 | MSG113: .ASCIZ | /% SOFT: /                                    |
|      | 027240 | 035124 | 000040 |        |                |   |
| 6435 |        |        |        |        |                |   |
| 6436 | 027244 | 020045 | 040510 | 042122 | MSG114: .ASCIZ | /% HARD: /                                    |
|      | 027252 | 020072 | 000    |        |                |   |
| 6437 |        |        |        |        |                |   |
| 6438 | 027255 | 045    | 020441 | 040510 | MSG115: .ASCIZ | /%!!HARD READ ERROR/                          |
|      | 027262 | 042122 | 051040 | 040505 |                |   |
|      | 027270 | 020104 | 051105 | 047522 |                |   |
|      | 027276 | 000122 |        |        |                |   |
| 6439 | 027300 | 020445 | 047125 | 052111 | MSG116: .ASCIZ | /%!UNIT IS REWINDING: TEST WILL START AT BOT/ |
|      | 027306 | 044440 | 020123 | 042522 |                |   |
|      | 027314 | 044527 | 042116 | 047111 |                |   |

|      |        |        |        |        |  |
|------|--------|--------|--------|--------|--|
|      | 027322 | 035107 | 052040 | 051505 |  |
|      | 027330 | 020124 | 044527 | 046114 |  |
|      | 027336 | 051440 | 040524 | 052122 |  |
|      | 027344 | 040440 | 020124 | 047502 |  |
|      | 027352 | 000124 |        |        |  |
| 6440 | 027354 | 000134 |        |        | MSG118: .ASCIZ /\                                      |
| 6441 | 027356 | 051045 | 046505 | 053117 | MSG120: .ASCIZ /%REMOVE TMDP FROM SLAVE TO BE TESTED%/ |
|      | 027364 | 020105 | 046524 | 050104 |  |
|      | 027372 | 043040 | 047522 | 020115 |  |
|      | 027400 | 046123 | 053101 | 020105 |  |
|      | 027406 | 047524 | 041040 | 020105 |  |
|      | 027414 | 042524 | 052123 | 042105 |  |
|      | 027422 | 000045 |        |        |  |
| 6442 | 027424 | 044045 | 051101 | 053504 | MSG121: .ASCIZ /%HARDWARE SWR IN USE%/                 |
|      | 027432 | 051101 | 020105 | 053523 |  |
|      | 027440 | 020122 | 047111 | 052440 |  |
|      | 027446 | 042523 | 000045 |        |  |
| 6443 |        |        |        |        |  |
| 6444 |        |        |        |        |  |
| 6445 | 027452 | 000000 |        |        | WDATA: 0 .EVEN ;WRITE BUFFER                           |
| 6446 |        |        |        |        |  |
| 6447 |        | 033460 |        |        |  |
| 6448 | 033460 | 000000 |        |        | RDATA: 0 .+.4004 ;READ BUFFER                          |
| 6449 |        |        |        |        |  |
| 6450 |        | 000001 |        |        | .END   |





|        |        |       |       |       |       |      |      |       |
|--------|--------|-------|-------|-------|-------|------|------|-------|
| DAT0D  | 014442 | 4778# | 4786  |       |       |      |      |       |
| DAT0E  | 014452 | 4780# | 4785  |       |       |      |      |       |
| DAT0F  | 014466 | 4782  | 4784# |       |       |      |      |       |
| DAT1   | 014476 | 3122  | 4792# |       |       |      |      |       |
| DAT1A  | 014502 | 4793# | 4802  | 4825  | 4830  | 4879 |      |       |
| DAT10  | 014620 | 3129  | 4846# |       |       |      |      |       |
| DAT11  | 014650 | 3130  | 4858# |       |       |      |      |       |
| DAT12  | 014670 | 3131  | 4868# |       |       |      |      |       |
| DAT13  | 014712 | 3132  | 4878# |       |       |      |      |       |
| DAT14  | 014722 | 3133  | 4883# |       |       |      |      |       |
| DAT15  | 014752 | 3134  | 4899# |       |       |      |      |       |
| DAT2   | 014516 | 3123  | 4801# |       |       |      |      |       |
| DAT3   | 014522 | 3124  | 4806# |       |       |      |      |       |
| DAT3A  | 014530 | 4808# | 4819  |       |       |      |      |       |
| DAT4   | 014546 | 3125  | 4817# |       |       |      |      |       |
| DAT5   | 014556 | 3126  | 4824# |       |       |      |      |       |
| DAT6   | 014564 | 3127  | 4829# |       |       |      |      |       |
| DAT7   | 014572 | 3128  | 4834# |       |       |      |      |       |
| UB     | 000532 | 2811# |       |       |       |      |      |       |
| DCHK   | 015446 | 4059  | 4253  | 5036# |       |      |      |       |
| DCHK0  | 015474 | 5040  | 5042# |       |       |      |      |       |
| DEREV1 | 001170 | 2993# | 3320  | 5122* |       |      |      |       |
| DEREX  | 016530 | 5194  | 5215  | 5217  | 5226  | 5235 | 5238 | 5240# |
| DEREX1 | 016562 | 5241  | 5244  | 5246  | 5248# |      |      |       |
| DERFL  | 000706 | 2873# | 5037* | 5113  | 5249* |      |      |       |
| DERR   | 016060 | 5106  | 5154# |       |       |      |      |       |
| DERRO  | 016070 | 5156# | 5247  |       |       |      |      |       |
| DERROA | 016120 | 5158  | 5163# |       |       |      |      |       |
| DERROB | 016152 | 5169  | 5172# |       |       |      |      |       |
| DERROC | 016176 | 5176  | 5179# |       |       |      |      |       |
| DERROD | 016200 | 5178  | 5180# |       |       |      |      |       |
| DERR1  | 016226 | 5184  | 5187# |       |       |      |      |       |
| DERR2  | 016230 | 5186  | 5188# |       |       |      |      |       |
| DERR3  | 016244 | 5191# |       |       |       |      |      |       |
| DERR4  | 016246 | 5155  | 5190  | 5192# |       |      |      |       |
| DERR4A | 016406 | 5209  | 5218# |       |       |      |      |       |
| DERR4B | 016454 | 5203  | 5227# |       |       |      |      |       |
| DERR5  | 016512 | 5232  | 5236# |       |       |      |      |       |
| DERR6  | 016524 | 5206  | 5230  | 5239# |       |      |      |       |
| DFX    | 016056 | 5114  | 5116  | 5121  | 5123# |      |      |       |
| DF0    | 015750 | 5062  | 5101# | 5110  |       |      |      |       |
| DF0A   | 015644 | 5072  | 5074# | 5111  |       |      |      |       |
| DF0A0  | 015666 | 5078  | 5080# |       |       |      |      |       |
| DF0A1  | 015702 | 5083  | 5085# |       |       |      |      |       |
| DF0A2  | 015716 | 5088  | 5090# |       |       |      |      |       |
| DF0A3  | 015732 | 5093  | 5095# |       |       |      |      |       |
| DF0A4  | 015736 | 5075  | 5097# |       |       |      |      |       |
| DF0B   | 015604 | 5063# |       |       |       |      |      |       |
| DF0B0  | 015626 | 5066  | 5069# |       |       |      |      |       |
| DF0C   | 015564 | 5055  | 5059# |       |       |      |      |       |
| DF0C0  | 015574 | 5045  | 5047  | 5049  | 5061# |      |      |       |
| DF0D   | 015550 | 5051  | 5056# |       |       |      |      |       |
| DF0E   | 015542 | 5053# | 5058  |       |       |      |      |       |
| DF0F   | 015534 | 5050# | 5054  |       |       |      |      |       |
| DF1    | 015762 | 5098  | 5102  | 5105# |       |      |      |       |
| DF2    | 015772 | 5100  | 5104  | 5107# |       |      |      |       |





|        |        |       |       |       |       |
|--------|--------|-------|-------|-------|-------|
| LRCER  | 021076 | 5497* | 5500* | 5585  | 5643# |
| LRC5V  | 021104 | 5478* | 5636  | 5646# |       |
| MR     | 000534 | 2812# | 5488  | 5743* | 5821* |
| MSG1   | 024564 | 5160  | 6329# |       |       |
| MSG10  | 024645 | 4280  | 4300  | 6338# |       |
| MSG100 | 026633 | 3442  | 6419# |       |       |
| MSG101 | 026654 | 5843  | 6420# |       |       |
| MSG102 | 026703 | 5845  | 6421# |       |       |
| MSG103 | 026712 | 5849  | 6422# |       |       |
| MSG104 | 026722 | 5834  | 6423# |       |       |
| MSG105 | 026737 | 3708  | 4125  | 6424# |       |
| MSG106 | 026752 | 3379  | 6425# |       |       |
| MSG107 | 027040 | 3861  | 6427# |       |       |
| MSG109 | 027124 | 3375  | 6429# |       |       |
| MSG11  | 024652 | 5979  | 6339# |       |       |
| MSG110 | 027156 | 3727  | 6430# |       |       |
| MSG111 | 027200 | 3733  | 6431# |       |       |
| MSG112 | 027212 | 3851  | 6432# |       |       |
| MSG113 | 027233 | 3287  | 3307  | 6434# |       |
| MSG114 | 027244 | 3292  | 3312  | 6436# |       |
| MSG115 | 027255 | 4161  | 6438# |       |       |
| MSG116 | 027300 | 5718  | 6439# |       |       |
| MSG118 | 027354 | 6135  | 6440# |       |       |
| MSG12  | 024666 | 5975  | 6340# |       |       |
| MSG120 | 027356 | 3160  | 6441# |       |       |
| MSG121 | 027424 | 5788  | 6442# |       |       |
| MSG13  | 024704 | 3814  | 6020  | 6341# |       |
| MSG14  | 024712 | 3818  | 6024  | 6342# |       |
| MSG15  | 024717 | 5197  | 6343# |       |       |
| MSG16  | 024750 | 5663  | 6344# |       |       |
| MSG16A | 026777 | 3388  | 6426# |       |       |
| MSG17  | 024753 | 5660  | 6345# |       |       |
| MSG2   | 024571 | 5173  | 6330# |       |       |
| MSG20  | 024756 | 3382  | 6346# |       |       |
| MSG21  | 024771 | 4618  | 6348# |       |       |
| MSG22  | 025016 | 4004  | 6349# |       |       |
| MSG23  | 025045 | 5536  | 6350# |       |       |
| MSG23A | 025053 | 5570  | 6351# |       |       |
| MSG23B | 025060 | 5556  | 6352# |       |       |
| MSG23C | 025065 | 5566  | 6353# |       |       |
| MSG23D | 025072 | 5540  | 6354# |       |       |
| MSG23E | 025100 | 5546  | 6355# |       |       |
| MSG23F | 025105 | 5550  | 6356# |       |       |
| MSG23G | 025112 | 6357# |       |       |       |
| MSG23H | 025117 | 5602  | 6358# |       |       |
| MSG23I | 025124 | 6359# |       |       |       |
| MSG23J | 025131 | 6360# |       |       |       |
| MSG23K | 025136 | 6361# |       |       |       |
| MSG23L | 025143 | 6362# |       |       |       |
| MSG23M | 025150 | 6363# |       |       |       |
| MSG24  | 025155 | 5765  | 6364# |       |       |
| MSG25  | 025175 | 5712  | 6365# |       |       |
| MSG26  | 025215 | 5337  | 6366# |       |       |
| MSG27  | 025226 | 5352  | 6367# |       |       |
| MSG28  | 025237 | 3827  | 3843  | 6126  | 6368# |
| MSG3   | 024576 | 5181  | 6331# |       |       |

|        |        |       |       |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|------|--|--|--|--|--|--|
| MSG30  | 025241 | 4434  | 6369# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG31  | 025306 | 4431  | 6370# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG31A | 025363 | 4438  | 4440* | 6371# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG32  | 025450 | 4493  | 6372# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG33  | 025471 | 4532  | 6373# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG34  | 025505 | 4544  | 6374# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG35  | 025520 | 4577  | 6375# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG36  | 025541 | 4587  | 6376# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG37  | 025560 | 4599  | 6377# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG38  | 025603 | 4627  | 6378# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG39  | 025623 | 4636  | 6379# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG4   | 024603 | 5163  | 6332# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG40  | 025663 | 4650  | 6380# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG41  | 025712 | 4659  | 6381# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG42  | 025724 | 4668  | 6383# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG43  | 025744 | 6159  | 6384# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG44  | 025750 | 5802  | 6385# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG45  | 025777 | 6386# |       |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG46  | 026011 | 6387# |       |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG47  | 026016 | 6388# |       |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG48  | 026023 | 3422  | 3508  | 6389# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG49  | 026056 | 3252  | 3335  | 6390# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG5   | 024610 | 3584  | 5706  | 6333# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG50  | 026072 | 4523  | 6391# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG52  | 026117 | 4476  | 6392# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG53  | 026140 | 4556  | 6393# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG54  | 026153 | 5036  | 5530  | 6394# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG55  | 026162 | 4290  | 6395# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG56  | 026171 | 5532  | 6396# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG57  | 026175 | 4516  | 6397# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG58  | 026216 | 5576  | 6398# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG59  | 026224 | 5587  | 6399# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG6   | 024615 | 3397  | 3484  | 3969  | 5709  | 6334# |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG60  | 026232 | 3399  | 5984  | 6400# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG61  | 026236 | 5990  | 6401# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG62  | 026242 | 5997  | 6402# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG64  | 026246 | 3625  | 3675  | 4115  | 6403# |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG65  | 026270 | 3272  | 3710  | 3729  | 4127  | 4150  | 6404# |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG66  | 026301 | 3774  | 6405# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG67  | 026314 | 3789  | 6406# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG68  | 026324 | 3302  | 6407# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG69  | 026335 | 4609  | 6408# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG7   | 024622 | 6045  | 6335# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG70  | 026353 | 3486  | 6409# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG71  | 026407 | 4487  | 6410# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG72  | 026430 | 3282  | 6411# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG73  | 026441 | 3277  | 6412# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG74  | 026452 | 4443  | 6413# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG75  | 026475 | 4452  | 6414# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG76  | 026510 | 3317  | 6415# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG77  | 026521 | 3297  | 6416# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG78  | 026532 | 3617  | 3665  | 3720  | 6417# |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG79  | 026573 | 4109  | 4143  | 6418# |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG8   | 024627 | 6007  | 6336# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MSG9   | 024637 | 4528  | 6337# |       |       |       |       |       |       |       |       |       |       |      |  |  |  |  |  |  |
| MTC1   | 000674 | 2868# | 3587* | 3637* | 3791* | 3988* | 3990* | 4194* | 4196* | 4215* | 4217* | 4285* | 4302* | 5395 |  |  |  |  |  |  |

|        |          |       |       |       |       |       |       |       |       |       |       |       |       |       |
|--------|----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
|        |          | 5414  | 5420  | 5473  | 5629  | 5658  | 5661  | 5704  | 5722  | 5741  | 5744  | 5749* | 5751  | 6027  |
| MTINT  | 022006   | 2784  | 4462  | 5820# |       |       |       |       |       |       |       |       |       |       |
| MTINTA | 022010   | 5770  | 5821# |       |       |       |       |       |       |       |       |       |       |       |
| NOP    | = 000240 | 2739# |       |       |       |       |       |       |       |       |       |       |       |       |
| NRTP   | 011252   | 3619  | 3667  | 3722  | 4111  | 4145  | 4171# |       |       |       |       |       |       |       |
| NRZOF  | 000652   | 2859# |       |       |       |       |       |       |       |       |       |       |       |       |
| OCTP   | 024126   | 2756  | 6219# |       |       |       |       |       |       |       |       |       |       |       |
| OCTPG  | 024276   | 6227  | 6230  | 6237  | 6241  | 6246  | 6251  | 6253  | 6257# |       |       |       |       |       |
| OCTPGO | 024314   | 6258  | 6260  | 6263# |       |       |       |       |       |       |       |       |       |       |
| OCTPG1 | 024320   | 6222  | 6264# |       |       |       |       |       |       |       |       |       |       |       |
| OCTPO  | 024144   | 6221  | 6224# |       |       |       |       |       |       |       |       |       |       |       |
| OCTP1  | 024164   | 6225  | 6229# |       |       |       |       |       |       |       |       |       |       |       |
| OCTP2  | 024172   | 6228  | 6231# |       |       |       |       |       |       |       |       |       |       |       |
| OCTP3  | 024262   | 6223  | 6254# |       |       |       |       |       |       |       |       |       |       |       |
| OFL    | 024340   | 6219* | 6259  | 6263* | 6269# |       |       |       |       |       |       |       |       |       |
| ONE    | 014232   | 4728  | 4730# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRT  | 022672   | 3251  | 3268  | 3334  | 3372  | 3398  | 3421  | 3485  | 3507  | 3616  | 3664  | 3719  | 3860  | 4003  |
|        |          | 4108  | 4142  | 5159  | 5302  | 5310  | 5524  | 5703  | 5717  | 5761  | 5975# |       |       |       |
| PAPRTA | 023046   | 6011# | 6017  |       |       |       |       |       |       |       |       |       |       |       |
| PAPRTB | 023062   | 6010  | 6014# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRTC | 023076   | 6015  | 6018# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRTD | 023104   | 6013  | 6020# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRTY | 023200   | 6035  | 6038# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRT0 | 022774   | 5994  | 5996# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRT1 | 023150   | 6028  | 6031# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRT2 | 023202   | 6033  | 6039# |       |       |       |       |       |       |       |       |       |       |       |
| PAPRT3 | 023204   | 6030  | 6037  | 6040# |       |       |       |       |       |       |       |       |       |       |
| PARS   | 014332   | 4723  | 4725* | 4745* | 4746* | 4749# |       |       |       |       |       |       |       |       |
| PATRN  | 000560   | 2825# | 4601  | 4604  | 4713  | 4719  | 4733  | 5921* | 5925* | 5927* | 5929* | 5946* | 5948* | 5950* |
|        |          | 5953* | 6016  | 6018  |       |       |       |       |       |       |       |       |       |       |
| PATS   | 014330   | 3189* | 3438* | 4354* | 4719  | 4734* | 4748# | 5057* |       |       |       |       |       |       |
| PFLG   | 000672   | 2867# | 5156* | 5243  | 5248* | 5523* | 5611  | 5616* |       |       |       |       |       |       |
| PICK   | 017114   | 5285  | 5329# |       |       |       |       |       |       |       |       |       |       |       |
| PIK1   | 000770   | 2906# | 5277  | 5314  | 5330  | 5341  |       |       |       |       |       |       |       |       |
| PIK2   | 000772   | 2907# |       |       |       |       |       |       |       |       |       |       |       |       |
| PIK3   | 000774   | 2908# |       |       |       |       |       |       |       |       |       |       |       |       |
| PIK4   | 000776   | 2909# |       |       |       |       |       |       |       |       |       |       |       |       |
| PIK5   | 001000   | 2910# |       |       |       |       |       |       |       |       |       |       |       |       |
| PIK6   | 001002   | 2911# |       |       |       |       |       |       |       |       |       |       |       |       |
| PIK7   | 001004   | 2912# |       |       |       |       |       |       |       |       |       |       |       |       |
| PIK8   | 001006   | 2913# |       |       |       |       |       |       |       |       |       |       |       |       |
| PRB    | 000624   | 2843# | 4766  |       |       |       |       |       |       |       |       |       |       |       |
| PRS    | 000622   | 2842# | 4760* | 4762* | 4763  |       |       |       |       |       |       |       |       |       |
| PSW    | 000606   | 2836# | 5752* | 5758* | 5780* | 6168  | 6169* | 6173* |       |       |       |       |       |       |
| RANBAS | 000626   | 2844# | 3343* | 6063* | 6064  |       |       |       |       |       |       |       |       |       |
| RANG   | 023254   | 4351  | 4369  | 4924  | 6063# | 6066  | 6068  |       |       |       |       |       |       |       |
| RANSAV | 000630   | 2845# | 3344* | 4352* | 4353  | 4370  | 4925  | 6063  | 6064* | 6065  | 6067  |       |       |       |
| RANSET | 004276   | 3183  | 3343# | 3437  |       |       |       |       |       |       |       |       |       |       |
| RCNT   | 000554   | 2823# | 3345* | 3583  | 3754  | 3927  | 3960  | 4298  | 4370* | 4579  | 4581  | 4586  | 5919* | 5945* |
|        |          | 6031  | 6043  |       |       |       |       |       |       |       |       |       |       |       |
| RCNTR  | 012202   | 3241  | 4367# |       |       |       |       |       |       |       |       |       |       |       |
| RCSAV  | 000632   | 2846# | 3345  | 4586* |       |       |       |       |       |       |       |       |       |       |
| RDA    | 010004   | 3962  | 3964  | 3969# |       |       |       |       |       |       |       |       |       |       |
| RDATA  | 033460   | 3776  | 3978  | 4014  | 4024  | 4206  | 4227  | 4240  | 4281  | 4293  | 4296  | 4306  | 4741  | 4781  |
|        |          | 5043  | 5166  | 5211  | 5225  | 5399  | 5402  | 6448# |       |       |       |       |       |       |
| RDCMD  | 000562   | 2826# | 3882* | 3890* | 3894  | 3902* | 3909* | 3915* | 3919  | 3923* | 3963  | 3971  | 3979  | 3993  |

|        |        | 4018  | 4025  | 4048  | 4067  | 4077  | 4132  | 4164  | 4192  | 4207  | 4225 | 5061  | 5109  | 5118  |
|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|------|-------|-------|-------|
| RDERR1 | 001150 | 5168  | 5175  | 5183  | 5189  | 5208  | 5231  | 5279  | 5397  | 5432  | 5498 | 6029  |       |       |
| RDER1  | 001110 | 2982# | 3305  | 4020* | 4052* |       |       |       |       |       |      |       |       |       |
| RDER2  | 001112 | 2960# | 3285  | 4022* | 4050* |       |       |       |       |       |      |       |       |       |
| RDER3  | 001114 | 2961# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDER4  | 001116 | 2962# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDER5  | 001120 | 2963# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDER6  | 001122 | 2964# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDER7  | 001124 | 2965# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDER8  | 001126 | 2966# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDEX   | 010672 | 2967# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDFL   | 015064 | 4078  | 4080  | 4082  | 4084  | 4088# |       |       |       |       |      |       |       |       |
| RDRTG  | 010766 | 2778* | 3168* | 3439* | 4709  | 4716* | 4928* | 4930# |       |       |      |       |       |       |
| RDRTX  | 011250 | 4118# | 4160  |       |       |       |       |       |       |       |      |       |       |       |
| RDRTY  | 010700 | 4167  | 4169# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT0  | 010712 | 4053  | 4102# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT1  | 010744 | 4103  | 4105# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT1A | 010742 | 4107  | 4113# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT1B | 010762 | 4112# |       |       |       |       |       |       |       |       |      |       |       |       |
| RDRT2  | 011044 | 4114  | 4117# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT3  | 011066 | 4124  | 4131# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT4  | 011072 | 4133  | 4136# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT5  | 011074 | 4135  | 4137# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT5A | 011140 | 4135  | 4138# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT5B | 011150 | 4122  | 4148# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT6  | 011200 | 4141  | 4150# |       |       |       |       |       |       |       |      |       |       |       |
| RDRT7  | 011244 | 4147  | 4155  | 4158# |       |       |       |       |       |       |      |       |       |       |
| RDX    | 010676 | 4149  | 4168# |       |       |       |       |       |       |       |      |       |       |       |
| RDO    | 010042 | 4165  |       |       |       |       |       |       |       |       |      |       |       |       |
| RD1    | 010110 | 4089# |       |       |       |       |       |       |       |       |      |       |       |       |
| RD1A   | 010124 | 3972  | 3974  | 3977# | 4076  | 4087  |       |       |       |       |      |       |       |       |
| RD1B   | 010132 | 3984  | 3987# |       |       |       |       |       |       |       |      |       |       |       |
| RD1D   | 010140 | 3980  | 3990# |       |       |       |       |       |       |       |      |       |       |       |
| RD10   | 010616 | 3989  | 3991# |       |       |       |       |       |       |       |      |       |       |       |
| RD11   | 010626 | 3992# |       |       |       |       |       |       |       |       |      |       |       |       |
| RD2    | 010144 | 4070  | 4072  | 4074# |       |       |       |       |       |       |      |       |       |       |
| RD3    | 010204 | 4075  | 4077# |       |       |       |       |       |       |       |      |       |       |       |
| RD4    | 010234 | 3991  | 3993# |       |       |       |       |       |       |       |      |       |       |       |
| RD4A   | 010332 | 3994  | 3996  | 3998  | 4001# |       |       |       |       |       |      |       |       |       |
| RD4A0  | 010364 | 4002  | 4008# |       |       |       |       |       |       |       |      |       |       |       |
| RD4A1  | 010406 | 4013  | 4024# |       |       |       |       |       |       |       |      |       |       |       |
| RD4A2  | 010430 | 4026  | 4031# |       |       |       |       |       |       |       |      |       |       |       |
| RD4B   | 010436 | 4034  | 4037# |       |       |       |       |       |       |       |      |       |       |       |
| RD4C   | 010442 | 4028  | 4030  | 4040  | 4042# |       |       |       |       |       |      |       |       |       |
| RD4D   | 010472 | 4011  | 4044# |       |       |       |       |       |       |       |      |       |       |       |
| RD4E   | 010476 | 4043  | 4045# |       |       |       |       |       |       |       |      |       |       |       |
| RD5    | 010506 | 4049  | 4052# |       |       |       |       |       |       |       |      |       |       |       |
| RD6    | 010530 | 4051  | 4053# |       |       |       |       |       |       |       |      |       |       |       |
| RD7    | 010554 | 4009  | 4046  | 4055# |       |       |       |       |       |       |      |       |       |       |
| RD7A   | 010604 | 4021  | 4023  | 4056  | 4058  | 4060# |       |       |       |       |      |       |       |       |
| READ   | 007744 | 4063  | 4065# |       |       |       |       |       |       |       |      |       |       |       |
| REGS   | 000544 | 4068  | 4071# |       |       |       |       |       |       |       |      |       |       |       |
| REOT   | 004330 | 3891  | 3903  | 3916  | 3924  | 3960# |       |       |       |       |      |       |       |       |
| REOTC  | 005054 | 2819# | 4445  | 4447  | 4464  |       |       |       |       |       |      |       |       |       |
|        |        | 3362# | 3686  | 3782  | 3806  | 3906  | 3930  |       |       |       |      |       |       |       |
|        |        | 3213  | 3215* | 3402* | 3408* | 3409  | 3410* | 3411* | 3450# | 3467* | 3468 | 3469* | 3470* | 4425* |
|        |        | 4568* | 4574  | 4575* | 4576* | 5875* | 5902* | 5904* |       |       |      |       |       |       |



|        |        |       |       |       |       |       |       |       |       |       |       |       |       |       |
|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| SN     | 000540 | 2814# | 4530  |       |       |       |       |       |       |       |       |       |       |       |
| SNPG   | 024520 | 6304  | 6307  | 6313  | 6315  | 6317# |       |       |       |       |       |       |       |       |
| SNPT   | 024442 | 4531  | 6298# |       |       |       |       |       |       |       |       |       |       |       |
| SPFLG  | 000572 | 2830# | 3440  | 4629  | 4631  |       |       |       |       |       |       |       |       |       |
| STAL   | 000670 | 2866# | 3249* | 3260* | 3263* | 3332* | 3395* | 3482* | 3601* | 3772* | 3896* | 3921* | 4065* | 4189* |
|        |        | 4198* | 4202* | 4204* | 4278* | 4304* | 4308* | 4332* | 5748* | 5756* |       |       |       |       |
| STALL  | 012132 | 3261  | 3264  | 3602  | 3773  | 3897  | 3922  | 4066  | 4190  | 4205  | 4279  | 4309  | 4332# | 4333  |
| START  | 003026 | 2772  | 2797  | 3155# |       |       |       |       |       |       |       |       |       |       |
| STARTA | 003160 | 2779  | 3176# | 4007  |       |       |       |       |       |       |       |       |       |       |
| STARTB | 003164 | 3169  | 3177# |       |       |       |       |       |       |       |       |       |       |       |
| STARTC | 003152 | 2775  | 3172# |       |       |       |       |       |       |       |       |       |       |       |
| STARTD | 003244 | 3173  | 3191# |       |       |       |       |       |       |       |       |       |       |       |
| STARTE | 003236 | 3190# | 3449  |       |       |       |       |       |       |       |       |       |       |       |
| START1 | 003406 | 3216# | 3339  |       |       |       |       |       |       |       |       |       |       |       |
| START2 | 003524 | 3234  | 3236# |       |       |       |       |       |       |       |       |       |       |       |
| START3 | 003540 | 3237  | 3239# |       |       |       |       |       |       |       |       |       |       |       |
| START4 | 003554 | 3221  | 3240  | 3242# | 3250  | 3255  |       |       |       |       |       |       |       |       |
| START5 | 004216 | 3266  | 3326# |       |       |       |       |       |       |       |       |       |       |       |
| START6 | 004234 | 3330# | 3333  |       |       |       |       |       |       |       |       |       |       |       |
| START7 | 004264 | 3244  | 3331  | 3338# | 3407  |       |       |       |       |       |       |       |       |       |
| START8 | 004272 | 3329  | 3339# |       |       |       |       |       |       |       |       |       |       |       |
| STAR1A | 003420 | 3218# |       |       |       |       |       |       |       |       |       |       |       |       |
| STAR1B | 003440 | 3219  | 3222# |       |       |       |       |       |       |       |       |       |       |       |
| STAR1C | 003474 | 3224  | 3226  | 3230# |       |       |       |       |       |       |       |       |       |       |
| STAR4A | 003634 | 3248  | 3256# |       |       |       |       |       |       |       |       |       |       |       |
| STAR40 | 003566 | 3243  | 3245# |       |       |       |       |       |       |       |       |       |       |       |
| STAUT  | 003136 | 2791  | 3159  | 3162  | 3167# |       |       |       |       |       |       |       |       |       |
| STAUTO | 003346 | 3207# | 5924  | 5926  | 5928  | 5930  | 5947  | 5949  | 5951  | 5954  |       |       |       |       |
| STFLG  | 000640 | 2853# | 3177  | 3178  |       |       |       |       |       |       |       |       |       |       |
| STP    | 003734 | 3269  | 3271# | 3391  |       |       |       |       |       |       |       |       |       |       |
| STPX   | 004202 | 3270  | 3323# |       |       |       |       |       |       |       |       |       |       |       |
| STTBL  | 001050 | 2937# | 3184  | 3185  | 5858  | 5859  |       |       |       |       |       |       |       |       |
| SWR    | 000610 | 2837# | 3157* | 3193  | 3197  | 3201* | 3233  | 3236  | 3239  | 3265  | 3326  | 3461  | 3580  | 3598  |
|        |        | 3611  | 3623  | 3642  | 3659  | 3673  | 3682  | 3706  | 3725  | 3883  | 3886  | 3888  | 3892  | 3899  |
|        |        | 3910  | 3912  | 3917  | 4008  | 4055  | 4062  | 4102  | 4113  | 4123  | 4148  | 4221  | 4249  | 4255  |
|        |        | 4288  | 5154  | 5195  | 5240  | 5245  | 5300  | 5308  | 5471  | 5512  | 5608  | 5613  | 5759  | 5767  |
|        |        | 5784  | 5786* | 5793* | 5800  | 6009  | 6073  | 6078  | 6082  |       |       |       |       |       |
| SWREG  | 000176 | 2768# | 3157  | 3193  | 3201  | 5784  | 5793  | 6073  |       |       |       |       |       |       |
| TAPG   | 021144 | 3589  | 3641  | 3794  | 3992  | 4199  | 4220  | 4287  | 4305  | 5697# |       |       |       |       |
| TAPG0  | 021156 | 5699# | 5702  |       |       |       |       |       |       |       |       |       |       |       |
| TAPG1  | 021220 | 5705  | 5709# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG2  | 021232 | 5708  | 5712# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG3  | 021242 | 5700  | 5715# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG3A | 021312 | 5723  | 5726# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG3B | 021326 | 5725  | 5728  | 5730# |       |       |       |       |       |       |       |       |       |       |
| TAPG3C | 021346 | 5733  | 5736# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG3D | 021412 | 5740  | 5742  | 5744# |       |       |       |       |       |       |       |       |       |       |
| TAPG3E | 021436 | 5747  | 5749# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG3F | 021274 | 5716  | 5722# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG4  | 021464 | 5754# | 5755  | 5757  |       |       |       |       |       |       |       |       |       |       |
| TAPG5  | 021500 | 5758# |       |       |       |       |       |       |       |       |       |       |       |       |
| TAPG6  | 021542 | 5760  | 5767# |       |       |       |       |       |       |       |       |       |       |       |
| TAPG7  | 021552 | 5768  | 5770# |       |       |       |       |       |       |       |       |       |       |       |
| TBELL  | 024102 | 6188  | 6208# |       |       |       |       |       |       |       |       |       |       |       |
| TC     | 000542 | 2815# | 3246* | 3362* | 3415* | 3477* | 3497* | 3500* | 3515* | 3528* | 4513* | 5628* | 5892* |       |
| TEMP1  | 000644 | 2856# | 4501  | 4539  | 4551  | 4563  | 4761* | 4767  | 4771* | 5218* | 5219* | 5220* | 5221* | 5222  |

|         |        |       |       |       |       |       |       |       |       |       |       |       |       |       |
|---------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
|         |        | 5224  | 5271* | 5274* | 5282* | 5287  | 5332  | 5697* | 5701* | 5753* | 5754* | 5876* | 5895* | 5900  |
|         |        | 5902  | 5903* | 5904  | 6112* | 6121  | 6143* |       |       |       |       |       |       |       |
| TEMP2   | 000646 | 2857# | 4495* | 4496  | 4534* | 4546* | 4558* | 4683* | 4687  | 4772* | 4779  | 5272* | 5275* | 5283* |
|         |        | 5288  | 5333  |       |       |       |       |       |       |       |       |       |       |       |
| TEMP3   | 000650 | 2858# | 3716* | 3723* | 3737  | 3739* | 4139* | 4146* | 4154  | 4156* | 5273* | 5295  | 5334* | 6289  |
|         |        | 6292  |       |       |       |       |       |       |       |       |       |       |       |       |
| TEND    | 005004 | 3442# | 5870  |       |       |       |       |       |       |       |       |       |       |       |
| TIB     | 000642 | 2855# | 6115  | 6119  | 6124  | 6129  | 6139  | 6141  | 6147* | 6148  | 6174* | 6175* | 6176  |       |
| TINER   | 023656 | 6140  | 6142  | 6152  | 6154  | 6159# |       |       |       |       |       |       |       |       |
| TINF    | 000636 | 2852# | 3167* | 3172* | 3176* | 3432* | 4421  | 4648  |       |       |       |       |       |       |
| TINP    | 012226 | 3205  | 4421# |       |       |       |       |       |       |       |       |       |       |       |
| TINPX   | 014070 | 4647  | 4649  | 4677# |       |       |       |       |       |       |       |       |       |       |
| TINPO   | 012614 | 4486  | 4493# | 4504  | 4518  | 4572  |       |       |       |       |       |       |       |       |
| TINPOB  | 012704 | 4502  | 4508# |       |       |       |       |       |       |       |       |       |       |       |
| TINPOC  | 012744 | 4514# |       |       |       |       |       |       |       |       |       |       |       |       |
| TINPOD  | 012764 | 4515  | 4519# |       |       |       |       |       |       |       |       |       |       |       |
| TINPOE  | 013022 | 4522  | 4528# |       |       |       |       |       |       |       |       |       |       |       |
| TINP1   | 013040 | 4532# |       |       |       |       |       |       |       |       |       |       |       |       |
| TINP2   | 013116 | 4540  | 4544# |       |       |       |       |       |       |       |       |       |       |       |
| TINP2A  | 013174 | 4552  | 4556# |       |       |       |       |       |       |       |       |       |       |       |
| TINP2B  | 013252 | 4564  | 4568# |       |       |       |       |       |       |       |       |       |       |       |
| TINP2C  | 013300 | 4507  | 4570  | 4573# |       |       |       |       |       |       |       |       |       |       |
| TINP3   | 013320 | 4577# |       |       |       |       |       |       |       |       |       |       |       |       |
| TINP3A  | 013650 | 4636# | 5799  |       |       |       |       |       |       |       |       |       |       |       |
| TINP4   | 013714 | 4423  | 4646# |       |       |       |       |       |       |       |       |       |       |       |
| TKB     | 000614 | 2839# | 5775  | 6174  |       |       |       |       |       |       |       |       |       |       |
| TKS     | 000612 | 2838# | 3216* | 6170* | 6171  |       |       |       |       |       |       |       |       |       |
| TMEX    | 000564 | 2827# | 3633  | 3973  | 4081  | 4282  | 4611  | 4613  | 5922* |       |       |       |       |       |
| TMFLG   | 000700 | 2870# | 3635* | 3679* | 3696  | 3970* | 3975* | 3997  | 4010  | 4057  | 4069* | 4083  | 4085* | 4088* |
|         |        | 4200  | 4223  | 4251  | 5422  | 5443  | 5449  | 5460  | 5475  | 5528  | 5631  | 6032  |       |       |
| TOB     | 000640 | 2854# | 5560* | 5581* | 5591* | 6011* | 6041* | 6176* | 6182* | 6183  | 6185  | 6187  | 6191* | 6194* |
|         |        | 6198* | 6205  | 6209* | 6254* | 6265* | 6276* | 6279  | 6284* | 6317* | 6319* |       |       |       |
| TOG     | 024064 | 5561  | 5582  | 5592  | 6012  | 6042  | 6177  | 6189  | 6192  | 6195  | 6199  | 6203# | 6204  | 6210  |
|         |        | 6255  | 6266  | 6320  |       |       |       |       |       |       |       |       |       |       |
| TPB     | 000620 | 2841# | 6205* | 6281* | 6283* |       |       |       |       |       |       |       |       |       |
| TPOS    | 014100 | 4543  | 4555  | 4567  | 4683# | 4685  |       |       |       |       |       |       |       |       |
| TPOS1   | 014110 | 4510  | 4686# |       |       |       |       |       |       |       |       |       |       |       |
| TPS     | 000616 | 2840# | 6203  | 6277  |       |       |       |       |       |       |       |       |       |       |
| TSTAL   | 000600 | 2833# | 3260  | 3263  | 3772  | 3896  | 3921  | 4278  | 4308  | 4670  | 4672  |       |       |       |
| TTIN    | 023674 | 6114  | 6168# |       |       |       |       |       |       |       |       |       |       |       |
| TTINT   | 021556 | 2762  | 5775# |       |       |       |       |       |       |       |       |       |       |       |
| TTOUT   | 023754 | 2751  | 6182# | 6190  | 6200  | 6213  |       |       |       |       |       |       |       |       |
| TTR     | 023442 | 4451  | 4460  | 4482  | 4500  | 4538  | 4550  | 4562  | 4585  | 4596  | 4608  | 4617  | 4626  | 4635  |
|         |        | 4644  | 4658  | 4667  | 4676  | 5810  | 5840  | 6086  | 6110# |       |       |       |       |       |
| TWO     | 014226 | 4726  | 4729# |       |       |       |       |       |       |       |       |       |       |       |
| TYPE =  | 000004 | 2754# | 3161  | 3253  | 3273  | 3278  | 3283  | 3288  | 3293  | 3298  | 3303  | 3308  | 3313  | 3318  |
|         |        | 3336  | 3380  | 3383  | 3389  | 3400  | 3423  | 3443  | 3487  | 3509  | 3618  | 3626  | 3666  | 3676  |
|         |        | 3709  | 3711  | 3721  | 3728  | 3730  | 3734  | 3815  | 3819  | 3828  | 3844  | 3852  | 3862  | 4005  |
|         |        | 4110  | 4116  | 4126  | 4128  | 4144  | 4151  | 4162  | 4436  | 4439  | 4444  | 4453  | 4477  | 4488  |
|         |        | 4494  | 4517  | 4524  | 4529  | 4533  | 4545  | 4557  | 4578  | 4588  | 4600  | 4610  | 4619  | 4628  |
|         |        | 4637  | 4651  | 4660  | 4669  | 5161  | 5164  | 5174  | 5182  | 5198  | 5338  | 5353  | 5526  | 5533  |
|         |        | 5537  | 5541  | 5547  | 5551  | 5557  | 5567  | 5571  | 5577  | 5588  | 5603  | 5664  | 5707  | 5710  |
|         |        | 5713  | 5719  | 5763  | 5766  | 5789  | 5803  | 5835  | 5844  | 5846  | 5850  | 5976  | 5980  | 5985  |
|         |        | 5991  | 5998  | 6008  | 6021  | 6025  | 6046  | 6077  | 6081  | 6127  | 6136  | 6160  |       |       |
| TYPOCT- | 104400 | 2758# | 3276  | 3281  | 3286  | 3291  | 3296  | 3301  | 3306  | 3311  | 3316  | 3321  | 3387  | 3713  |
|         |        | 3732  | 3736  | 3813  | 3817  | 3822  | 3850  | 4130  | 4153  | 4172  | 4446  | 4455  | 4527  | 4580  |





|          |        |       |      |
|----------|--------|-------|------|
| DTBOOT   | 1243#  |       |      |
| GETANS   | 767#   |       |      |
| LDPDR    | 515#   |       |      |
| LPDP11   | 1268#  |       |      |
| PSPTAG   | 746#   |       |      |
| REGBOX   | 132#   |       |      |
| RESLDR   | 873#   |       |      |
| SAVLDR   | 855#   |       |      |
| SVTKS    | 1141#  |       |      |
| \$CATCH  | 1124#  |       |      |
| \$CHAIN  | 89#    | 2641# | 3157 |
| \$CHNPD  | 105#   |       |      |
| \$CNV16  | 606#   |       |      |
| \$CNV18  | 635#   |       |      |
| \$CNV48  | 704#   |       |      |
| \$CPCHK  | 897#   |       |      |
| \$CPREG  | 17#    |       |      |
| \$CPVEC  | 167#   |       |      |
| \$FPREG  | 46#    |       |      |
| \$GETAN  | 771#   |       |      |
| \$KMPRE  | 347#   |       |      |
| \$KWDR   | 998#   |       |      |
| \$KW11   | 929#   |       |      |
| \$LCTRL  | 2#     |       |      |
| \$LPREG  | 186#   |       |      |
| \$MAMFO  | 1176#  |       |      |
| \$MMBIT  | 207#   |       |      |
| \$MREG   | 264#   |       |      |
| \$PDRBI  | 385#   |       |      |
| \$POWER  | 439#   |       |      |
| \$PSWBI  | 147#   |       |      |
| \$RECO   | 795#   |       |      |
| \$RESLD  | 876#   |       |      |
| \$RESTO  | 476#   | 2641# | 6091 |
| \$SAVE   | 464#   | 2641# | 6090 |
| \$SAVI D | 858#   |       |      |
| \$SETIB  | 508#   |       |      |
| \$SHIFT  | 489#   |       |      |
| \$SMPRE  | 309#   |       |      |
| \$STINS  | 8#     |       |      |
| \$STKPT  | 202#   |       |      |
| \$ST200  | 1136#  |       |      |
| \$SVTK   | 1146#  |       |      |
| \$SWOPT  | 56#    |       |      |
| \$TCDRV  | 1029#  |       |      |
| \$TCREG  | 192#   |       |      |
| \$TRAPS  | 402#   |       |      |
| \$TYPE   | 518#   |       |      |
| \$TYPEF  | 592#   |       |      |
| \$UMPRE  | 272#   |       |      |
| \$VECTA  | 1163#  |       |      |
| .\$ACT1  | 67#    | 2641# | 2759 |
| .\$EOP   | 78#    | 2641# | 3444 |
| . ABS.   | 033462 | 000   |      |

TMO3/TU45 DATA RELIABILITY PROGRAM  
CZTURB.P11 15-MAY-80 12:18

C 11  
MACY11 30A(1052) 15-MAY-80 12:23 PAGE 78-1  
CROSS REFERENCE TABLE -- MACRO NAMES

SEQ 0132

ERRORS DETECTED: 0

CZTURB.CZTURB/CRF=CZTURB.P11  
RUN-TIME: 23 40 4 SECONDS  
RUN-TIME RATIO: 173/68=2.5  
CORE USED: 15K (29 PAGES)